


Important Tips

The gas spring has pin at both ends to prevent the ball stud plate from coming off easily.

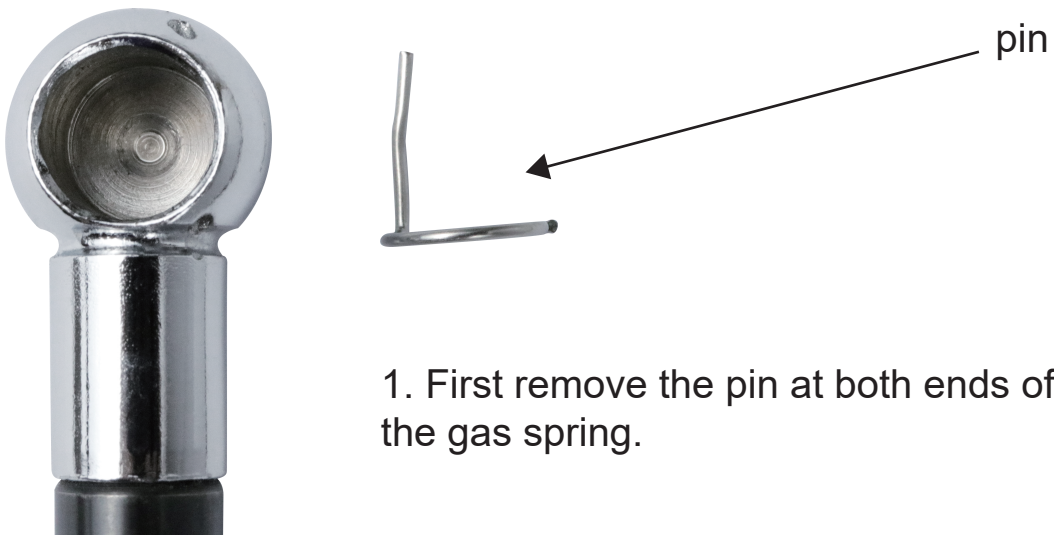

1. First remove the pin at both ends of the gas spring.



2. Then install the ball stud plate to the gas spring.



3. Then install the spring, note that the spring needs to be locked and fixed through two small holes from the bottom to the top to ensure that the ball stud plate and the gas spring will not be easily disconnected.

Please scan the QR code to watch the reference video first to avoid mistakes during installation.

