


INSTALLATION INSTRUCTIONS

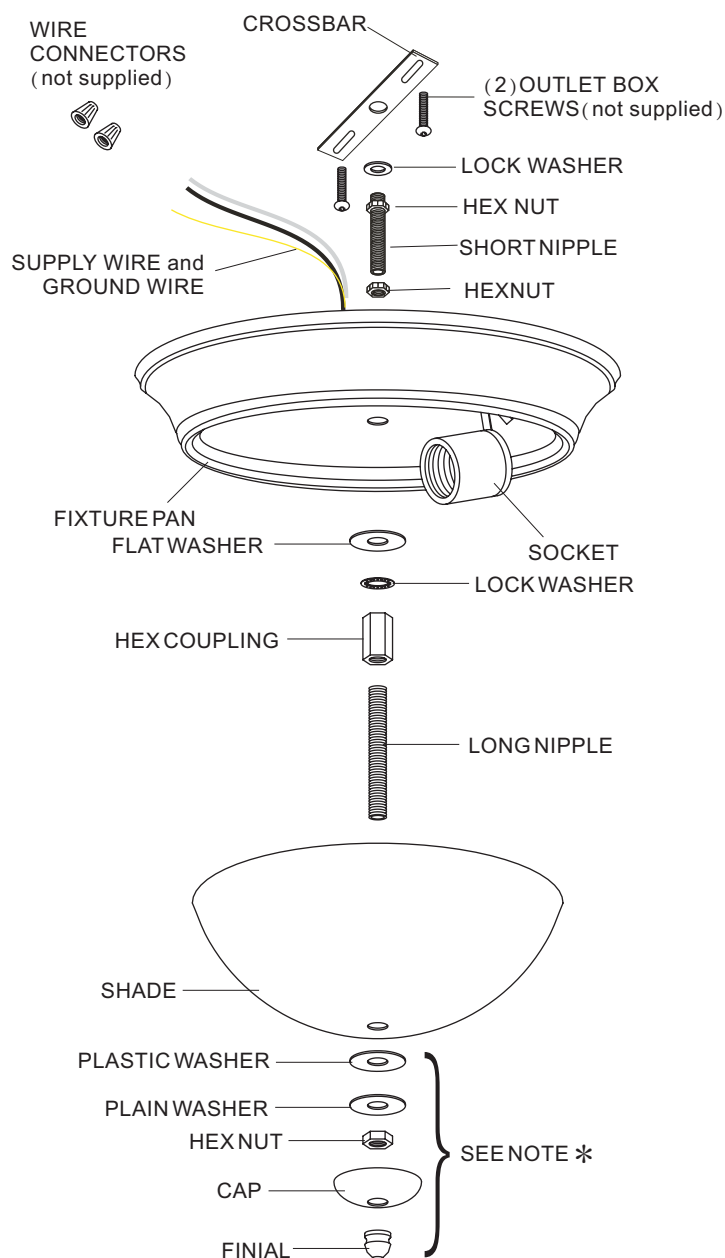

**IF IN DOUBT ABOUT ELECTRICAL
INSTALLATION, CONSULT A
LICENSED ELECTRICIAN!**

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration. This instruction sheet covers one, two and three light luminaries, even though a one light is shown.

2. Turn power OFF to the installation point at circuit breaker.

3. Locate the **CROSSBAR** and attach it to the **OUTLET BOX** using (2) **OUTLET BOX SCREWS** (not supplied). Locate the shorter **NIPPLE** and thread one **HEX NUT** onto it about half way. Slip a **LOCK WASHER** onto it and thread one end of the short **NIPPLE** into the center hole of the **CROSSBAR**. Position the **FIXTURE PAN** over the outlet box, passing the **MOUNTING HOLE** in the center of the **FIXTURE PAN** over the end of **NIPPLE**. Adjust the **NIPPLE** so approx. 3/8" inch of the **NIPPLE** is protruding from the **MOUNTING HOLE**. This adjustment may take a few tries. When this length is achieved, remove the **FIXTURE PAN** and tighten the **HEX NUT** up against the underside of the **CROSSBAR** with pliers. Next, thread another **HEX NUT** onto the other end of the nipple. Thread this **HEX NUT** on just enough so the inside surface of the pan rests against it. You may have to trial fit the **FIXTURE PAN** one more time to insure this distance also. This **HEX NUT** is needed here to prevent you from crushing down the center of the **FIXTURE PAN** in Step 4.

3. MAKING THE CONNECTIONS:

Position the **FIXTURE PAN** over the outlet box. Using wire connectors (not supplied) connect the **HOUSE GROUND WIRE** to the **FIXTURE GROUND WIRE**; connect the **HOUSE WHITE WIRE** to the **FIXTURE SUPPLY WIRE (WHITE SIDE)**; connect the **HOUSE BLACK (or RED) WIRE** to the **FIXTURE SUPPLY WIRE (BLACK SIDE)**. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the **OUTLET BOX**.

4. Secure the **FIXTURE PAN** to ceiling by passing the **NIPPLE** through the **MOUNTING HOLE**, then slip on the **FLAT WASHER** and the **LOCK WASHER** and then thread the **HEX COUPLING** to the bottom end of the **NIPPLE**. Snug down assembly until the **FIXTURE PAN** is flush against the ceiling. Be sure that there are no trapped or pinched wires along the edge of the pan. Next, thread the longer **NIPPLE** into the **HEX COUPLING** for the **SHADE** installation in Step 6.

5. Install the correct bulb(s) referring to fixture markings and/or labels for the maximum wattage.

6. Next, position the **SHADE** under the **FIXTURE PAN** and align the center hole at the bottom of the **SHADE** with the **LONG NIPPLE**. Pass the **SHADE** over the **LONG NIPPLE** and secure the **SHADE** with the **CAP/FINIAL** provided. Hand tighten **CAP/FINIAL** until snug.

* PLEASE NOTE: DEPENDING ON THE STYLE PURCHASED, YOUR FIXTURE MAY OR MAY NOT HAVE THE **EXACT** SHADE MOUNTING PARTS PICTURED. DUE TO THE NUMBER OF STYLES AVAILABLE, THIS INSTRUCTION SHEET MAY SHOW PARTS YOU MAY OR MAY NOT NEED FOR SHADE SECUREMENT. SEE ILLUSTRATION TO JUSTIFY THE PARTS YOU MAY HAVE IN YOUR PARTS BAG.

7. Restore power to the installation point ON. Keep this sheet for future reference.