


INSTALLATION INSTRUCTIONS FOR OUTDOOR WALL LIGHT




INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS

Before starting the installation, disconnect the Power by Turning Off the Circuit Breaker. Turning the Power Off using the LightSwitch is not sufficient to prevent electrical shock. All electrical connections and installation must be following local codes, ordinances, and/or National Electric Code and Must Be Done by an Electrician Only.

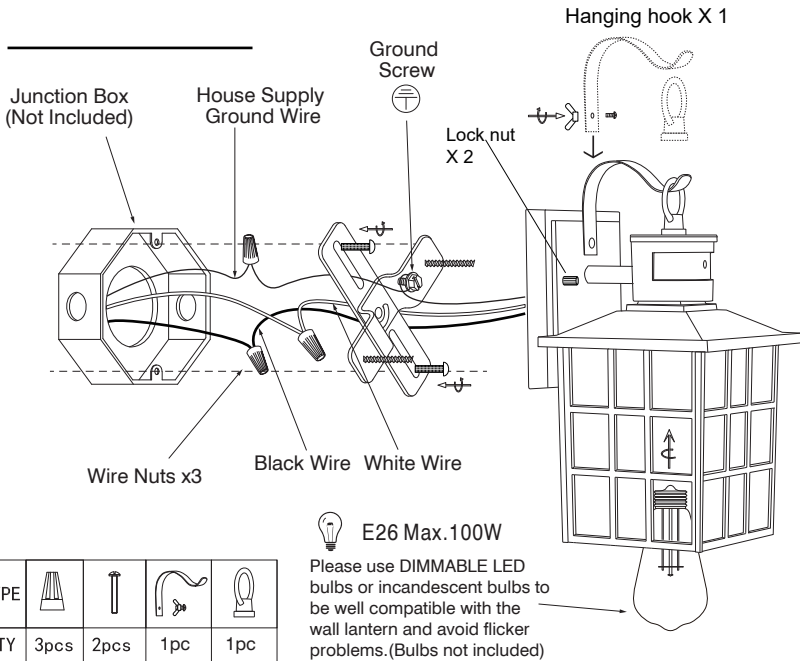

TYPE				
QTY	3pcs	2pcs	1pc	1pc

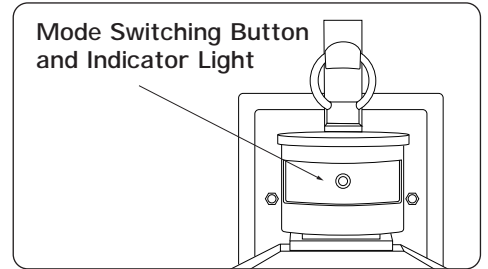

ECO MODE OFF

1. Quickly press mode button once.
2. The indicator light turns green and Light bulb turns off.
3. Change mode to ECO mode



DIM MODE 30%

1. Quickly press mode button once.
2. The indicator light turns red and Light bulb turns on.
3. Change mode to DIM mode

MOTION SENSOR

DIM MODE:

With 30% dim light at night, activated with 100% light once motion is detected, revert to 30% brightness without movement. Full turn off at dawn.

ECO+ MODE:

Full off at night, 100% light once motion is detected, revert to full off brightness without movement. Full turn off at dawn.

Manual Override Mode :

Turn the light switch "off-on" within 2 seconds. The light will be changed into manual mode, keeping 100% brightness for 6-8hrs but will auto turn off at dawn, Then back to AUTO MODE.

Dim Mode Brightness Adjustment:

You can adjust the standby brightness in dim mode, the default is 30% brightness, you can adjust it between 10-50%, and the adjusted brightness can be memo-rized. Press and hold the sensor button to quickly adjust brightness in unattended mode.

Please refer to the MOTION SENSORS INSTRUCTION MANUAL for more setup information.

1 YEAR LIMITED WARRANTY*

This Light Fixture is warranted against defects in material and quality for 1 year from the purchase date.

This warranty does not cover acts of nature such as lighting damage or corrosion and discoloration of components. Nor does it cover damages caused through abuse, improper installation, surges in electric current, or acts of third parties.

This warranty does not cover the costs of removing and resealing the lighting fixture.

If this product falls for any reason covered by this warranty, feel free to contact us.

ASSEMBLY INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:



SAFETY PRECAUTIONS:

1. Turn off electrical power before starting the installation of the light fixture.
 2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
 3. Firmly attach the fixture ground wire (bare copper) to the mounting bracket with the ground screw (by wrapping around the ground screw) and then connect it to the house supply ground wire with a wire nut.
 4. To clean the fixture, turn off the power, wait for it to cool, and wipe the fixture with a clean, soft cloth.
- Note: the product may not look exactly as shown in the figures.

INSTALLATION:

