


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

**NOTES:** 1. Before installing, consult local electrical codes for wiring and grounding requirements.  
2. READ AND SAVE THIS INSTRUCTION.

## Hardware Package (included):

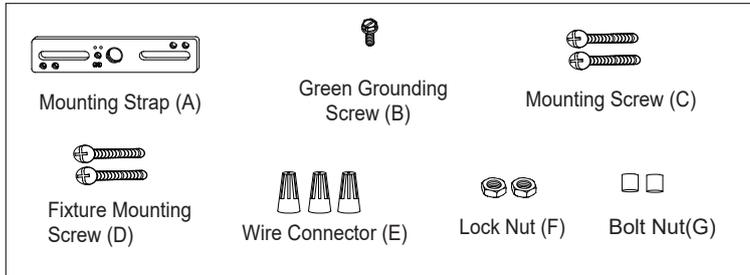


## Installation Steps

Turn off the power at fuse or circuit box.


- Rod Connections:
  - Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
  - Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
  - Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.
 

**Note: Length adjustable from 17" to 59". Use fewer rods if shorter length is desired.**
- Thread the fixture wire through the canopy kit, then secure the rod assembly to the set nipple of the canopy kit.
- Attach the mounting strap to outlet box by using two mounting screws.
- Pull out the source wires from the outlet box. Make wire connections using wire connectors as follows:
  - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
  - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
  - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire connector.

Carefully put the wires back into the outlet box.
- Attach the canopy kit to the mounting strap by inserting the fixture mounting screws, then secure it with two bolt nuts.
- Attach the glass shade to fixture, then secure it with the socket ring.

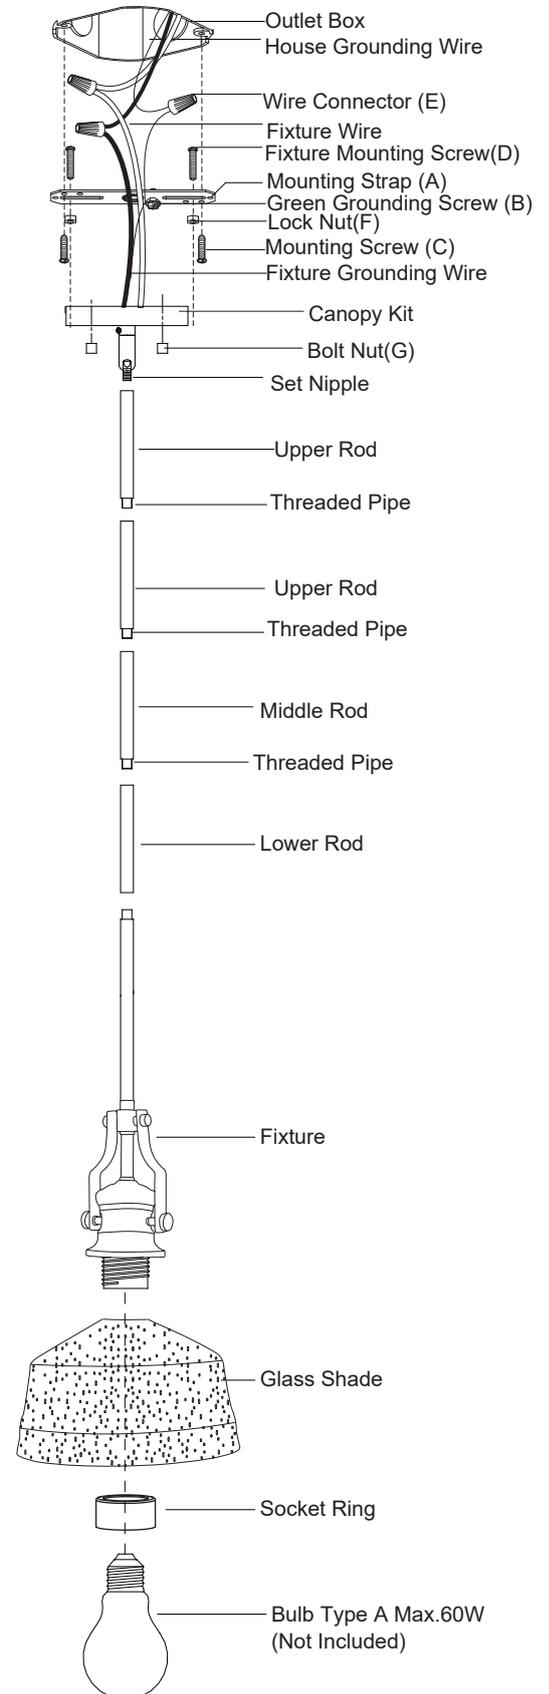

**Fig. 1**

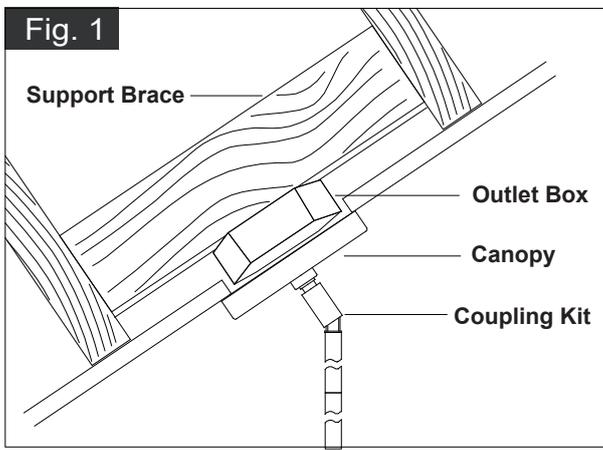



7. Install bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.

8. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

**Spare Parts List:**

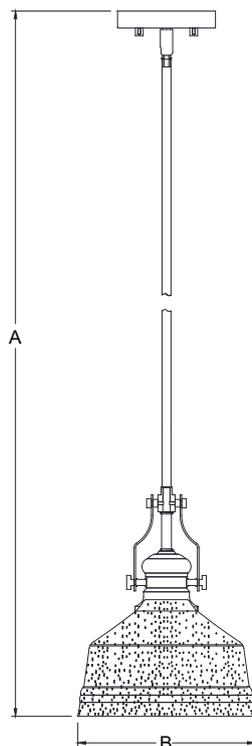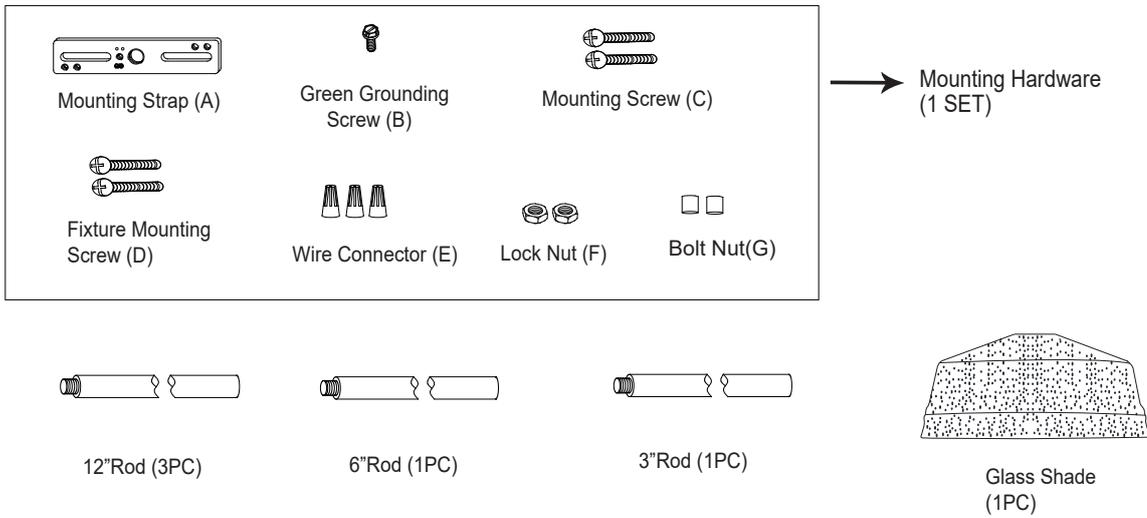

A: 59"  
B: 12"