


# USER'S MANUAL

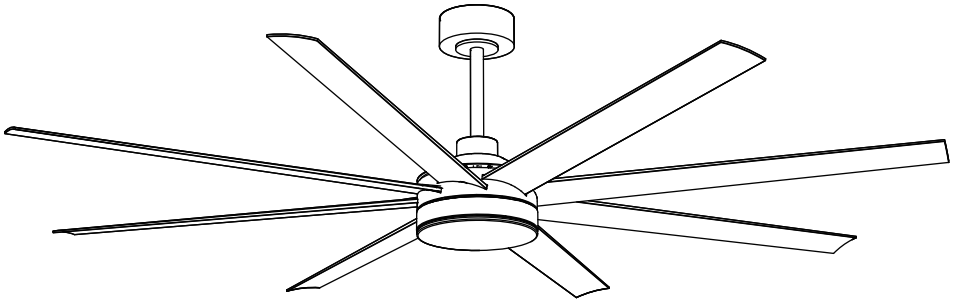

## Warm Tips

1. Insert the downrod ball head into the groove of the mounting bracket. (Figure 1)
2. About Light Memory: (Figure 2)
  - \* Wall switch:  
Turn on the light after 10s to remain last light setting.
  - \* Remote controller:  
Turn on the light will remain last light setting.
3. The lighting kit can be replaced if fault in the future.

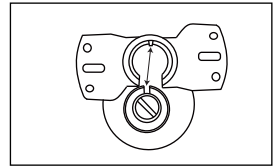


Figure 1

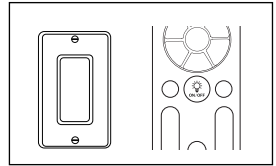




Figure 2

## WARNING!!!

**To avoid fire, shock and serious personal injury, follow these instructions.**

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

# Fan components

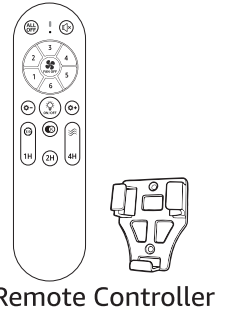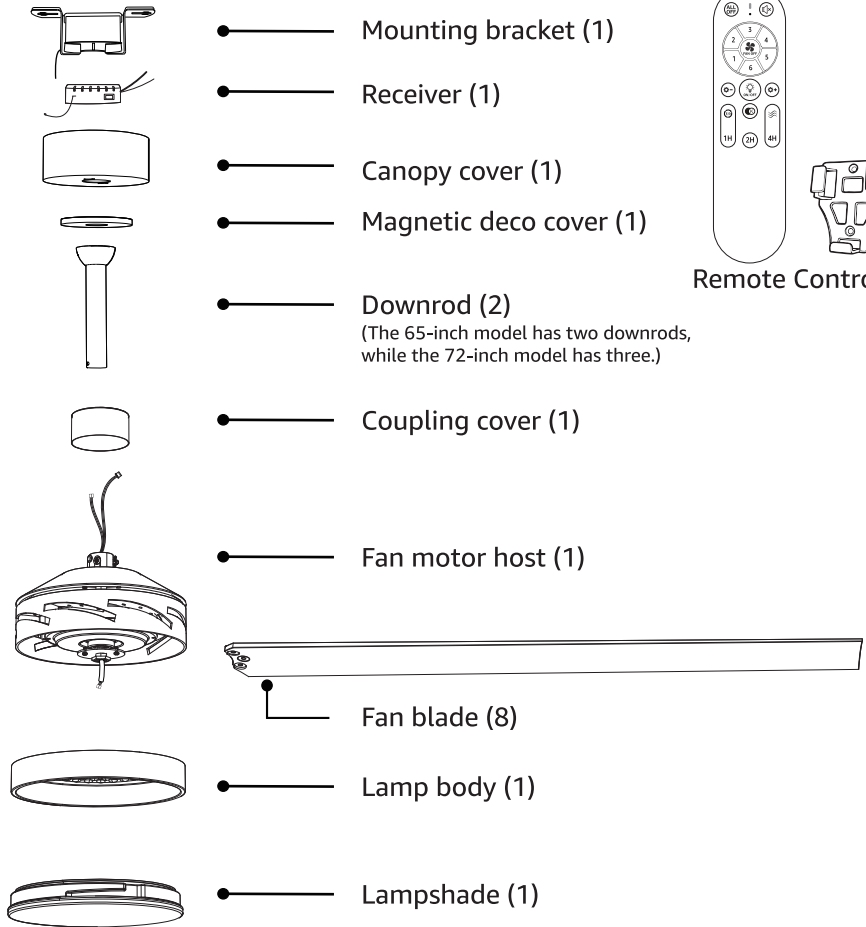

4 (a)



Washers

2 (b)



Expansion screw

2+1 (c)



Balance kit

3 (d)



Wire nut

4 (e)



Plastic expansion tube

24+2 (f)



Blade screw

4 (g)



 
Self-tapping screw

2 (h)



Outlet box screw

1+1 (i)



This hook and plastic tube are only provided with the 72-inch fan light.

## Energy Saving Usage

**Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.**

### Choosing The Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

### Turn Off When Not In The Room

If the room is unoccupied, turn off the ceiling fan to conserve energy.

### Using The Ceiling Fan Year Round

**Summer Season:** Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

**Winter Season:** Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.


# Electrical and Structural Requirements

Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds.

Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.


## Low-profile use (Figure 1)

A 1/2-inch deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.

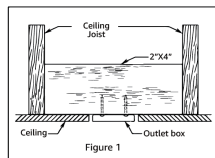


## Deep-profile use (Figure 2)

A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.

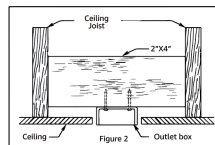

## Brace Use (Figure 3)

Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

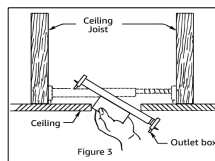

If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.


## WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.


Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

# Installation

1

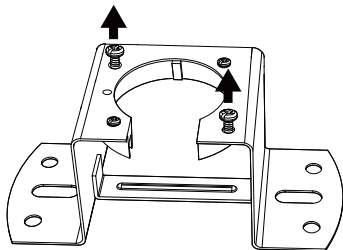


2

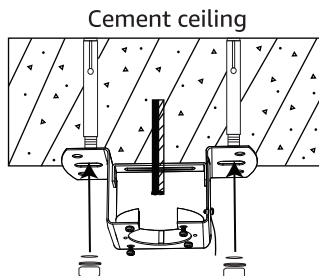


- Unscrew the two screws in the middle of the bracket counterclockwise by 2-3 turns, ensuring that they remain securely fixed to the bracket.
- Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.  
**Cement ceiling:** Drill hole on the cement ceiling, then use expansion screws or expansion tube and self-tapping screw to fix.

3

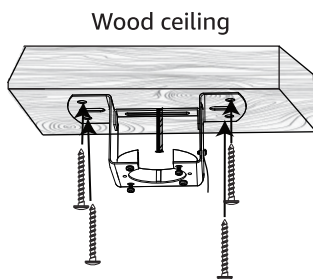


4

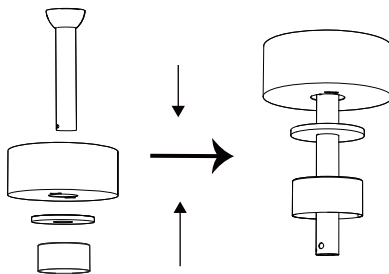


- **Wood ceiling:** Use self-tapping screws to drive into the wooden ceiling.
- Mount the canopy cover coupling cover and magnetic deco cover onto the downrod.

5

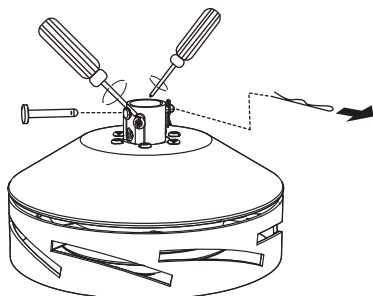


6

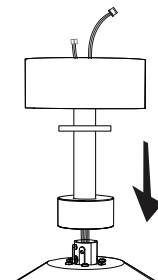


- Loosen the screws, then pull out the pin lock and remove the pin on the fan motor host.
- Assemble the canopy and coupling cover as shown in the figure, thread the wires through the downrod. (If the wires blocked, please take out the pin on the ball head)



# Installation

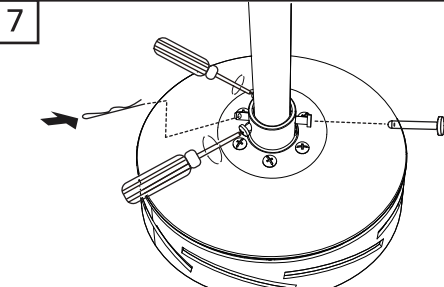



- Insert the downrod pin, lock it with the downrod clip, and then tighten the two screws on the yoke.
- Hang the downrod onto the bracket, ensuring that the two slots align.

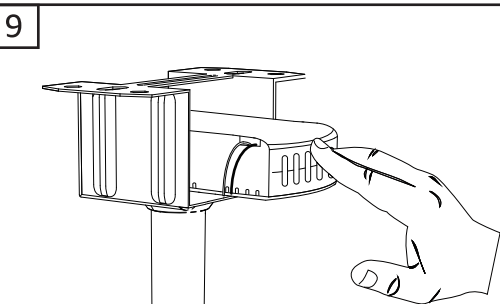

- Place the receiver on the bracket.
- Connect the wires between the receiver and the fan motor host: white to white wires, blue to blue wires, and connect the 3-pin wire connector.

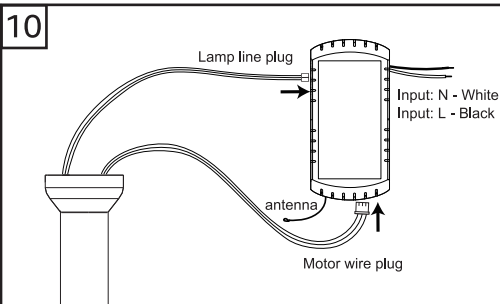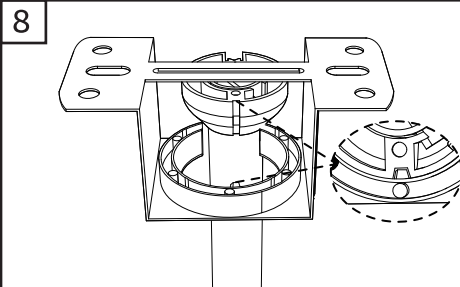

- Place the receiver on the bracket.
- Connect the wires between the receiver and the fan motor host: white to white wires, blue to blue wires, and connect the 3-pin wire connector.

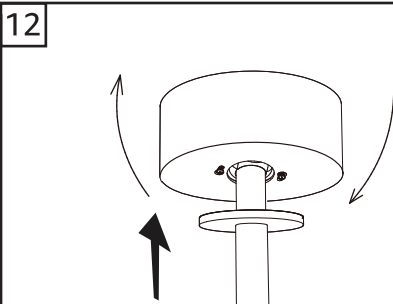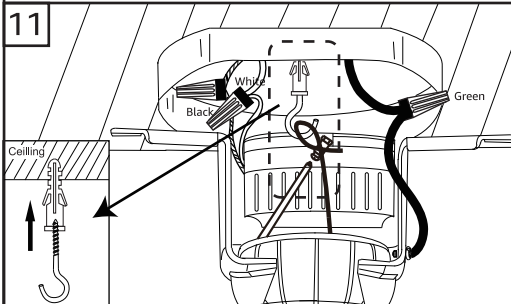

- For the 72-inch fan: first, install the ceiling hook, then attach the safety rope to the hook first (The 65-inch fan does not require this step).

## Wiring:

Connect the "Neutral wire" (white wire) from ceiling to the white wire.


Connect the "Live wire" (black wire) from ceiling to the black wire.

Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the green wire.


- Push the canopy cover upward, align it with the two screws from step one, rotate and tighten the screws to secure canopy cover, then push the magnetic deco cover upward.

# Installation

13

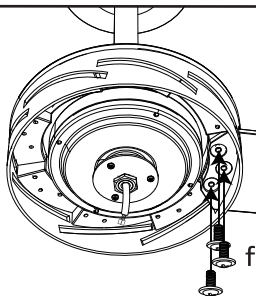


14

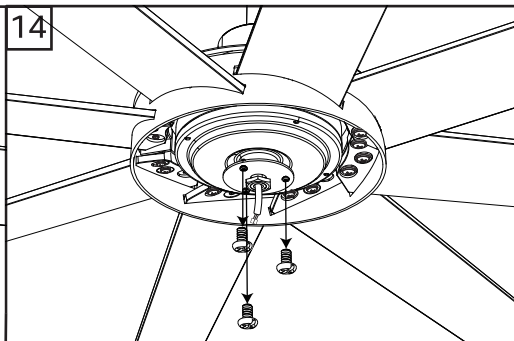


- Align the holes on the fan blade with those on the motor, and secure them with 3 screws.(Repeat this step to install the remaining fan blades.)
- Remove three screws from the triangle plate on the fan motor host.

15

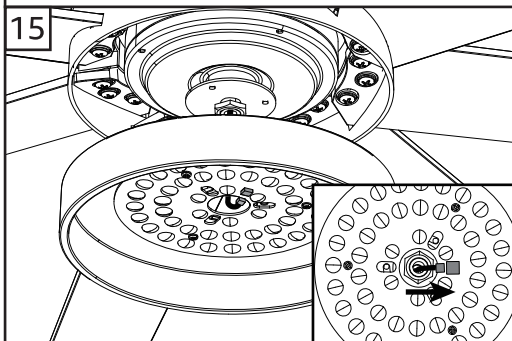


16

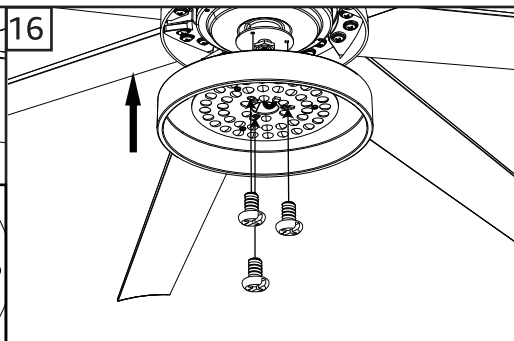


- Connect the wire terminal of the LED.
- Move the lamp body upward and secure it with the screws removed to the fan motor host. (step 14)

17

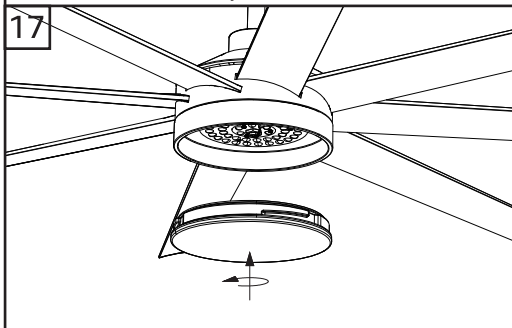

18

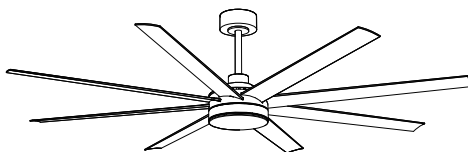


- Locate the locking point and screw the lampshade into place by turning it upward.
- Installation complete.

# Operate Your Ceiling Fan

**IMPORTANT:** Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1).

Only control light on/off via wall fan switch.

Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

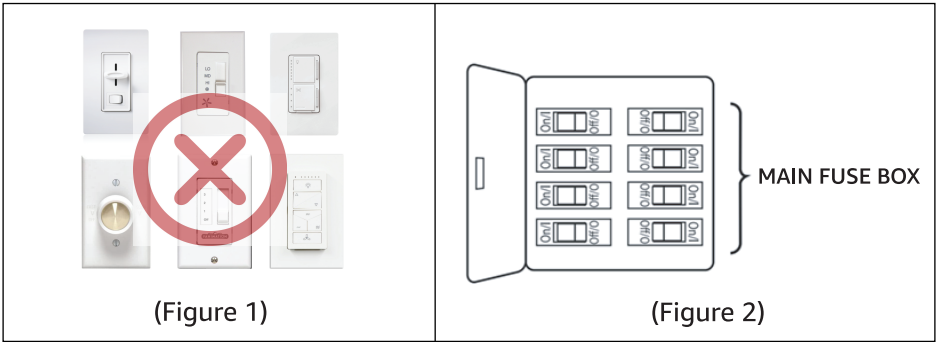


(Figure 1)

(Figure 2)


# Installation Recommended

Room Size:


Recommended Installation Height and downrod length :

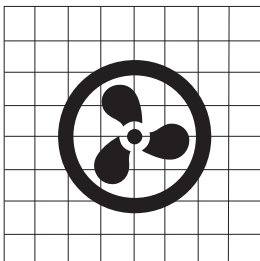

65-Inch: UP TO 18 ft x 26 ft  
72-Inch: UP TO 20 ft x 30 ft

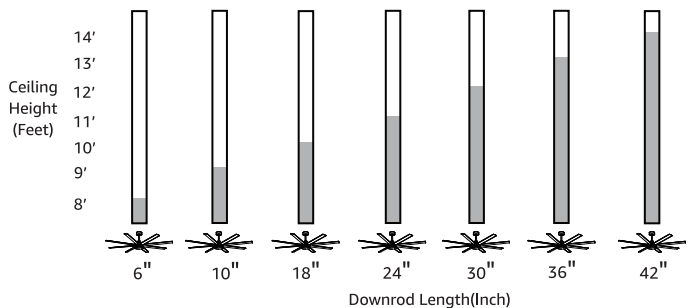

# Remote Control

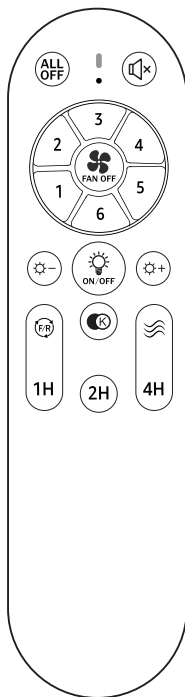

	All off
	Mute
<b>1-6</b>	Fan speed
	Fan off
	Brightness -
	Light on/off
	Brightness +
	Forward/reverse (When the fan is off, using this function will turn on the fan.)
	CCT change
	Natural wind (When the fan is off, using this function will turn on the fan.)
<b>1H</b>	All off after 1 hours
<b>2H</b>	All off after 2 hours
<b>4H</b>	All off after 4 hours

Attach wall plate using the two screws provided.



To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds.

2. Turn on the main power switch of the ceiling fan, then press and hold the button within 3s.

3. The light flashes, indicating successful pairing.

FAN OFF

If the pairing process is unsuccessful, please repeat the above steps.


# APP Control

**NOTE: Please enable Bluetooth and pair the fan with app to control it!**



1. Ensure Bluetooth is enabled on your mobile device.

2. Make sure you allow this app to access Bluetooth. (For iPhone users, Android users can ignore this step.)  
 Method 1: Click "Allow" when opening the app for the first time.  
 Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.

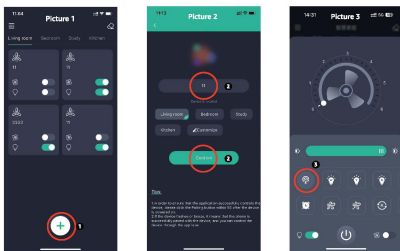

Picture 1

3. Enter the app page and click the plus sign below (Add group).

Picture 2

4. Enter any name, then click Confirm.

Picture 3


5. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.

	Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.
	Slide to change the fan speed
	Slide to change the brightness of the light
	Quick switch for "Natural" light color
	Quick switch for "Yellow" light color
	Quick switch for "White" light color
	Not available for this model
	Timer the fan
	Natural wind: fan speed will change automatically when use this function
	Sleeping wind
	Night light (10% brightness in neutral white)
	Not available for this model
	Fan moves forwards
	Fan moves reversely
	Oscillating Funtion (Not available for this model)
	Light off/on
	Fan off/on

# Troubleshooting

PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	<ol style="list-style-type: none"> <li>1. Check main and branch circuit fuses or circuit breakers.</li> <li>2. Make sure forward/reverse switch is firmly in bottom or top position. Fan will not operate when switch is in the middle.</li> <li>3. Make sure that the wall control is turned "ON"</li> <li>4. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off.</li> <li>5. Make sure battery has power, change battery(2*AAA) to try again.</li> <li>6. The remote controller is not paired, check Page.9 to pair.</li> <li>7. The motor or receiver or remote controller is fault, contact our customer service.</li> </ol>
If Fan Sounds Noisy	<ol style="list-style-type: none"> <li>1. Make sure all screws in motor housing are snug. (not over tightened)</li> <li>2. Make sure the screws which attach the fan blade bracket to the motor are tight.</li> <li>3. Too close to the wall, make sure the blades at least 3ft to the wall.</li> <li>4. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing.</li> <li>5. If using an optional ceiling fan lightkit, make sure the screws securing the lampshade tight.</li> <li>6. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control.</li> <li>7. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.</li> </ol>
If Fan Wobbles	<p>All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step.</p> <ol style="list-style-type: none"> <li>1. Check that all blades are screwed firmly into motor housing.</li> <li>2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist.</li> <li>3. Make sure the ball head into the slot.</li> </ol>

# Troubleshooting

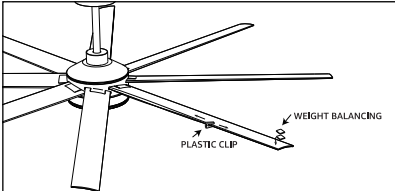PROBLEM	SUGGESTED REMEDY
<p>If Fan Wobbles</p>	<p>4. Make sure the the downrod is well fixed by screws                      5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.                      6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps:  <u>How to use balancing kit:</u></p> <p>(1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest.                      (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade.                      (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved.                      (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement.                      (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned.                      (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights.</p>  <p>The diagram shows a side view of a ceiling fan blade. A small plastic clip is attached to the trailing edge of the blade, approximately halfway between the blade holder and the tip. An arrow points to a specific location on the top surface of the blade, labeled 'WEIGHT BALANCING', indicating where a balancing weight should be placed.</p>
<p>If Light Does Not Work or Flickering</p>	<p>1. Check for loose or disconnected wires in fan switch housing.                      2. Check the wiring of receiver to the light kit.                      3. Check for loose or disconnected wires in light kit, make sure connector is correct inserted.                      4. Check for faulty light bulbs. (light bulb version only)                      5. There is too many ceiling fans with different control system in the same area, shut down other ceiling fansto check if still flickering.                      CAUTION: Make sure main circuit is turned off before entering switch housing.</p>

## Customer Service

### 30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

### Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.


### Quick Response Within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. ( It would be appreciated if you could provide us with a video or pictures, if available)

### 2-Year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

# Replace The Downrod

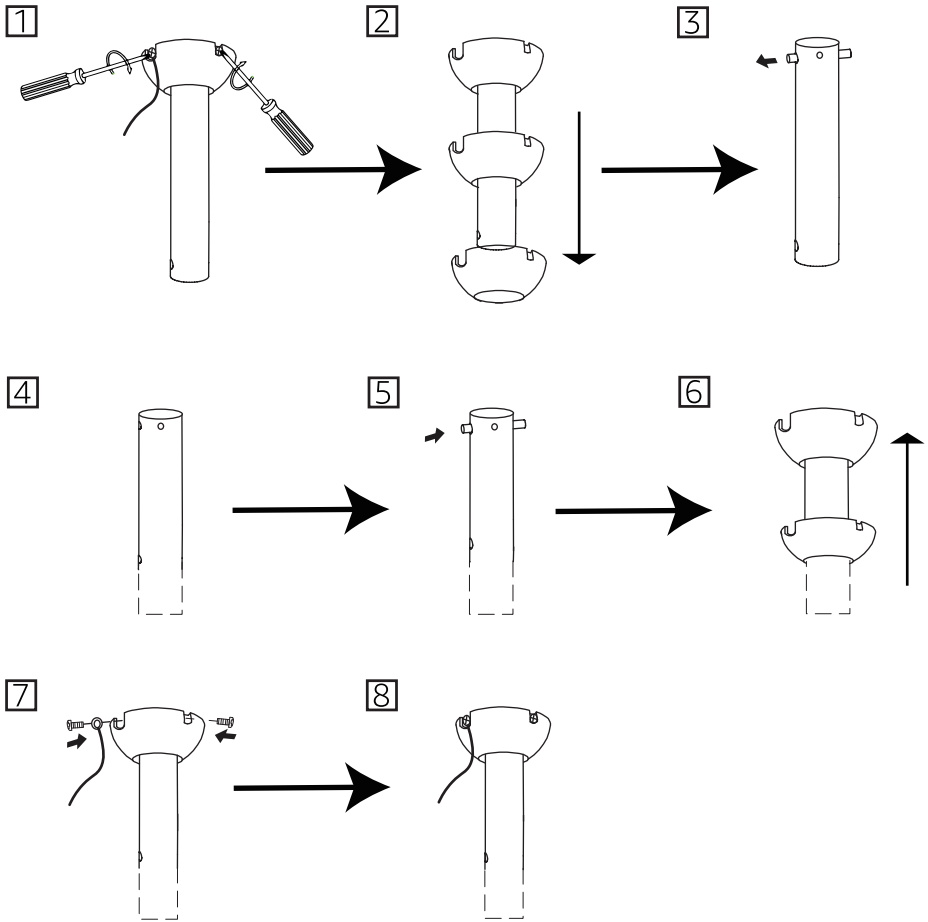

## **!** WARNING

### Fan fall hazard

To prevent serious injury or death:

- Always follow the downrod assembly instructions exactly.
- Verify the downrod is assembled correctly by firmly pulling on the hanger ball.
- Pin must be reinserted to secure downrod assembly.

