 
 
 
 
 
 
 
 
 
 
 
 
 

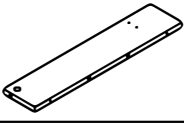 
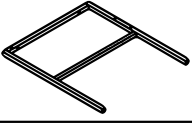 
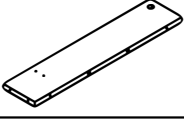 
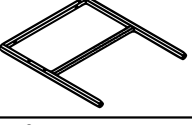 
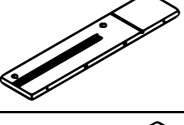 
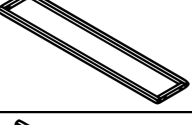 
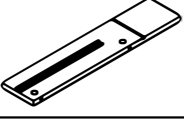 
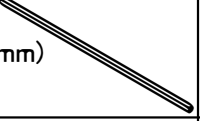 



# ASSEMBLY INSTRUCTION

 
 

 
 

 
 
 


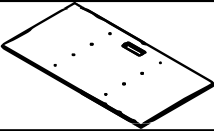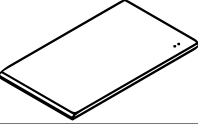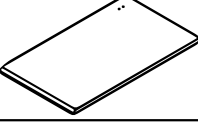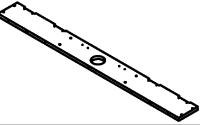


 
 
 

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the cation during shipment. Seperate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


\*\*\* Do not fully tighten screws until fully assembled \*\*\*

## COMPONENT PARTS

 DESCRIPTION	PART NAME	QTY (PCS)	DESCRIPTION	PART NAME	QTY (PCS)
①	BOTTOM PANEL 	1	⑬	BACK PARTITION 	1
②	C-TOP PANEL 	1	⑭	DRAWER FACE 	1
③	L-TOP PANEL 	1	⑮	LEFT DRAWER SIDE 	1
④	R-TOP PANEL 	1	⑯	RIGHT DRAWER SIDE 	1
⑤	BACK PANEL 	1	⑰	DRAWER BACK 	1
⑥	L-FRONT PANEL 	1	⑱	DRAWER BOTTOM 	1
⑦	R-FRONT PANEL 	1	⑲	USB SOCKET 	1
⑧	LEFT PANEL 	1	⑳	LEFT FRAME 	1
⑨	RIGHT PANEL 	1	㉑	RIGHT FRAME 	1
⑩	LEFT PARTITION 	1	㉒	BACK FRAME 	1
⑪	RIGHT PARTITION 	1	㉓	CROSS TUBE (L: 1028mm) 	1
⑫	FLIP BOARD 	1			

# HARDWARE REQUIRED

Ⓐ		ALLEN KEY		1 PC
Ⓑ		CAM BOLT	34.8mm	10 PCS
Ⓒ		CAM LOCK		10 PCS
Ⓓ		WOODEN DOWEL	ø8mm*30mm	13 PCS
Ⓔ		SCREW	8#*38mm	28 PCS
Ⓕ		SCREW (Black)	6#*12mm	38 PCS
Ⓖ		SCREW	7#*15mm	12 PCS
Ⓗ		BOLT	ø1/4"*32mm	10 PCS
Ⓘ		BOLT	ø5/32"*25mm	2 PCS
Ⓙ		WASHER	ø12mm	2 PCS
Ⓚ		PLUG	20mmSQ	4 PCS
Ⓛ		HINGE		4 PCS
Ⓜ		HINGE		2 PCS
Ⓝ		L-LID SUPPORT		1 PC
Ⓞ		R-LID SUPPORT		1 PC
Ⓟ		KNOB		1 PC
Ⓠ		GLUE		1 PC
Ⓡ		CAP		1 PC

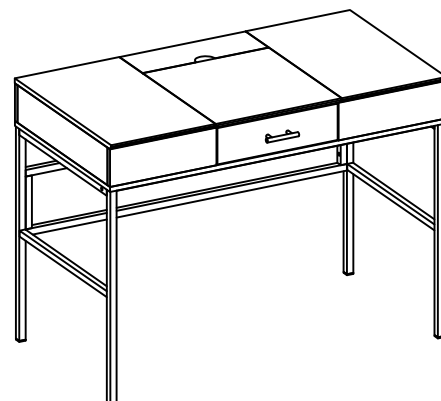

## Attention

 
\*\*\* Assembly required: 2-people recommended.




\*\*\* Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

## How to assemble:


## STEP 1

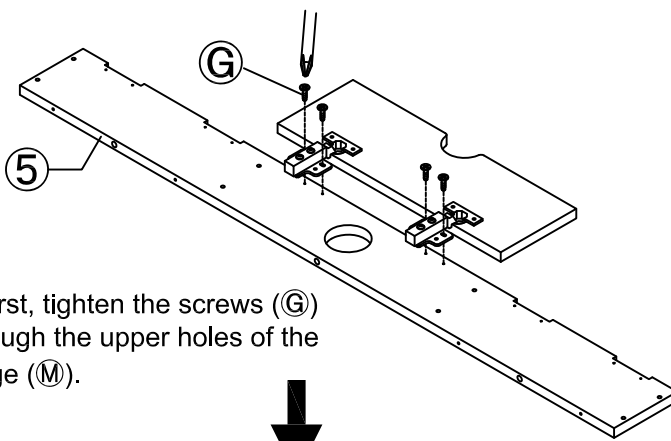

**\*\*First, tighten the screws (G) through the upper holes of the hinge (M).**

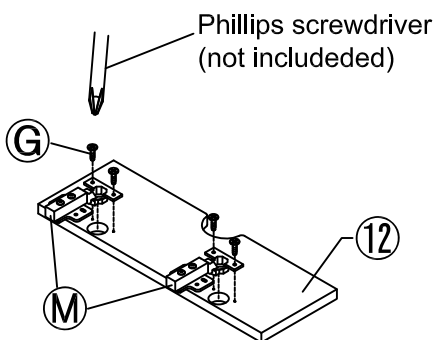 


**\*\*Attention: Use the carton as a working surface to prevent table-top damage during assembly.**

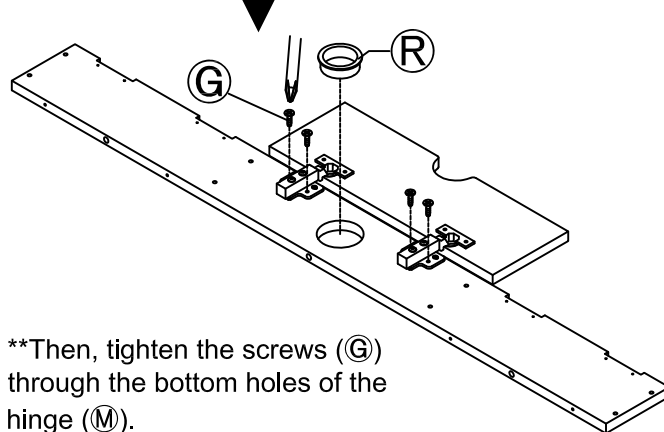 


**\*\*Then, tighten the screws (G) through the bottom holes of the hinge (M).**

 
## STEP 2

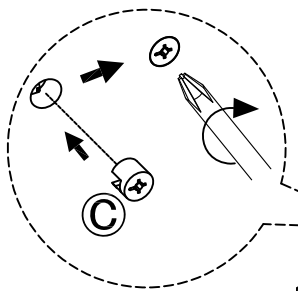


Phillips screwdriver  
(not included)

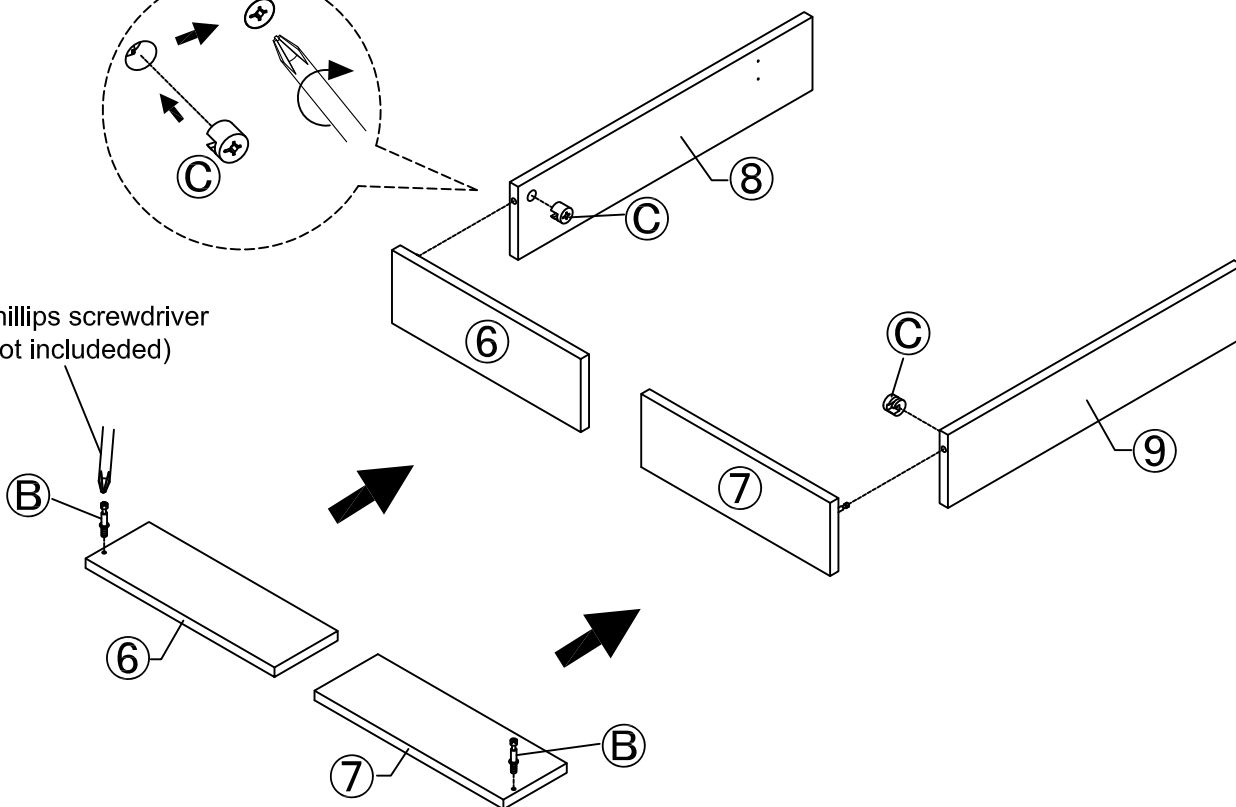 

## STEP 3

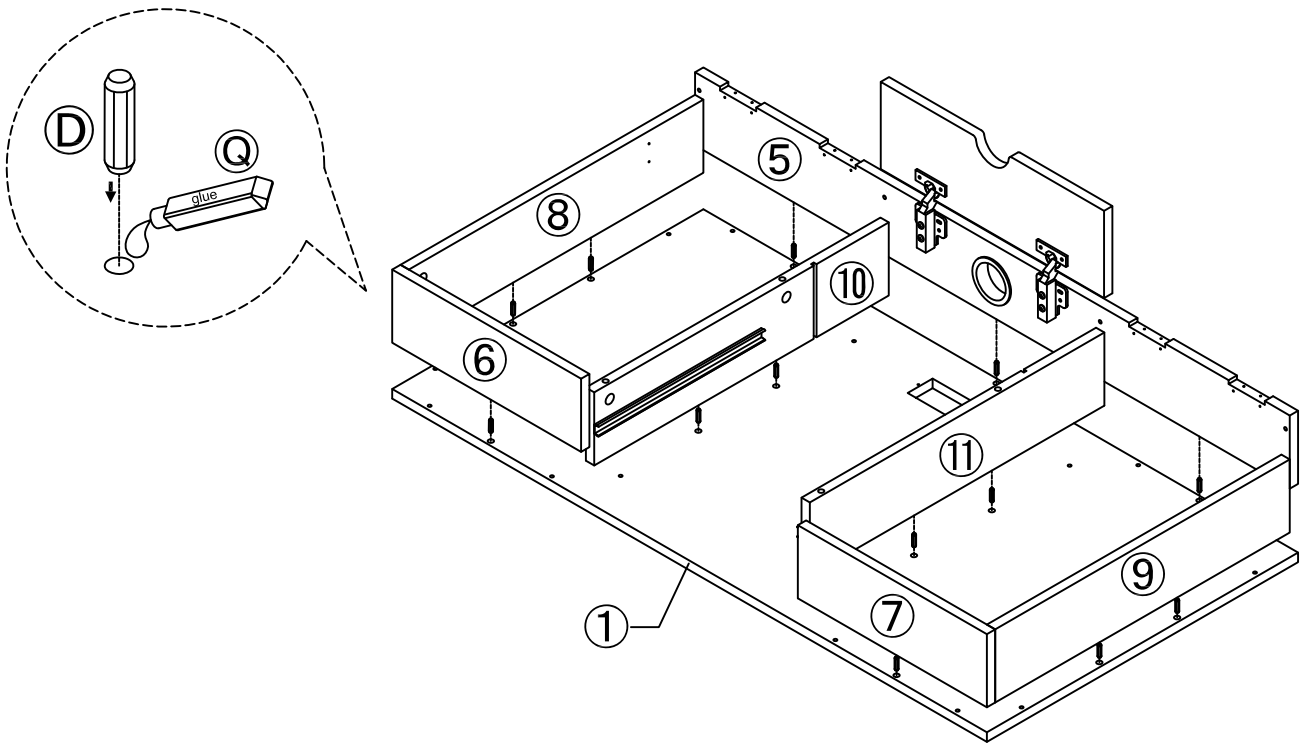 


## STEP 4

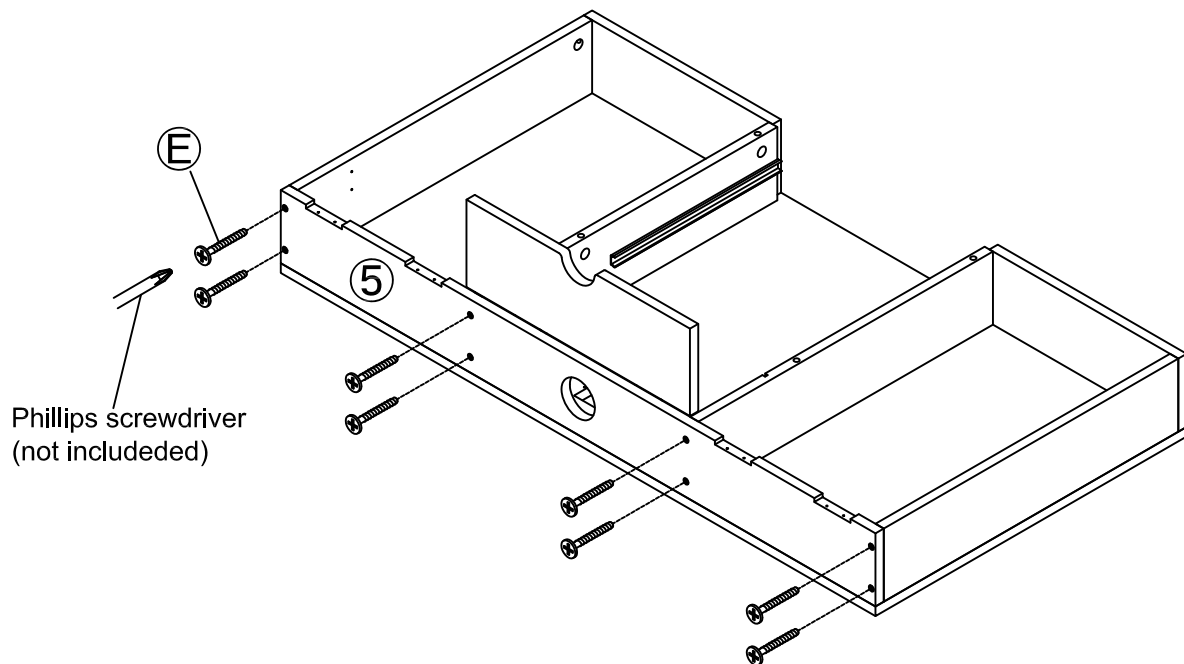 


## STEP 5

 Phillips screwdriver  
(not included)

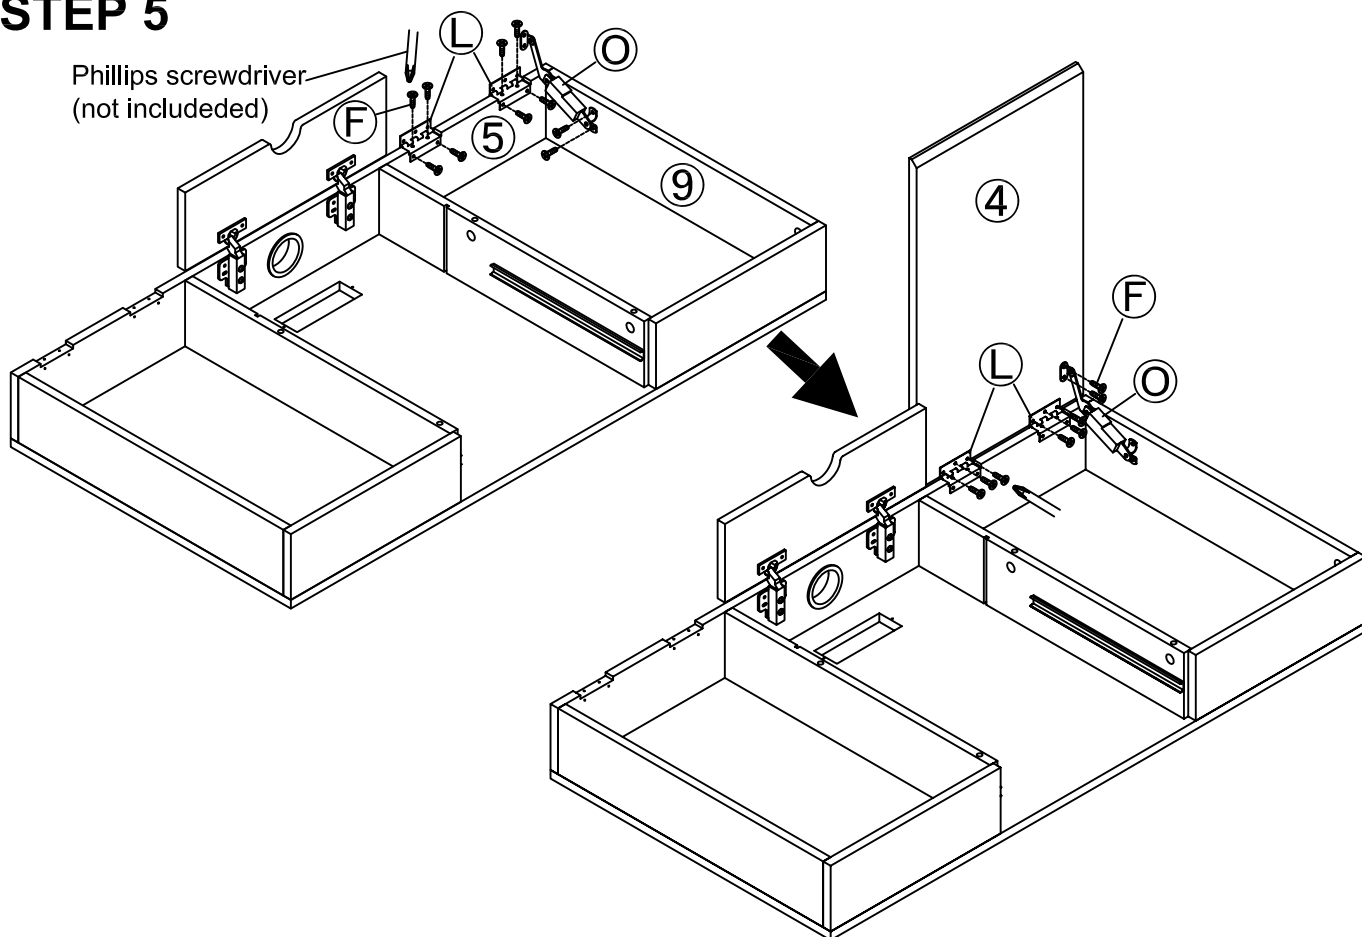


## STEP 6

 Phillips screwdriver  
(not included)

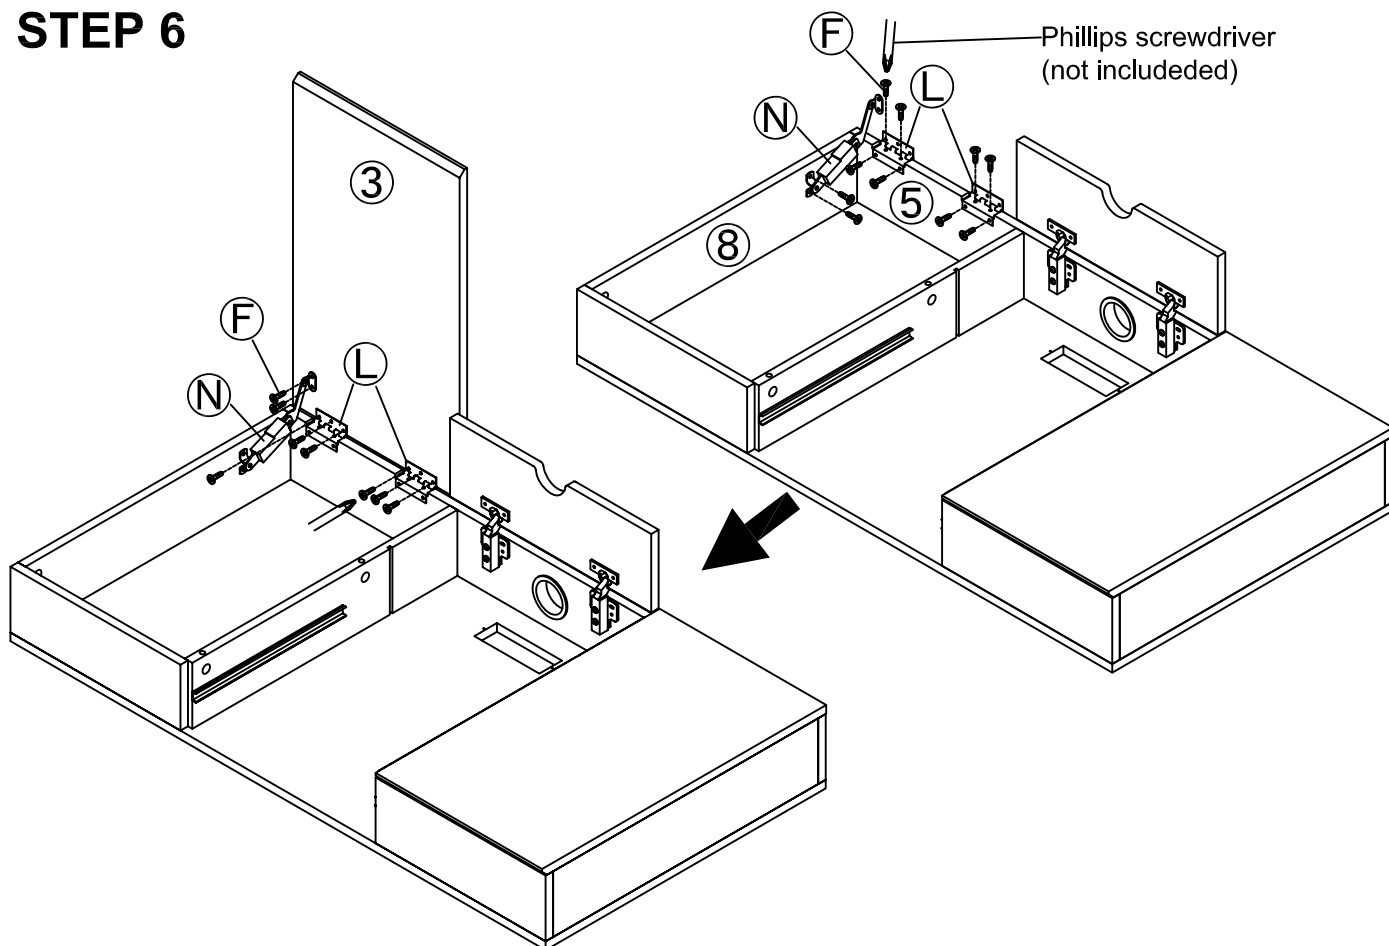


## STEP 7

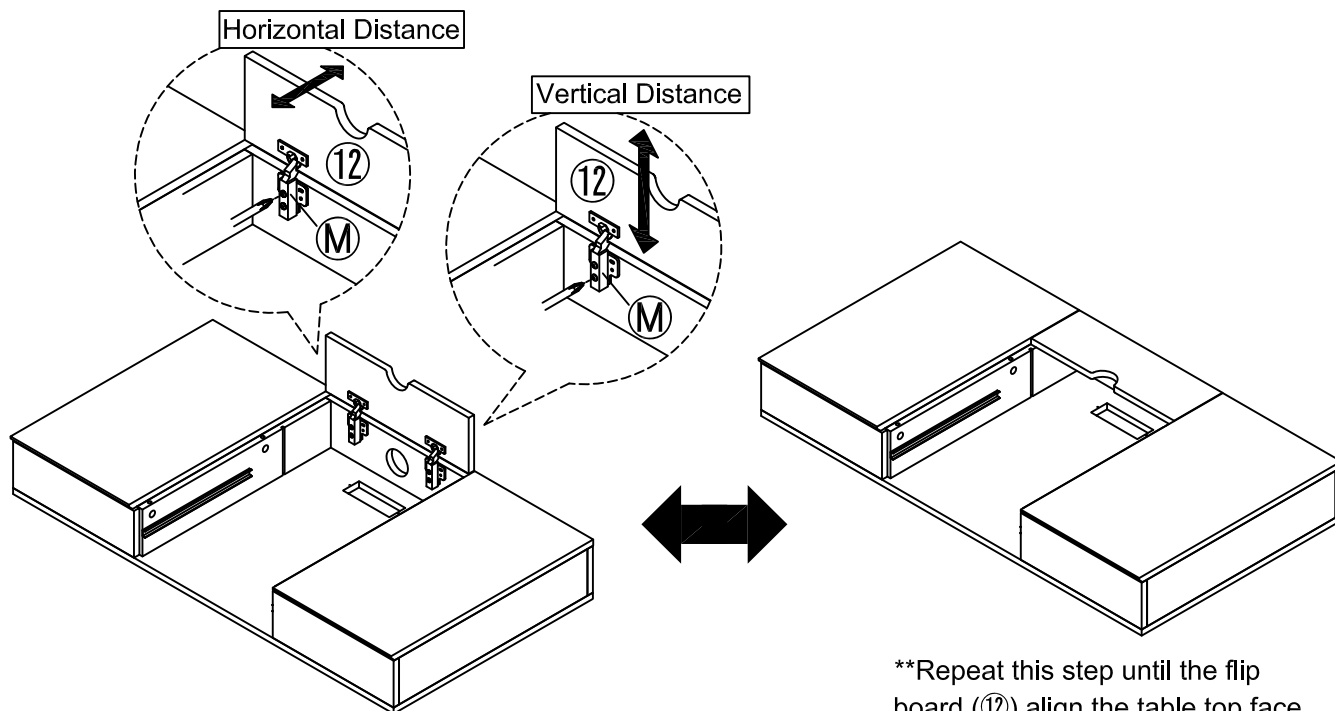 


\*\*Regulate the direction of the flip board (12) by the hinge (M).

\*\*Repeat this step until the flip board (12) align the table top face & back side.

## STEP 8

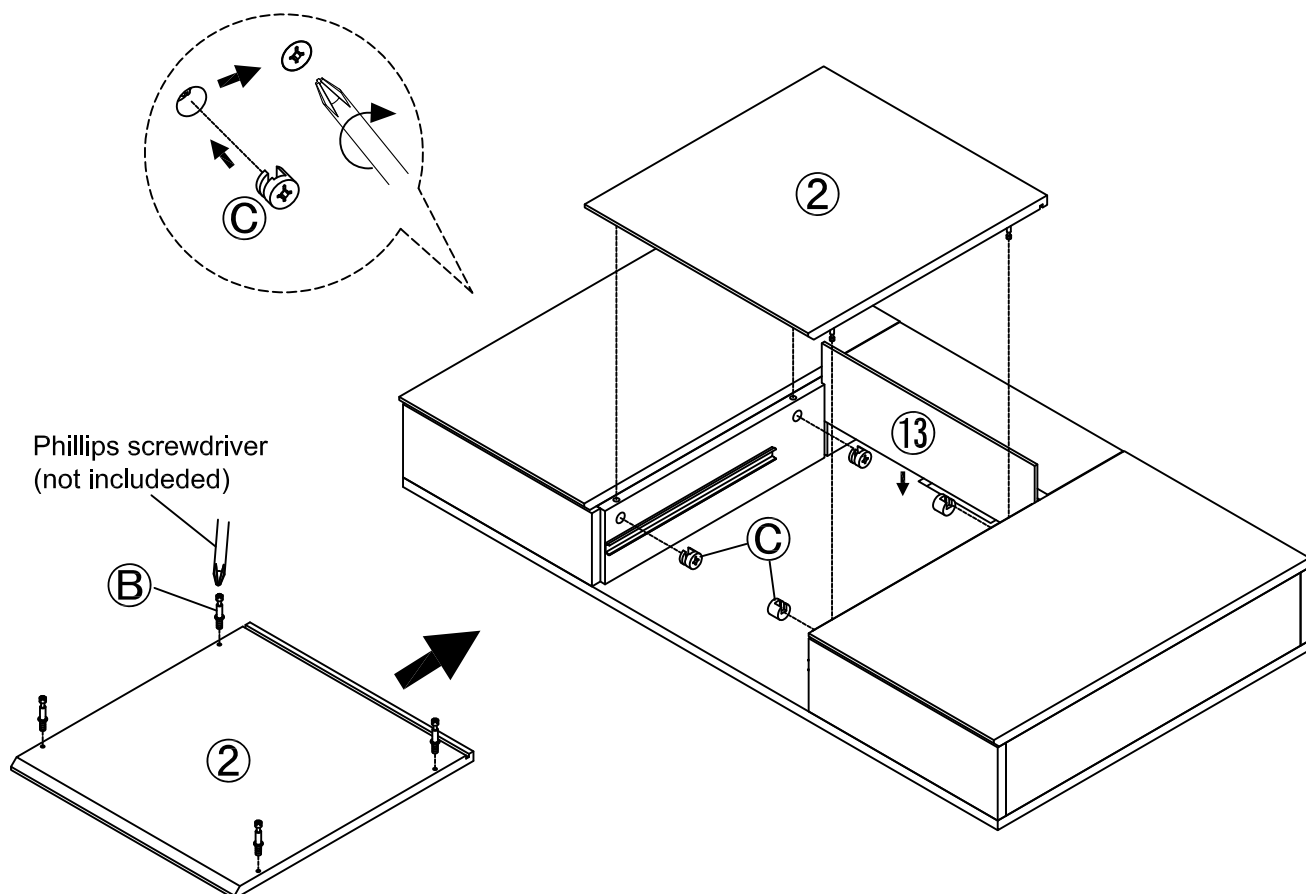 


## STEP 9

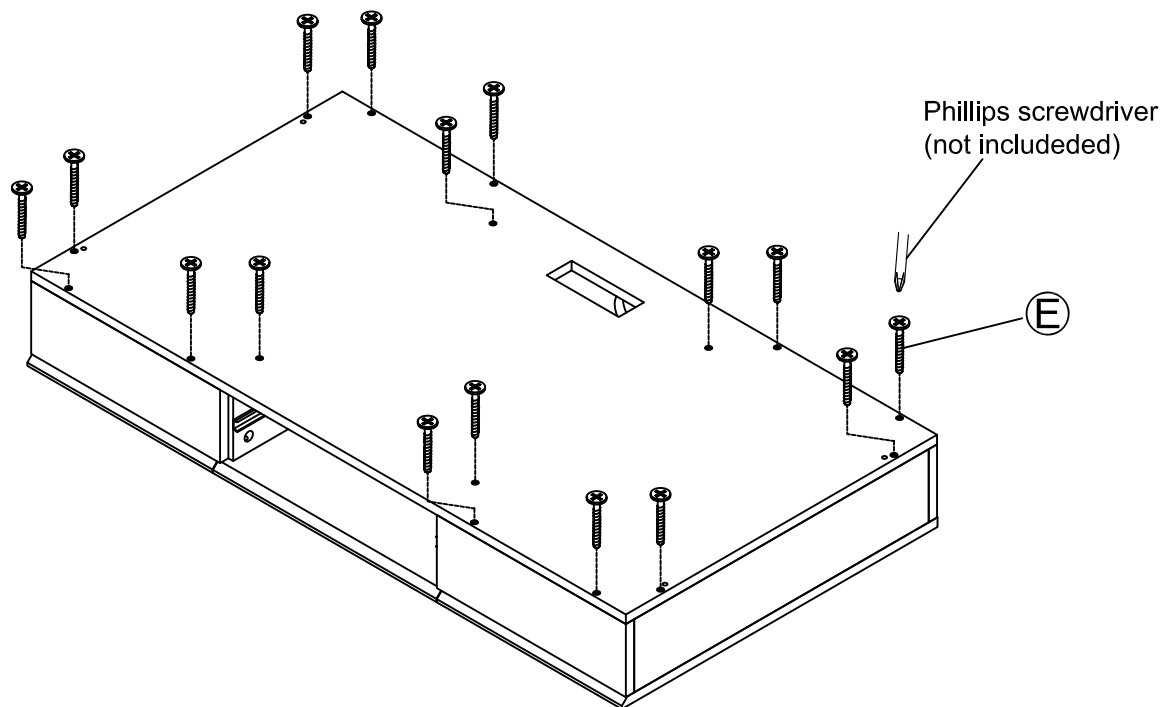 


**\*\*Attention:** Use the carton as a working surface to prevent table-top damage during assembly.


## STEP 10

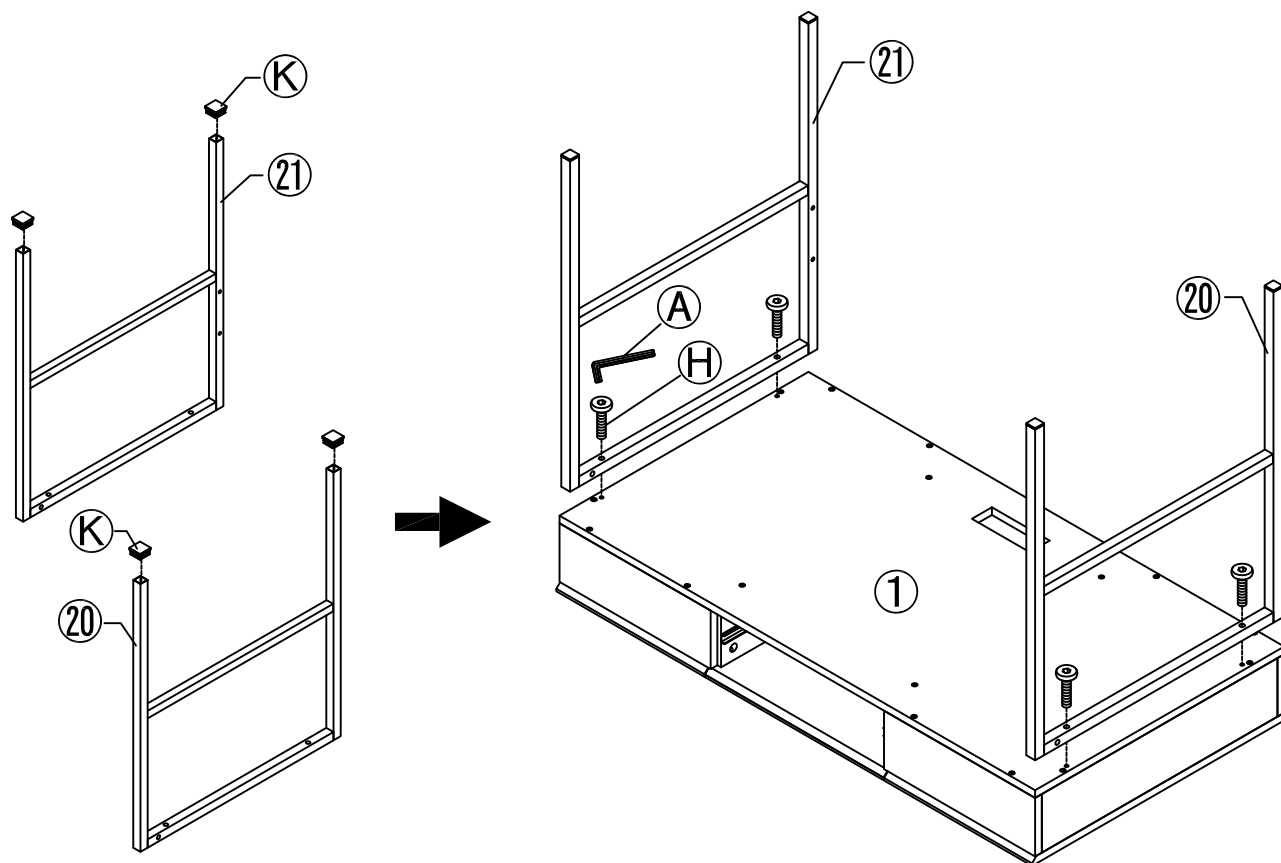 

## STEP 11

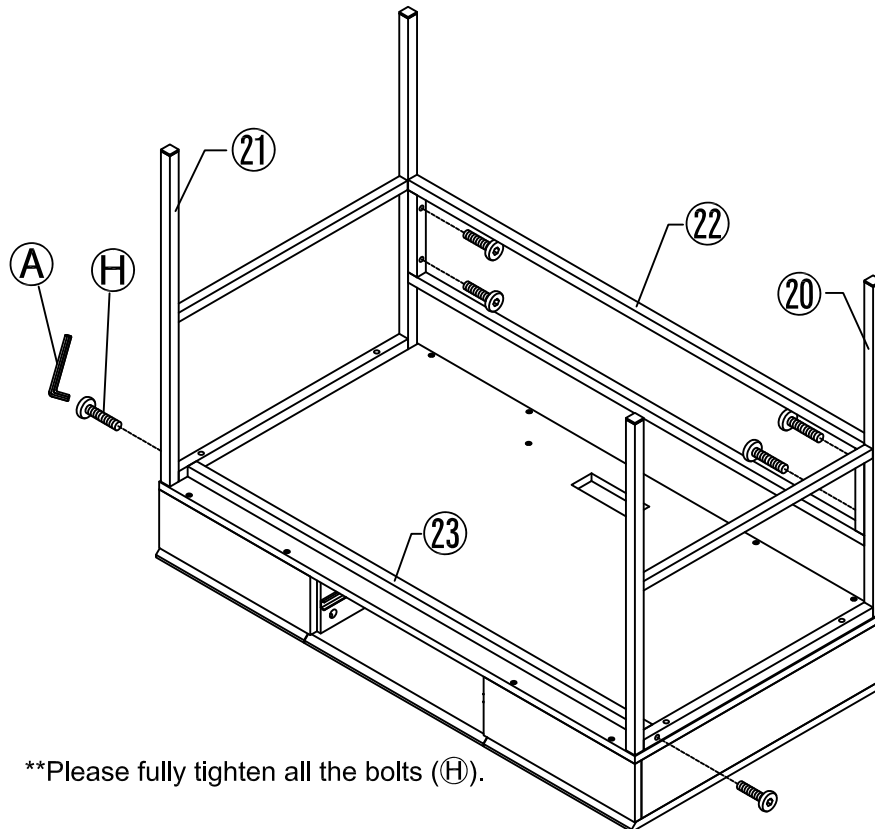 


## STEP 12

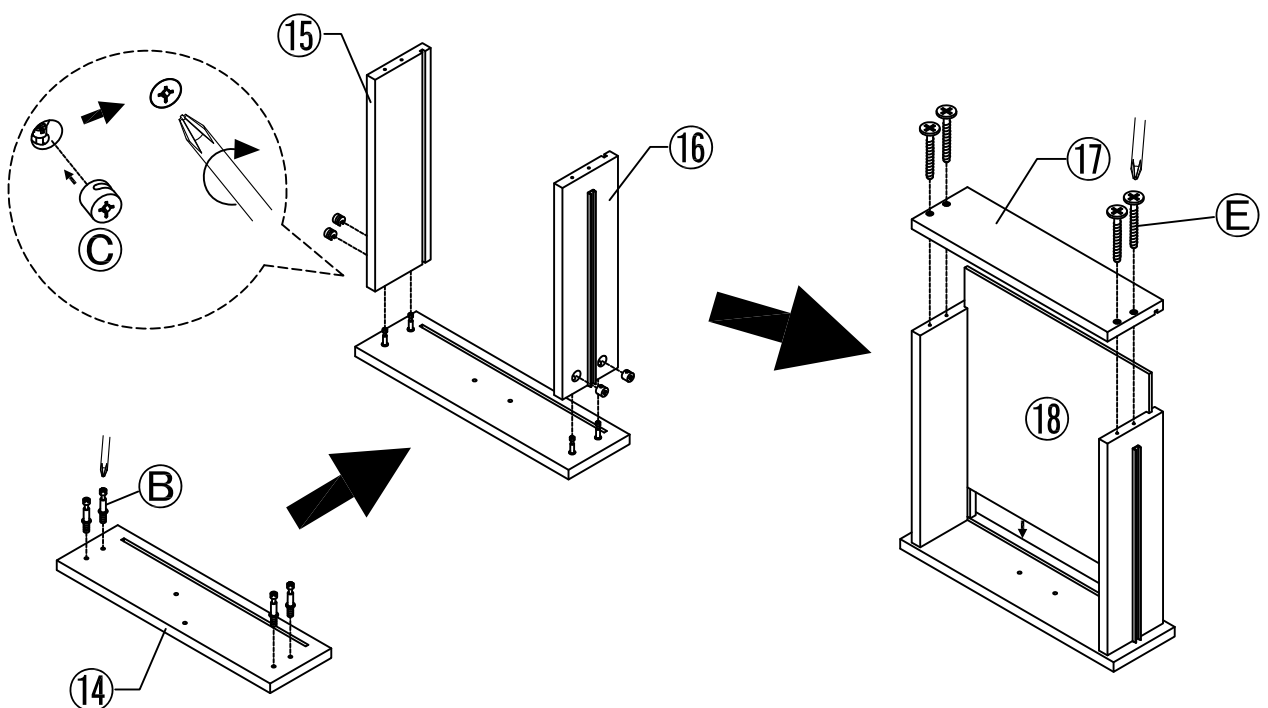 



## STEP 13

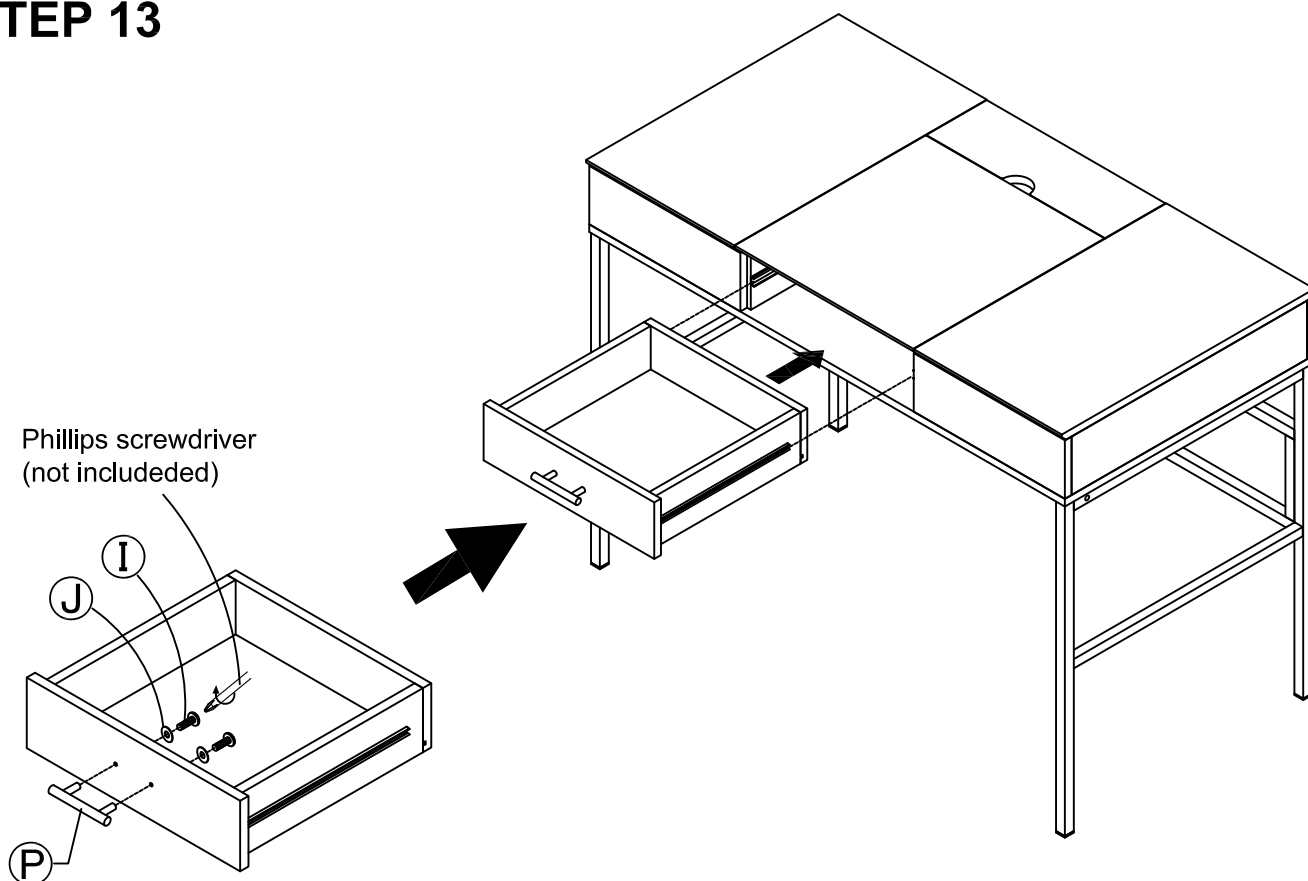 

## STEP 14

