


#### **ASSEMBLY INSTRUCTIONS**

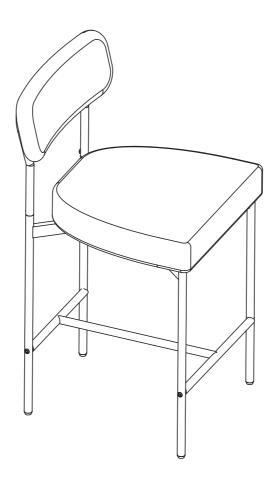


# **MARNING**


- Assembly: Adult assembly required.

  CHOKING HAZARD: Small screws and parts can pose a choking risk. Keep them away from children under 3 years old.
- Packaging: Keep these packaging materials out of reach of children.
- **Inspection:** check the product for wear and tear, and any part is damaged, missing, or has loose screws. Check all fasteners regularly.
- Weight Limit: 300 lbs.
- Safety: Keep away from heat sources.
- Storage: Do not leave outdoors or near wet surroundings.


# PRODUCT SPECIFICATIONS

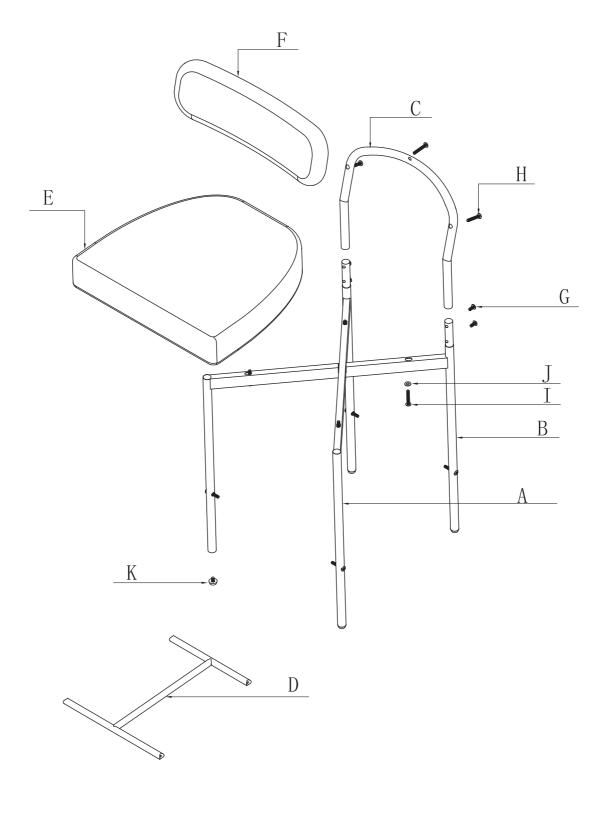


### PARTS LIST

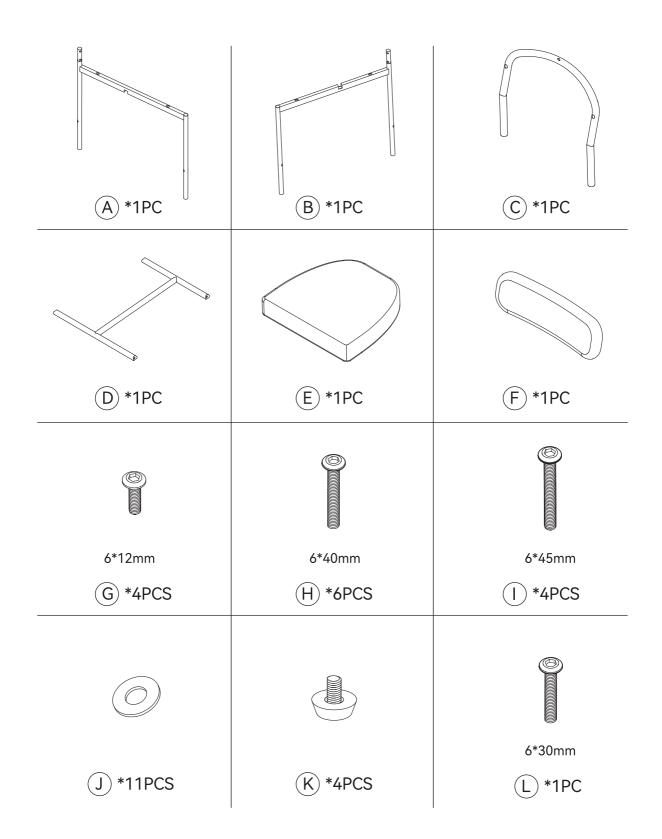


Insert A into B along the middle notch until the surface is flush.

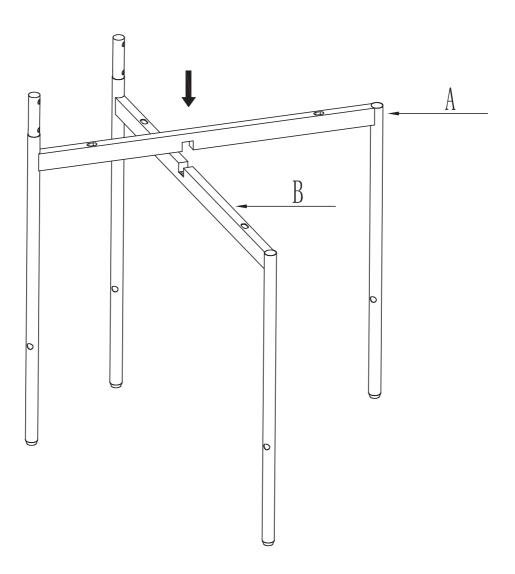


Place the pedal against the hole inside the leg tube AB and lock it in from the outside hole with screw H.

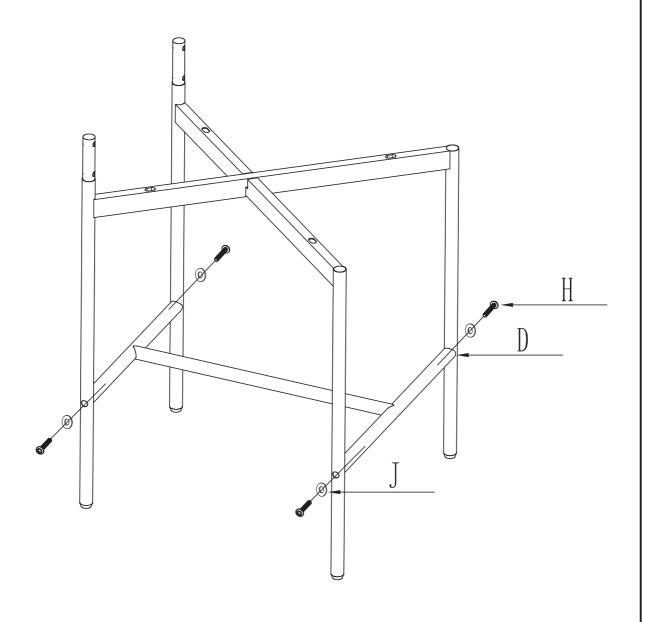


Align the seat cushion E with the hole on the leg AB, and insert the screw I and the washer J from below.

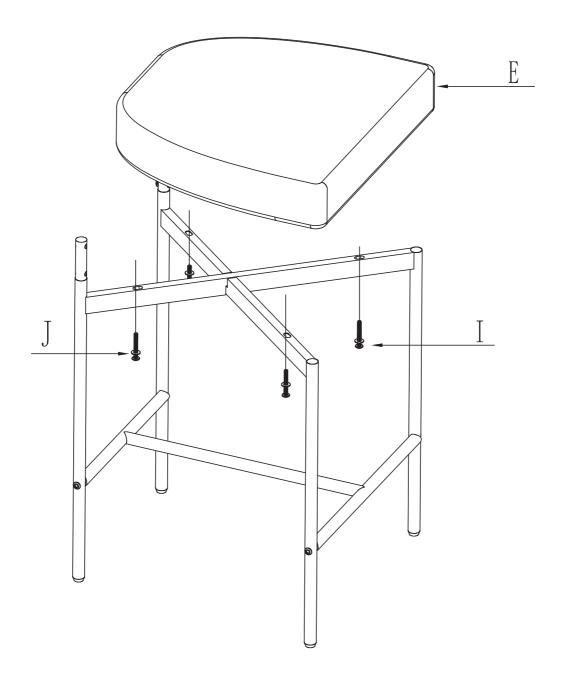


Align the cushion F and the cushion elbow E according to the curvature and hole position, and then tighten the screw H&L from the back of E.

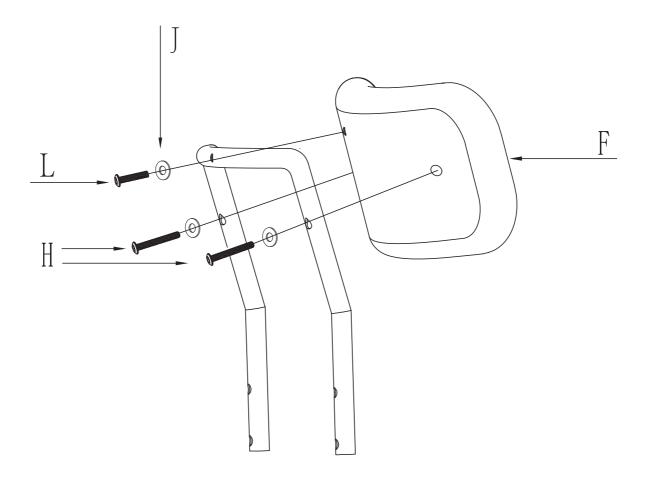


Insert the assembled cushion above the leg AB, align the hole position and tighten the screw G from the back.

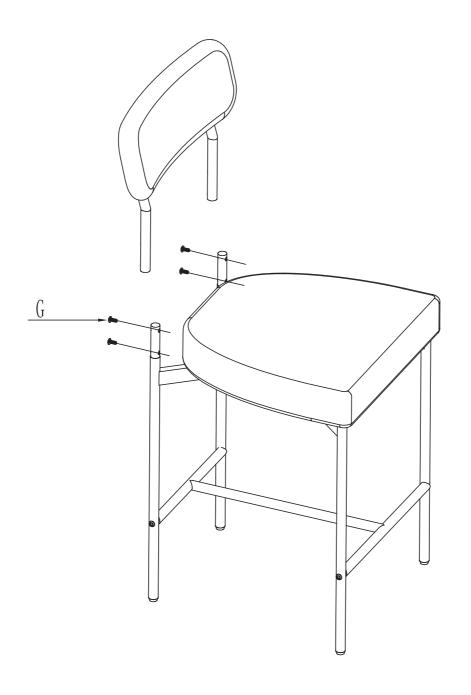

After installation, adjust the foot nails at the bottom to keep the chair balanced.

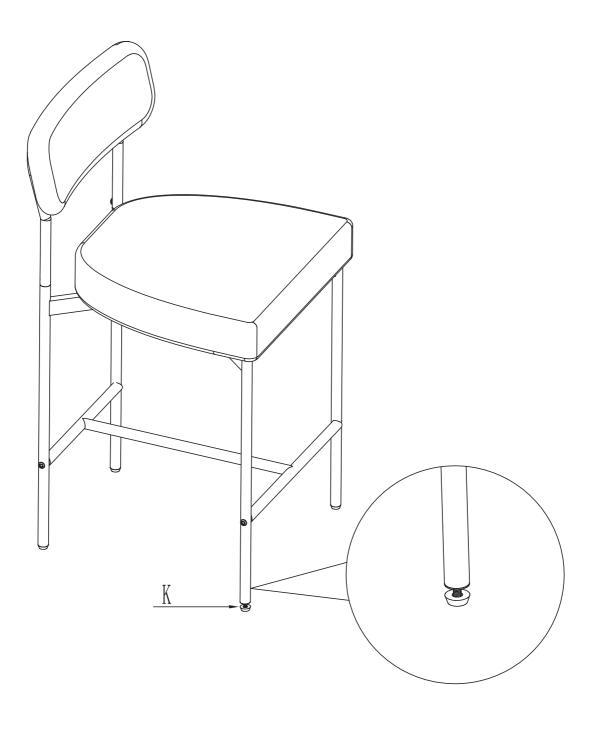

Installation completed

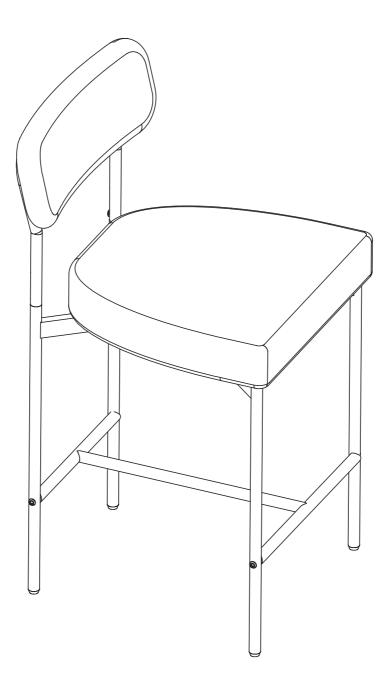

#### MAINTENANCE AND PRESERVATION

#### **WARRANTY**

metal furniture are generally more durable than plastic ones, but they can sometimes break. While metal furniturecan last many years with proper care, products are not guaranteed against damage due to play and use.

Products sold are guaranteed against defects in materials and workmanship for twelve (12) months from the date of original purchase. This warranty is valid only under normal use and for the intended purpose of the product.

Comfortable experience, Bringing aesthetics to life