 


IMPORTANT!
Do not tighten too hard: this can damage boards. Please just screw 30%-50% until all the screws have been screwed into the holes.

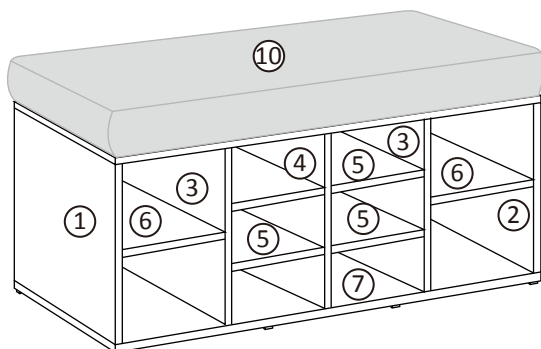

 
 
 
 
 
 
 
 
 
6090-SR7701

Assembly & User Instructions

Parts list

 
Letter	Components		Pieces
A		40mm	32
B		Wooden dowels	4
C			8
D		Allen key	1
E		M3.5×14mm	2
V		Cam covers	20

Parts list

 
	450×370×12mm	1	①
	450×370×12mm	1	②
	450×356×12mm	2	③
	450×356×12mm	1	④
	356×230×12mm	4	⑤
	356×250×12mm	2	⑥
	1020×370×12mm	1	⑦
	1020×370×12mm	1	⑧
	1004×460×3mm	1	⑨
	1022×374×80mm	1	⑩

Assembly

1

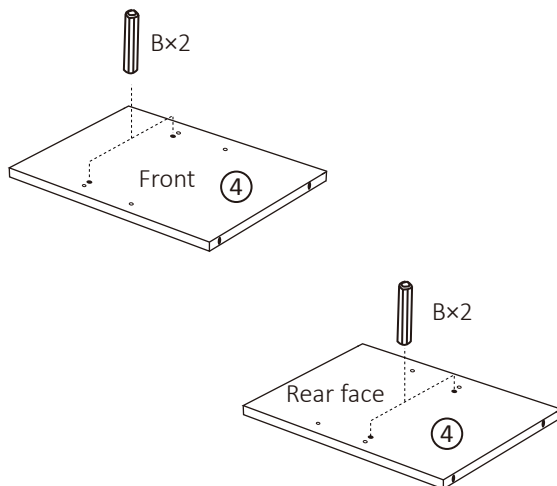 


2

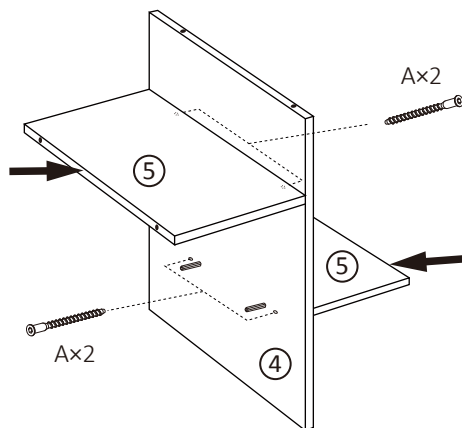 


Assembly

3

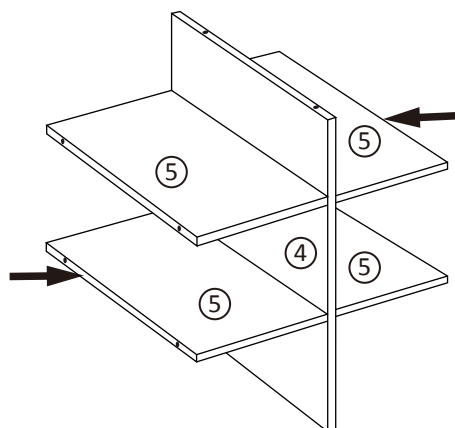 


4

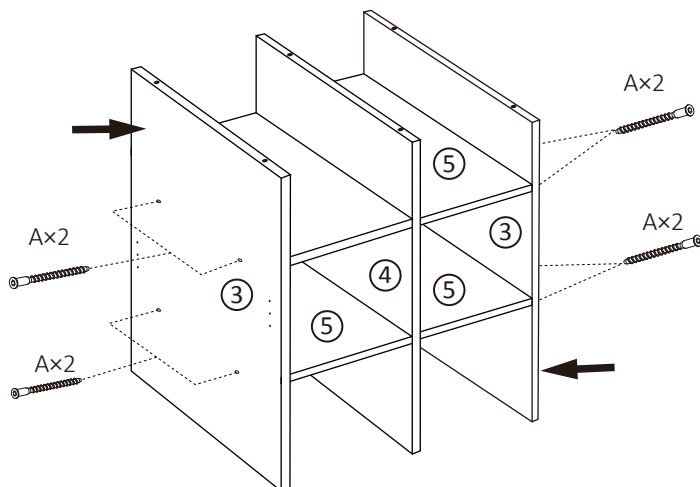 


Assembly

5

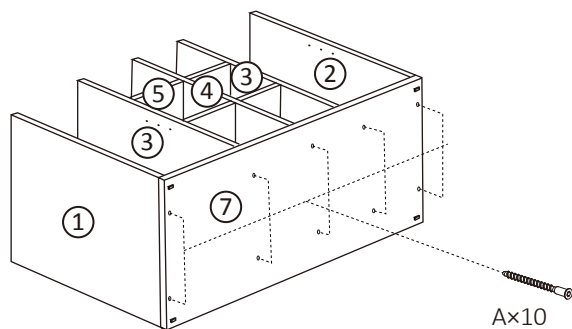 


6

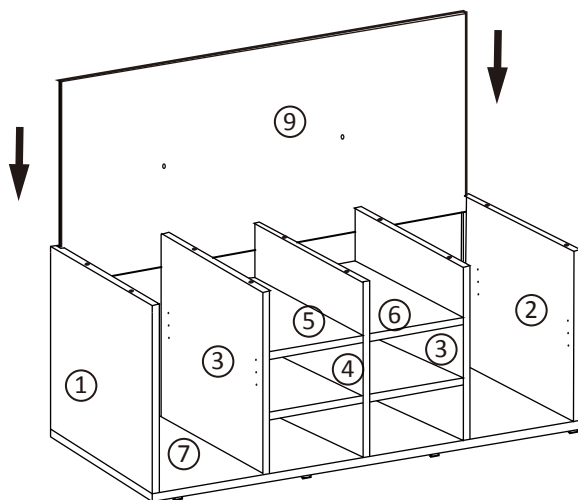 


Assembly

7

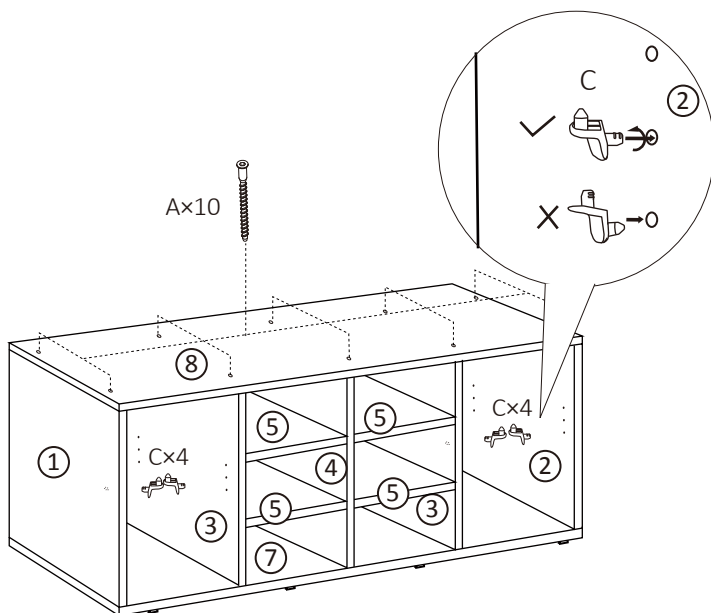 


8

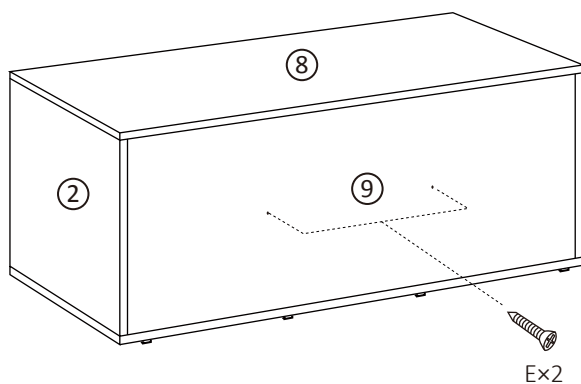

Assembly

9

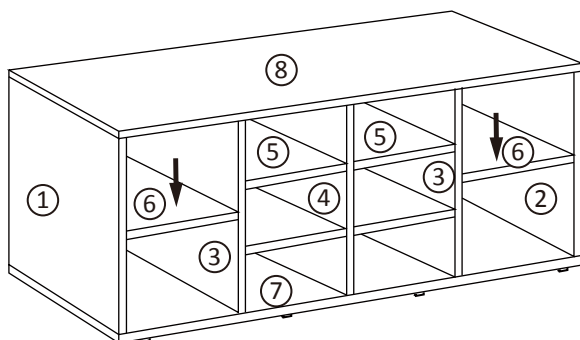

10 Note: please fit cam covers (V) onto visible/exposed screw (A) to complete assembly.

