




ASSEMBLY INSTRUCTIONS


INSTRUCCIONES DE INSTALACIÓN

INSTRUCTIONS DE MONTAGE

1. Locking casters should be installed front and non-locking rear.
Las rueditas pueden instalarse al frente o en la parte posterior si ésta no se bloquea.
Les roulettes peuvent être installées sur la face avant ou postérieure si celle-ci ne se bloque pas.

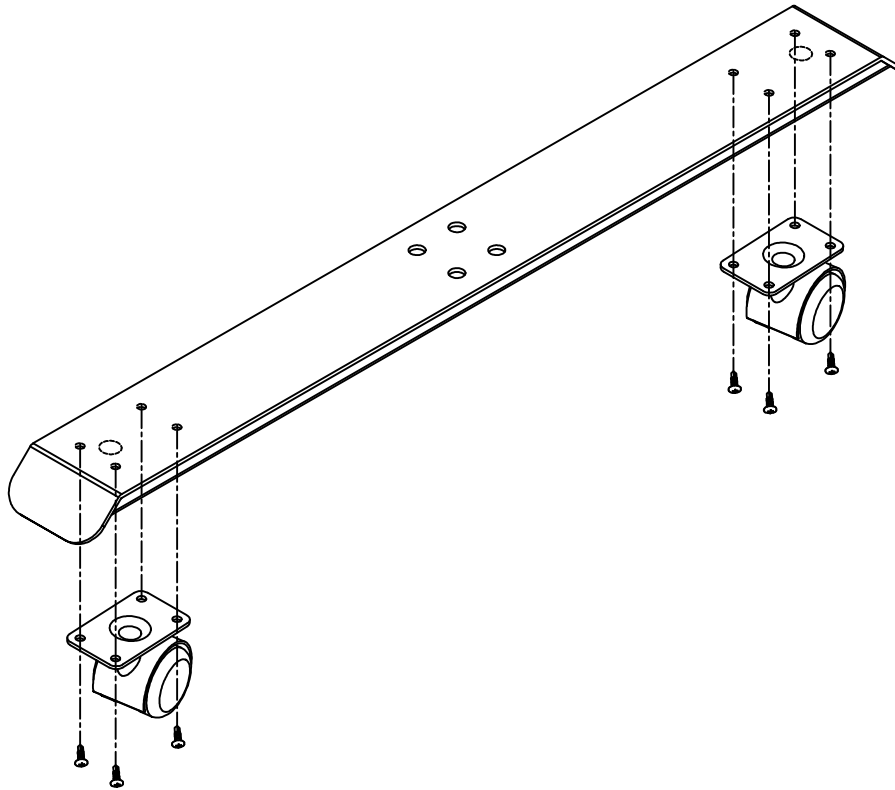


A.

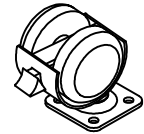


Locking casters	2 PCS
Las rueditas	PZC
Les roulettes	PIECE

B.

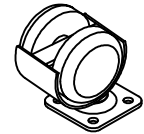

Castors	2 PCS
rueditas	PZC
roulettes	PIECE

C.

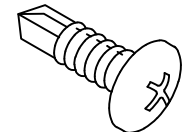

Caster screws	16 PCS
tornillos de rueditas	PZC
vis des roulettes	PIECE

Model/ modelo/ modèle: ALE-HT3004

Manufactured for/ Hecho para/ Fabriqué pour Alera®/ Essendant Co.,
One Parkway North, Deerfield, IL 60015 © 2016 Essendant Co.
Made in/ Hecho en/ Fabriqué en Taiwan