


**ASSEMBLY INSTRUCTIONS  
COASTER FINE FURNITURE**

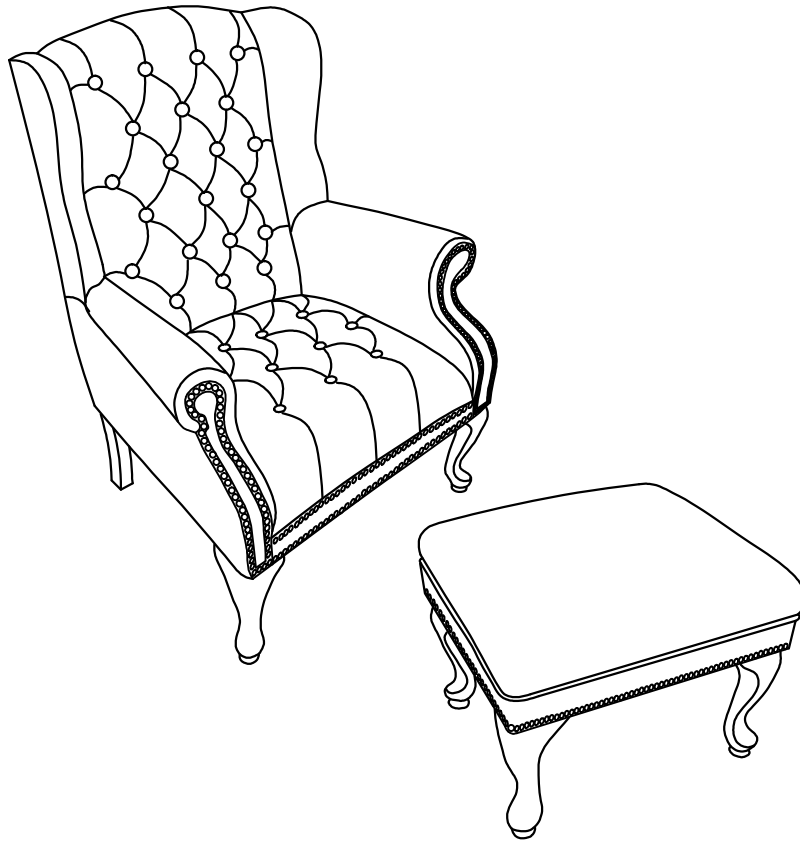

***Accent Chair W/Ottoman***

# ASSEMBLY INSTRUCTIONS

 
## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.








ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION


AN	SEAT CUSHION		1PC
BN	FRONT LEGS		2PCS
CLN	LEFT BACK LEG		1PC
CRN	RIGHT BACK LEG		1PC
D	OTTOMAN CUSHION		1PC
E	OTTOMAN LEG		4PCS

## ZN HARDWARE IDENTIFICATION


NO	DESCRIPTION	FIGURE	Q' TY
1	ØLOCK WASHER 5/16"		8PCS
2	ØFLAT WASHER 5/16"		8PCS
3	ØBOLT 5/16X2-1/2"		8PCS
4	ØALLEN KEY 5mm		1PC
5	ØSCREW 8X1-3/4"		8PCS

# ASSEMBLY INSTRUCTIONS


## STEP: 1

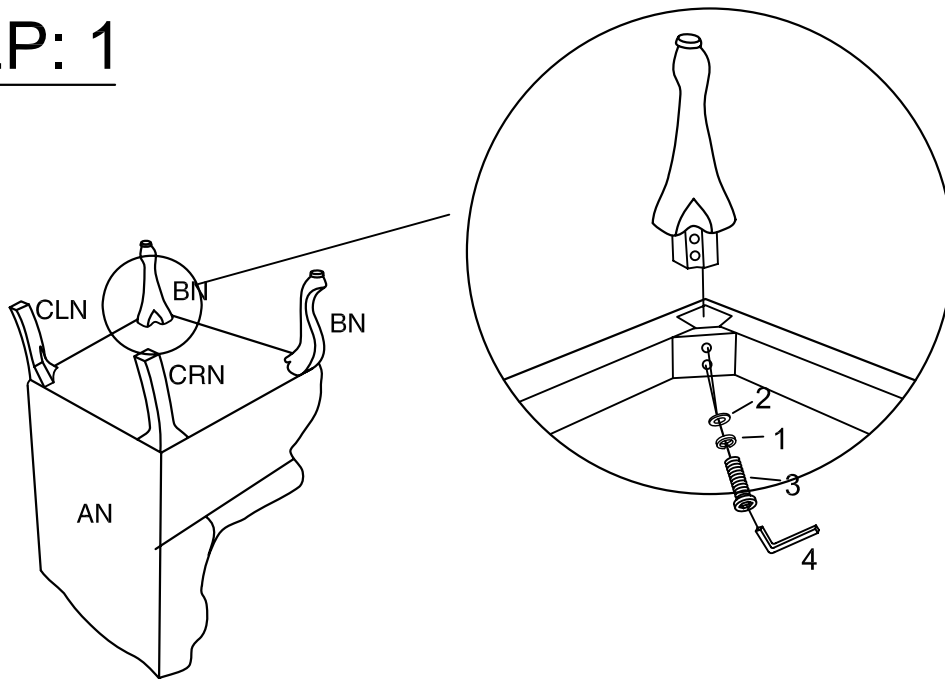


## STEP: 2

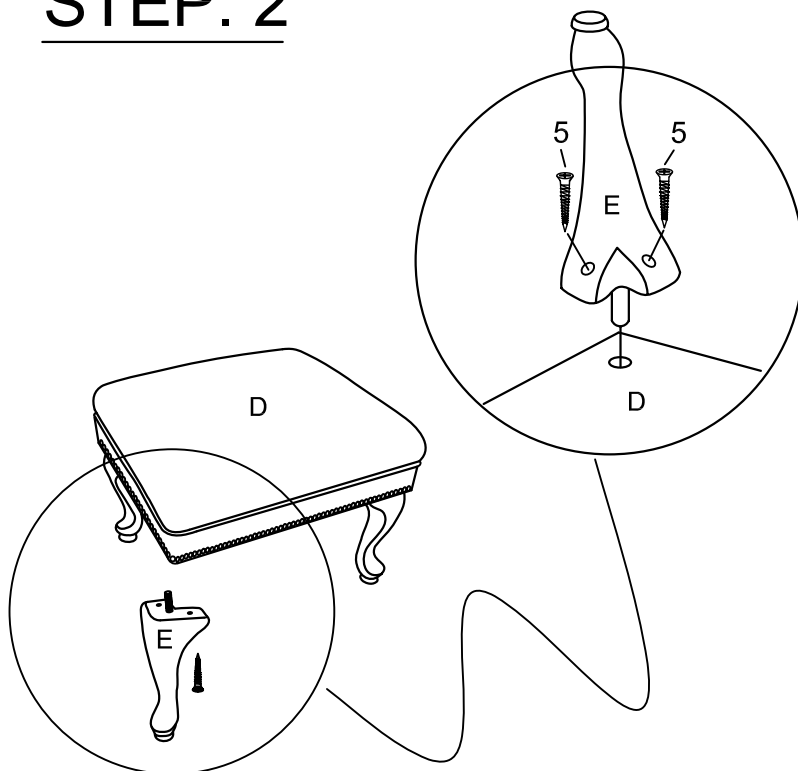

## STEP: 3

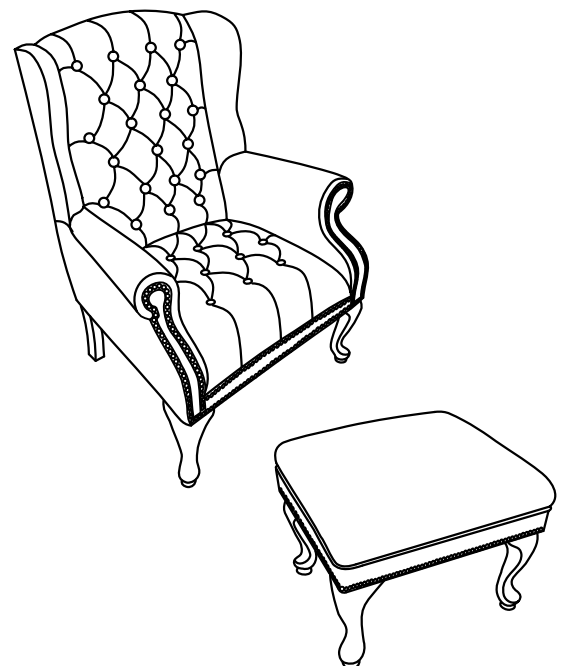

# ASSEMBLY INSTRUCTIONS

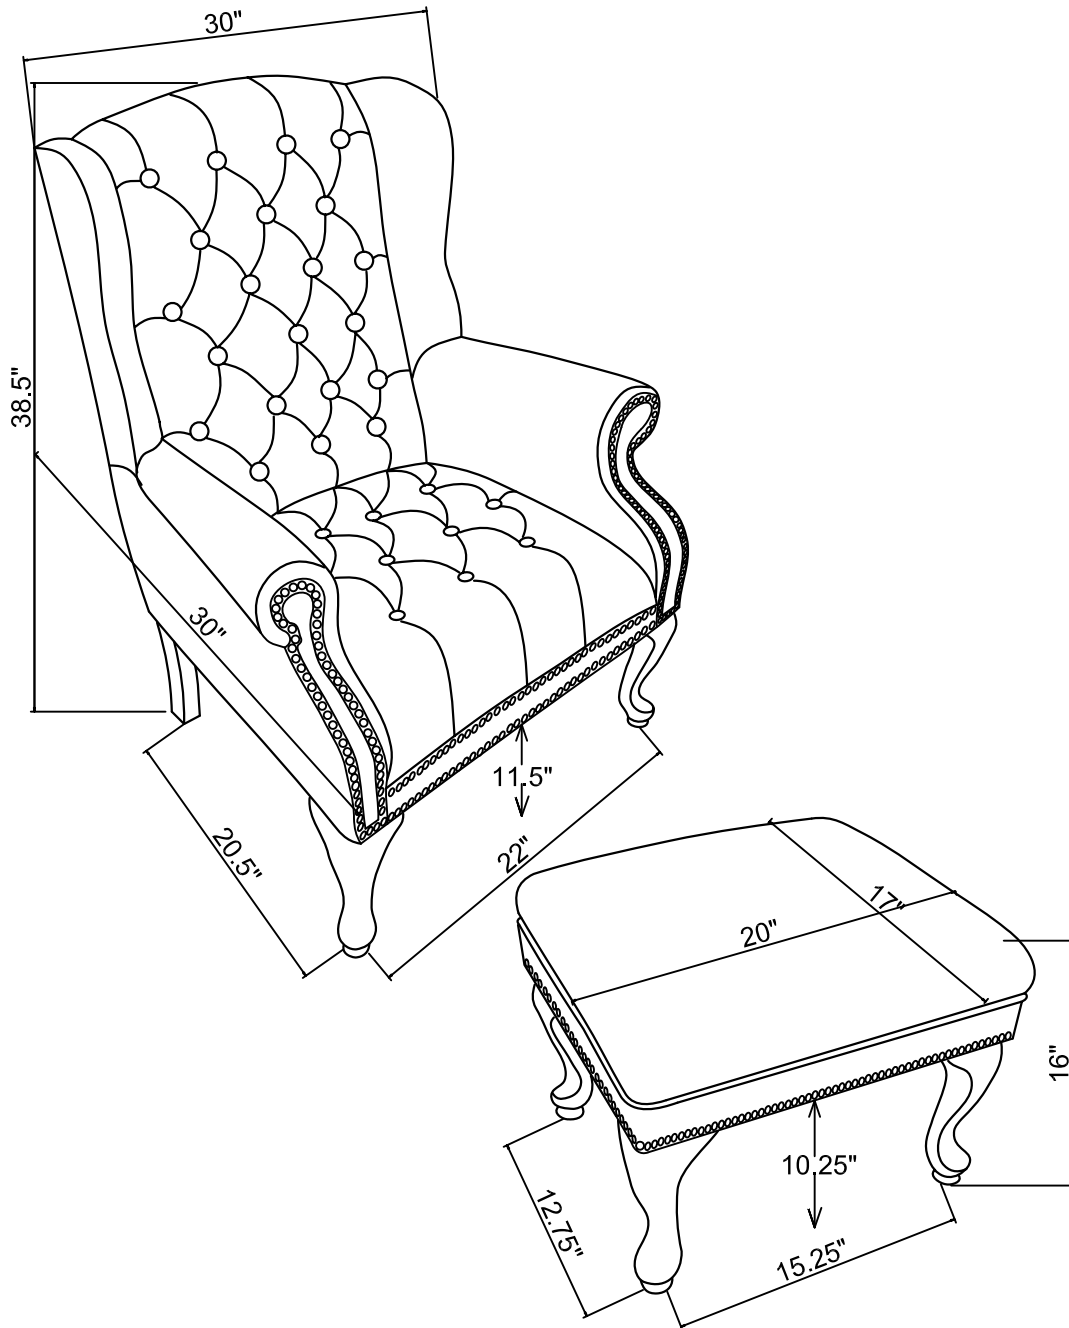

Note: Dimension tolerance  $\pm 5\%$