


INSTRUCTION MANUAL PARTS LIST

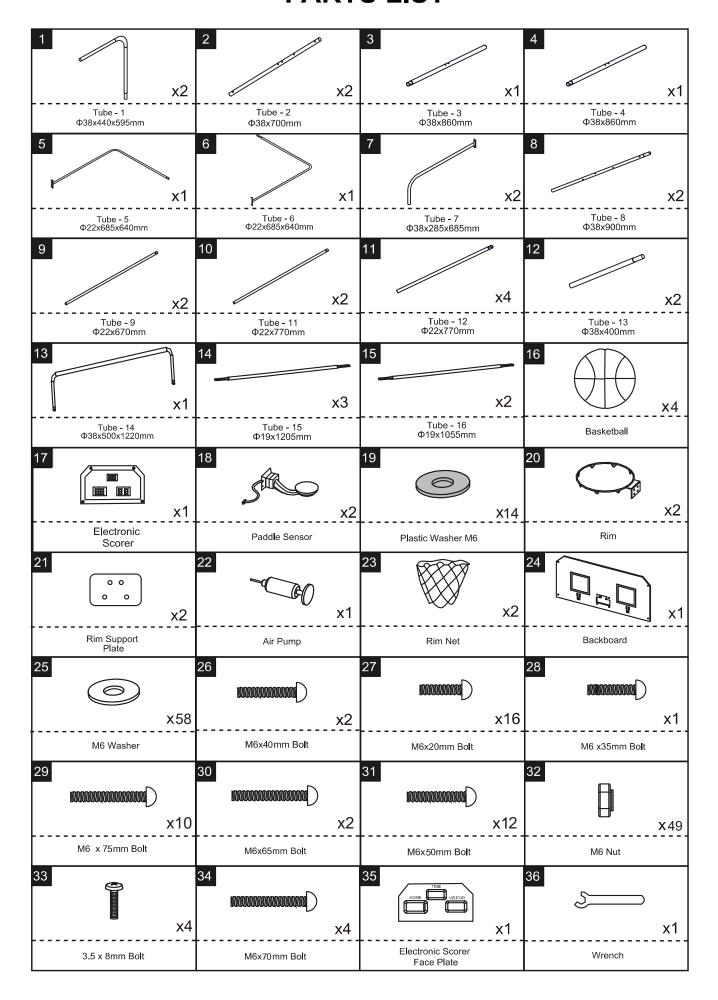

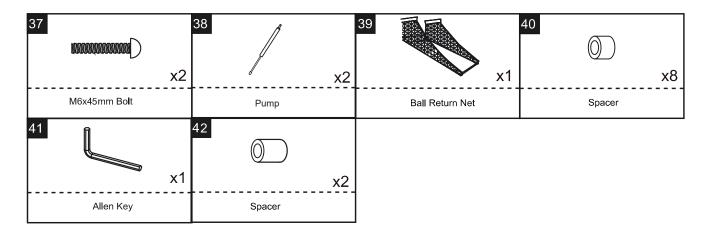

PRE-INSTALLED PARTS

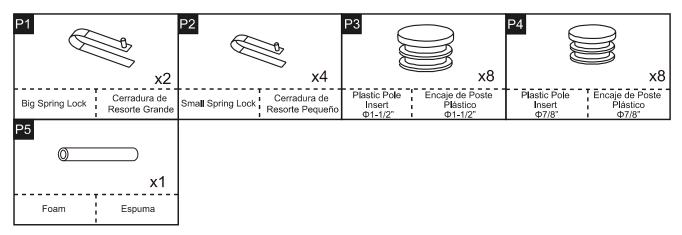

ASSEMBLY INSTRUCTIONS:

- 1. Find a clean, level place to begin the assembly of your Basketball Game. We recommend that two adults work together to assemble this basketball game.
- Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts list pages. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.


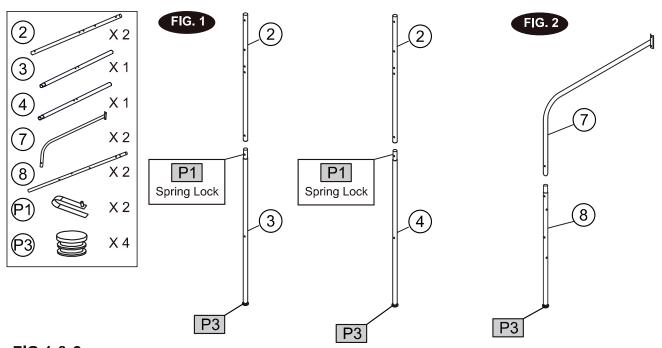


FIG.1 & 2


- 3. Attach the Tubes 2 (#2) to the Tube 3 and Tube 4 (#3 and #4) using the spring lock mechanism (pre-installed) as shown in FIG. 1.
- 4. Attach the Tubes 7 (#7) to the Tubes 8 (#8) as shown in FIG. 2.

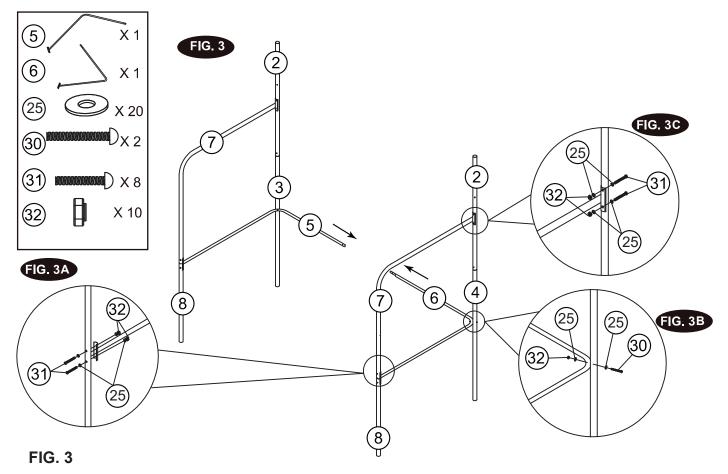


- 5. Attach the Tube-5 (#5) and Tube-6 (#6) to Tube-7 and Tube-8 (#7 and #8) using Bolts(#31), Washers(#25) and Nuts (32). See FIG.3A.
- 6. Attach the Tube-5 (#5) and Tube-6 (#6) to Tube-3 and Tube-4 (#3 and #4) using Bolts(#30), Washers(#25) and Nuts (32). See FIG.3B.


Note: Make sure the spring locks face inward.

- 7. Attach the Tube-7 (#7) to Tube-2 (#2) using Bolts(#31), Washers(#25) and Nuts (32). See FIG.3C.
- 8. Insert the Tube-6 (#6) to the Tube-5 (#5) as shown in FIG. 3.

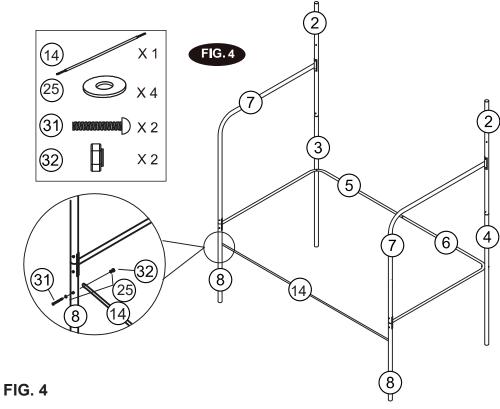


9. Attach the Tube-14(#14) to Tube-8(#8) as shown in **FIG. 4.**

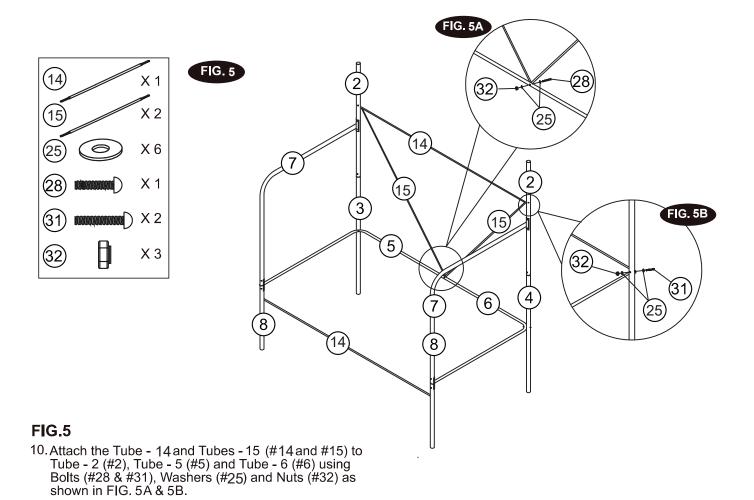

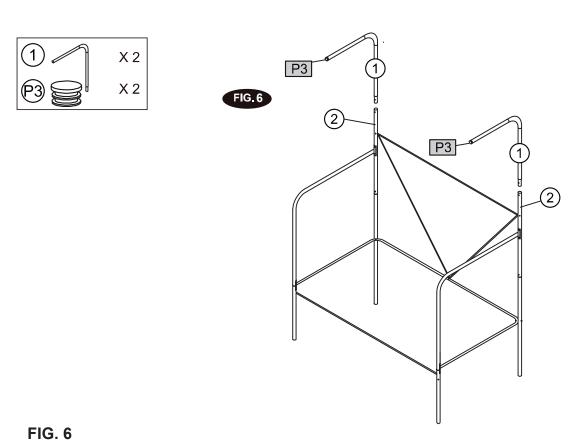

11. Insert the Tubes - 1 (#1) to the Tubes - 2 (#2) as shown in FIG.6.

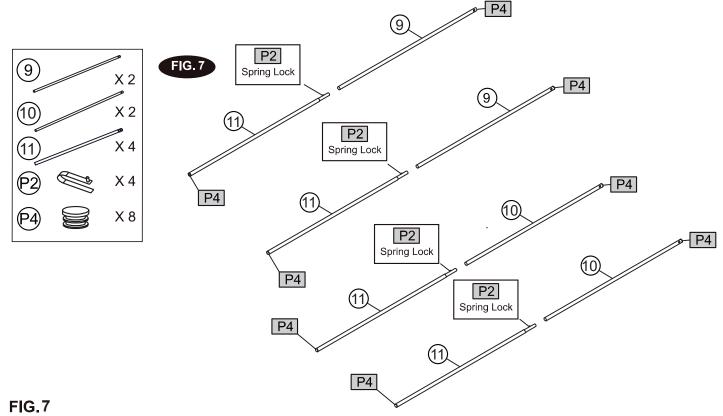

12. Attach the Tubes - 11(#11) to the Tube - 9, Tube - 10 and Tube - 11 (#10 and #11) using the spring lock mechanism (pre-installed) as shown in FIG. 7.

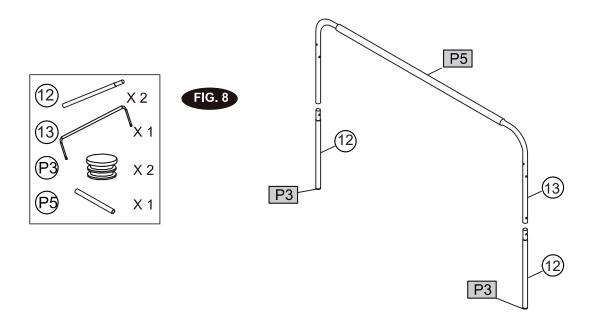
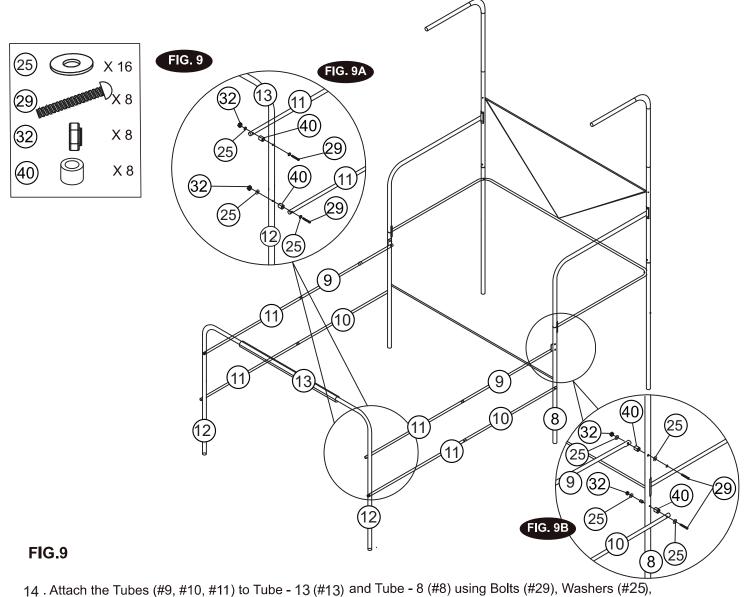
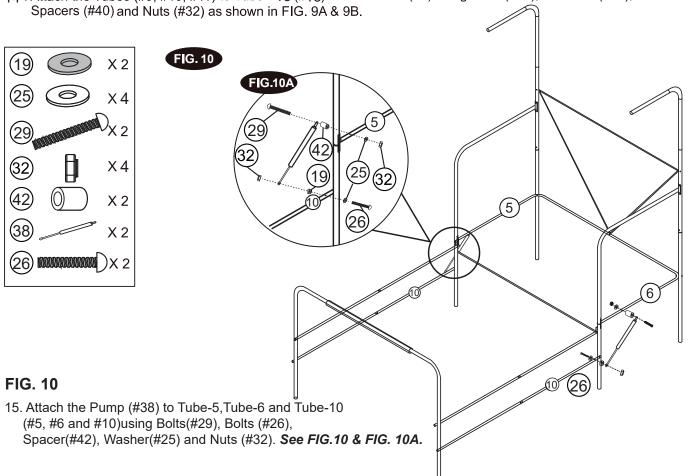


FIG.813 . Insert the Tubes - 13 (#13) to the Tubes - 12 (#12) as shown in FIG. 8.





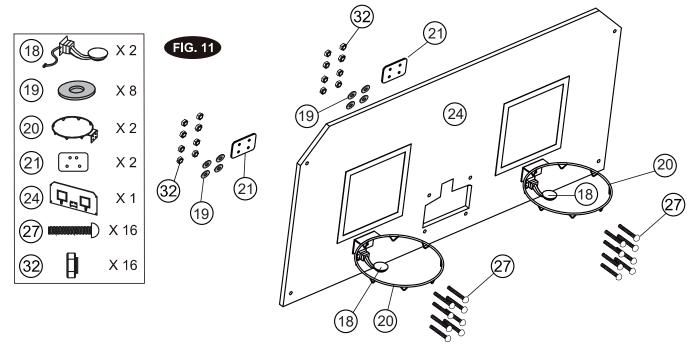


FIG.11

16. Attach the Rims (#20) and Rim Support Plates (#21) to the Backboard (#24) using the Bolts (#27) and Nuts (#32). Then attach the Paddle Sensors (#18) to the Backboard (#24) using the Bolts (#27), Washers (#19) and Nuts (#32). Ensure that washers are used on both sides of the backboard as shown in FIG. 11.

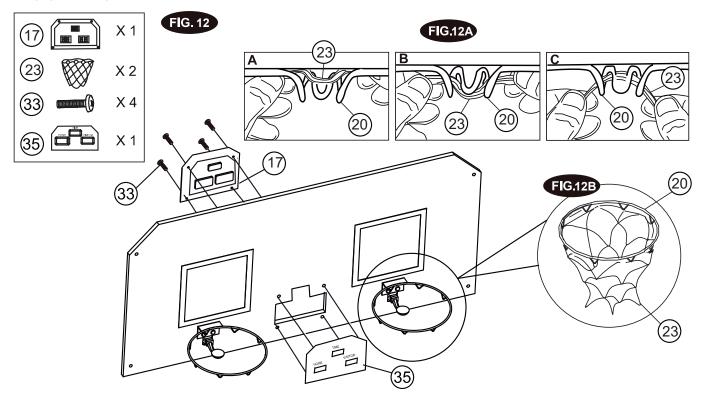


FIG.12

- 17. Attach the Electronic Scorer Face Plate (#35) to the front of the Backboard and connect with the Electronic Scorer (#17) using Bolts (#33) as shown in FIG.12.
- 18. Install the Net (#23) to the Rim (#20) as shown in FIG. 12 A and 12B.

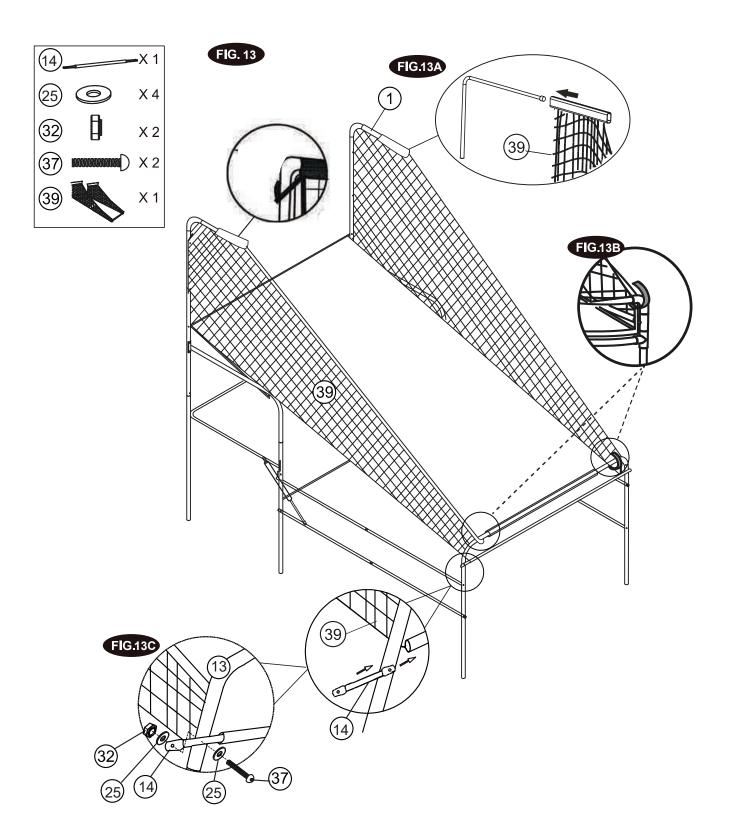


FIG.13

- 19 · Slide elastic straps and sleeve of Ball Return Net (#39) onto Top Tubes 1 (#1) as shown in FIG. 13A & 13B.
- 20. Slide the Tube 14 (#14) in front of the Ball Return Net (#39) and attach it to the Tube 13 (#13) using Bolts (#37), Washers (#25) and Nuts (#32) as shown in FIG. 13C.

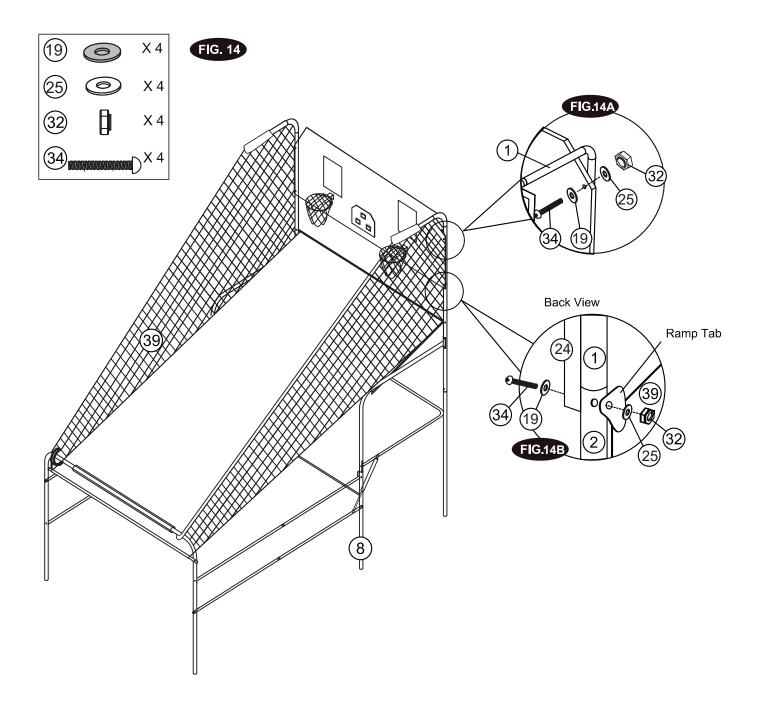


FIG.14

21. With the help of another adult, Attach the Backboard (#24) to the Tubes - 1 (#1) using Bolts (#34), Washers (#19& #25) and Nuts (#32) as shown in FIG. 14 A. At each bottom hole of the backboard, attach the ramp tabs of Ball Return Net (#39) using Bolts (#34), Washers (#19& #25), and Nuts (#32) as shown in FIG. 14B.


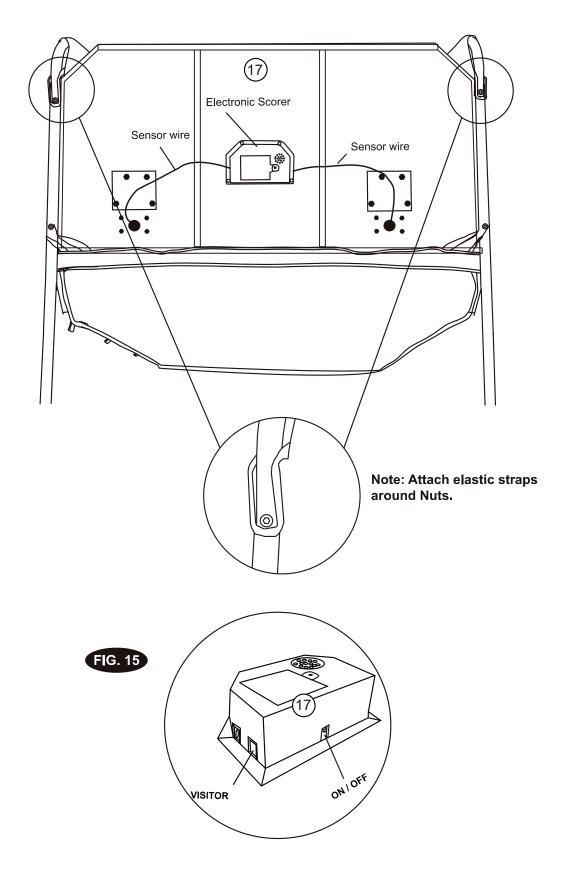


FIG.15

Connect the Sensor Wire of Paddle Sensor (#18) to the Electronic Scorer (#17) as shown in FIG. 15.

.

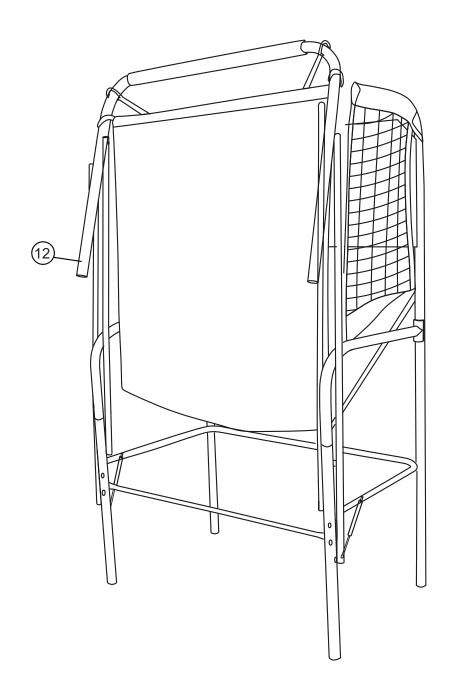


ELECTRONIC SCORER OPERATION

Battery Installation

Battery Box: Unscrew the bolt using a screwdriver and open the battery box. Insert 3 "AA" batteries (not included) in the order of polarity as shown on the inside cover. Then close the cover using a screwdriver. Turn the power ON using the ON/OFF switch.

Reminding:

- a. Batteries must be installed according to the correct polarization (+ and -) required.
- Please clean the battery contacts and also those of the device prior to battery installation.
- c. If the game will not be used for a long period of time, we recommend that the batteries should be removed.

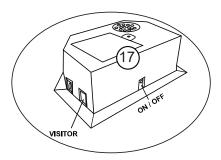

How to play?

- 1. While game is in Sleep Mode, if a basketball is scored, the game will turn back on and the score board will begin the 5 sec. countdown.
- 2. After finishing the game, Turn OFF the scorer by using the ON/OFF switch. NOTE: The scoreboard will turn off after 5 minutes of inactivity; however, we recommend turning the ON/OFF switch to OFF when the game will not be used for an extended period of time.

⚠ WARNING:

- 1) Requires 3 "AA" batteries (not included).
- 2) Do not mix old and new batteries.
- 3) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

Missing parts, damages, and any other problems, please contact us via email.

