

4.5"

• IMPORTANT SAFEGUARDS •

⚠ When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages:

Read all instructions before use.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs, or the appliance in water or other liquids.
- Never leave this appliance unattended during use. Close supervision is necessary when any appliance is used by or near children. This burner is not intended to be used by children.
- Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts, before cleaning the appliance.
- Do not operate appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries and void any warranty.
- Do not use outdoors or in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not move appliance during operation or with cookware on top.
- To disconnect, turn the control dial to the off position, then remove plug from the wall outlet.
- Do not use this appliance for anything other than its intended use. This appliance is for **HOUSEHOLD USE ONLY**.
- Any maintenance other than cleaning should be performed only by a service repair center.

• ADDITIONAL SAFEGUARDS •

- Clean the appliance regularly as a build-up of grease poses a fire hazard.
- Never cook food directly on the burners. Always use proper cookware.
- Do not attempt to cut food in cookware while on the heated burners.
- Do not clean with metal scouring pads. Pieces can break off and touch electrical parts creating a risk of electrical shock.
- When in use, keep unit a minimum of 10-12 inches away from walls. Place on a stable, heat-resistant surface and in a well-ventilated area. Place the appliance on a dry and horizontal surface.
- For long-life performance, avoid dropping anything on the burners.
- Always pull the plug out from the wall outlet. Never pull the cord.
- Electric Power: If the electric circuit is overloaded with other appliances, this appliance may not operate properly. The appliance should be operated on a separate electrical circuit from other operating appliances.

• BEFORE FIRST USE •


- Read all instructions and important safeguards.
 - Remove all packaging materials, labels and/or stickers. Make sure items are received in good condition.
 - Throw away all plastic bags as they can pose a risk to children.
 - Place the double burner on a flat, sturdy, heat resistant counter, or tabletop for use.
 - Wipe burners clean with a damp cloth.
 - Set temperature control knobs to OFF position.
 - Plug into wall outlet.
 - Before your first use, turn the temperature controls to high for 3 to 5 minutes to warm up the unit. Do not place any pots and pans on it yet. This step only needs to be done the first time you use the product.
- NOTE: Due to the manufacturing process, the double burner may emit a slight burning odor when it is first activated. Use the double burner in a well-ventilated area.**
- Do not use abrasive cleaners or scouring pads.
 - Do not immerse any part of this appliance or power cord in water or other liquid.

• SUITABLE COOKWARE •

- For the most efficient operation of the range, the pots and pans used must be in good shape with a solid base.
- To ensure safety and maximum heat efficiency, use only pots and pans with flat bases. See figure below.
- Stainless steel, nonstick and heat-proof ceramic cookware are suitable to use on the electric burners.
- Please read instructions on all cookware to ensure they can be used on a cooktop.
- The diameter of the bottom of pots and pans should be 6 ½" to 7 ½" and with a maximum cooking capacity of 1 ½ quarts for each hot plate.
- **CAUTION: Do not use any cookware that does not have a completely flat bottom.**

4.5"

• PARTS •

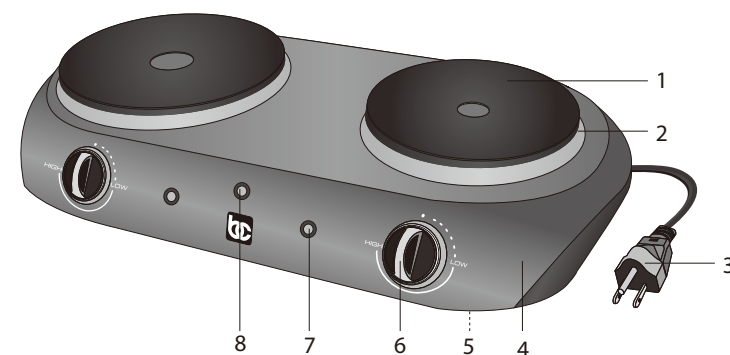

1. Die-cast heating plate
2. Heat plate ring
3. Power plug
4. Housing unit
5. Non-skip rubber feet
6. Temperature control knob
7. Burner indicator light
8. Power indicator light

• OPERATING INSTRUCTIONS •

- Turn the control knob to the desired level of heat. The temperature can be adjusted from low to high by turning the control knobs.
- Place the cookware on burners.
- When finished cooking, turn control knobs to OFF position and unplug from wall outlet. Wait until the burners have completely cooled before cleaning.

CAUTION:

- Do not touch the surface of the range when in operation as it is very hot.
- The burners will remain hot for a period of time after the unit has been turned off. Do not move, clean, or store until unit has completely cooled.
- Do not immerse the range in water or any liquid.

• CLEANING •

- Always unplug unit and allow to cool completely before cleaning.
- Use a damp soft sponge or cloth to clean the burners. It is ok to use a small amount of non-abrasive detergent.
- Do not use harsh abrasive cleaners.
- Do not immerse any part of this appliance or power cord in water or other liquid.
- Electric burners are not dishwasher safe.

• STORAGE •

- Store the burners in a cool, dry place.
- To protect the heating elements, do not stack any items on burners when stored.



double burner
by bene casa



BC-99540