



CONGRATULATIONS ON YOUR NEW SCREEN TENT!

STOP

BEFORE YOU GET STARTED, PLEASE READ CAREFULLY.

When you first open the bag on your new Quick-Set shelter, it may appear inside out. It is not inside out, but is designed to fold into a compact bag.



Step 1. Remove the loose fabric wrapped around each of the hubs.



Step 2. Stand shelter up on the center hub.



Step 3. Open with roof facing up with Poles on the inside.



Step 4. With poles on the inside, reach handle at pane center and pull while holding roof line with opposite hand.



Step 5. Continue around shelter repeating the previous step until all panels are erect.



Step 6. Enter through door and push roof center hub up until erect.

SAFETY INSTRUCTIONS

Please fully understand and follow all safety instructions outlined in this booklet. Failure to do so could result in severe injury.

- Do not use open flame heaters in your screen tent.
- Tent fabric will melt when contact is made with hot surfaces (i.e., heaters).
- Use external tie-downs and stakes during excessive wind conditions(15+mph)

WARNING

Injury or death may result from fire if tent fabric is exposed to open flame.

Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent. Tent fabric is treated with fire retardant. Application of any foreign substance may render the flame retardant properties ineffective.

PARTS LIST

Item #	Qty.	Description
1	1	Carry Bag
2	12	Stake, Screen Hub
3	6	Tie Down Rope
4	5	Sidewalls
5	1	Instructions/Owner's Manual

SET UP INSTRUCTIONS

IMPORTANT: When you first open your shelter, you will see the poles on the OUTSIDE of the shelter. Once setup, the poles should be on the INSIDE of the tent. Your screen tent is folded in half for storage. Only pull outward on the hub pull (loops) on the exterior of the tent.



Please follow the directions carefully for proper set up and takedown.

SET UP INSTRUCTIONS CONTINUED

Step 1: Unzip the storage bag completely and remove the shelter. Use care not to misplace the instructions and the stake and rope pouch. It is advised to store your stakes, ropes and pouch in the carry bag until they're needed.

Step 2: Pick the tent up directly from the carry bag and stand it on the center metal hub. (Photo 1)



Photo 1

Step 3: With the screen tent standing upon the black center hub hold one corner of the material and let the screen fall open until you see the roof lying flat with the Clam logo facing up. If it does not fall open naturally, unfold the tent until you can see the roof panel lying flat. At this point the poles should be on the inside of the tent with the roof facing up. (Photo 2)



Photo 2

Step 4: With the poles on the inside, reach for the handle at the center of one wall and pull until the section pops out. Hold the roof line with the opposite hand. (Photo 3)



Photo 3

Step 5: Continue around the shelter repeating the previous step until all wall panels are erect.



Photo 4

Step 6: Enter through the door and push up on the center ceiling hub until the ceiling pops up. (Photo 4)

SET UP INSTRUCTIONS CONTINUED

Step 7 (optional): Insert the vertical rods on either side of the screen tent's door. Remove the Velcro retaining loop securing the pole to the adjacent wall. Once freed, install one end of the rod into the other' send to make it one long rod. Place the bottom of the rod in the pocket located at the bottom of the panel directly below where the rods are mounted. Secure the rod with the Velcro loop. Repeat on the other side. It is recommended to use these if any wind is present. (Photos 5&6)



Photo 5



Photo 6

Step 8: Install securing stakes on the tent. The stakes are designed to be used on the inside grommets or the outside tie downs. If there is little to no wind, stakes may be used in the eyelet in each corner of the screen tent. Place the tip of the stake on the inside of the eyelet and drive it into the ground so the hook catches the eyelet and holds the tent in place.(Photo 7)

If wind is present you **must** use the outside tie downs. Secure the tent by tying one end of the provided strings on each metal loop on the outside of the hub and staking the other end. (Photo 8)



Photo 7

Using the built in Wind Panels:

Step 1: Locate the hub strap on the center of the wall and pull it through the grommet on the wind panel.

Step 2: Find the Velcro on the wind shield and Finish with securing the Velcro tabs

Step 4: To store the wind panels, simply detach the Velcro tabs and unzip the wind panels.



Photo 8

TAKE DOWN INSTRUCTIONS

Step 1: Remove all the stakes from the interior and exterior of the tent.

Step 2: If used, remove the vertical door support rods from pockets at the bottom of the panel, pull apart, and refasten them with the Velcro straps located diagonally on the panels next to each side of the door. (Photo 1)

Step 3: Push in on the walls in from the outside of the tent to collapse the wall panels. Do this to all wall panels until the tent is collapsed. (Photo 2)

Step 4: Push down on one of the roof poles until the roof is collapsed. (Photo 3)

Step 5: Once the shelter is completely collapsed grab one corner of the tent and fold it in half on itself. Once in half, you can now condense the shelter to fit into the carry bag. (Photo 4)

Step 6: Carefully lift and insert into the carry bag. Pay close attention not to twist or distort the hubs or fabric while inserting into bag. Place stakes and tie down ropes into their bag and place the stake bag into the carry bag.



Photo 1



Photo 2



Photo 3



Photo 4