

# FREQUENTLY ASKED QUESTIONS

01



## Hearing Air Hissing?

This is normal as the air release valve is venting excess air.

02



## Gaps appearing at seams?

This is normal after inflation. Always use the recommended pressure blower. Avoid overloading to prevent excessive stress on seams.

03



## Bubbles forming on the playhouse floor?

If water seeps into the playhouse, pressure changes may cause bubbling.

04



## Not fully inflated?

Close the drain at the bottom of the pool and ensure the air tube between the pool and slide is securely connected to prevent air leaks.

05



## Blower issues?

Maintain continuous air supply.