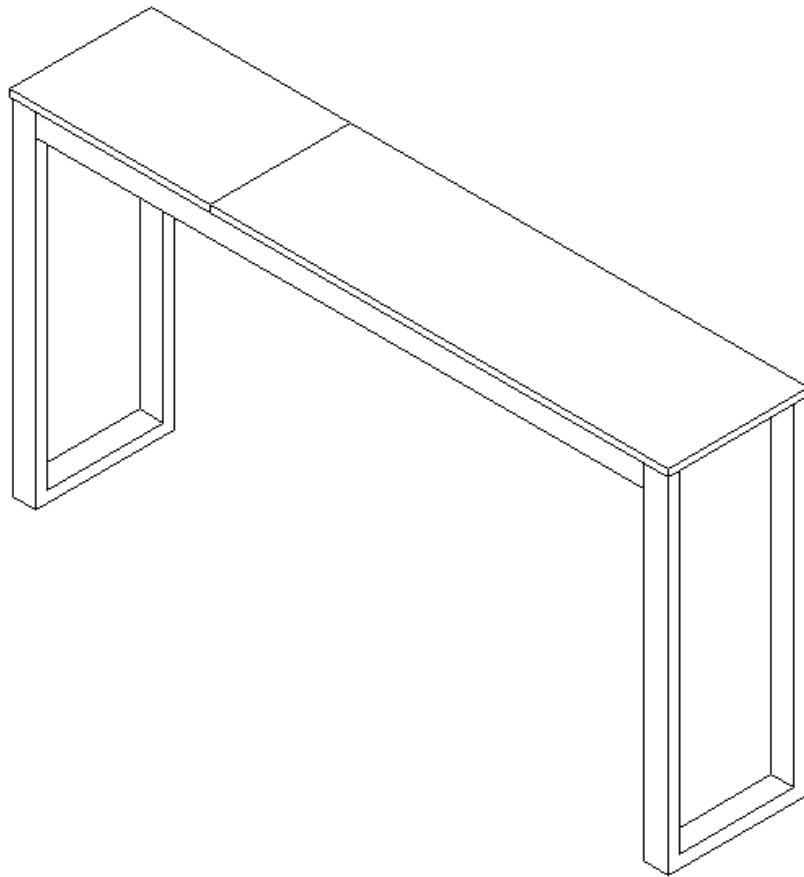 


## **ASSEMBLY INSTRUCTIONS**

**Console - White / Burnt Oak**

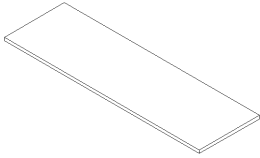 
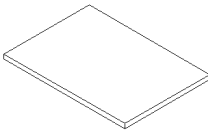 
 
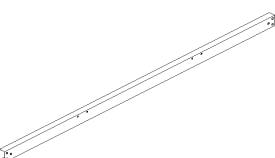 
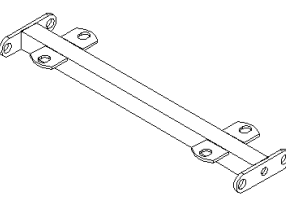 
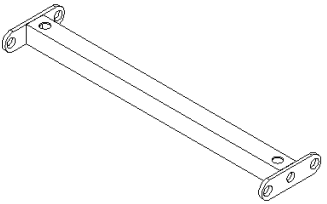 
 
 
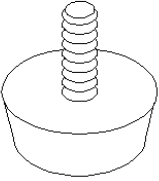 
 
 
**Console - Black / Burnt Oak**



# Console Parts list


Please review all parts and hardware before disposing of any packaging.  
Call Customer Service if missing hardware. Do not return to store/retailer.  
Using a screw that is too long will cause damage.

Before beginning assembly, separate each type of screw. Carefully study the  
Screw diagrams below. You may receive extra hardware with your unit. Screw diagrams  
below. You may receive extra hardware with your unit.

<b>A.</b> Quantity of 1  Big top	<b>B.</b> Quantity of 1  Small top	<b>C.</b> Quantity of 2  leg
<b>D.</b> Quantity of 2  apron	<b>E.</b> Quantity of 1  Metal rail	<b>F.</b> Quantity of 1  Metal rail
<b>1.</b> Quantity of 28  Short bolt : 1/4"x5/8"	<b>2.</b> Quantity of 22  Flat washer	<b>3.</b> Quantity of 4  leveler
<b>4.</b> Quantity of 1  Allen wrench	<b>5.</b> Quantity of 2  Long bolt : 1/4"x1-1/16"	
<b>Care and Cleaning Instructions:</b> Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects. For replacement parts or questions, please		For replacement parts or questions, please Call our Customer Service. Do not return product to store, please call Manufacturer for assistance, questions or Parts.

# Console
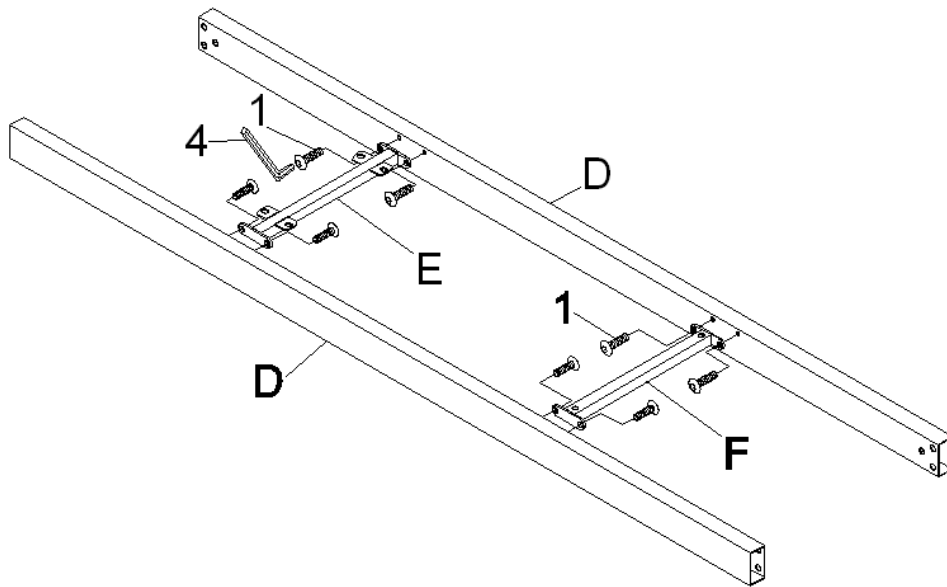 
## Assembly Instructions




Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page

Attach Metal rail (**E/F**) to apron (**D**) using short bolts (**1**),


tighten short bolt (**1**) using Allen wrench (**4**) as shown in figure 1.

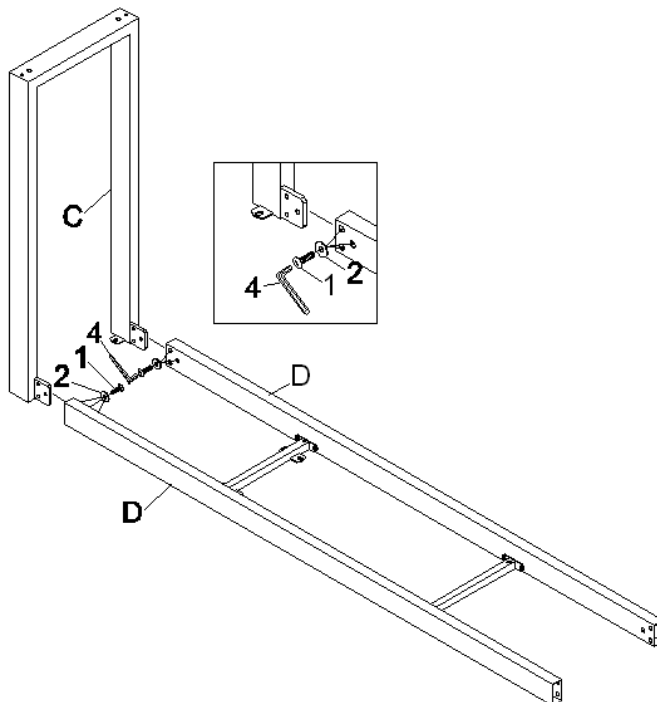 **Figure 1**




Attach one leg (**C**) to apron (**D**) using short bolts (**1**) & flat washer (**2**). Tighten short bolts (**1**) using Allen wrench (**4**) as shown in figure 2.

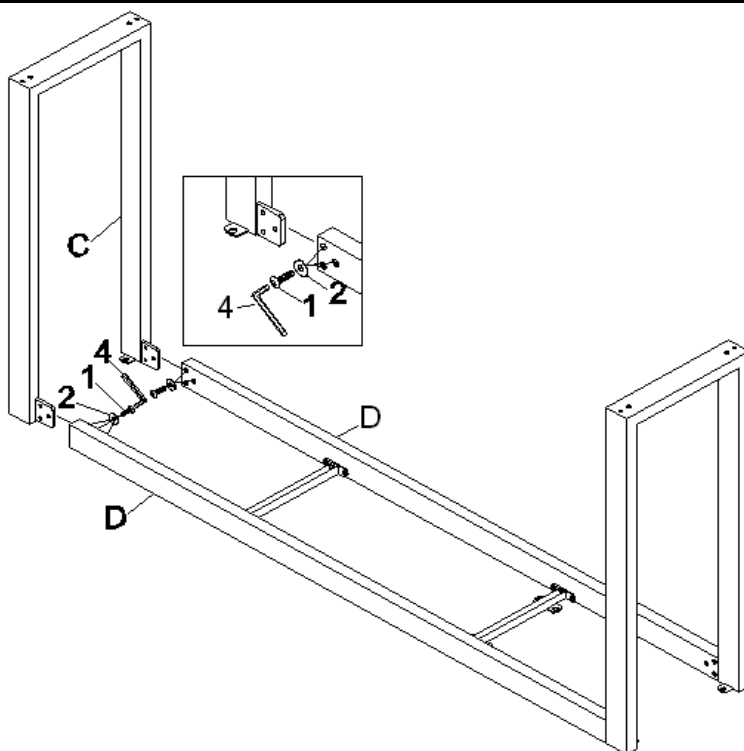 **Figure 2**



Repeat above step to attach other leg (C) to pre-assembled unit in figure 2 as shown.

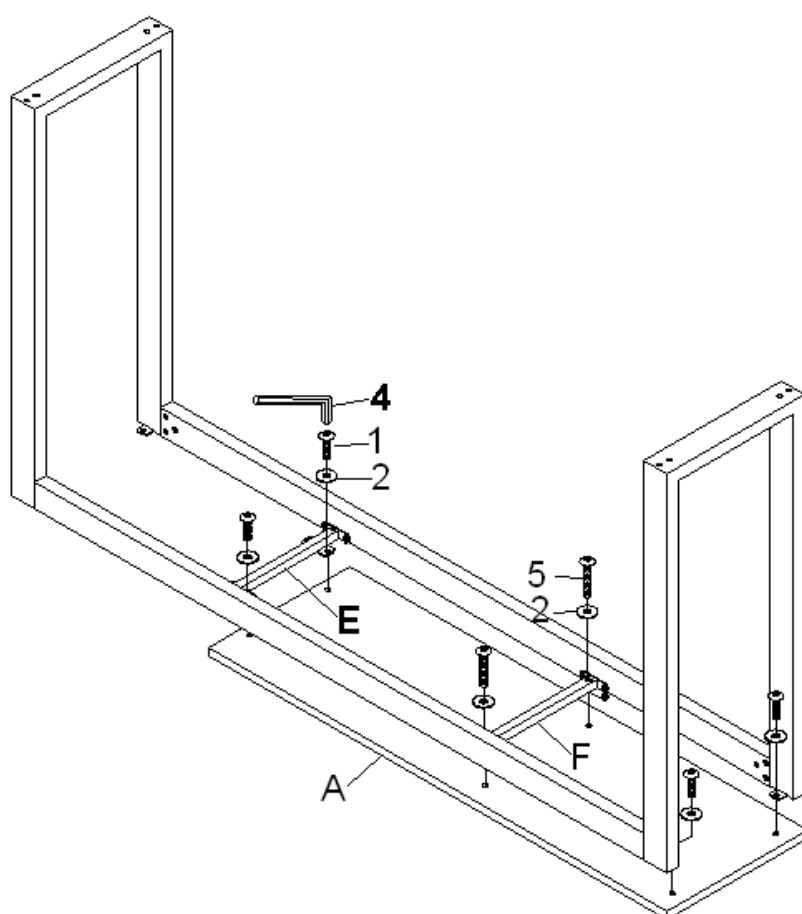 **Figure 3**




Attach big top (A) to metal rail (E) & leg (C) using short bolt (1) & flat washer (2),

Attach big top (A) to metal rail (F) using long bolt (5) & flat washer (2).

Tighten short bolt (1) and long bolt (5) using Allen wrench (4) as shown.

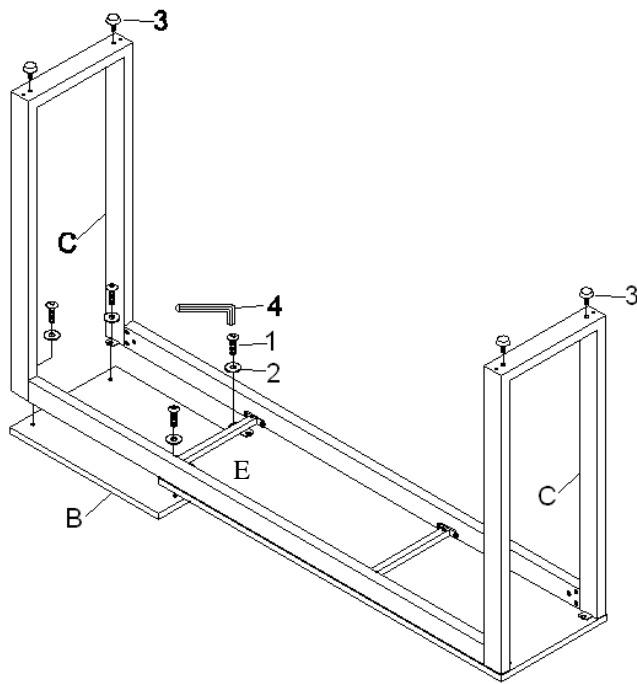 
**Figure 4**



Attach small top (**B**) to metal rail (**E**) & leg (**C**) with short bolt (**1**) & flat washer (**2**)

Tighten short bolt (**1**) using Allen wrench (**4**) as shown

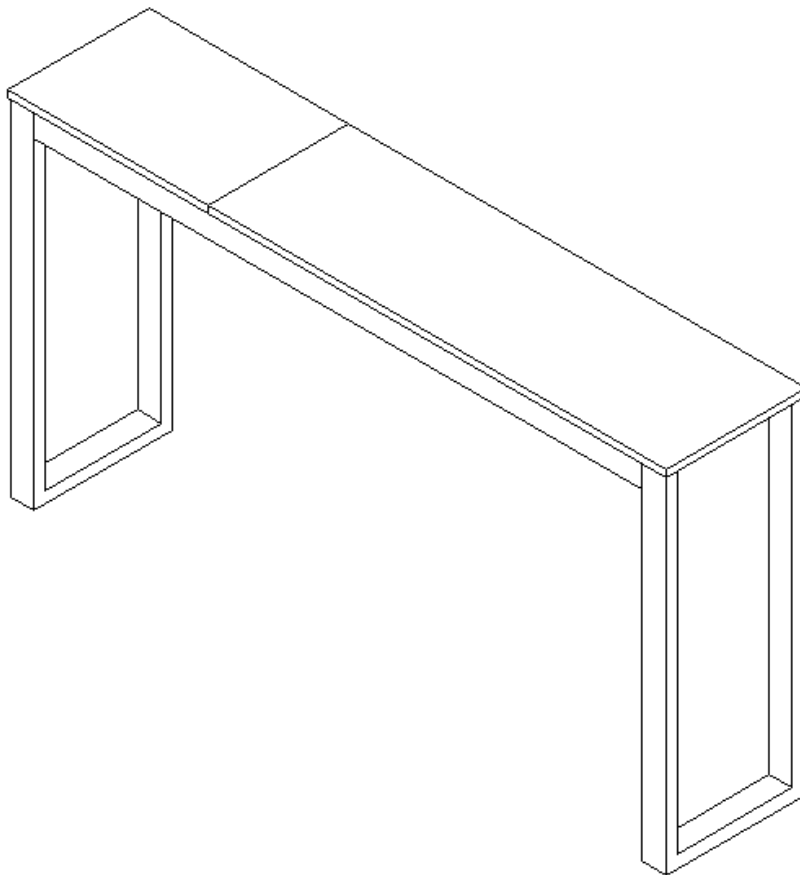 **Figure 5**



Now your console is ready for use

**Figure 6**

## Parts Replacement Form

### Customer Information

Name

---

Address

---

City/State/Zip Code

---

Phone Number

---

Please indicate where you purchased this item: Store/Website/Catalog

---

Please indicate color/size/style number:

---

Style No

Parts Letter

Parts Description

Quantity Needed

---

---

---

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.