

Maintenance and Storage:

QDCH-V2312

1. Clean the tanks regularly in order to achieve long term storage.
2. Lubricate the slide valve periodically with lubricants (Vaseline recommended)
3. Release the waste holding tank cap for long term storage.
4. Avoid strong sunlight and high temperatures.
5. If the piston pump is hard to pull up, pull it out and add lubricants to the built-in rings or open the fresh water tank cap to maintain pressure balance before use.


ASSEMBLY INSTRUCTION

BFTLPT-1015

Caution:


- Place on a flat surface.
- Ensure all latches are locked.
- Ensure the waste holding tank is assembled correctly and the cap is screwed on correctly.
- Weight bearing limit is no more than 200 kg.
- Do not lean on the seat cover during operation.
- Do not use water with a temperature higher than 40 degrees.

Using Instructions:

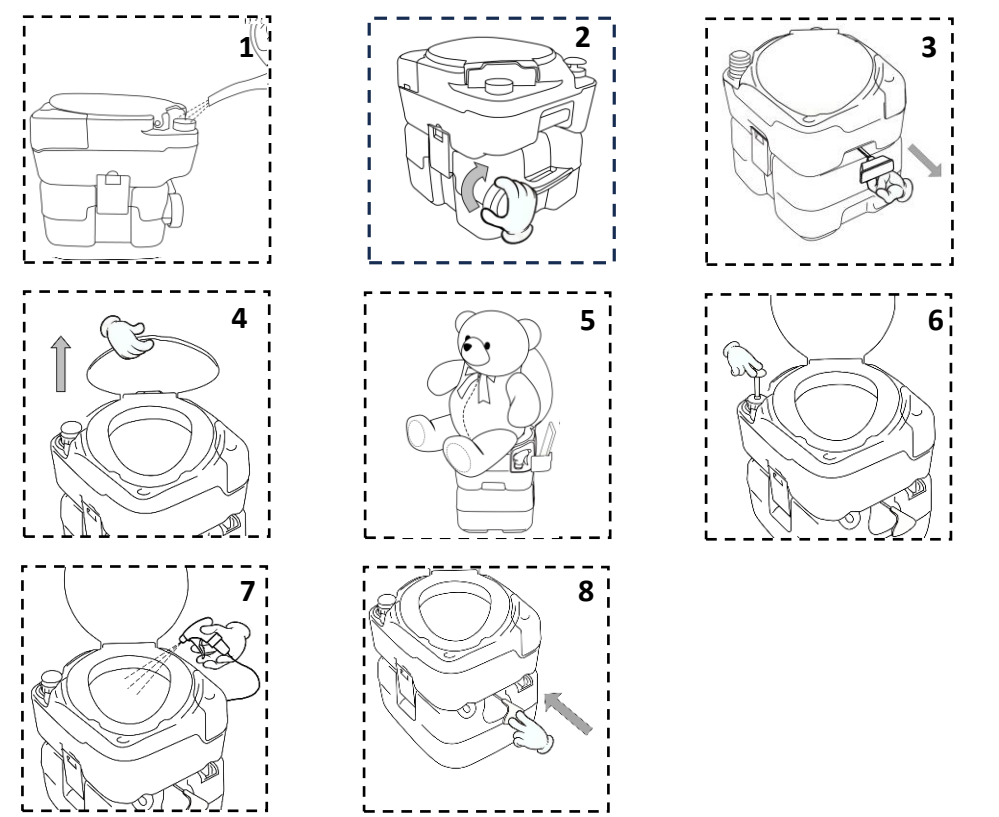

1. Fill the tank with freshwater.
2. Ensure the waste holding tank is assembled correctly and the cap is screwed on.
3. Open the slide valve.
4. Open the seat cover.
5. Use the toilet.
6. Pull the piston pump and press it to flush.
7. Use the handheld sprayer to clean the dead corner.
8. Close the slide valve.

Clean Instruction:

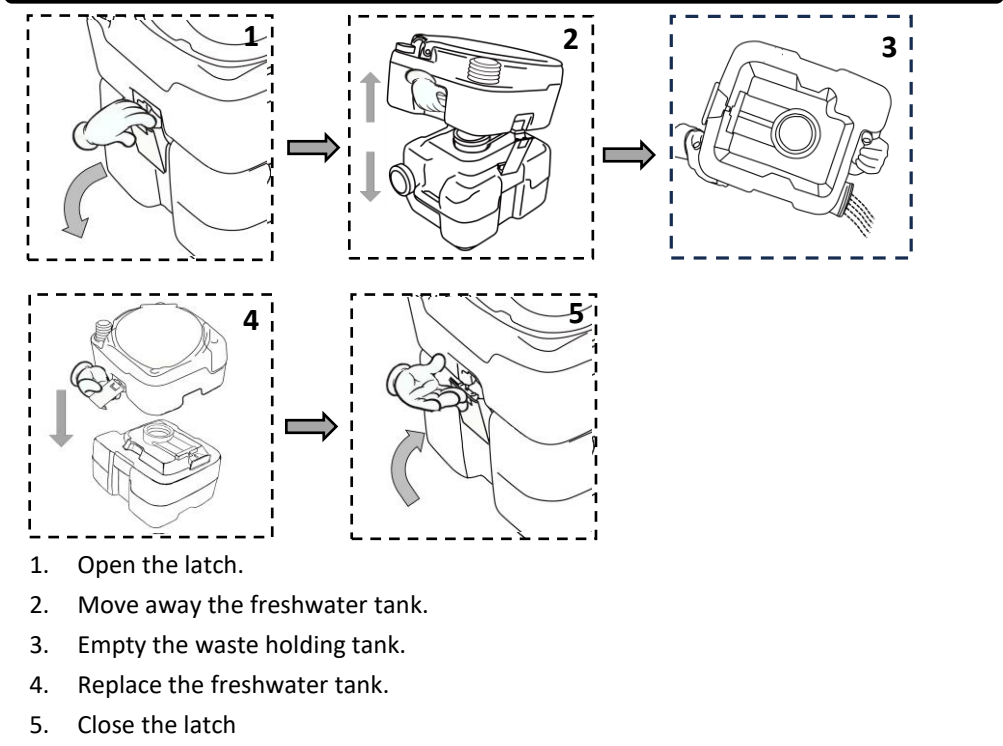

Accessories:

CHH-627 Handheld Sprayer

