 



Assembly Instructions

WI3990RD-SC-2PK

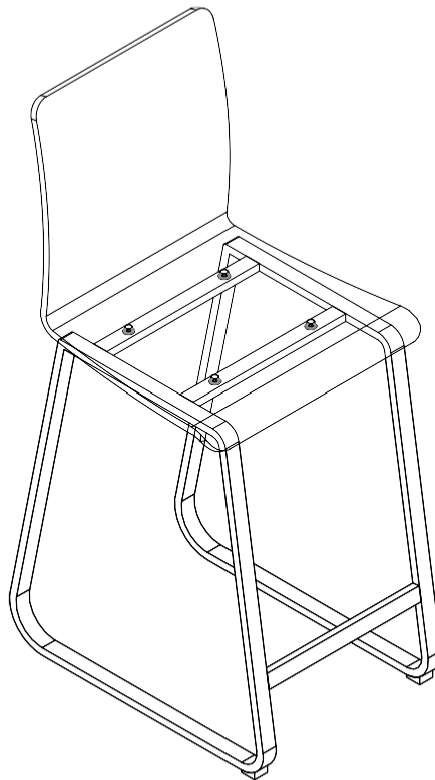



ASSEMBLY RATING

 The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

  
Allen Wrench

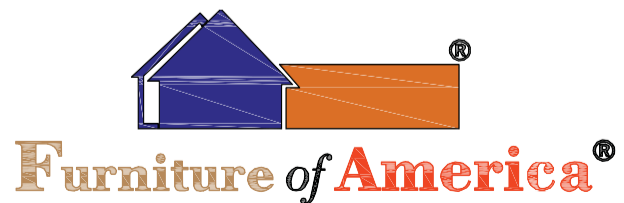


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

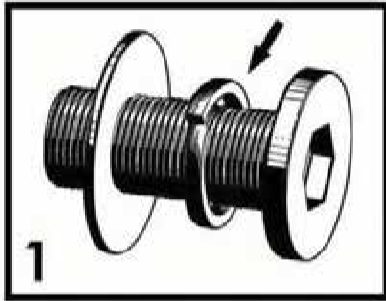

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

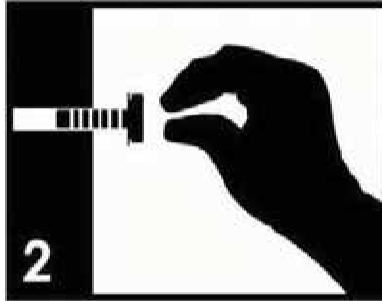

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

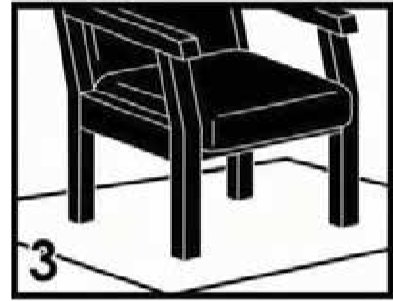

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

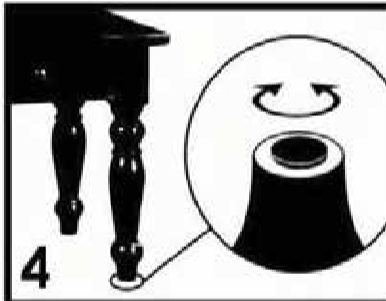

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

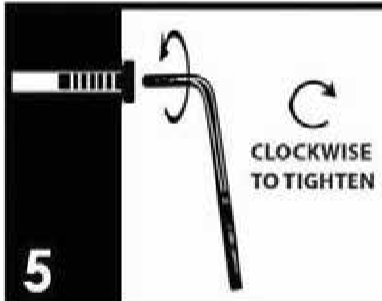


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

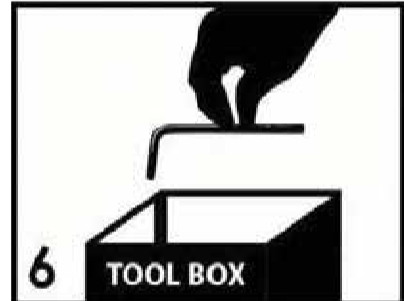


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

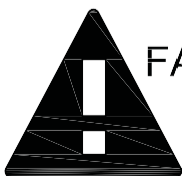



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

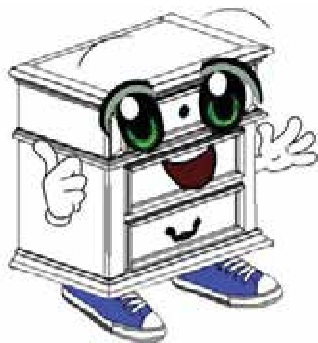


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

   
Parts List

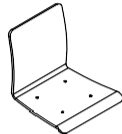	#1 x 1pc	x2	Chair Seat
	#2 x 1pc	x2	Left Frame
	#3 x 1pc	x2	Right Frame
	#4 x 2pcs	x2	Top Crossbar
	#5 x 1pc	x2	Bottom Crossbar

 Hardware List

	#A x 12pcs	x2	Bolt Ø1/4" x 1/2"
	#B x 4pcs	x2	Bolt Ø1/4" x 1"

 Hardware List

	#C x 18pcs	x2	Flat Washer Ø1/4"
	#D x 16pcs	x2	Lock Washer Ø1/4"
	#E x 4pcs	x2	Plastic Washer Ø1/4"
	#F x 4pcs	x2	Nut Ø1/4"
	#G x 2pcs	x2	Floor Leveler
	#H x 2pcs	x2	Flat Bolt Ø1/4" x 1/2"
	#I x 2pcs	x2	Cap
	#J x 1pc	x2	Allen Wench 4mm




#A x 12pcs
#C x 14pcs
#D x 12pcs
#G x 2pcs
#H x 2pcs
#I x 2pcs

 1. Prepare 12 bolt assemblies by first inserting a lock washer (#D) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).

3. Apply a flat washer (#C) onto the bolt (#H). Then align a cap (#I) to the holes along the bottom front ends of the frames and insert a bolt assembly into each. Secure using the Allen wrench (#J).

2. Insert 2 top crossbars (#4) and 1 bottom crossbar (#5) onto the small bars along the left and right frames (#2,3). Then insert 2 bolt assemblies into each end and secure using the Allen wrench (#J).

4. Insert a floor leveler (#G) into the holes along the bottom of the left and right frames (#2,3).

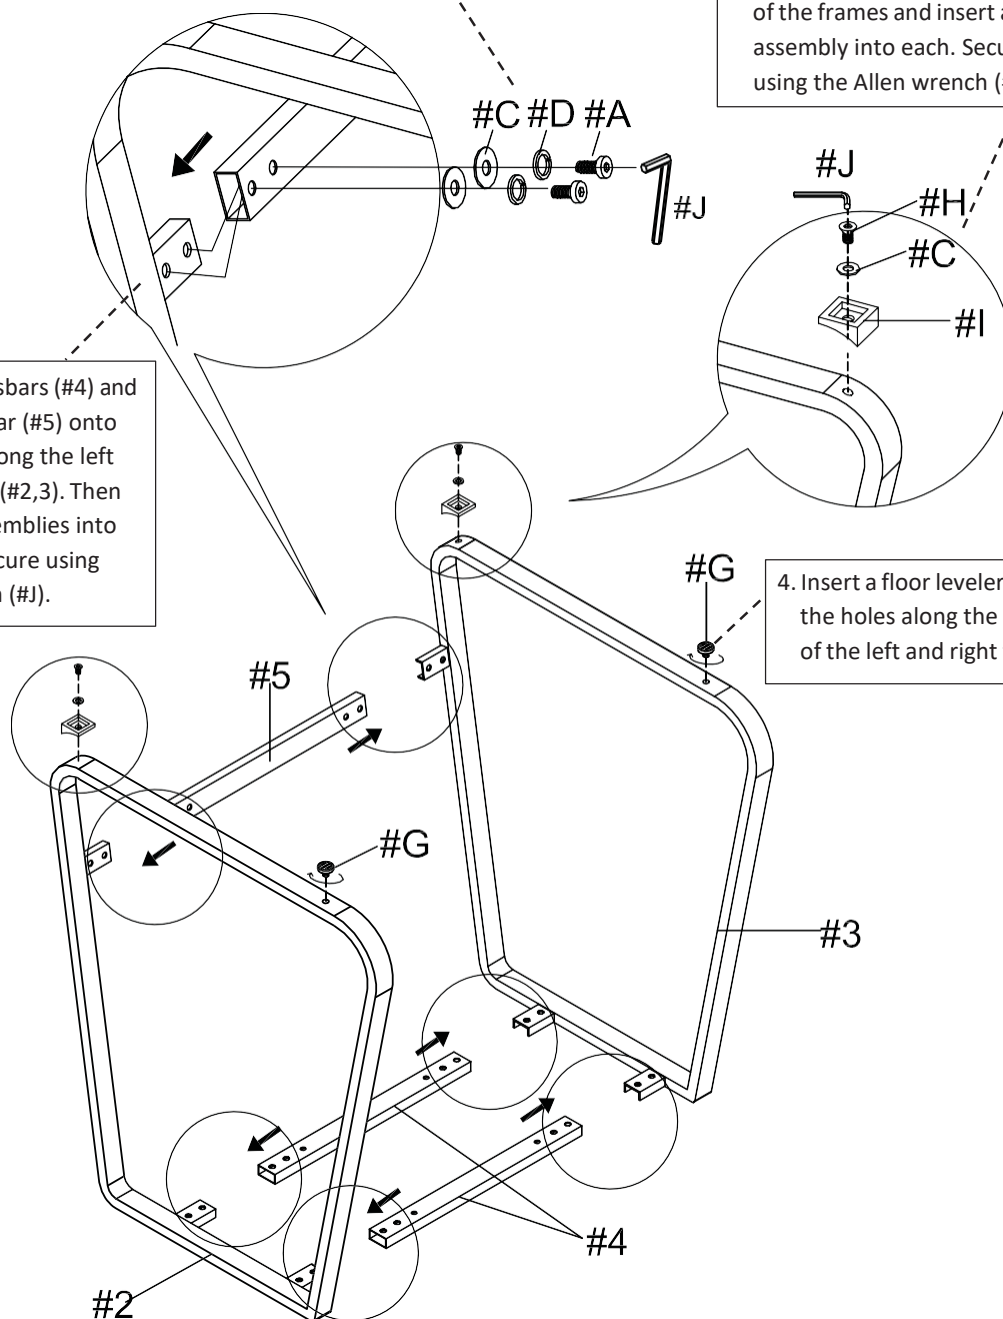




#B x 4pcs
#C x 4pcs
#D x 4pcs
#E x 4pcs
#F x 4pcs

1. Turn the frames upright.

 2. Prepare 4 bolt assemblies by first inserting a lock washer (#D) onto the bolt (#B) then a flat washer (#C) onto that same bolt (#B).

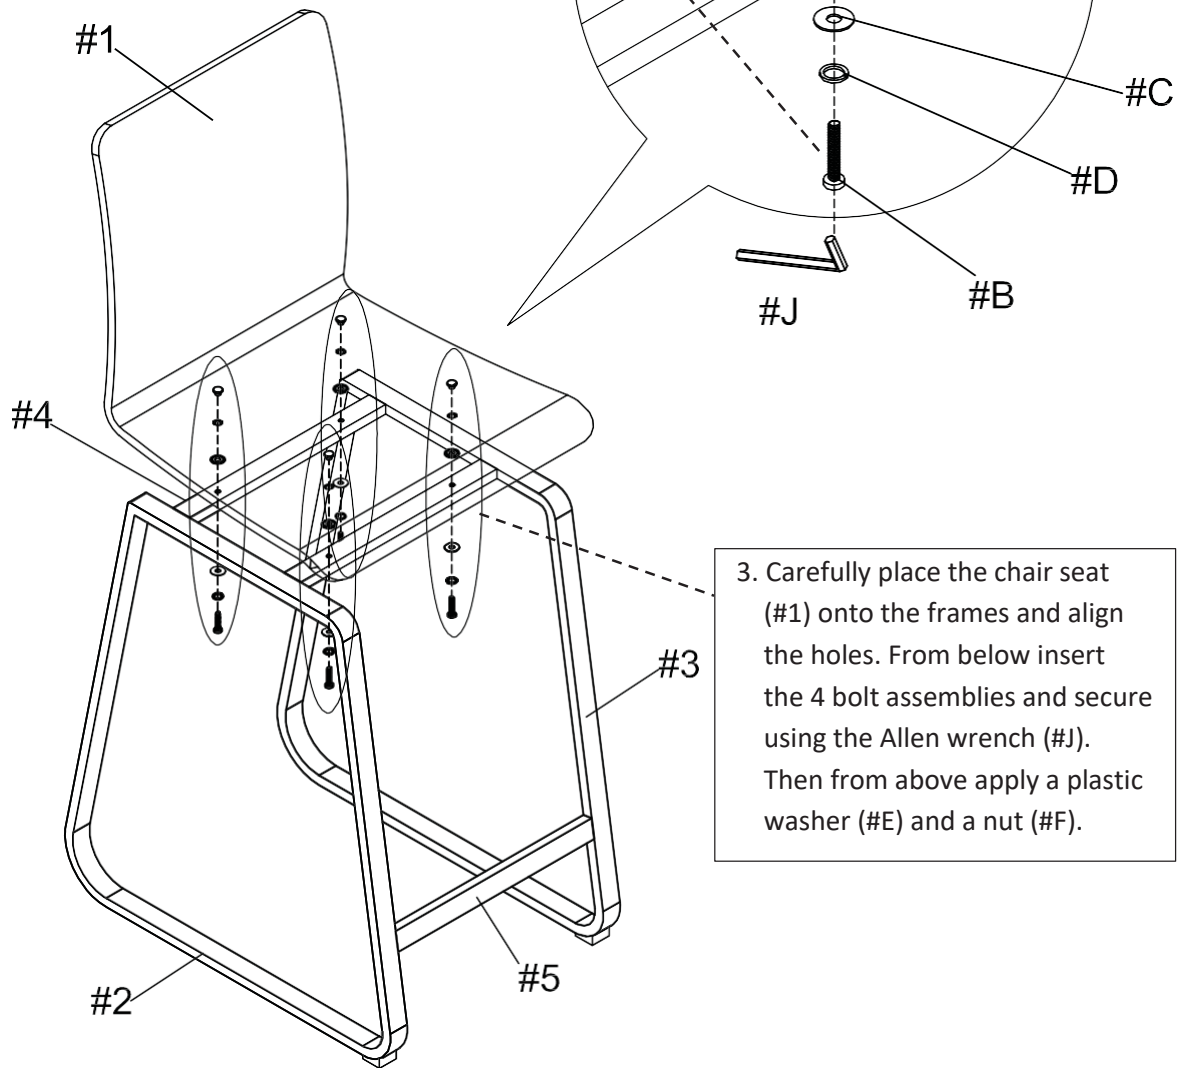

3. Carefully place the chair seat (#1) onto the frames and align the holes. From below insert the 4 bolt assemblies and secure using the Allen wrench (#J). Then from above apply a plastic washer (#E) and a nut (#F).