 





# ASSEMBLY INSTRUCTION

## Patio Dining Chair




### 26001DC

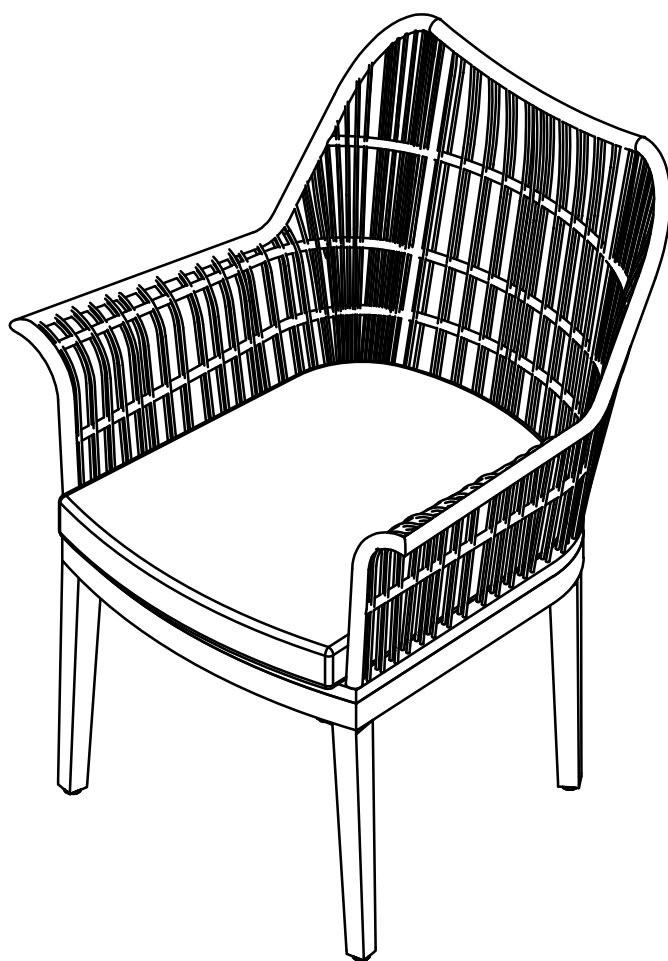
   
# RARTS LIST
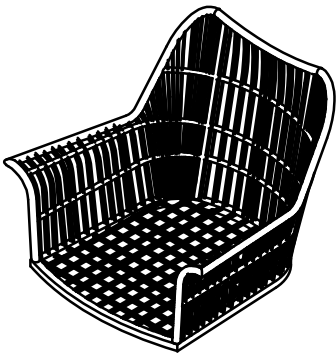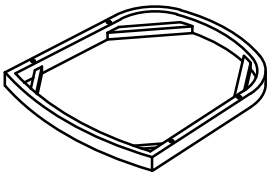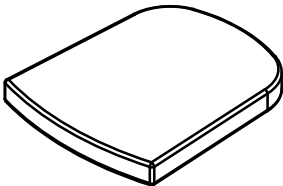
| LABEL |                                                                                     | DESCRIPTION  | QTY |
|-------|-------------------------------------------------------------------------------------|--------------|-----|
| A     |    | Backrest     | 2   |
| B     |   | Seat Frame   | 2   |
| C     |  | Leg          | 8   |
| D     |  | Seat Cushion | 2   |

# HARDWARE LIST
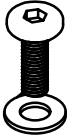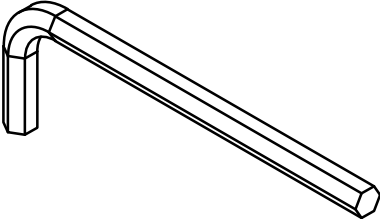 
| LABEL |                                                                                             | DESCRIPTION     | QTY |
|-------|---------------------------------------------------------------------------------------------|-----------------|-----|
| 1     | <br>M6×55  | Bolts & Washers | 8   |
| 2     | <br>M6×15 | Bolts & Washers | 24  |
| 3     | <br>M6   | Allen Wrench    | 1   |

# 1


1 × 4  
M6×55



3  
M6



#3

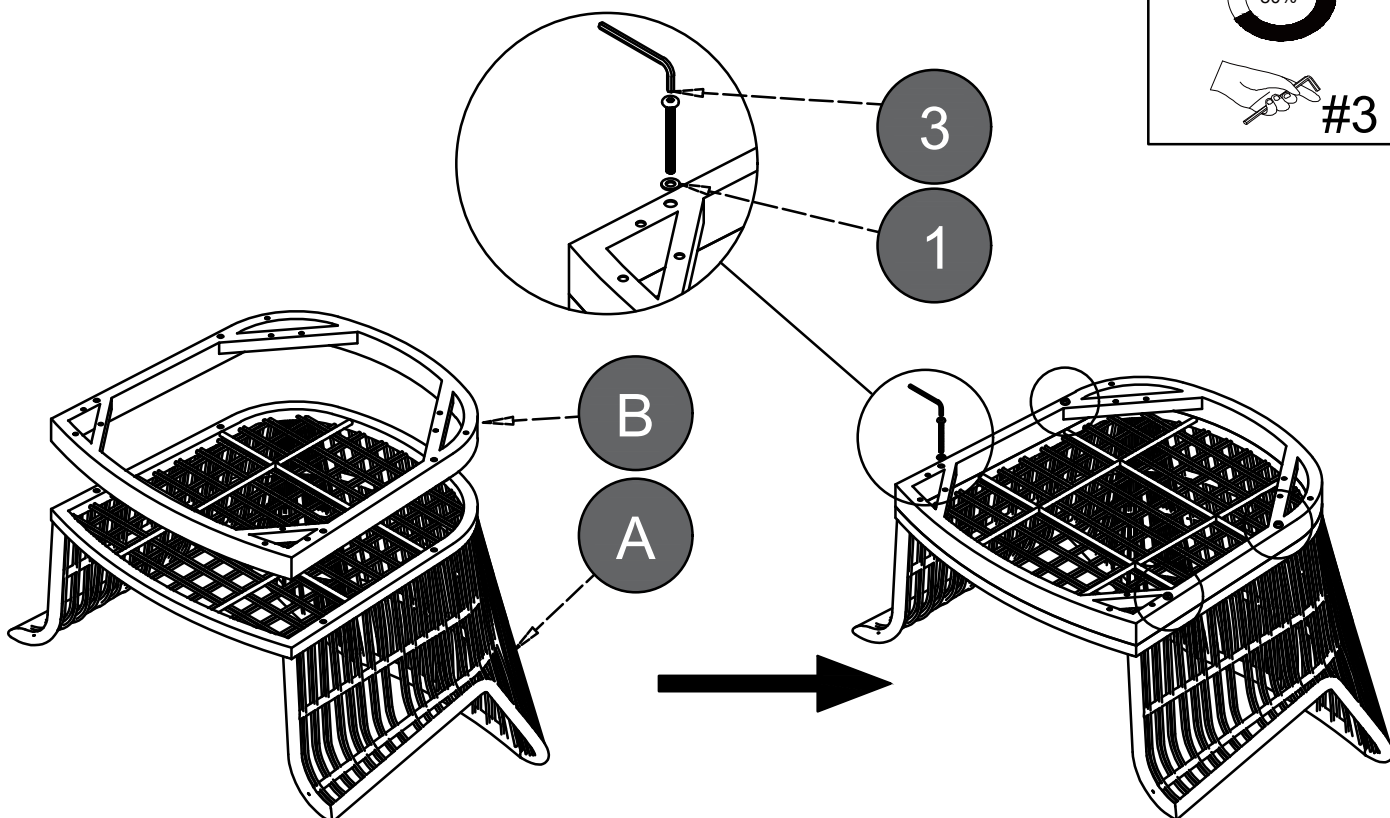

# 2


2 × 12  
M6×15



3  
M6





#3

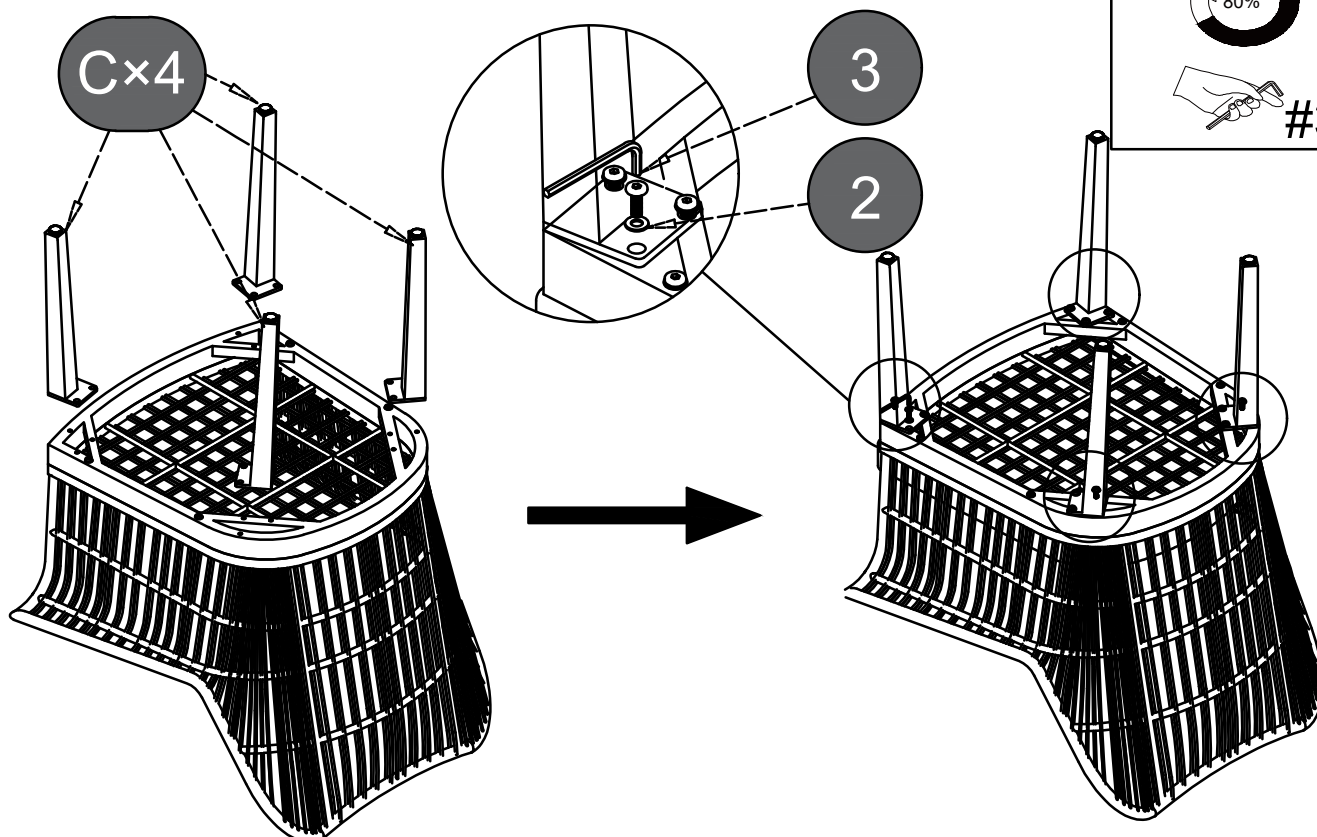


# 3



Tighten the screws to 100% tightness

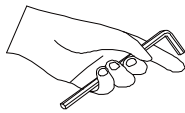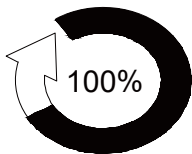

#3

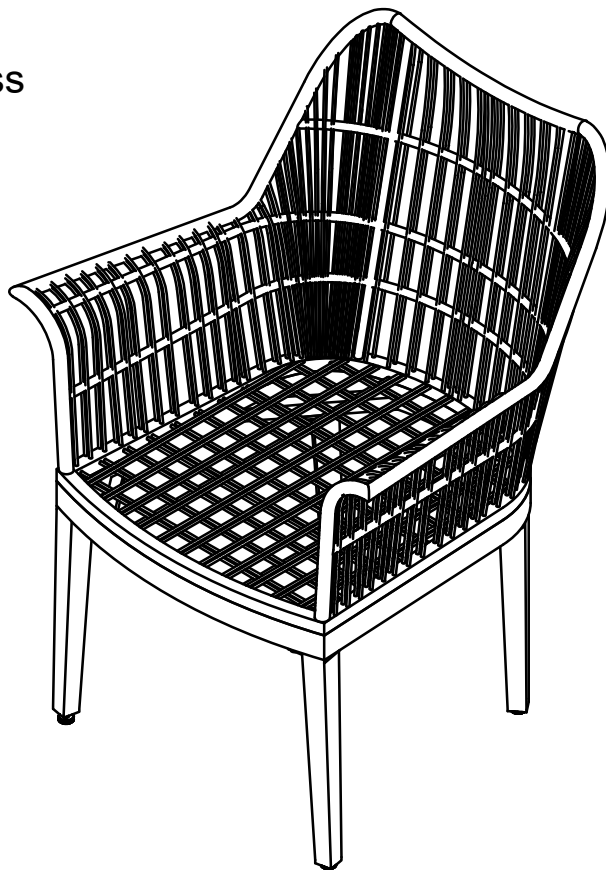

# 4

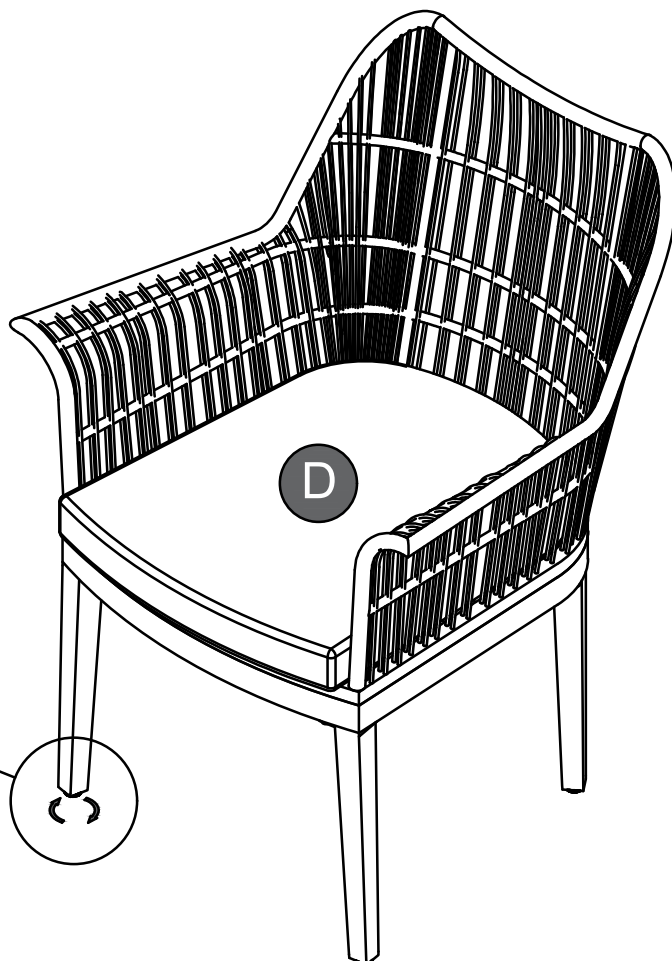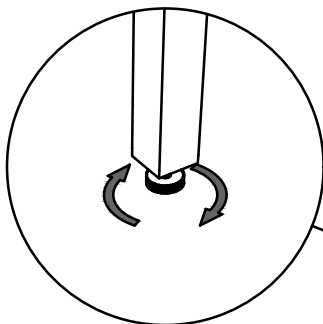

Note: Each leg has an adjustable fortuneteller to help level your chair.