
 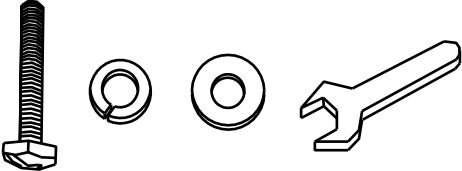
 
 



Assembly Instructions

EXTENDABLE SOLID WOOD DINING TABLE

PARTS LIST



FIGURE	DESCRIPTION	Q'TY
	Hardware Bag	1 Pc
	Table Top	1 Pc
	Leg	4 Pcs
	Apron Hinge	4 Pcs
	Leaf Hinge	3 Pcs
	Glides	2 Pcs
	Table Hook	4 Pcs
	Support Leaf Hinge	2 Pcs
	Apron Leaf	2 Pcs

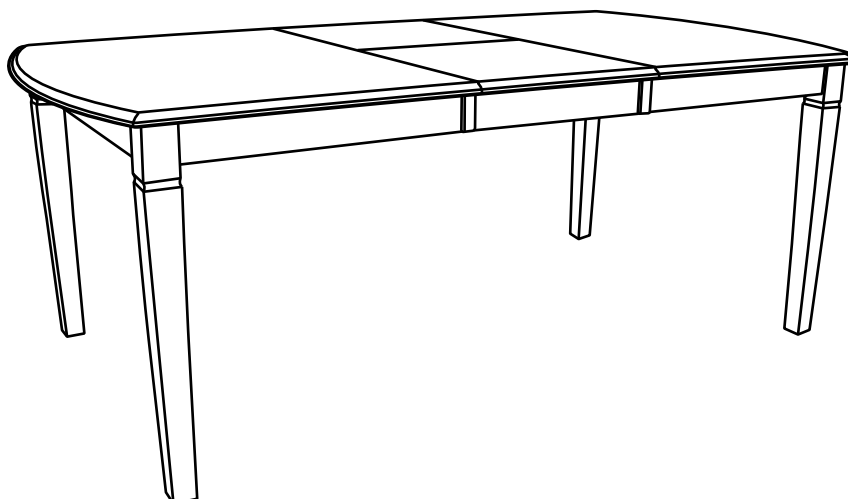

Assembly Instructions

EXTENDABLE SOLID WOOD DINING TABLE

  
HARDWARE PARTS :

			
Hex Bolt 8 pcs	Lock Washer 8 pcs	Flat Washer 8 pcs	Wrench 1 pc




NOTE: THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE.

ASSEMBLY :

- 1) Turn the Table Top upside down on a protective surface such as carpet or other soft material. Place the leg to corner of Apron, then tighten the **Flat Washer**, **Lock Washer** and **Hex Bolt** using the **Wrench** provided. Repeat the same for the other legs. Set the Table upright on its legs.

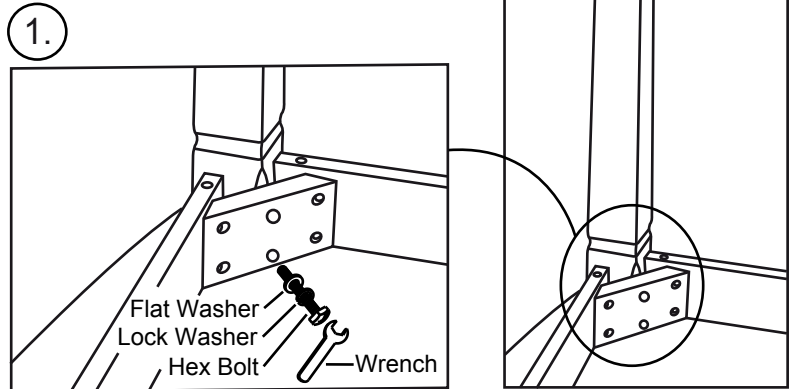

- 2) Unlock the hook underneath the table and pull the table top wide open equally from both end. Lift both leaves from the compartment.
- 3) Flip up the aprons and unfold leaf and place the leaf on the Table Top surface carefully.
- 4) Push table top from both ends to close. Lock the hook underneath the table.

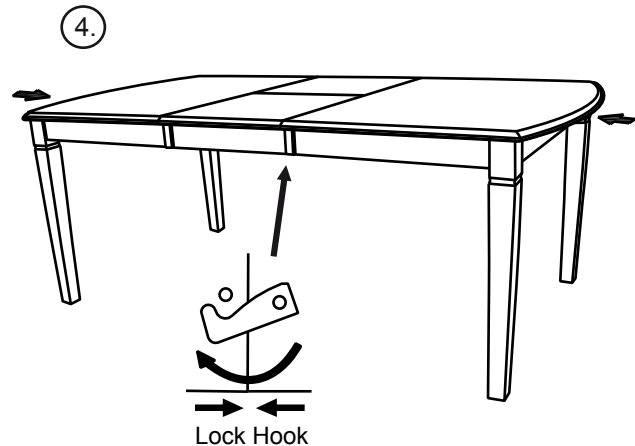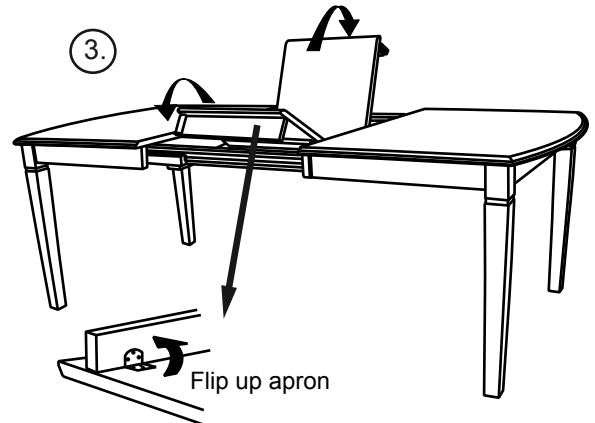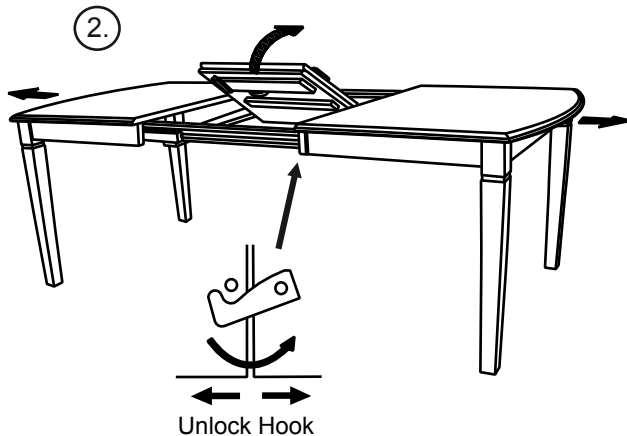

IMPORTANT NOTE :

~ Please keep all hardware out of the reach of children.

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.