

CROSS LEG DINING TABLE

ASSEMBLY INSTRUCTIONS

IMPORTANT NOTE :


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

HARDWARE LIST

A	JCBB SCREW M8 x 40mm		12PCS
B	SPRING WASHER 5/16"		12PCS
C	FLAT WASHER 5/16"		12PCS
D	ALLEN KEY M5		1PC
E	JCBC SCREW M6 x 50mm		4PCS
F	SPRING WASHER M6		4PCS
G	FLAT WASHER M6		4PCS
H	ALLEN KEY M4		1PC
I	WOOD BUTTON		4PCS


PART LIST

1	TABLE TOP	1PC
2	CROSS LEG	2PCS
3	CENTER RAIL	1PC

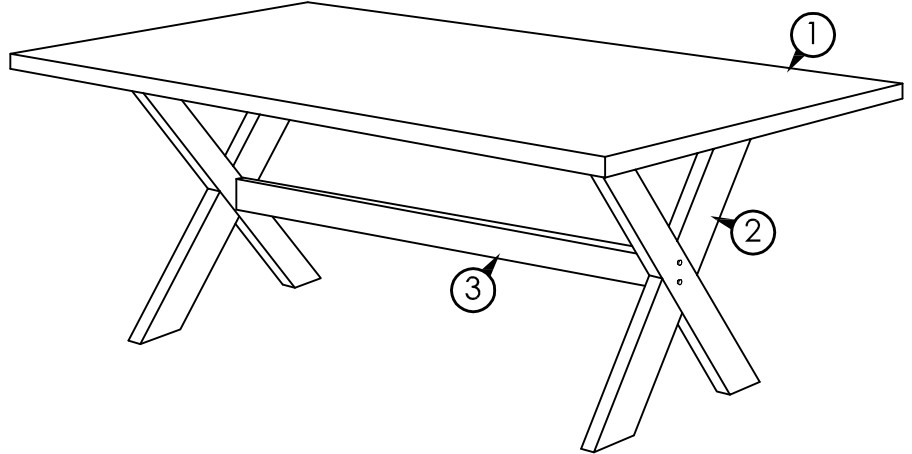

COMPLETED TABLE ASSEMBLY

STEP 1

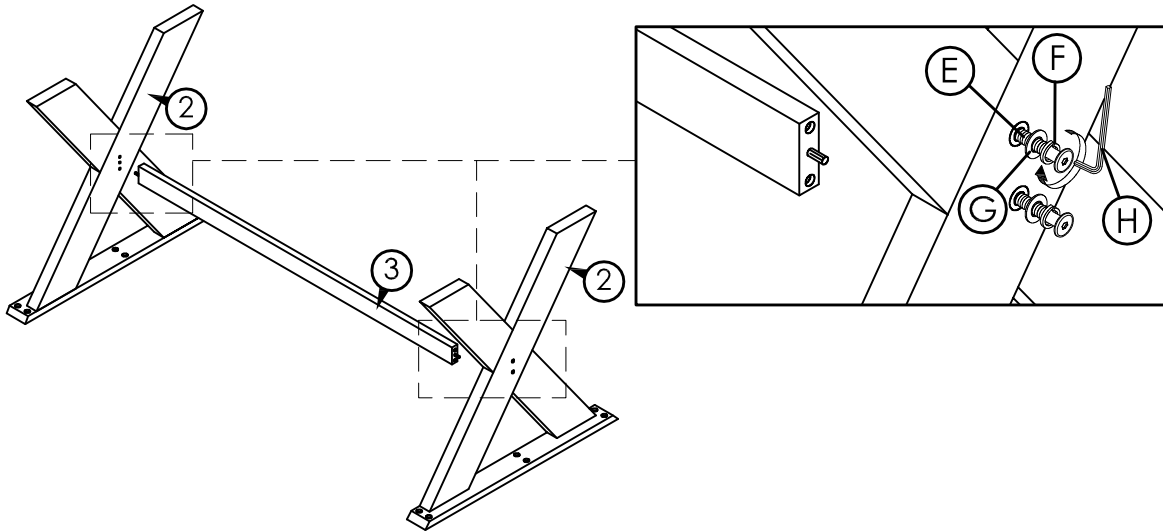

STEP 2

