

<b>Product Name:</b>	Resin Fountain with Lights
<b>SKU #:</b>	WHF2382-M

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Please make sure to unpack all the components from the packaging inside the carton to ensure that there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

**CARTON CONTENTS:**

Description	Quantity	Description	Quantity
Fountain (D)	1	Light (C)	1
Pump (B)	1	Top Plate (G)	1
Hose (A)	1	Transformer (H)	1
Hole Cover (E)	1	Rubber Ring (I)	1
Plastic Pads (K)	3	Hardware (J)	1

**Compatible Pumps for this fountain:**

Pump Model No.
JR350
WP350
YH400

**Tools required for assembly:** No tools required for assembly.

**Assembly Instructions:**

- Place the fountain (D) on a completely flat surface.
- Place the pump (B) in the center of the fountain (D).
- Pass the power cord of LED light (C) through the plate (G), then connect to the pump (B).
- Connect one end of hose (A) to the pump (B).
- Pass the power cord of pump (B) through the side hole of fountain (D) from inside to outside, put the (E) on side hole of fountain (D).
- Connect the power cord of pump (B) to transformer (H).
- Pass the other end of hose (A) through the plate (G) and connect on the LED light (C).

**Attention:**

- The LED light (C) and the plate (G) are not fixed.
- Please move the hose (A) into the small hole of the plate (G).

- Fill the fountain (D) with enough water to submerge the pump (B).

**Attention:** Make sure the water level is lower under the side hole.

- Install the rubber ring (I) on the LED light (C), and finally fix the LED light (C) on the plate (G).
- When installing the plate (G), be sure to hold it in place and use your thumb to press down the edges so that the plate is horizontally flat.

<b>Product Name:</b>	Resin Fountain with Lights
<b>SKU #:</b>	WHF2382-M


11. Plug transformer (H) into the standard power socket.

**Friendly reminder:**

- Always disconnect the power before moving or maintaining the fountain.
- Water level must remain below the side hole to prevent leaking.
- Use the plastic pad (K) to make the fountain level.
- Use the hardware (J) to open the top when necessary.

**WARNING-RISK OF ELECTRIC SHOCK**

- DO NOT use in water intended for swimming, wading, immersion, or bathing.
- Power unit must be supplied by a circuit protected by a ground fault circuit interrupter (GFCI).

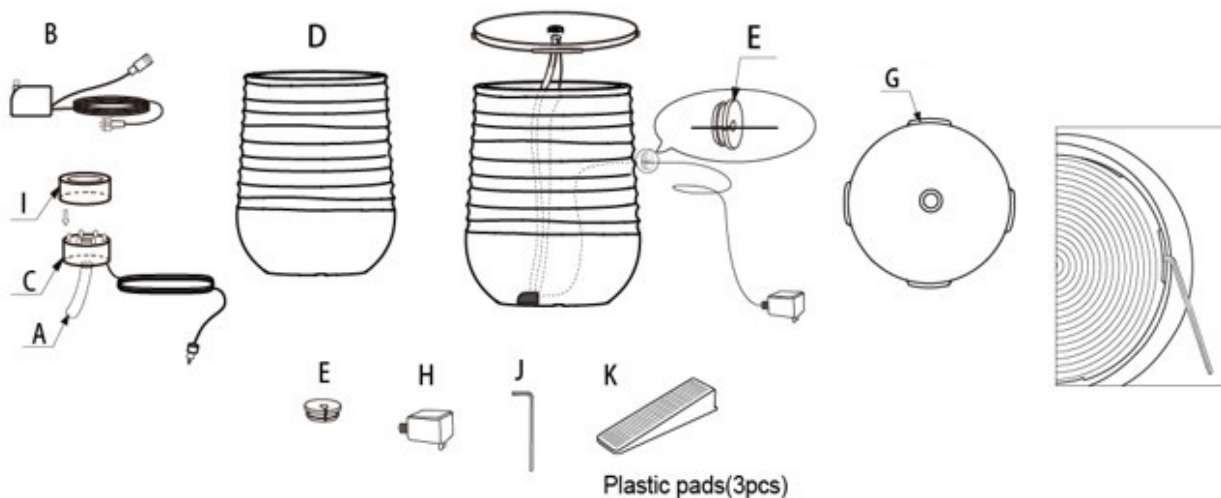

Note: The above diagram is for illustrative purposes only.

<b>Product Name:</b>	Resin Fountain with Lights
<b>SKU #:</b>	WHF2382-M

### **MAINTENANCE OF YOUR PUMP:**

- Keep the water clean – clean water will prolong the life of your pump.
- Use a pre-filter on your pump if available.
- Regular cleaning of the pump will be necessary depending on the environment in which it is operated. Clean the pump when it is visibly soiled or when a noticeable drop in performance is detected. **Failure to clean the pump will result in overheating of the pump and the voiding of the warranty!**
- Before cleaning, always disconnect the pump from the power source.
- Disassemble the pump by removing the inlet screen & the impeller housing. Remove the impeller/rotor assembly by gently pulling on the impeller blades. Use a soft cloth or brush to clean the area inside the pump where the impeller/rotor assembly was. Clean the inlet screen, impeller housing & impeller in warm soapy water. Reassemble the pump and inspect it for proper operation.

### **MAINTENANCE OF YOUR FOUNTAIN:**

- Unplug the pump from electric power before servicing, cleaning, or moving.
- Keep water clean - using clean water will reduce mineral deposits and improve water clarity.
- Clean the fountain periodically to prevent mineral deposits and contamination. Use warm, soapy water and a stiff brush for heavily stained surfaces. **Do not use harsh chemicals, as this will damage the finished surface and void the warranty.**
- Add clean water periodically to ensure the pump is fully submerged.
- Disconnect the power and empty the basin if the fountain will not be used for an extended time.
- If installed outdoors and in a freeze area of the country, ensure that all water is removed and the unit is completely dry. **This product is NOT to be operated below 41°F (5°C). Freeze damage may occur.**



### **Special Warnings and Cautions:**

#### **CAUTION:**

- The pump has been evaluated for use with water only.
- Do not use the pump in water exceeding 35°C / 95°F.
- Do not use the pump in flammable liquids.
- Do not use the pump for industrial purposes.
- Do not use the pump in vehicles or on ships, aircraft, or swimming pools.
- Do not use the pump in a location where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapor, or gas).
- Do not let the pump run dry. The pump must be completely submerged for proper operation and cooling.
- Do not use the power cord to lift the pump.
- Keep the plug dry. Do not expose the plug to water or steam.
- Before connecting to the power source, ensure the pump is assembled and completely submerged in water.



# Instruction Manual

**SAVE THESE INSTRUCTIONS**—This manual contains important safety and operating instructions for power units.

<b>Product Name:</b>	Resin Fountain with Lights
<b>SKU #:</b>	WHF2382-M

- Check the water level regularly to ensure the pump is completely submerged during operation. The pump should be fully submerged during operation. Do not add water while operating the product. Always disconnect the pump from the power source before adding water.

## **WARNINGS:**

- To reduce the risk of electric shock, connect only to a properly grounded, grounding-type receptacle.
- To reduce the risk of electric shock, use only on portable self-contained fountains no larger than 5 feet in any dimension.
- Do not exceed the voltage shown on the pump.
- Always disconnect the pump from the power source before beginning any maintenance or work on the pump or fountain.
- Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
- For pumps with a 3-prong, grounded type plug, do not remove the grounding pin from the plug on the power cord.

## **TIPS AND TROUBLESHOOTING:**

1. Ensure the pump's flow control switch is set to maximum (+) before operating. Once the flow is established, the pump can be adjusted downward to the desired level.
2. If the pump operates but there is no flow, check to ensure the pump is fully submerged.
3. If the pump operates, but there is no flow, check the supply tubing for kinks and correct it.
4. If the pump operates, but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump from the water. Remove supply tubing at the pump outlet and clean tubing inside and out if necessary. Reset pump in water (outlet side up) and once water begins to flow, re-attach the supply tubing.