 
 
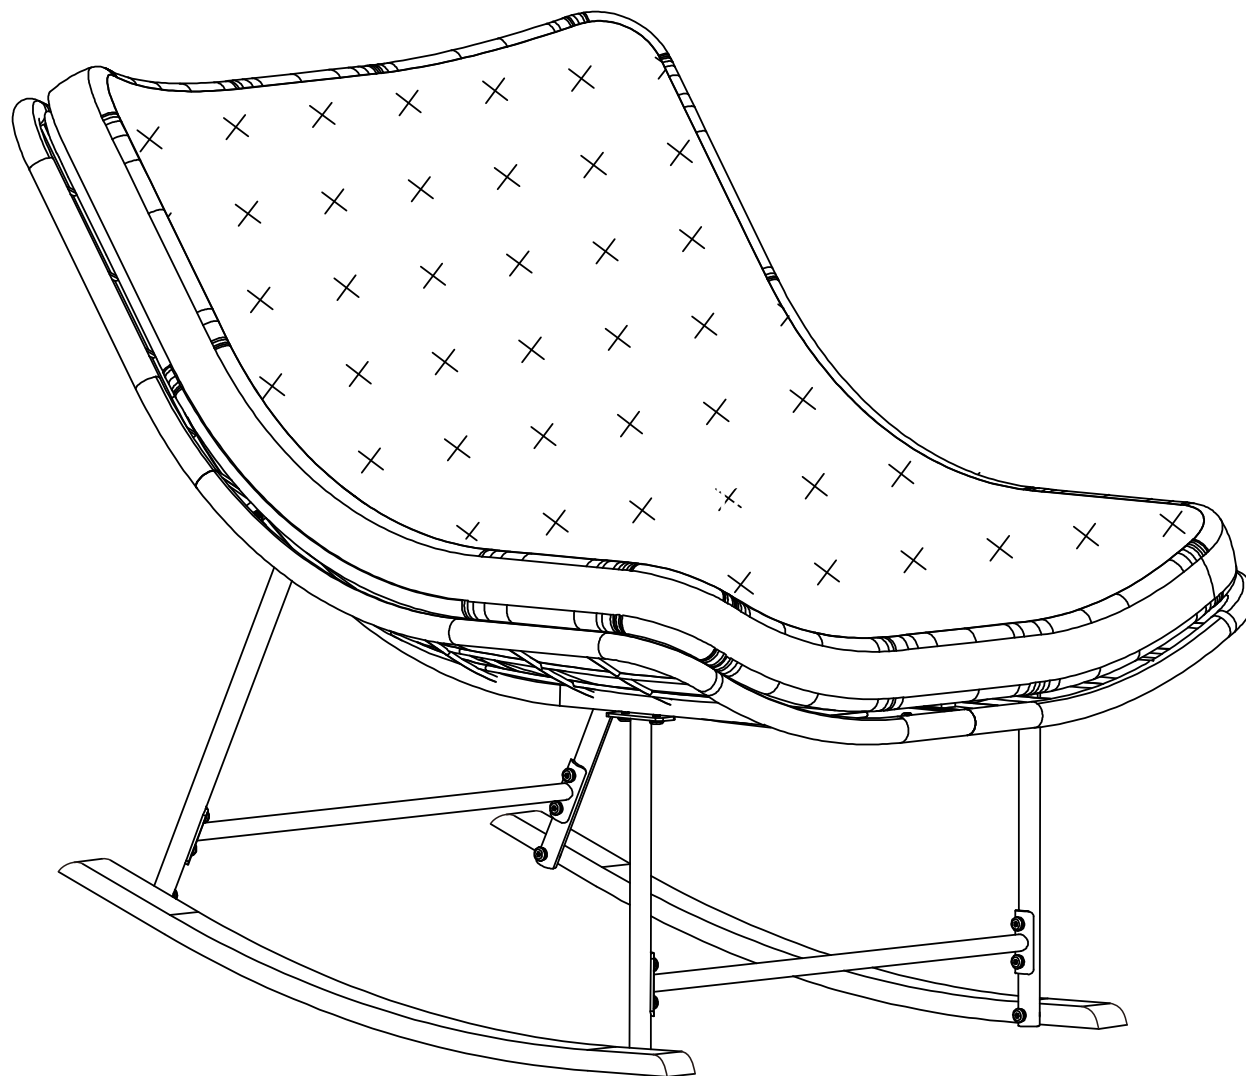 
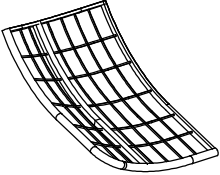 
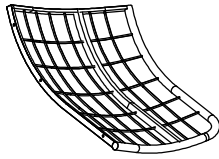 
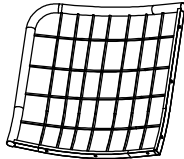 
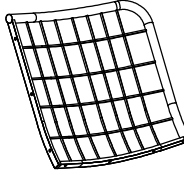 
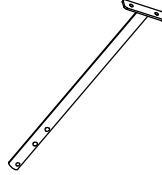 
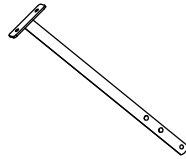 
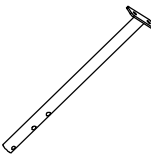 
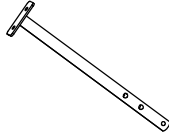 
 
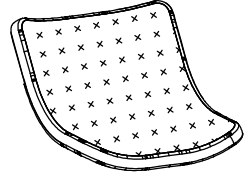 
 
 
 




PARTS LIST


A	B	C	D	E	F
					
X1	X1	X1	X1	X1	X1
G	H	I	J	K	
					
X1	X1	X2	X2	X1	
L	M	N	O	P	Q
	 M6*35		 M6*15	 M6*50	
X1	X12	X32	X16	X4	X4

Step 1

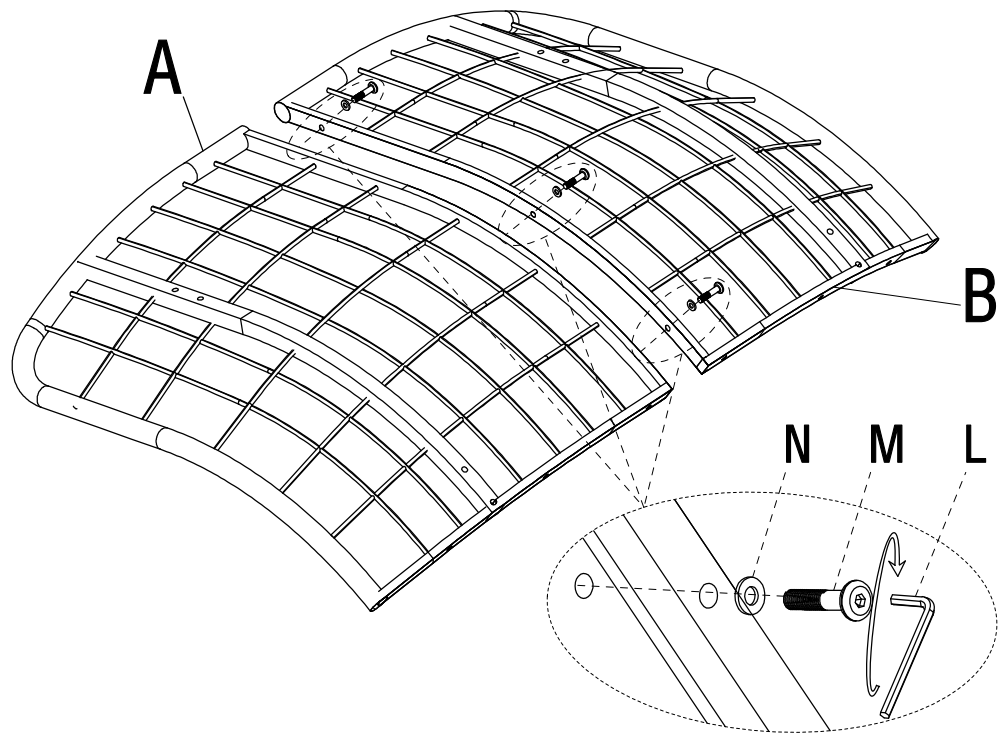


Screw the screws in half

 Step 2

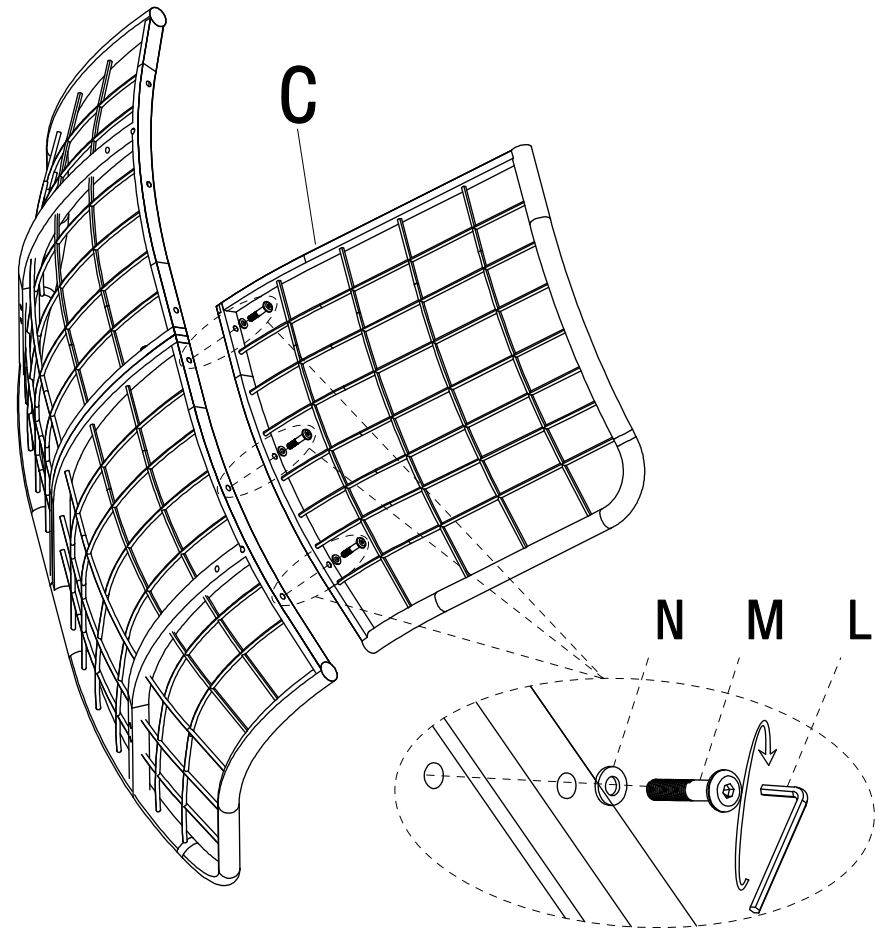


Screw the screws in half

 
Step 3

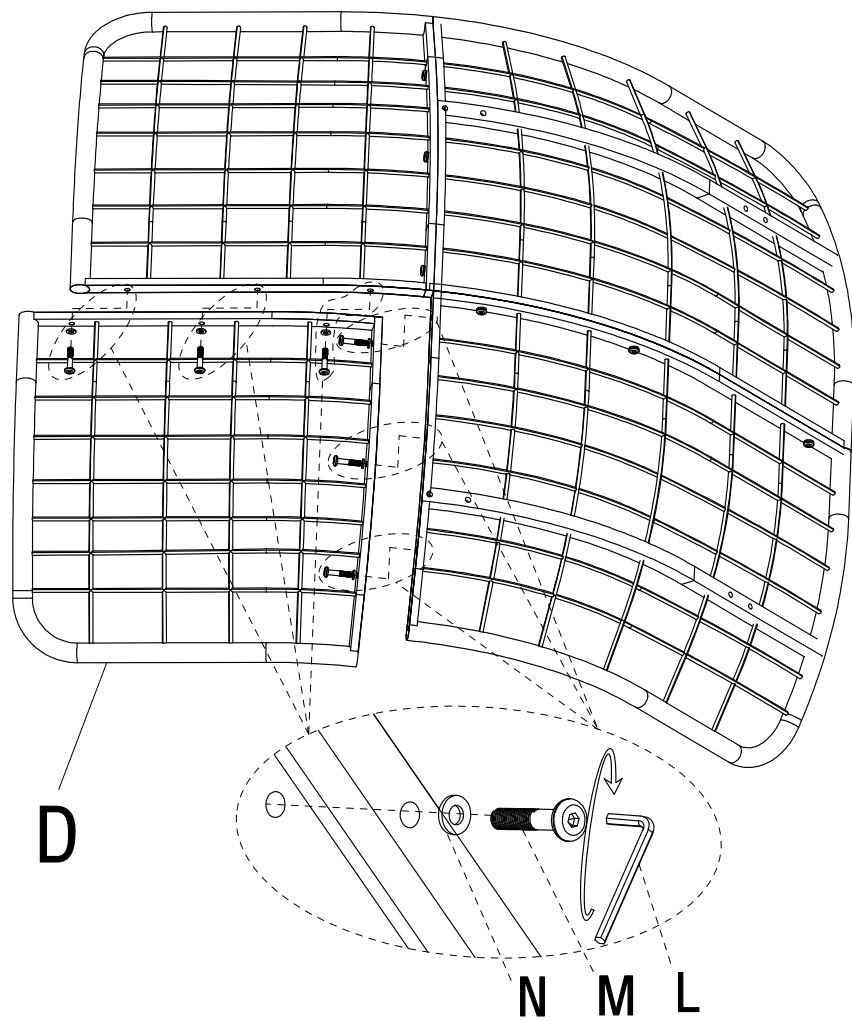

 Step 4

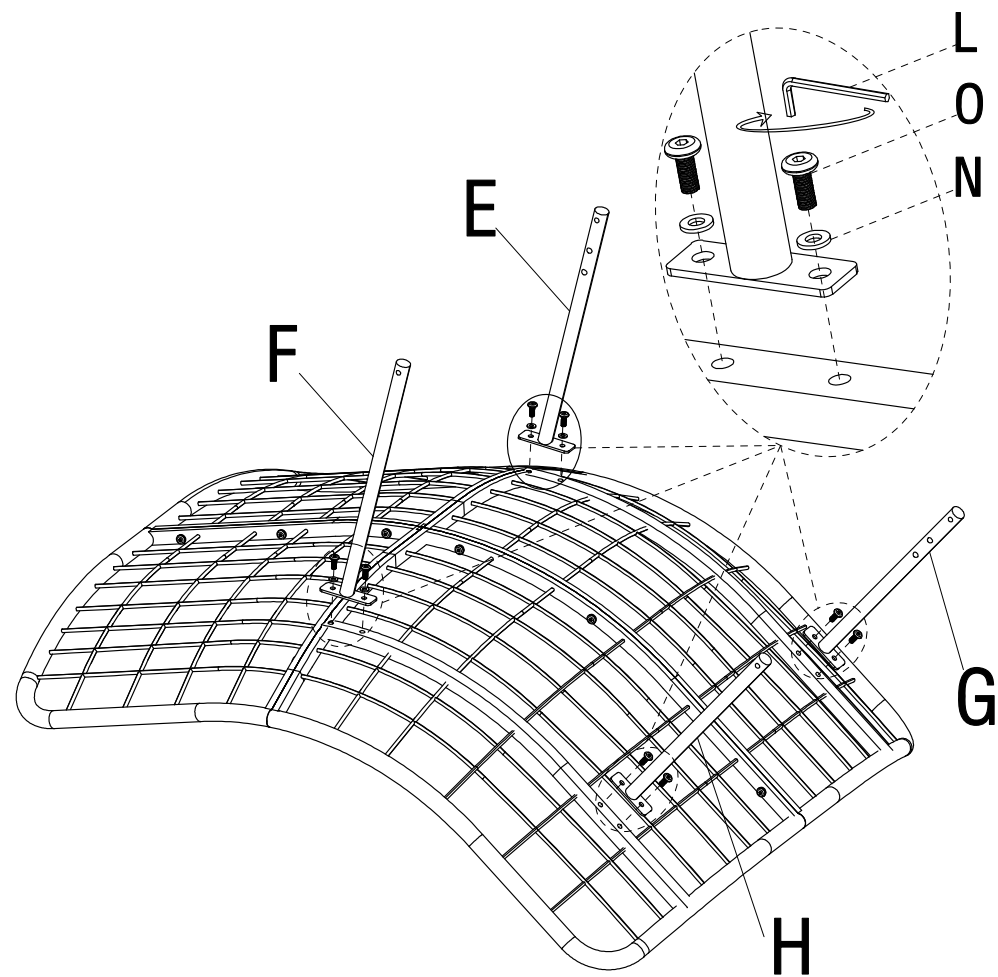


 Step 5

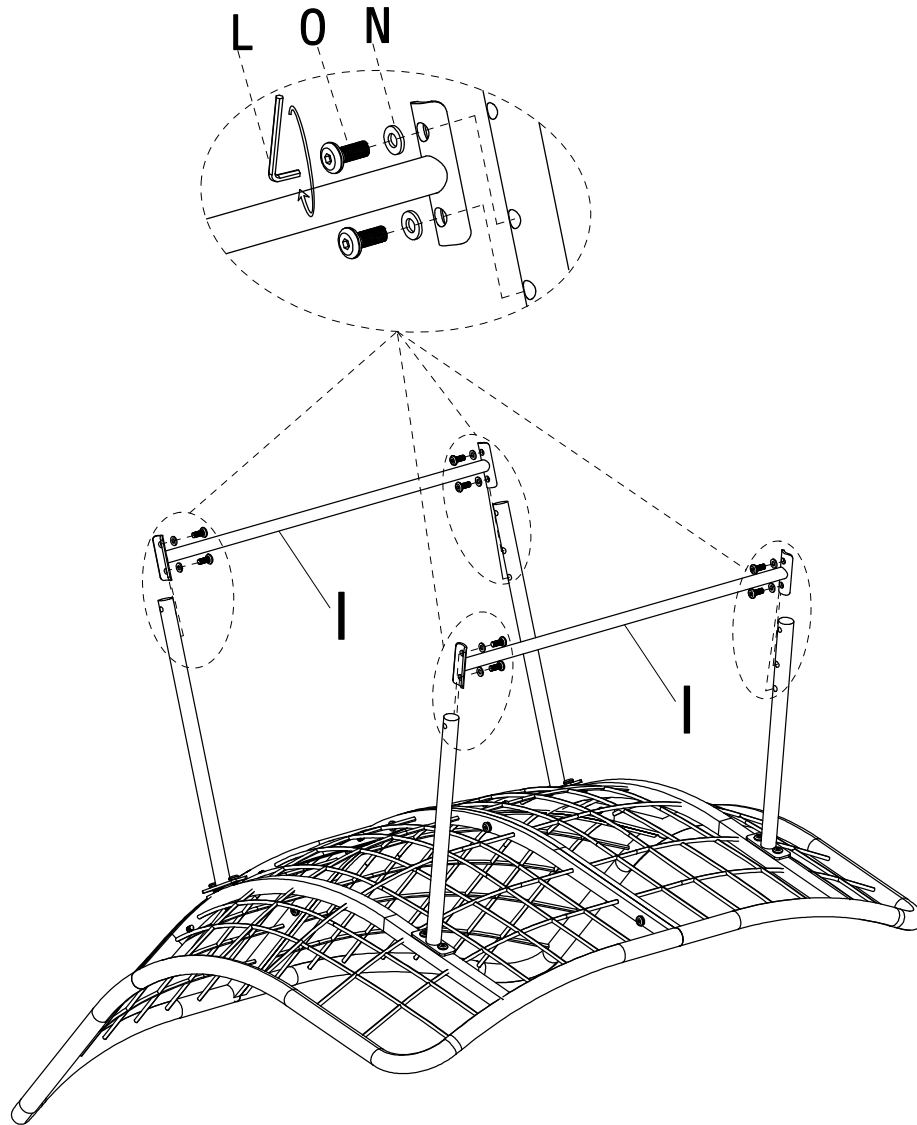


Screw the screws in half

 Step 6

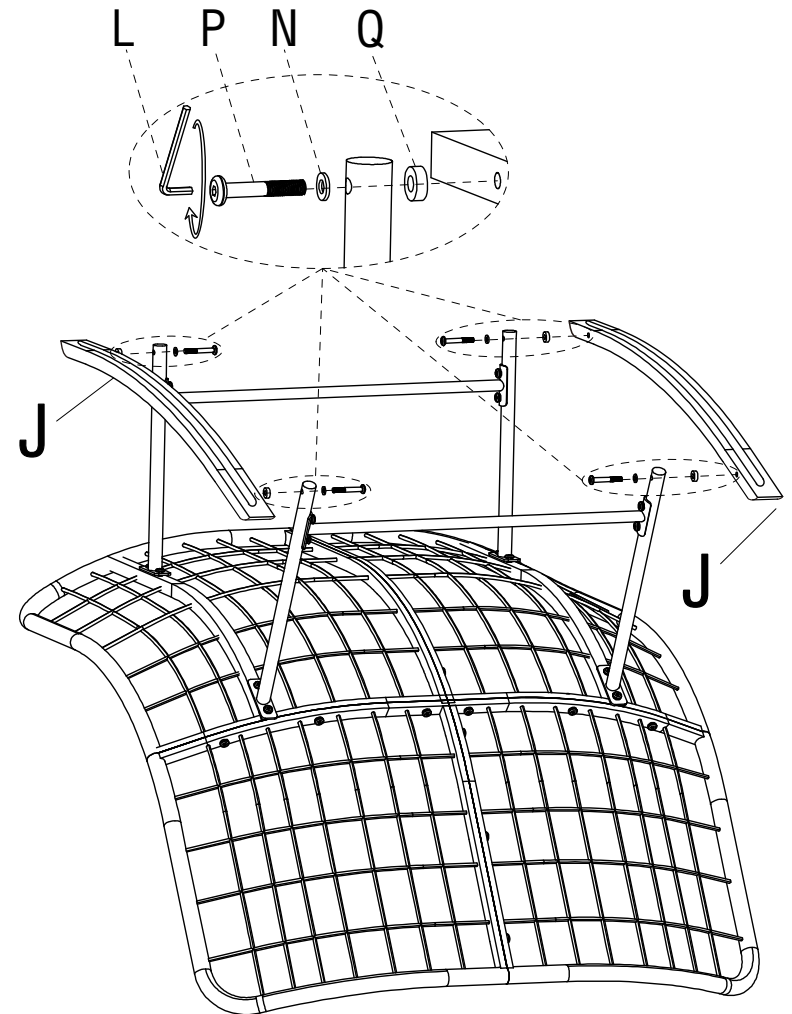

Check all screws and tighten them all

 Step 7

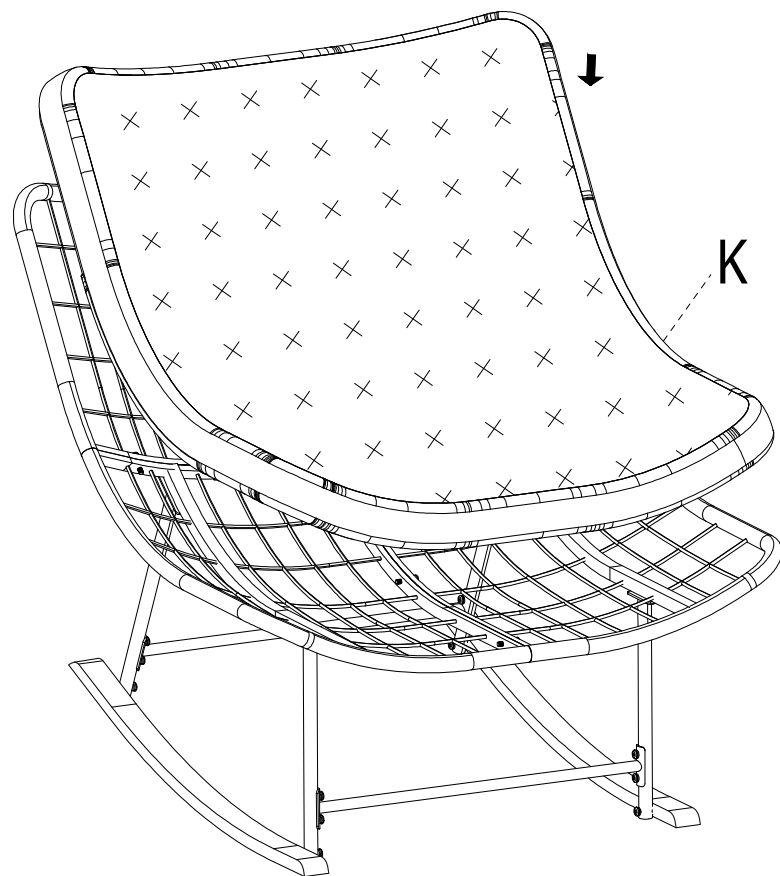

Step 8

