



ASSEMBLY INSTALLATION



1. Place the wheelbase upside down, insert the casters to the ends of the wheel stand.



2. Repeat for all 5 casters.



3. Turn the wheelbase right side up and insert the hydraulic piston.



4. Slide the hydraulic sleeve over the hydraulic piston as shown. (The sleeve should stick out about 1 inch.)



5. Attach 2 armrests with holes align, insert all screws BEFORE completely tightening them.



6. Tighten the screws with allen wrench.



7. Place the backrest on the seatbase and hold on. (It's better to have someone to help you.)



8. Insert all screws BEFORE completely tightening them. Then tighten the screws with allen wrench.



9. Secure the armrests to the backrest by screws.



10. Gently set the seat facing downwards. Attach the tilt mechanism to the bottom of the seatbase by screws.



11. Ensure the tilt mechanism is in the correct direction with the rod on the right side while sitting on the chair.



ATTENTION

(The color of the product shown in the instruction is for illustration purposes only)

1. To adjust the chair height, gently pull the lever up. Do not use excessive force to pull the lever.
2. Pay attention to your hand's position and keep it away from spaces in which it could get caught or be injured.
3. Do not make fast or violent movements.
4. (When the chair is in movement) Do not touch any of the chair's adjustment controls to prevent affecting its stability and causing a potentially dangerous fall.
5. (When reclining the chair to its full extent) Set the related control level in lock position and keep both feet on the ground, as well as abstain from any violent, rough or strong movement which could cause the chair to tip over.
6. If any part of the product is or appears to be damaged, missing or loose, please do not use the product.

PACKAGE CONTENTS



USAGE INSTRUCTIONS



1. The armrests can be left down for upper body support or flipped up to allow for uninhibited movement.



2. The knob which can be adjusted to increase or decrease the force needed to tilt.



3. Adjust height of seat by lift the lever. Tilt lock allows user to sit in an upright position.

