


INSTALLATION



Product Manual

Version: 590052US-01-26A-FH

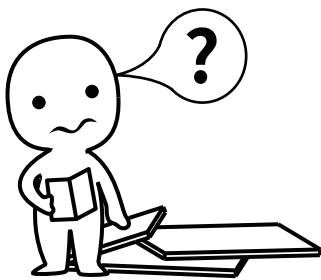


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

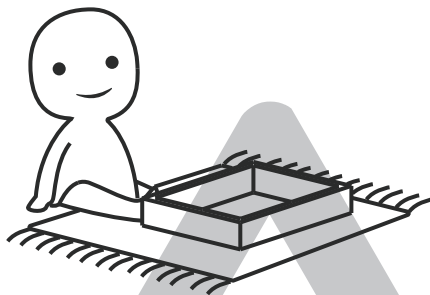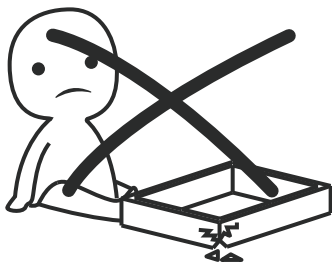



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

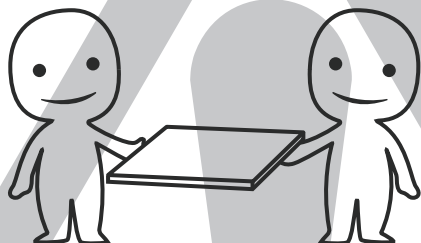

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

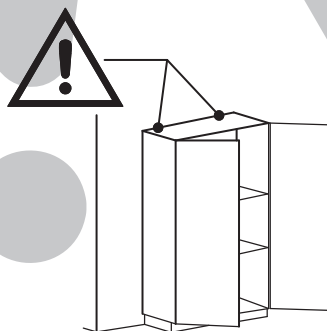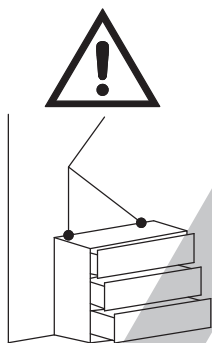

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

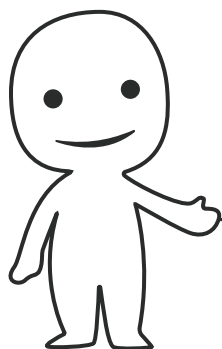


Please prepare the following tools

   

         When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

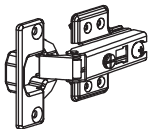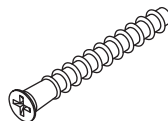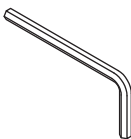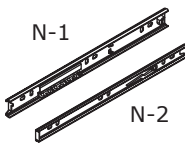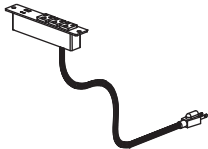A x 34+2  M6 x 35 mm	B x 34+2  Ø 15 mm	C x 24+2  Ø 8 x 30 mm	D x 42+3  M3.5 x 14 mm	E x 10+2  M4 x 35 mm
F x 4 	G x 8+2  Ø 20 mm	H x 4 	I x 5 	J x 12+2  M5 x 38 mm
K x 3 	L x 50+4  M3.5 x 12 mm	M x 1  4#	N x 4  290 mm	O x 4+1  M6 x 40 mm
P x 8+1  M6 x 50 mm	Q x 2 	S x 2  M4 x 40 mm	T x 2 	U x 12+1 
W x 1 	X x 1 			

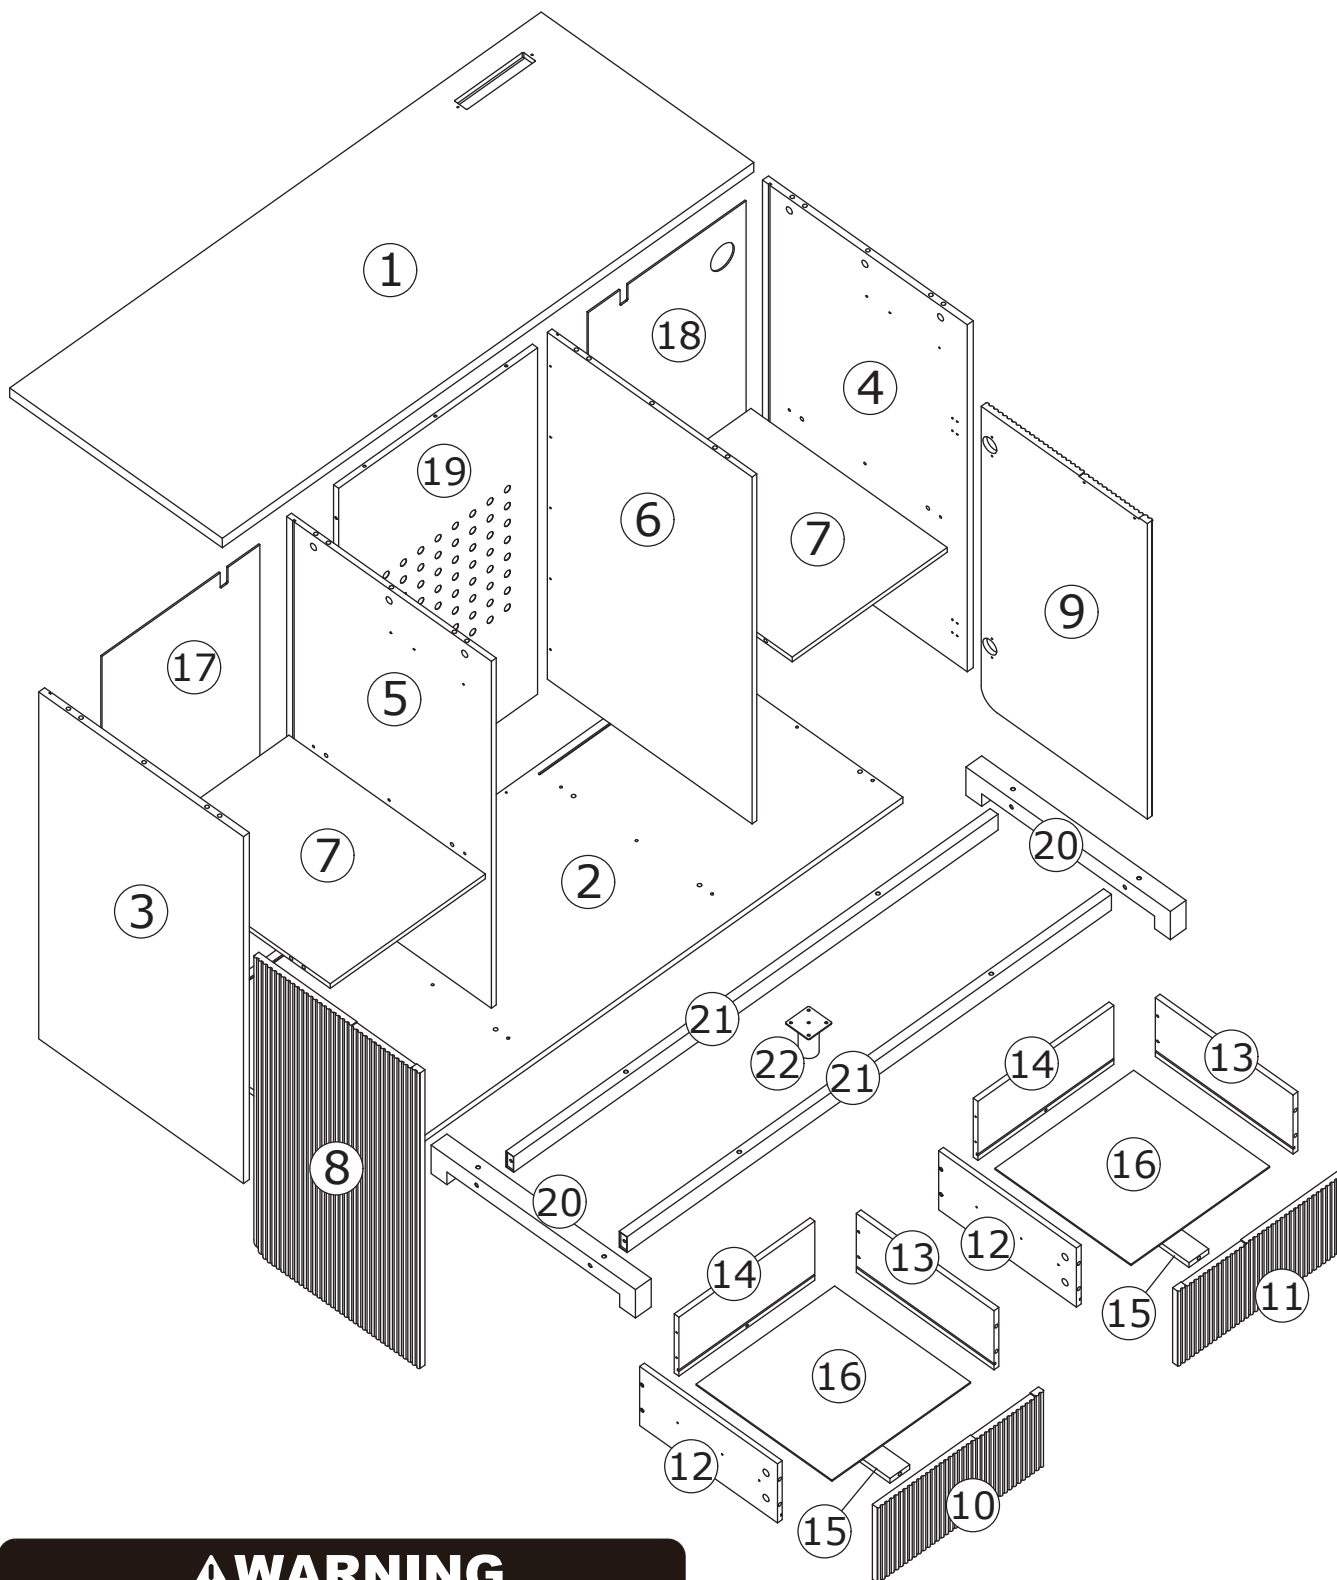


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

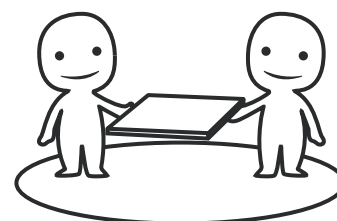


ASSEMBLED BY 2 ADULTS




**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.



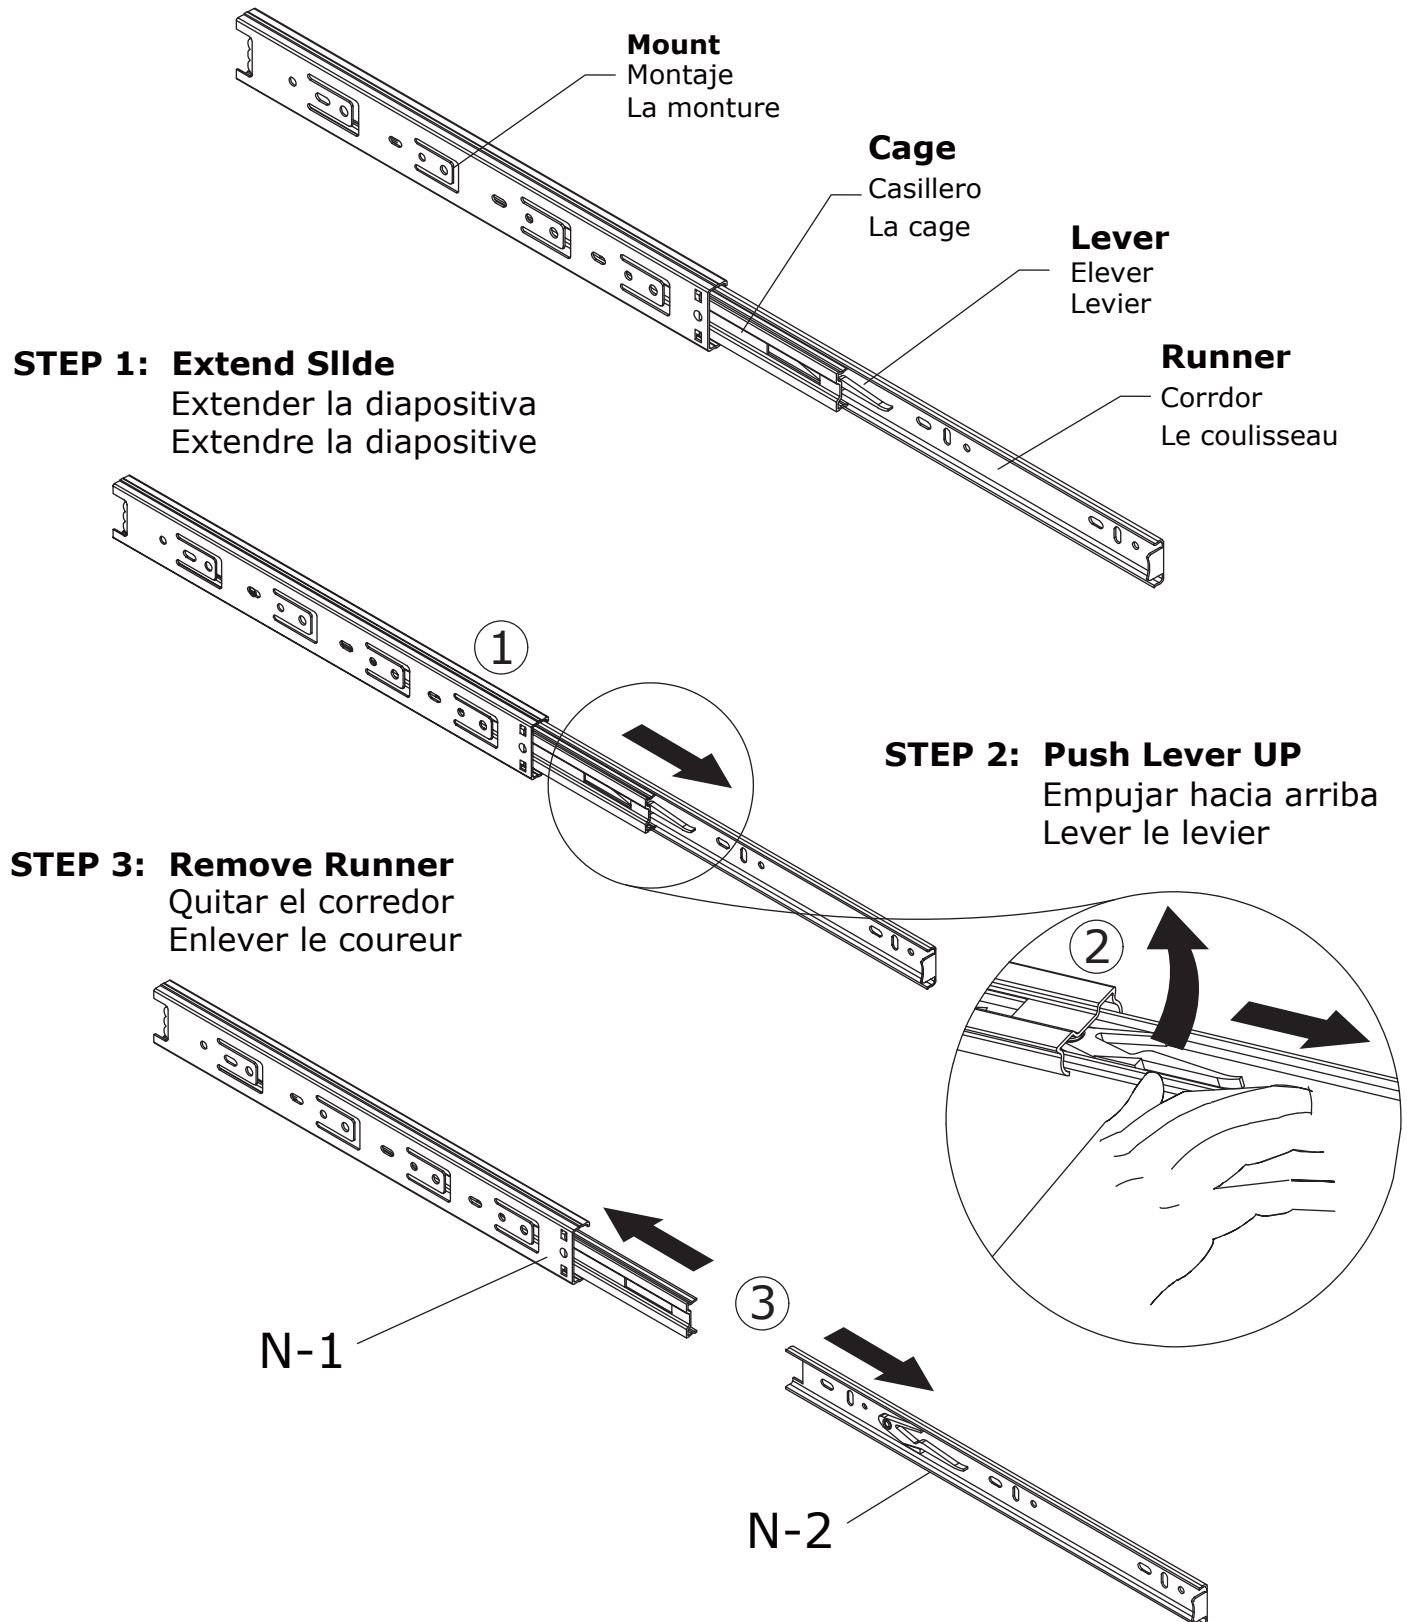


1

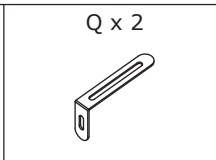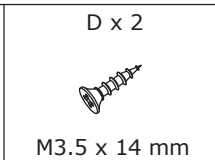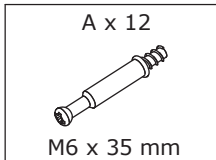

Screw eccentric rod (A) onto board 1.




Secure bracket (Q) to board 1 using screw (D). (If the unit needs to be mount to a wall later, leave a gap of at least 2" from the wall.)

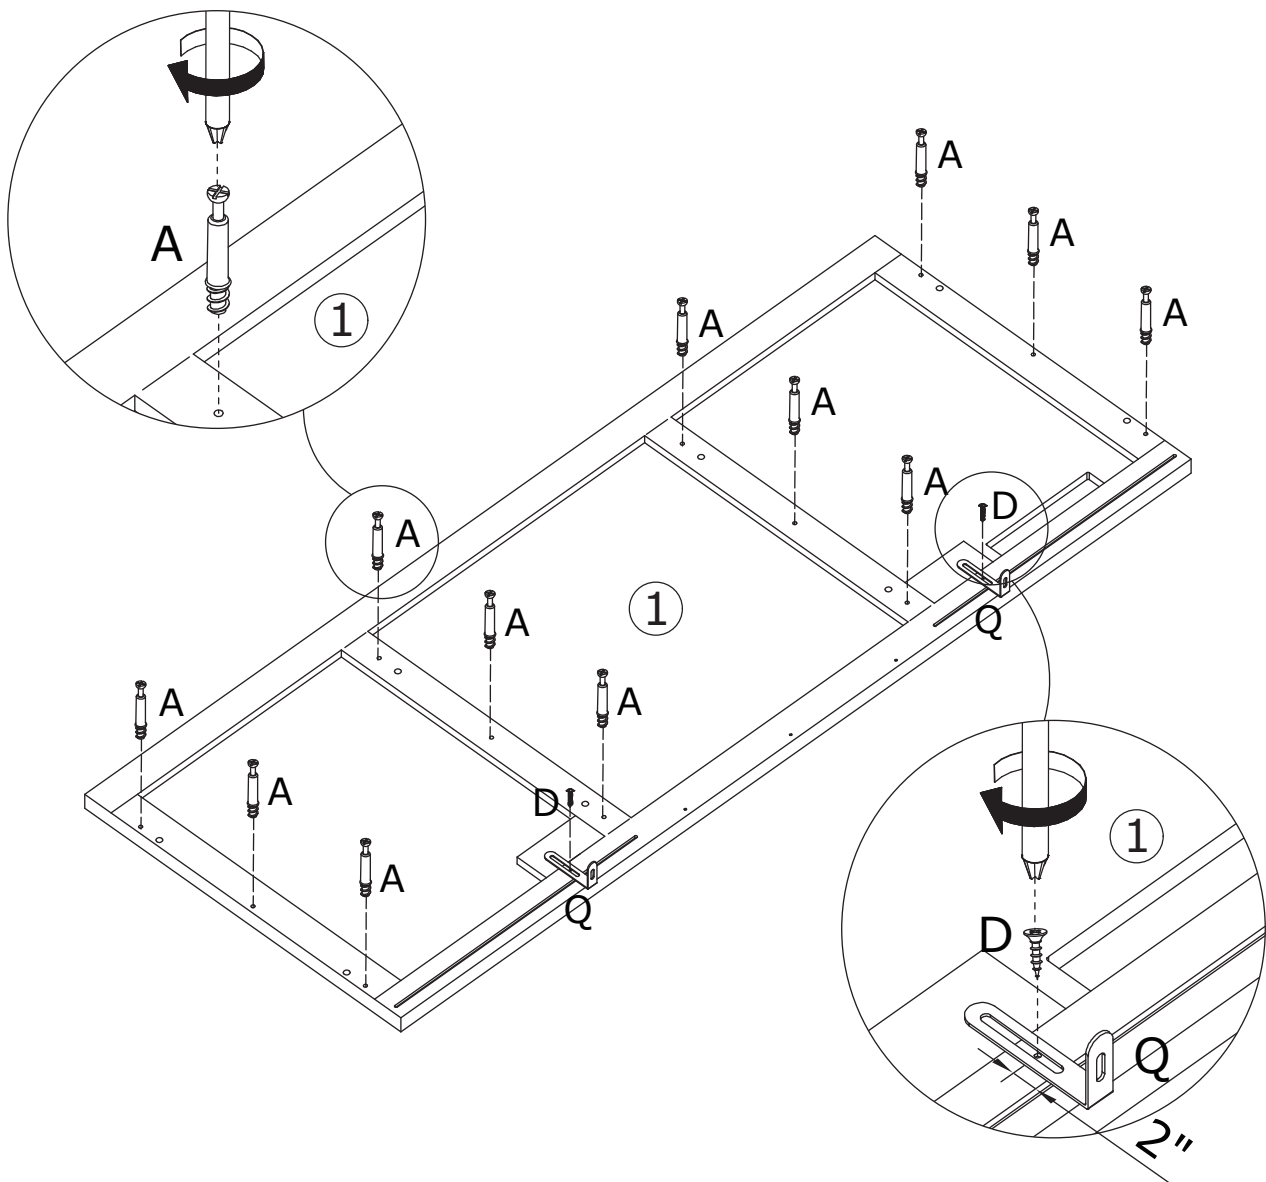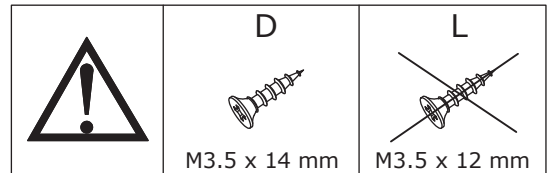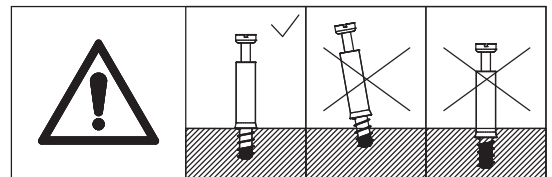

Leave 2-inch gap of the bracket for threading when mounting to a wall.










2

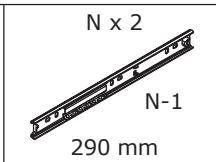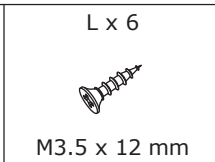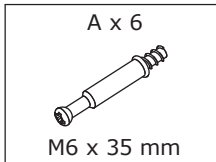


Screw eccentric rod (A) onto boards 3 and 5.


Secure slide rail (N-1) to boards 3 and 5 using screw (L).

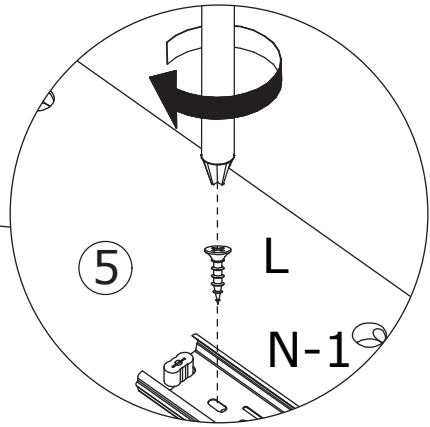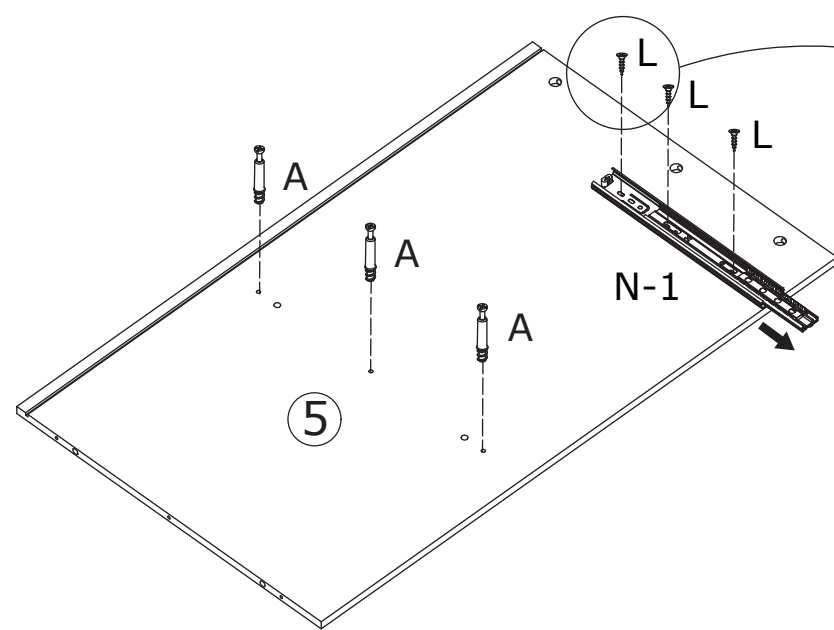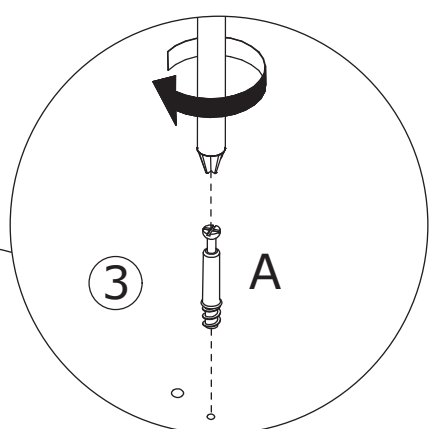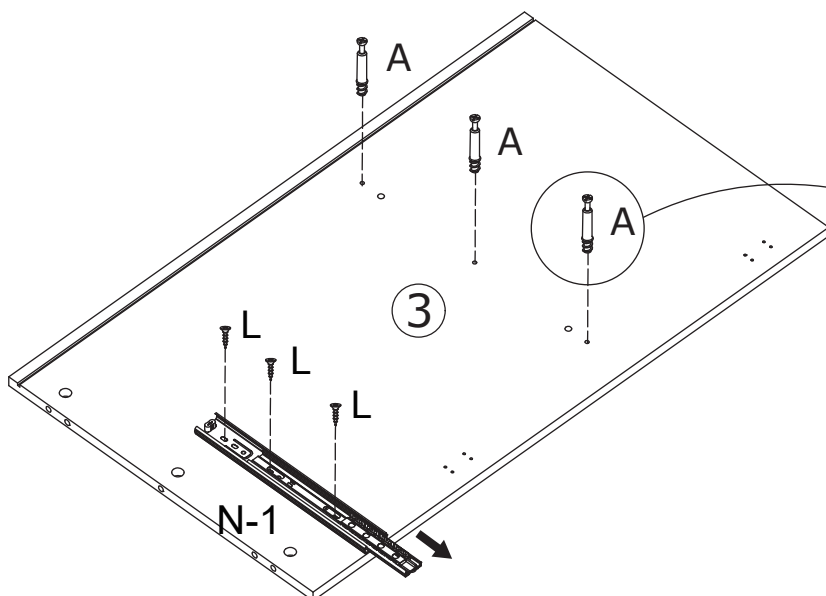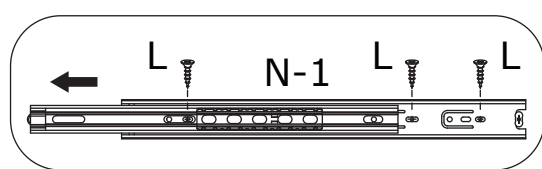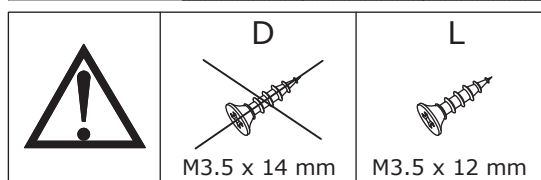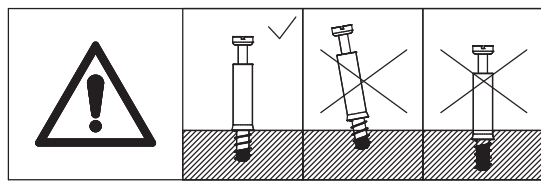

3

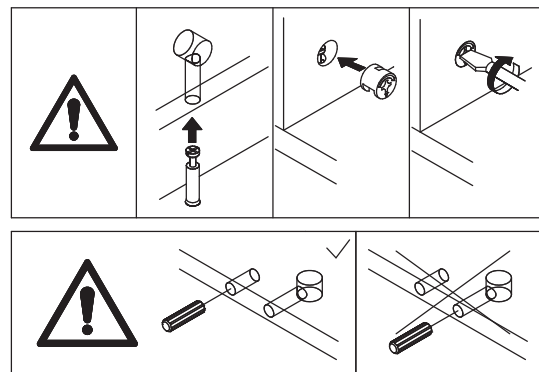

Connect boards 3 and 5 to board 7 using dowel (C), then tighten by turning eccentric cam (B) clockwise.

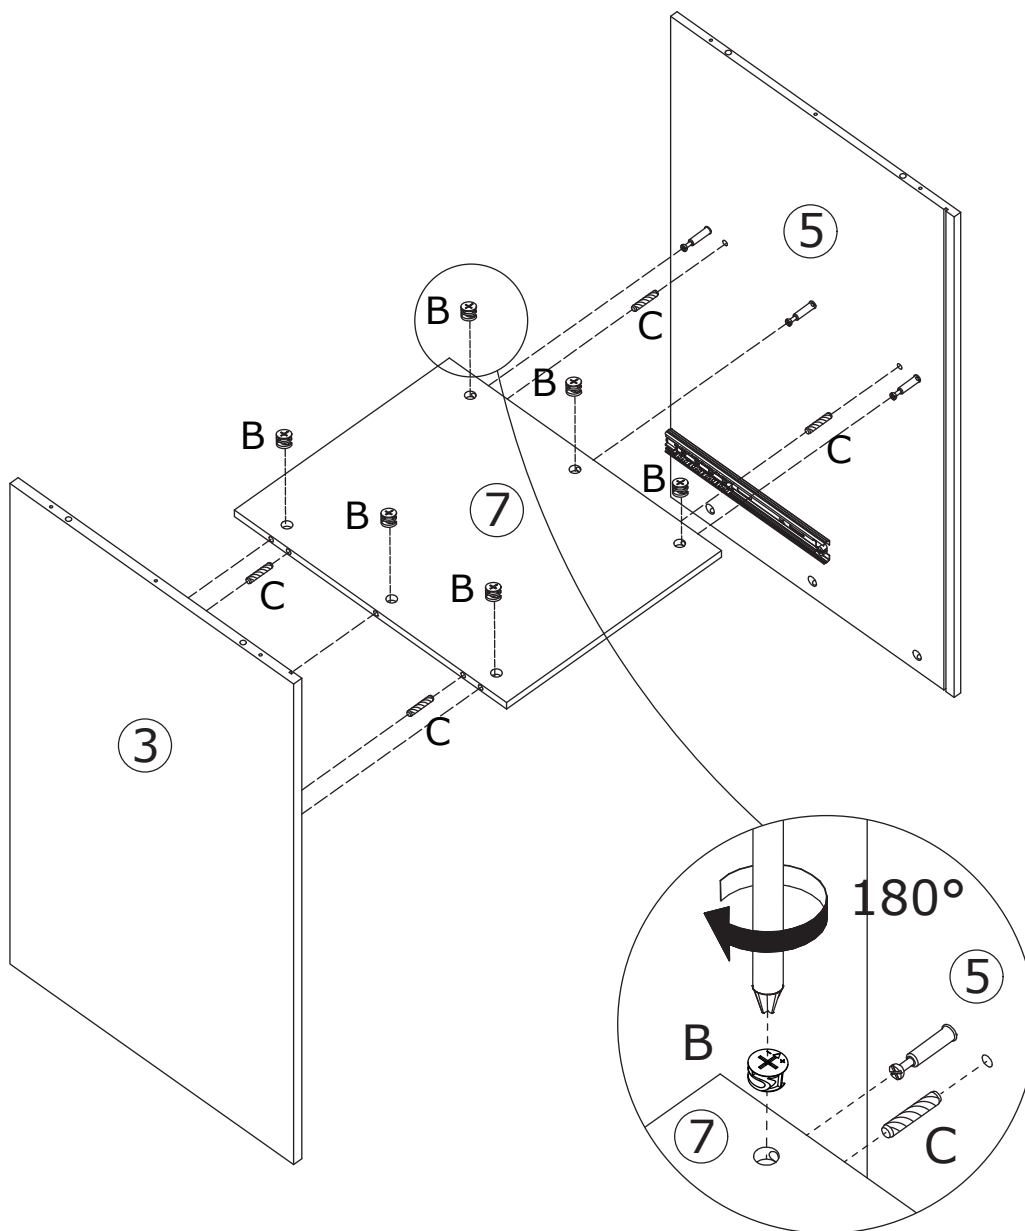


4

A x 6
M6 x 35 mm


L x 6
M3.5 x 12 mm

 N x 2
N-1
290 mm








Screw eccentric rod (A) onto boards 4 and 6.

Secure slide rail (N-1) to boards 4 and 6 using screw (L)

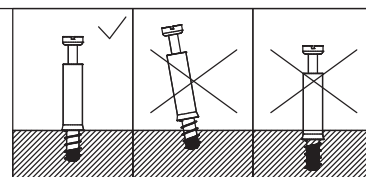


D
M3.5 x 14 mm


L
M3.5 x 12 mm

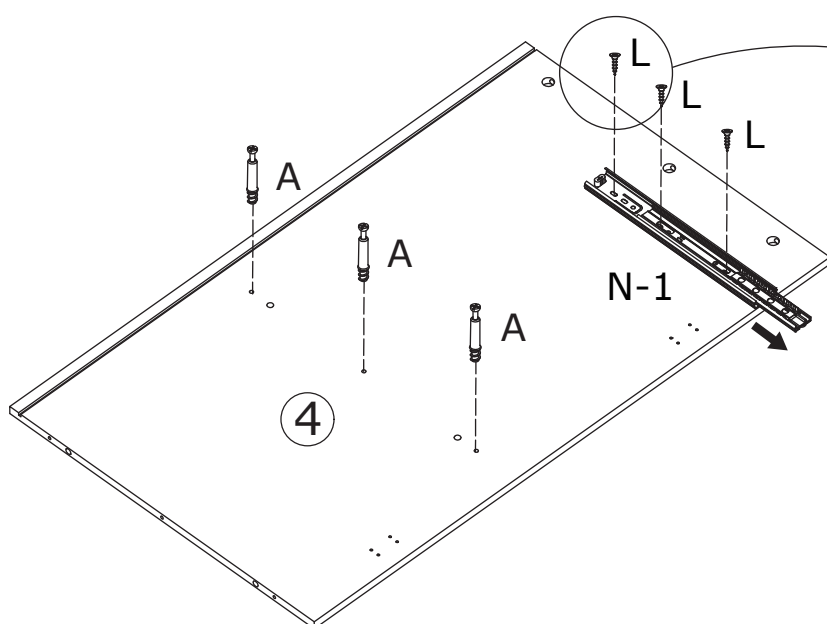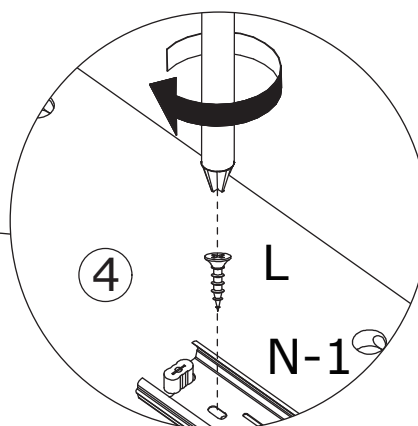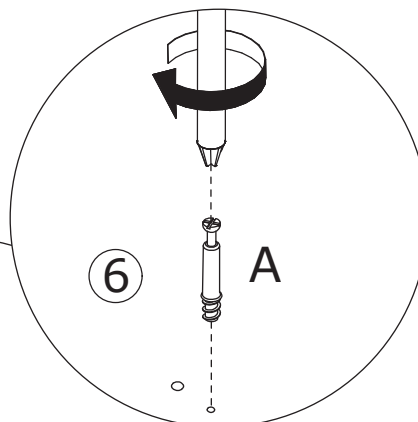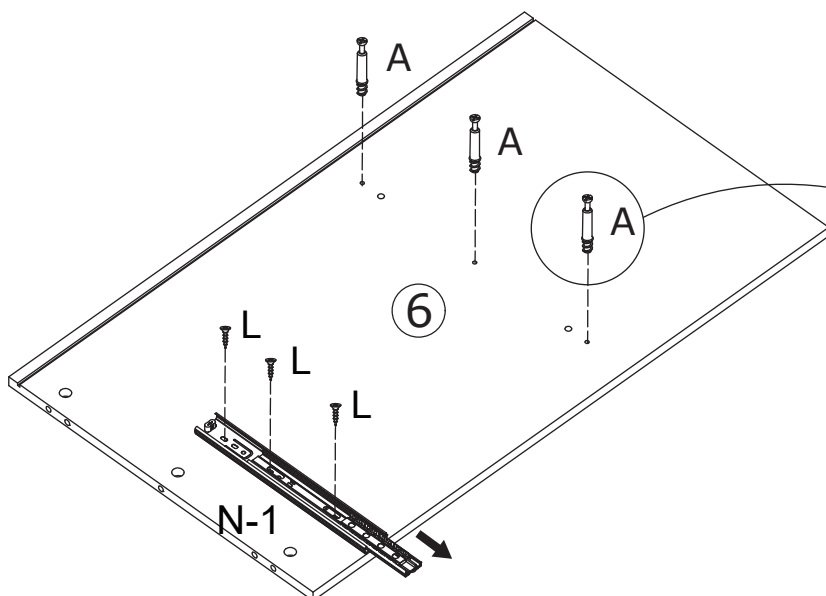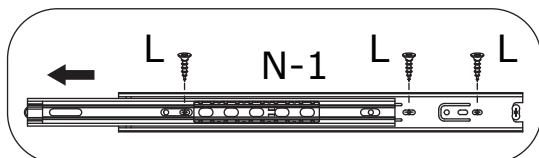



5

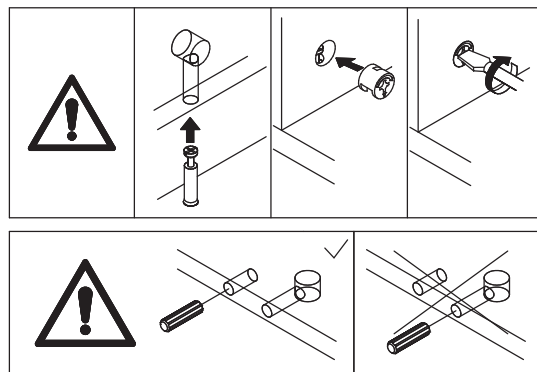





Connect boards 4 and 6 to board 7 using dowel (C), then tighten by turning eccentric cam (B) clockwise.

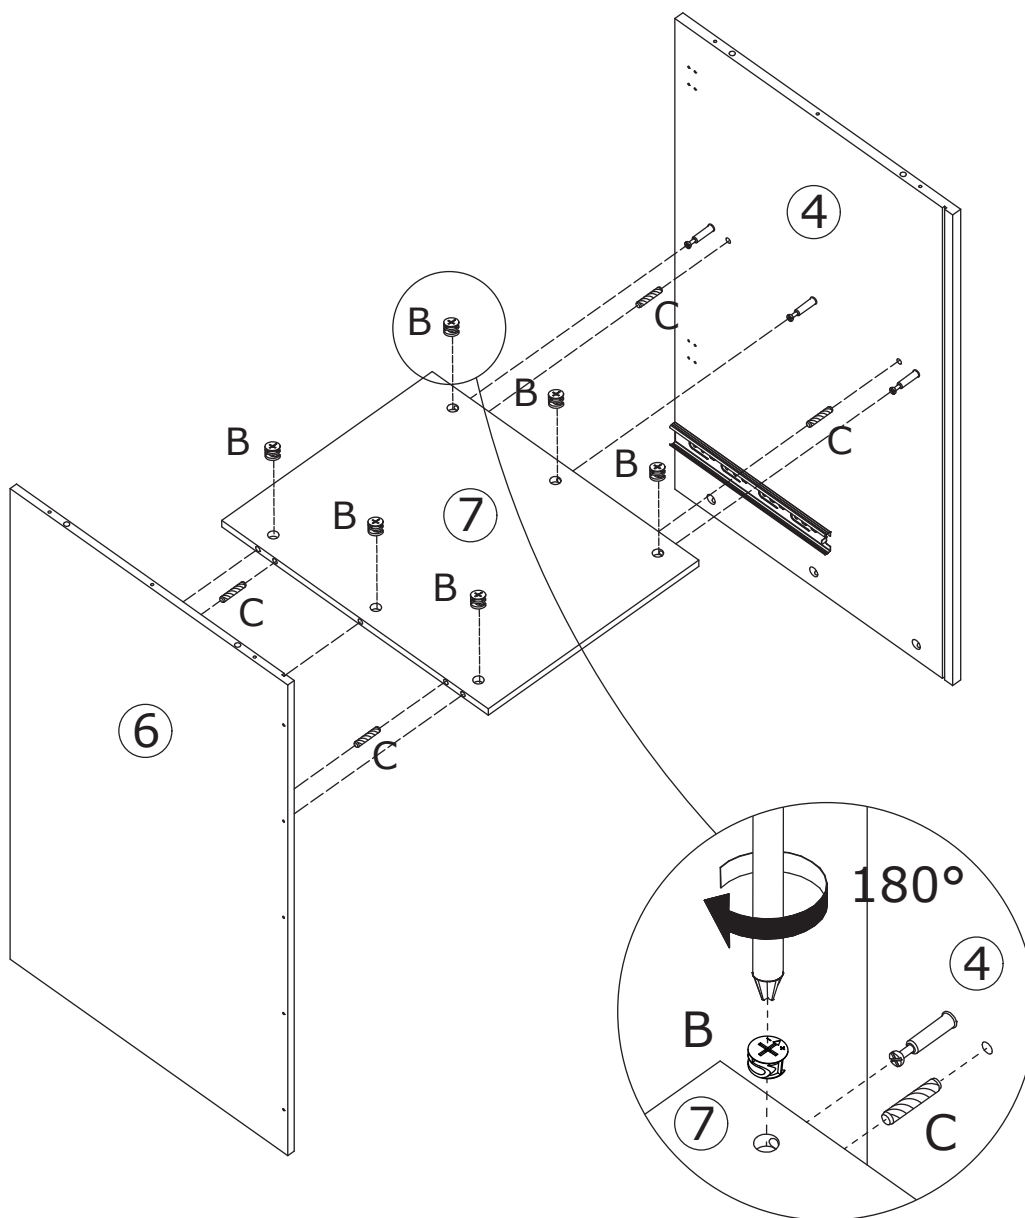

6

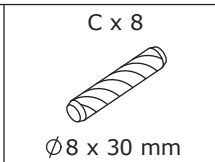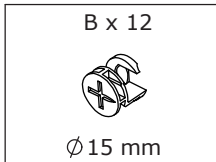


Connect boards 4, 6, 3, and 5 to board 1 using dowel (C), then tighten by turning eccentric cam (B) clockwise.

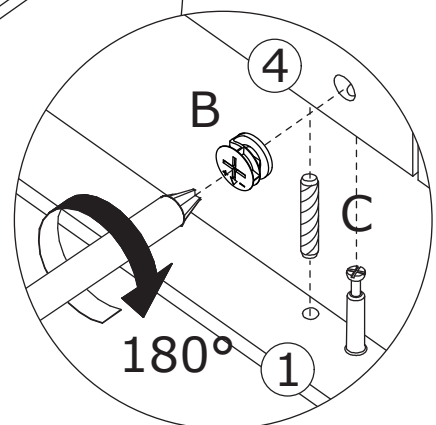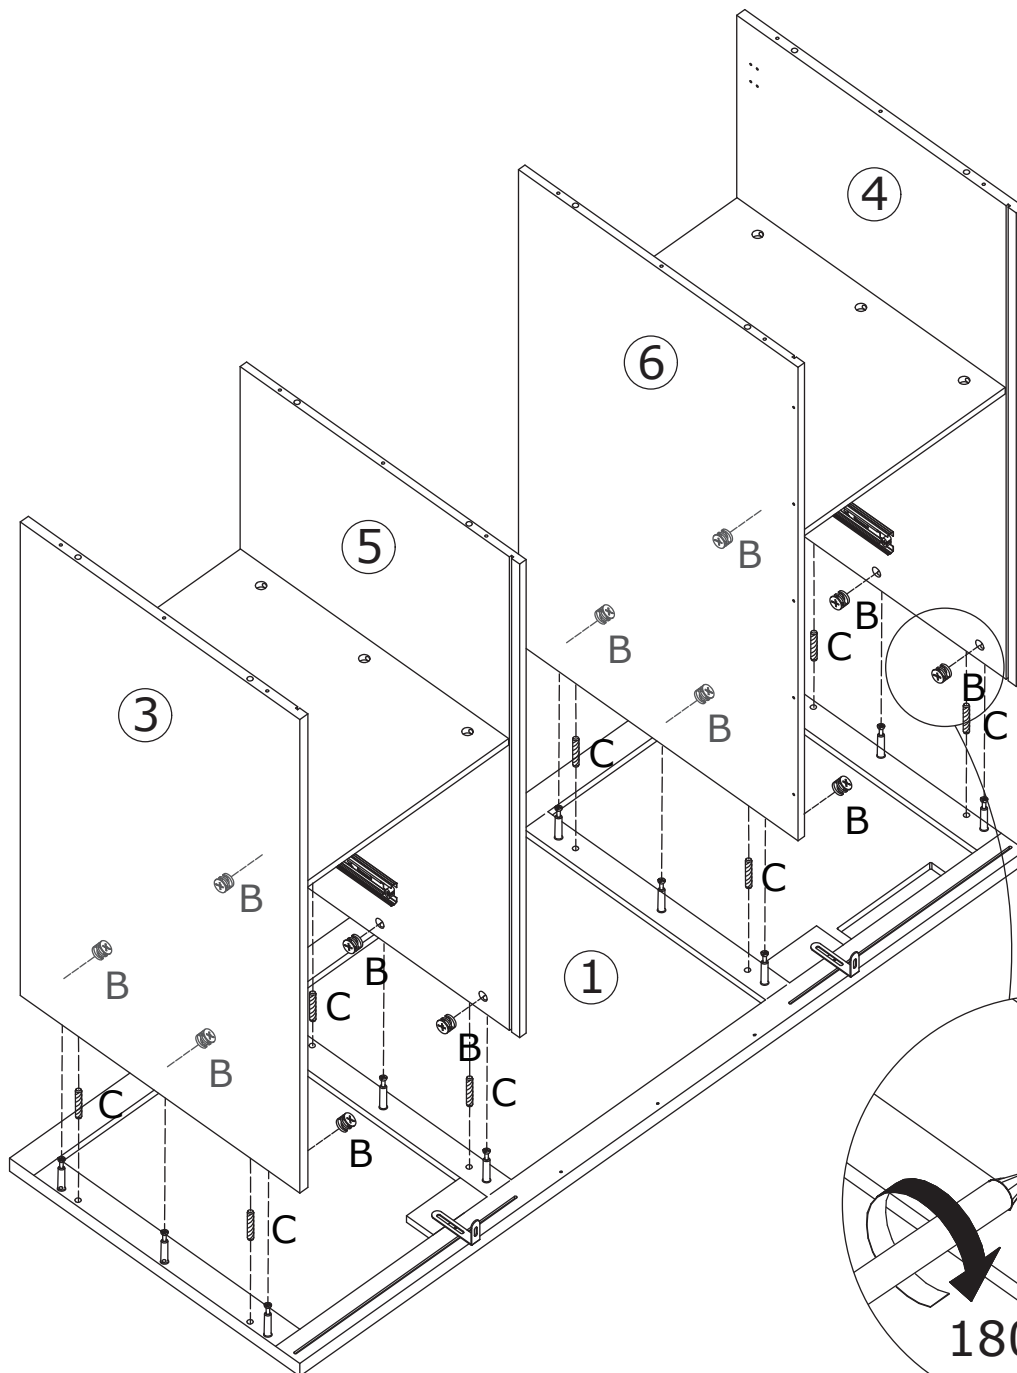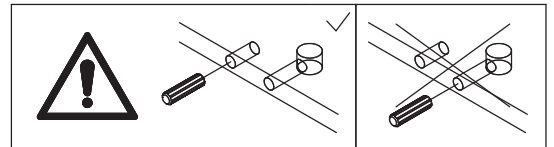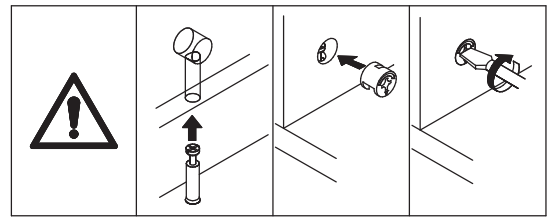

7

Insert boards 17 and 18 along the available slots.

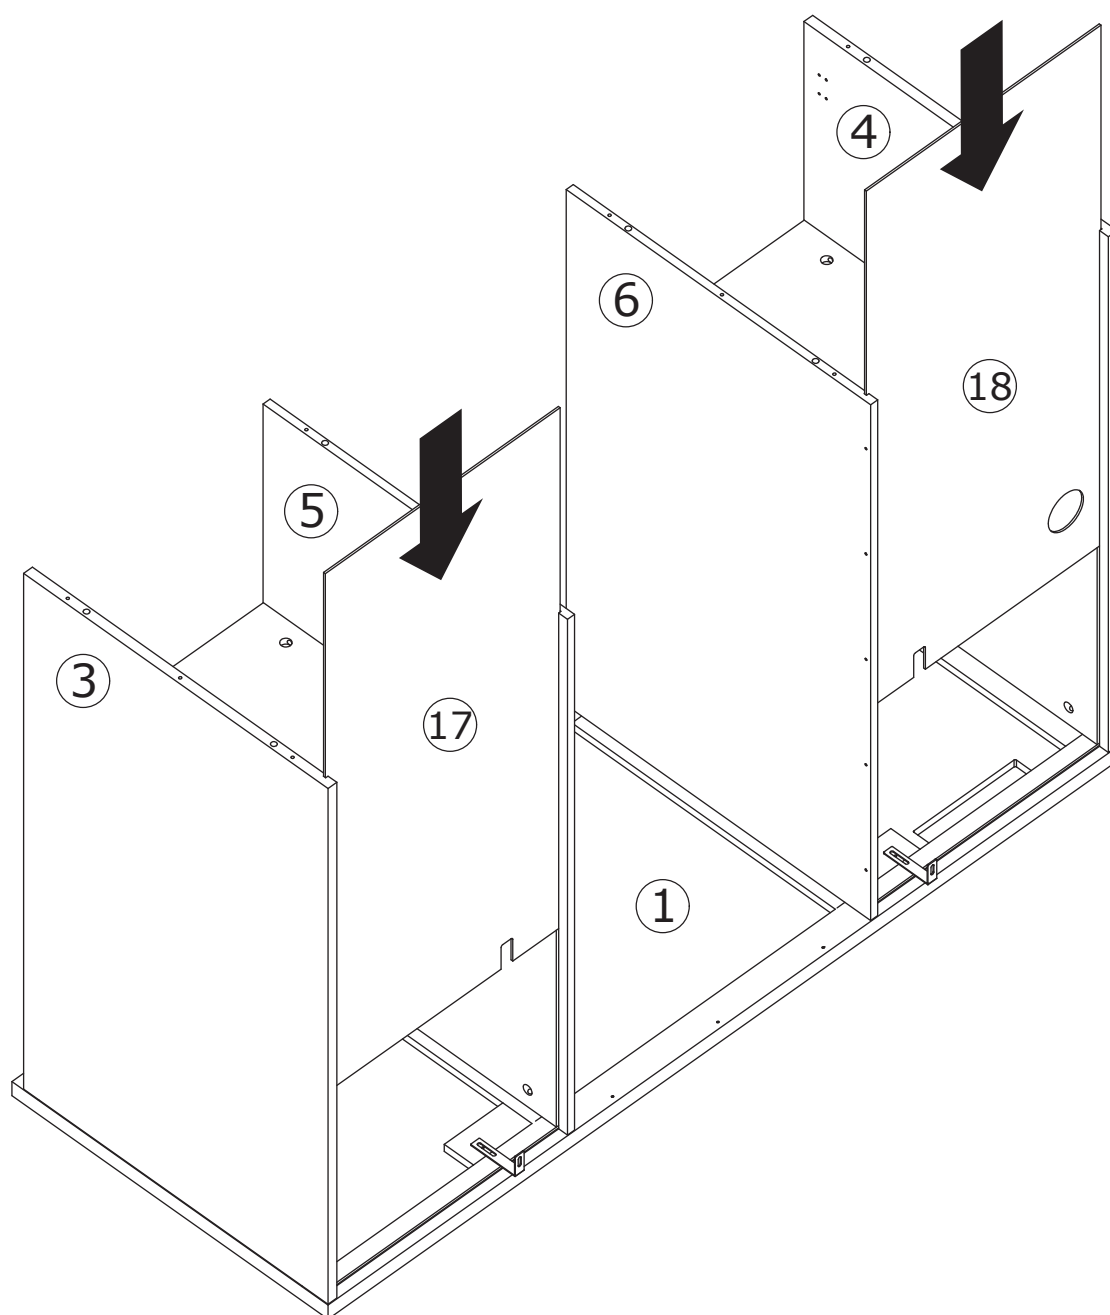


8



K x 1





Intall hole plug (K) into board 18.

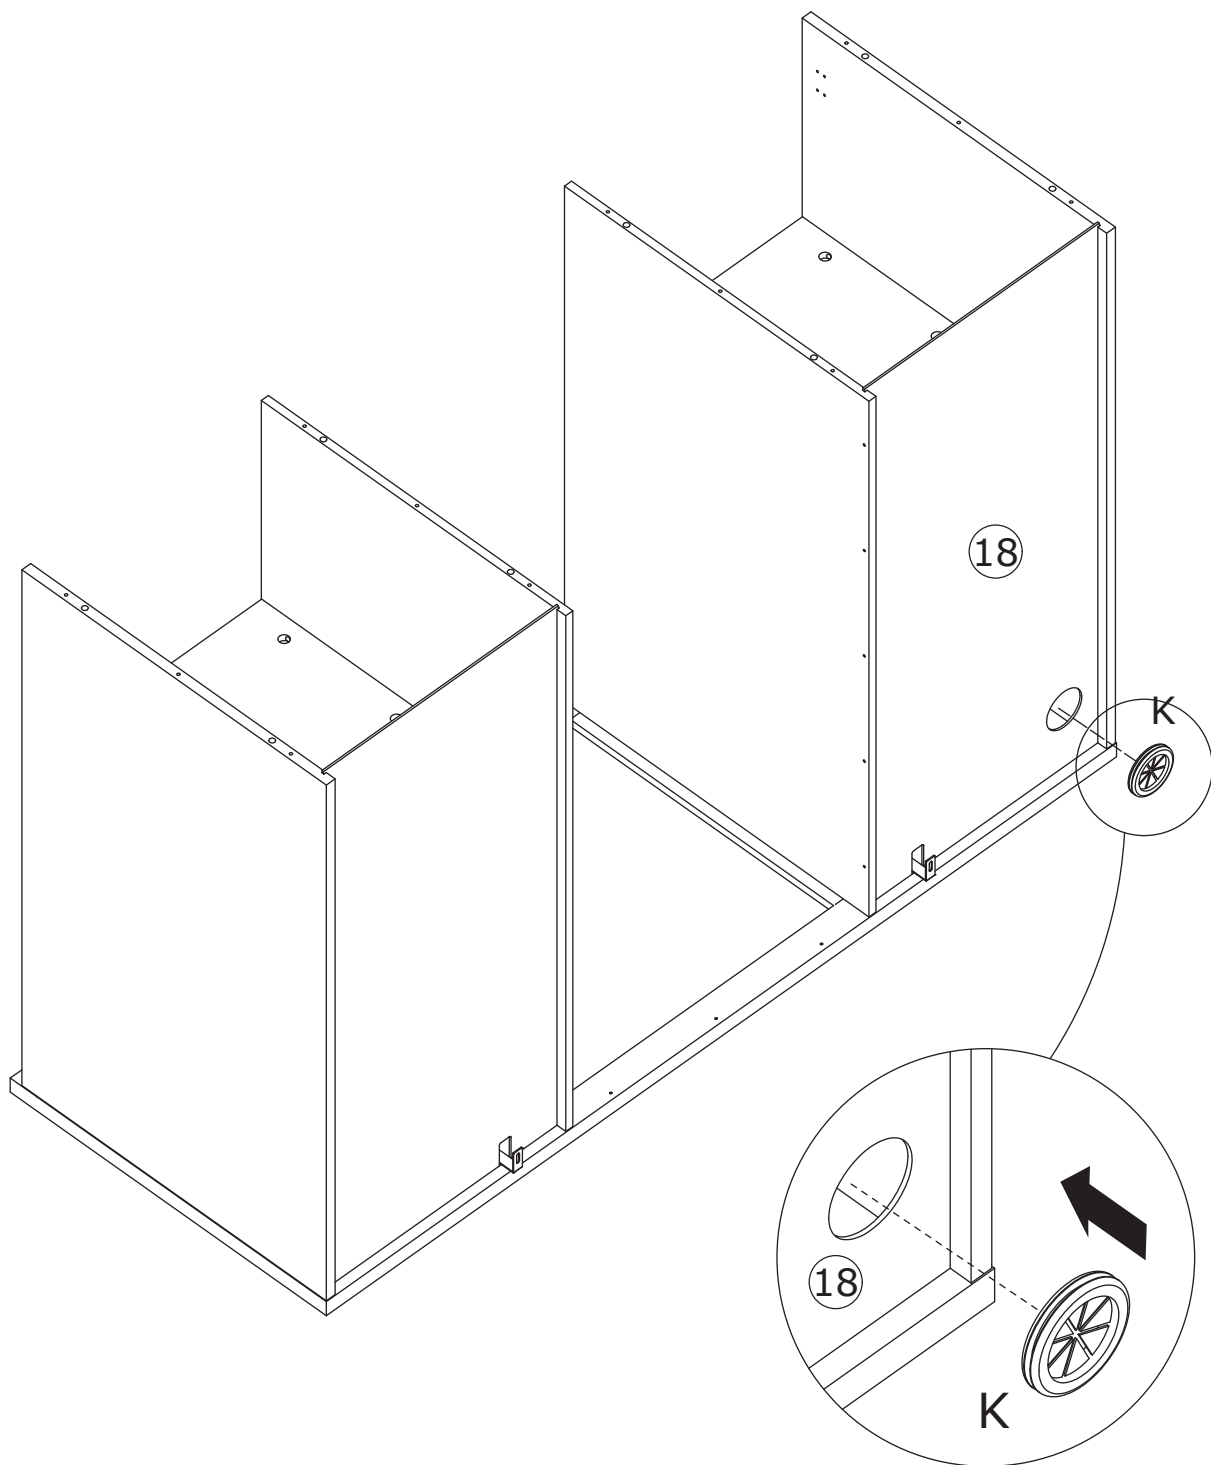

9

 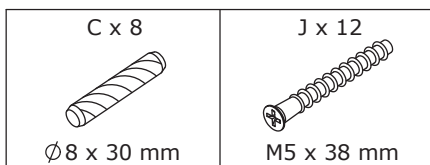

Connect board 2 to boards 3, 4, 5, and 6 using dowel (C), then secure them with screw (J).

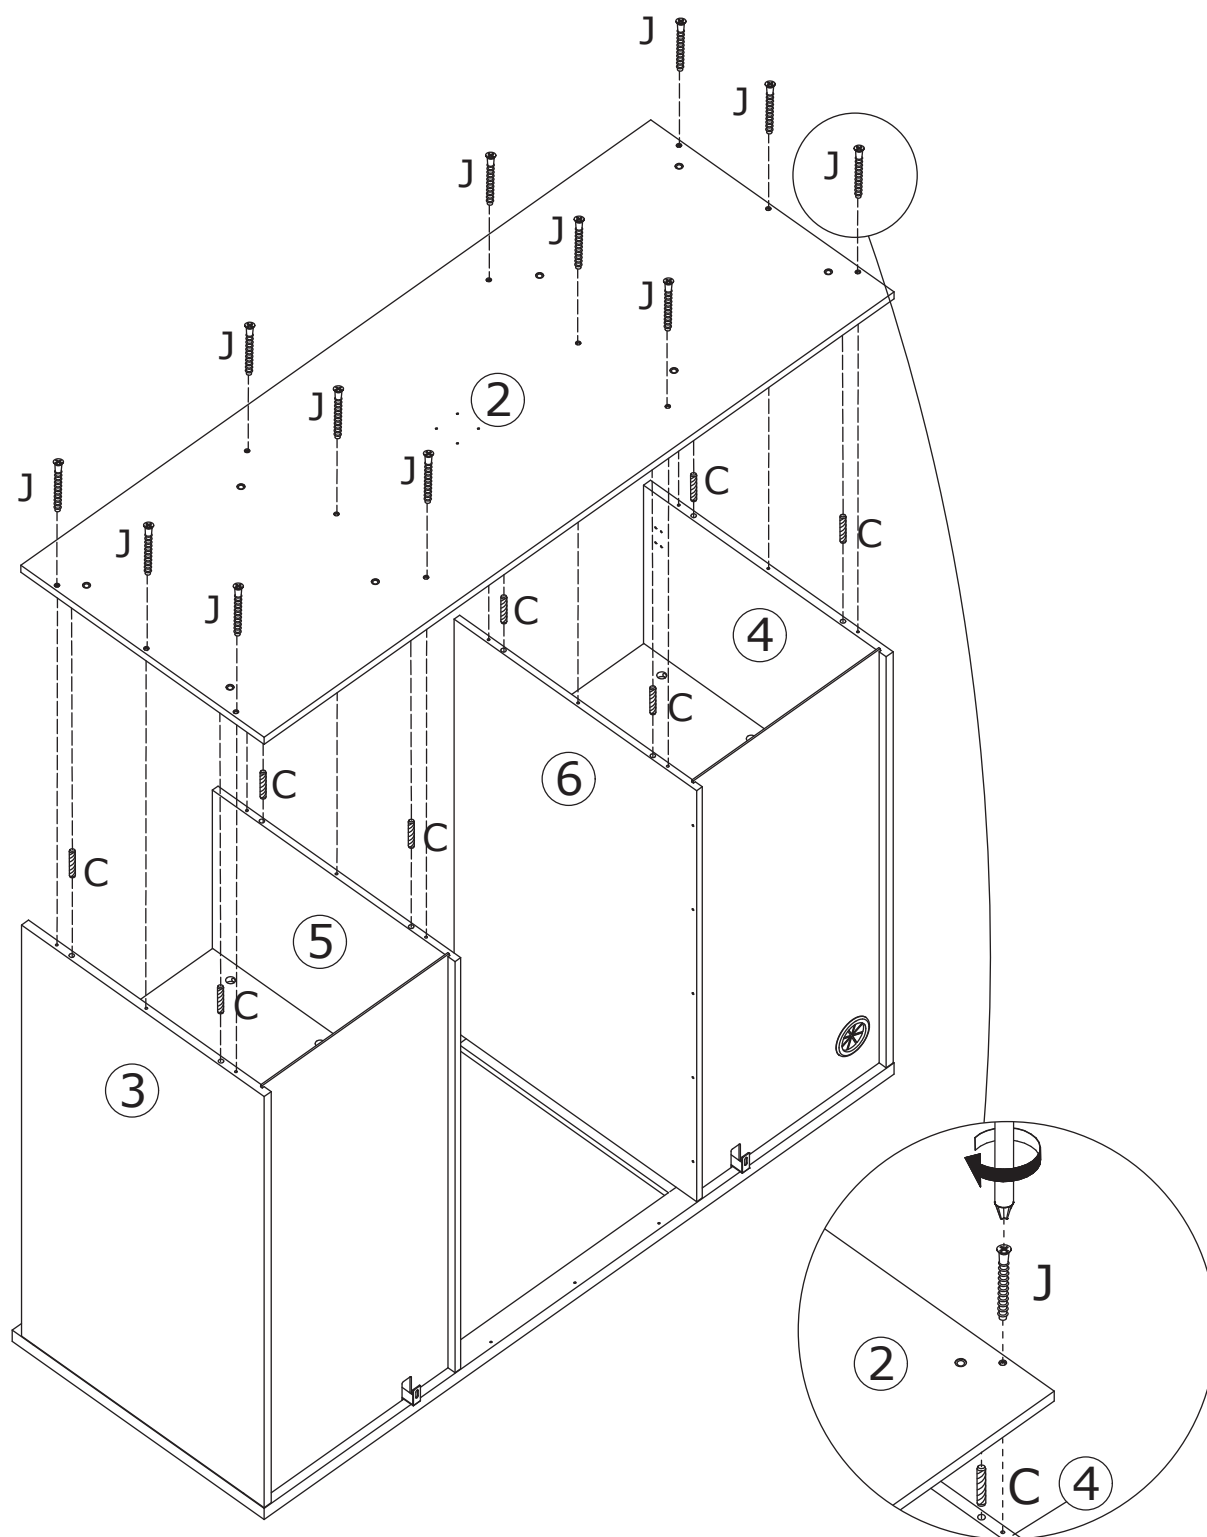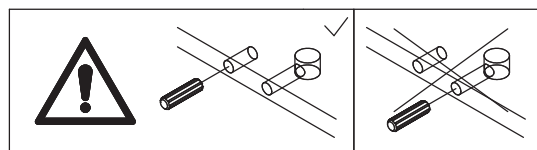


10

M x 1




4#

 O x 4





M6 x 40 mm

Secure iron pipe 20 and 21 using screw (O).

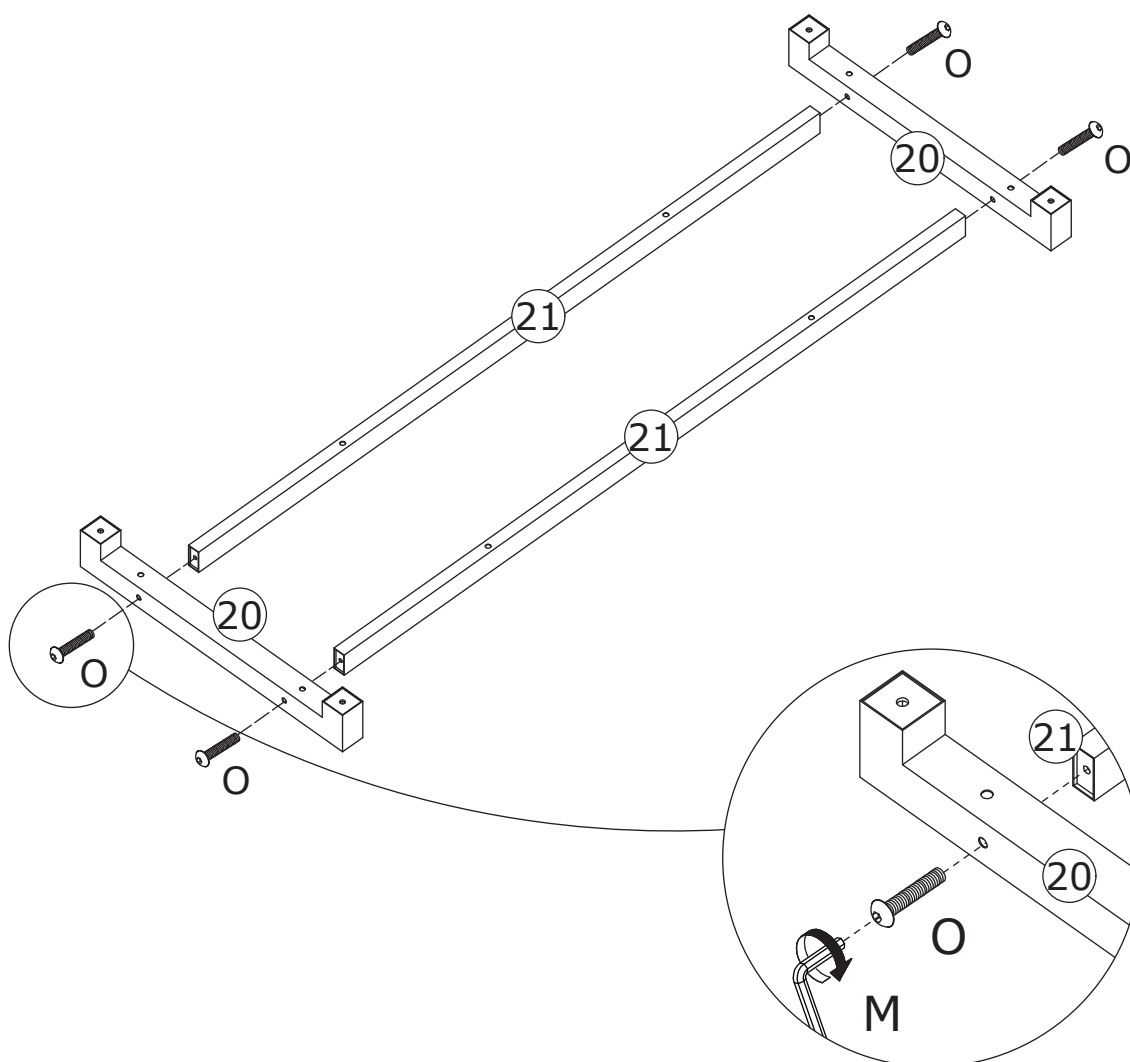


11

 D x 4  M3.5 x 14 mm	M x 1  4#	P x 8  M6 x 50 mm	
--	--	--	---

 	D  M3.5 x 14 mm	L  M3.5 x 12 mm
--	--	--

Secure iron pipes 20 and 21 to board 2 using screw (P).
Secure leg support 22 to board 2 using screw (D).

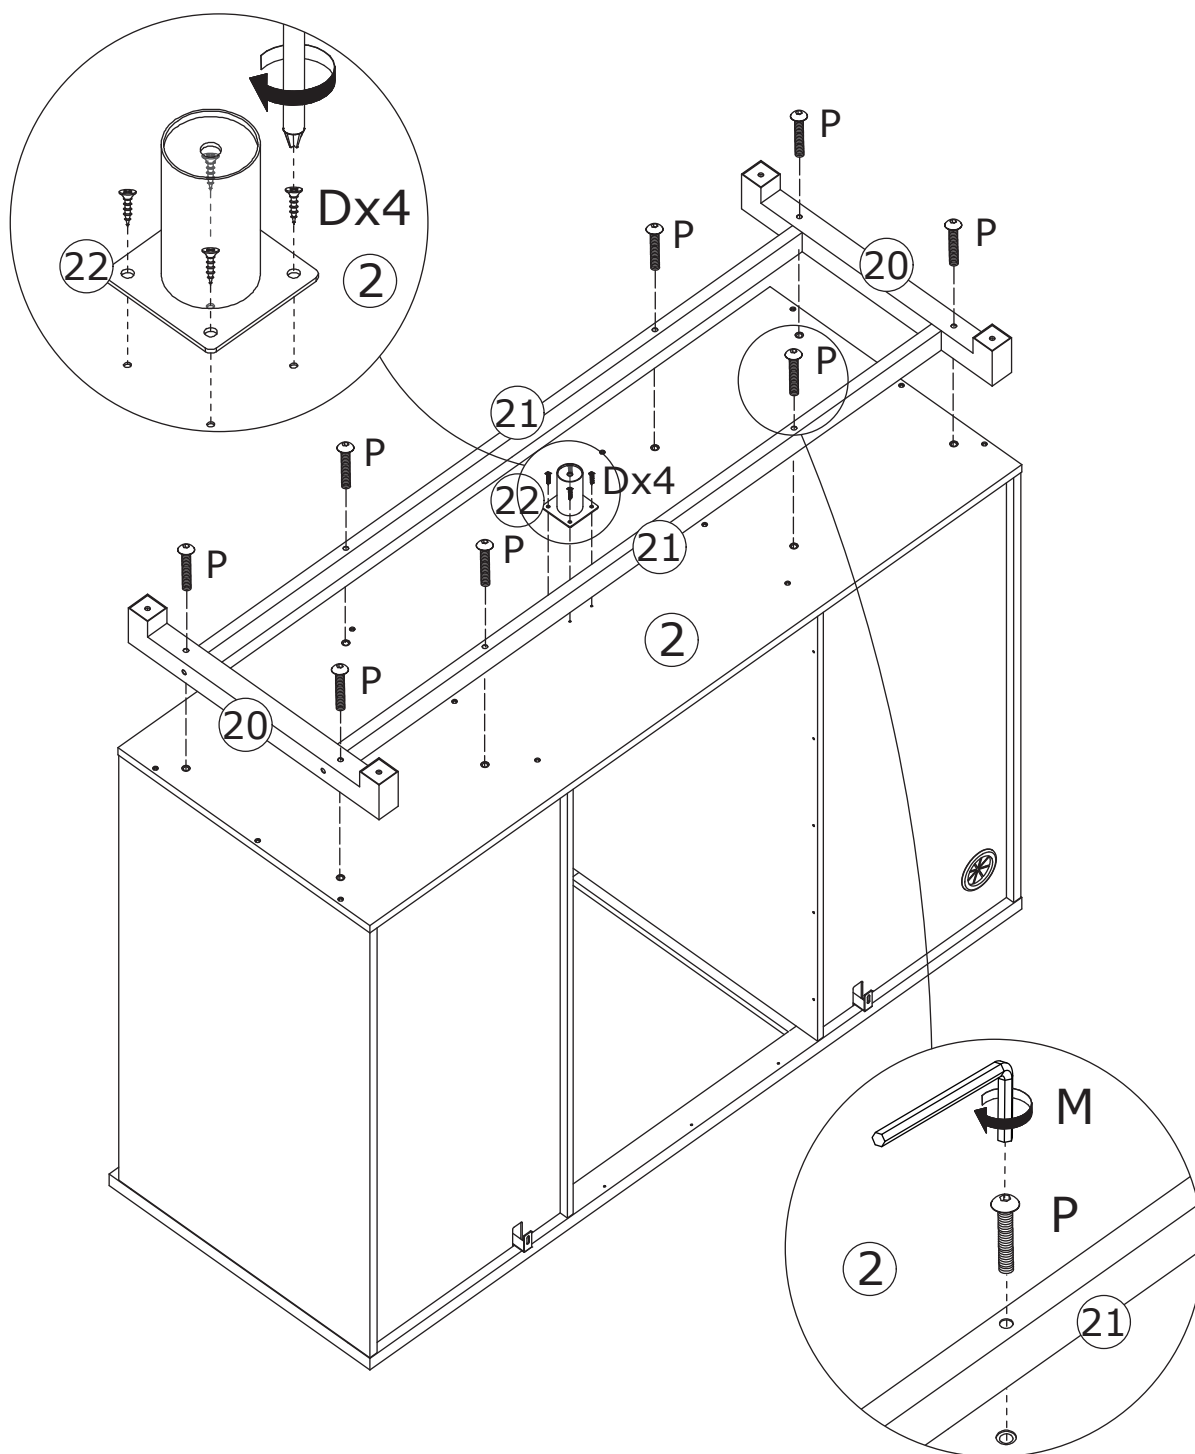


12

I x 5





Install adjustable foot pads (I) onto iron pipe 20 and leg support 22.

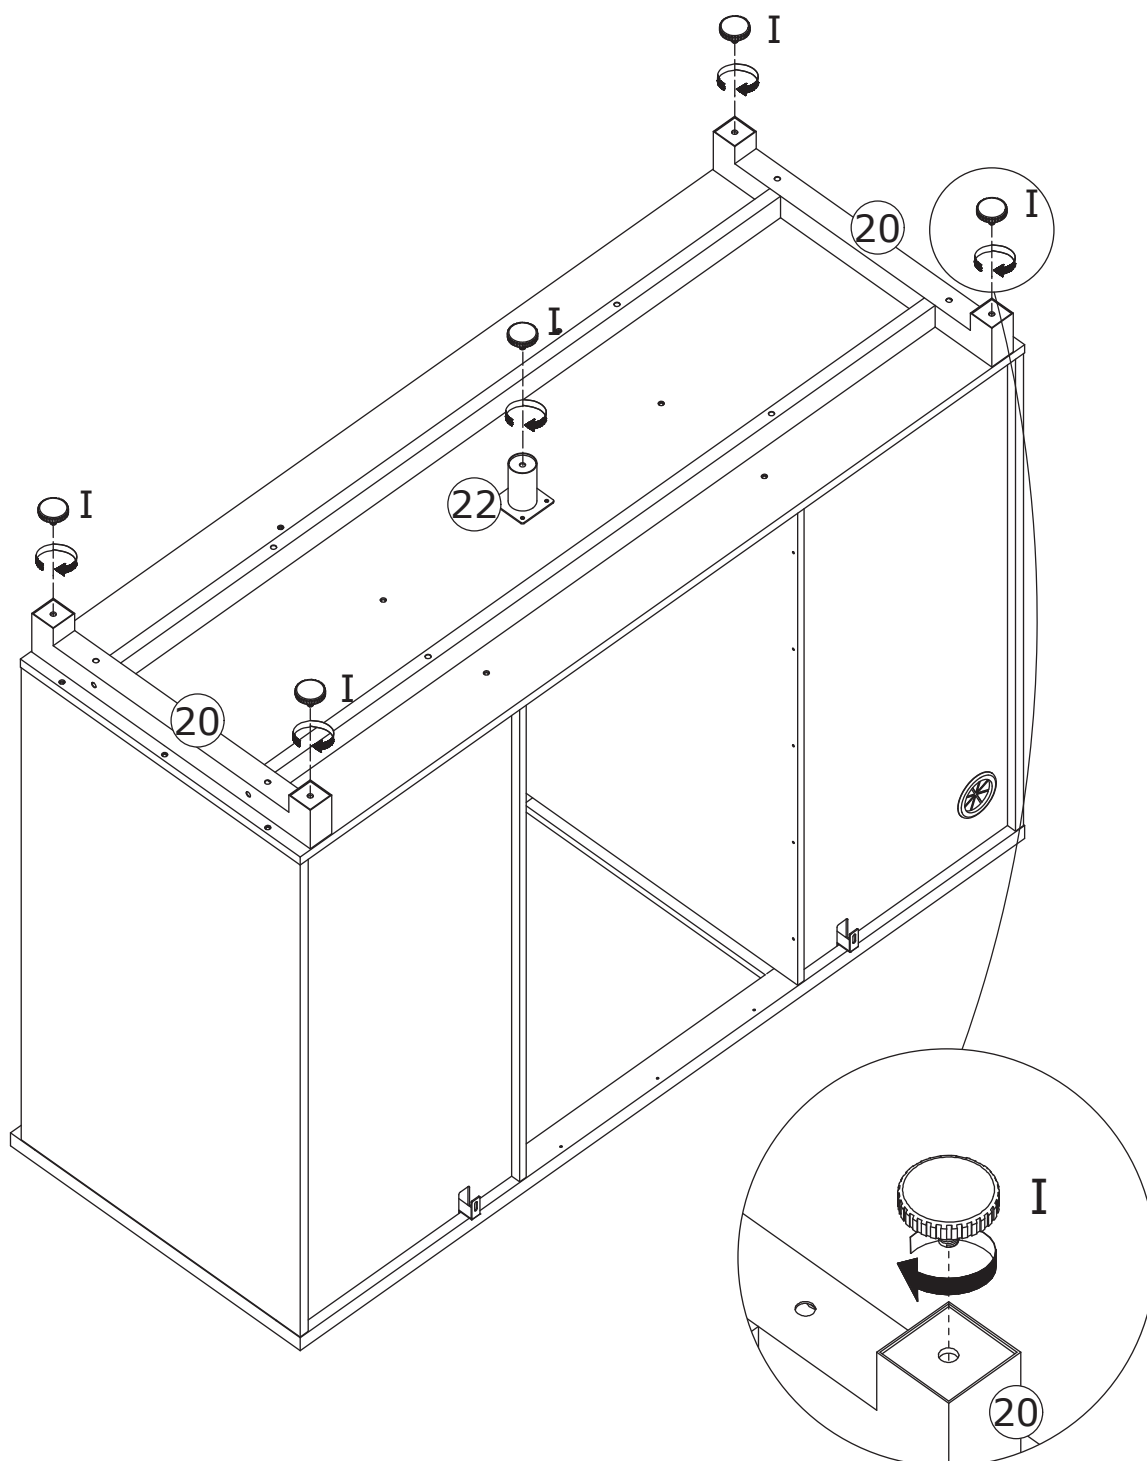

13

Due to the heavy weight of the unit, carefully flip it over with the assistance of at least two adults to avoid damage.

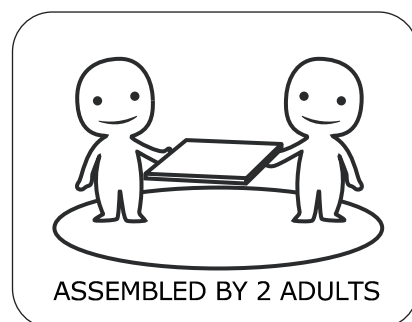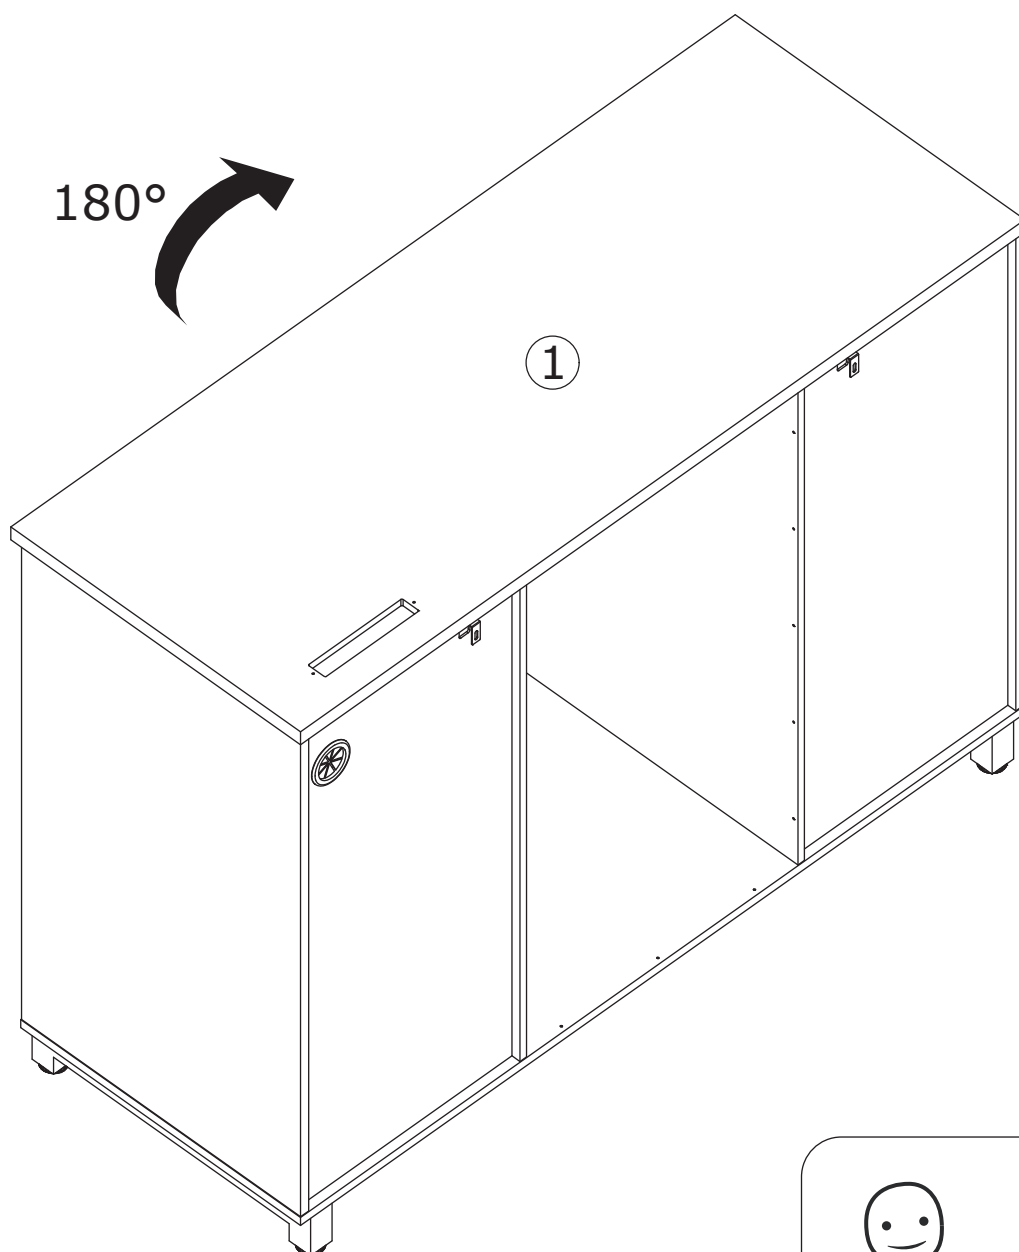



14

L x 2



M3.5 x 12 mm

 W x 1

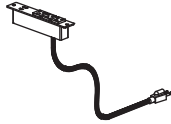

D




M3.5 x 14 mm

L



M3.5 x 12 mm

Secure power outlet (W) to board 1 using screw (L), with the power cord routed through hole plug.

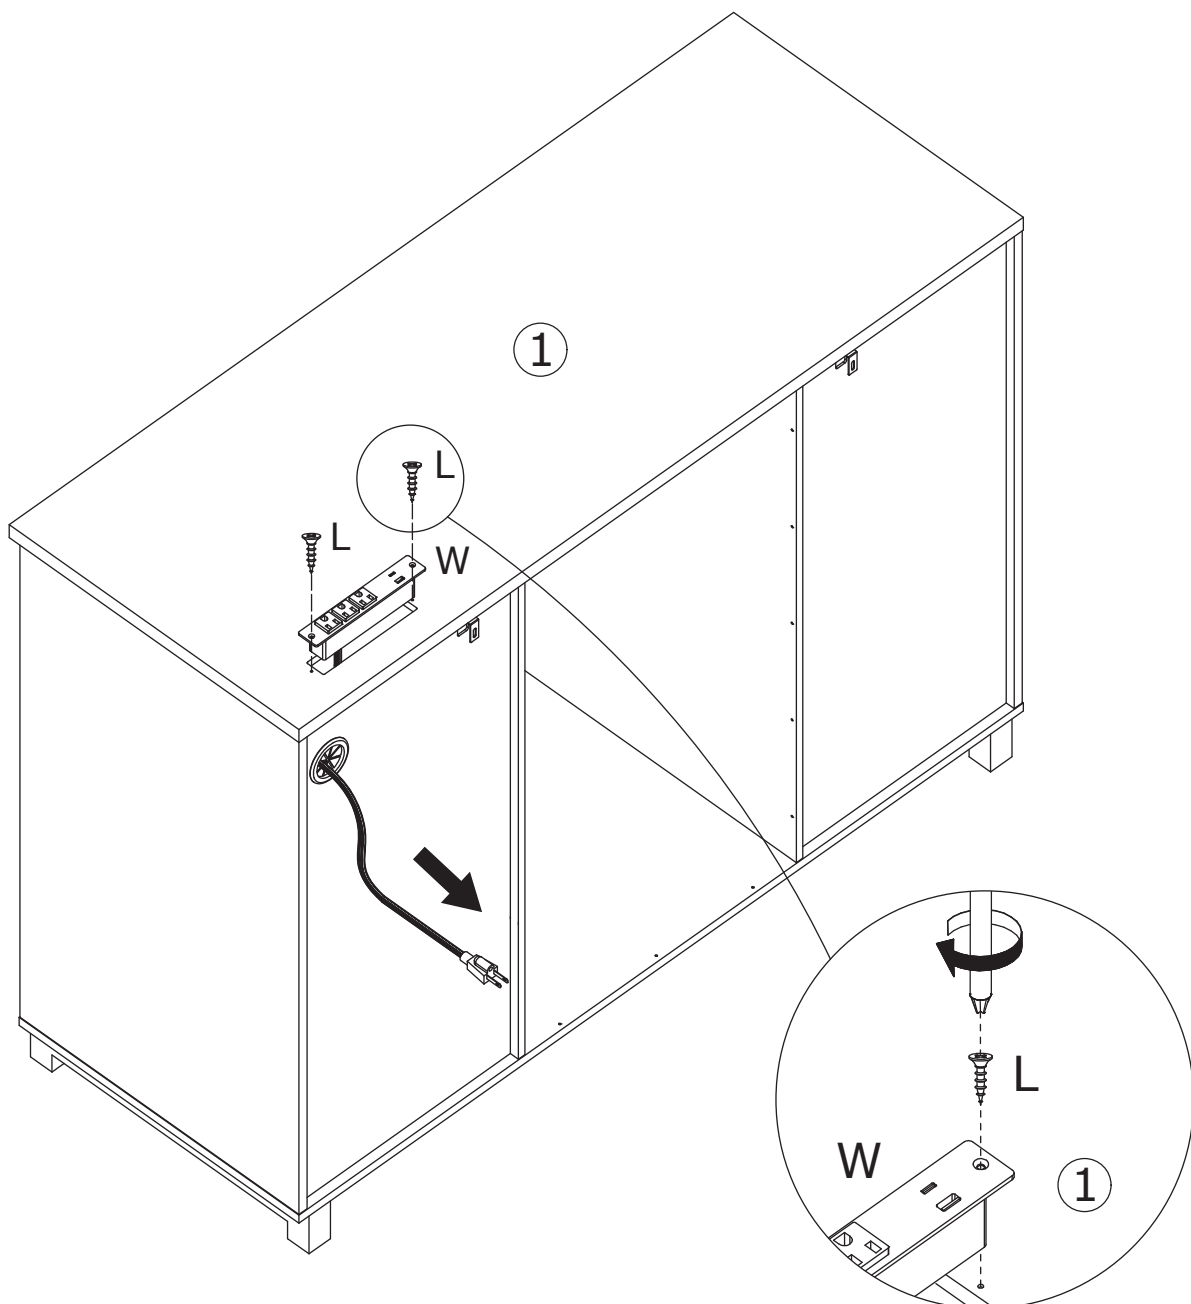


15

L x 16



M3.5 x 12 mm

 
K x 2



Install hole plug (K) to plate 19,
then secure plate 19 to the unit
using screw (L).



 D




M3.5 x 14 mm

L



M3.5 x 12 mm

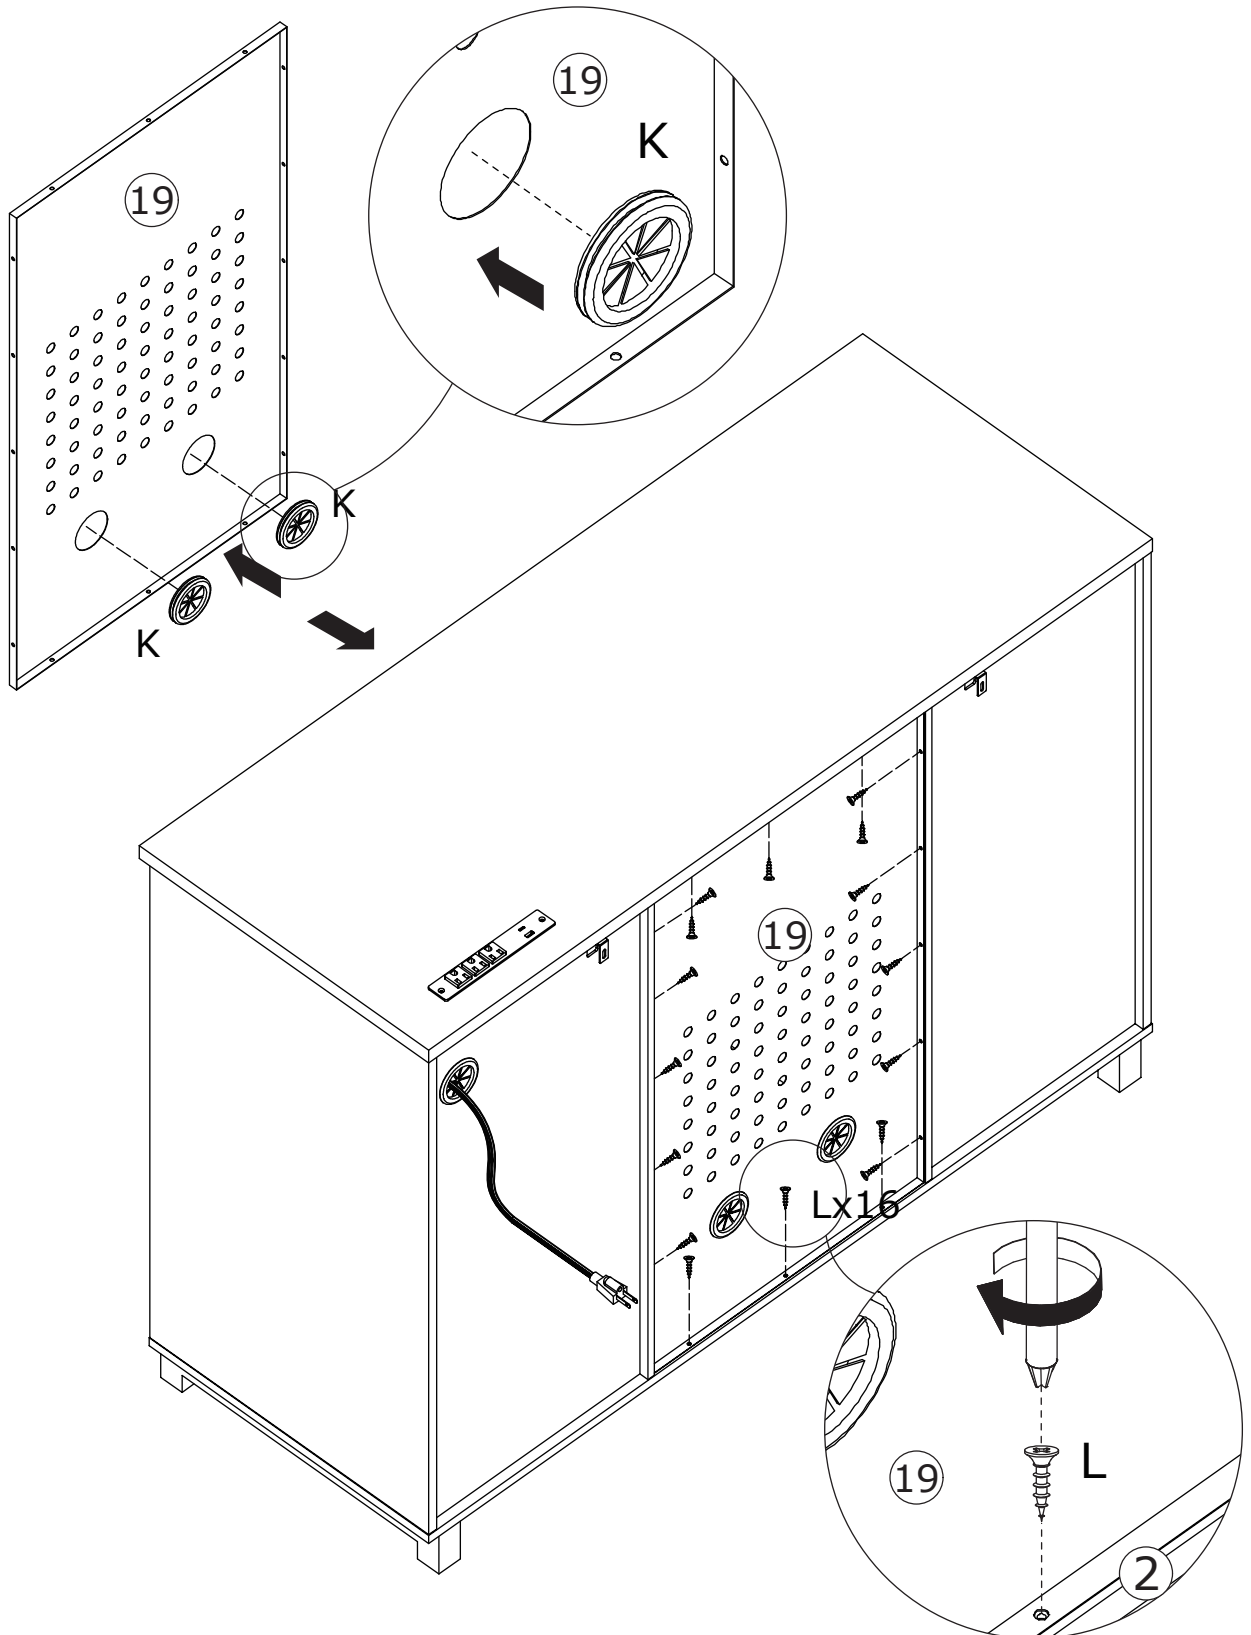


16

D x 12



M3.5 x 14 mm

 U x 12



D




M3.5 x 14 mm

L



M3.5 x 12 mm

Insert clip (U) into back slots and secure them using screw (D).

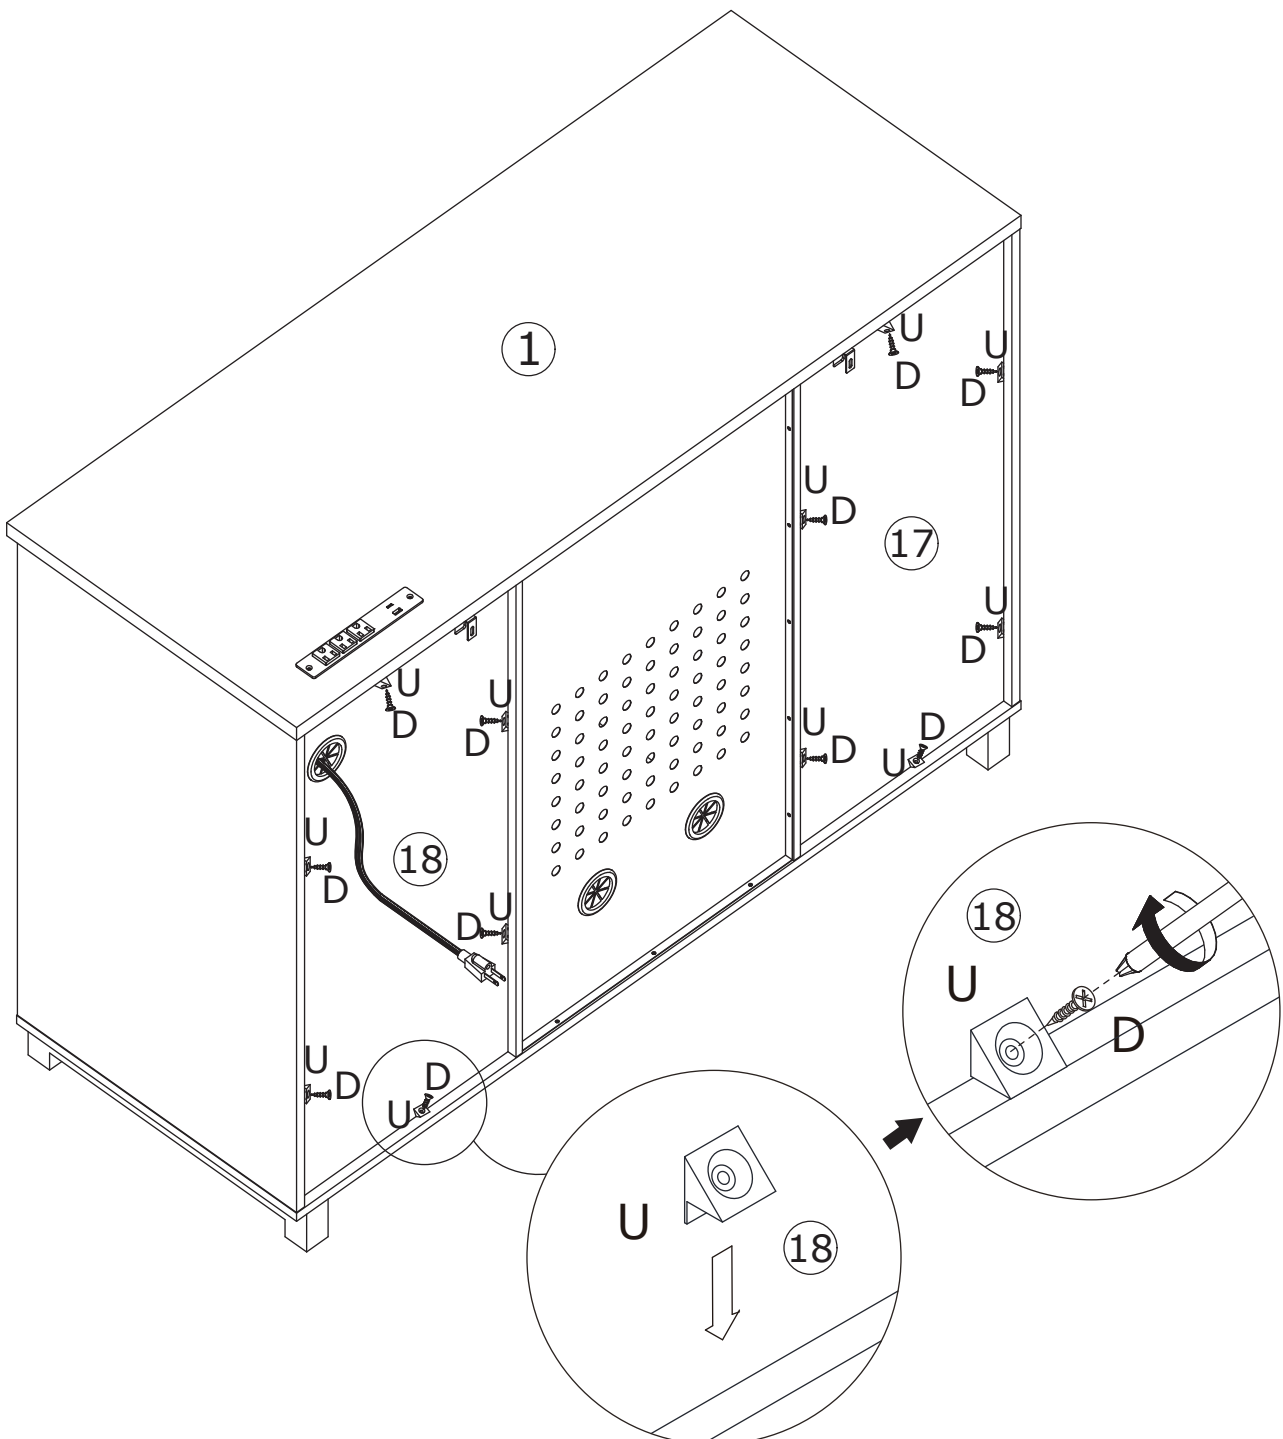




17

S x 2




M4 x 40 mm

   
T x 2




If wall mounting is required, install the anti-tipping device as shown.

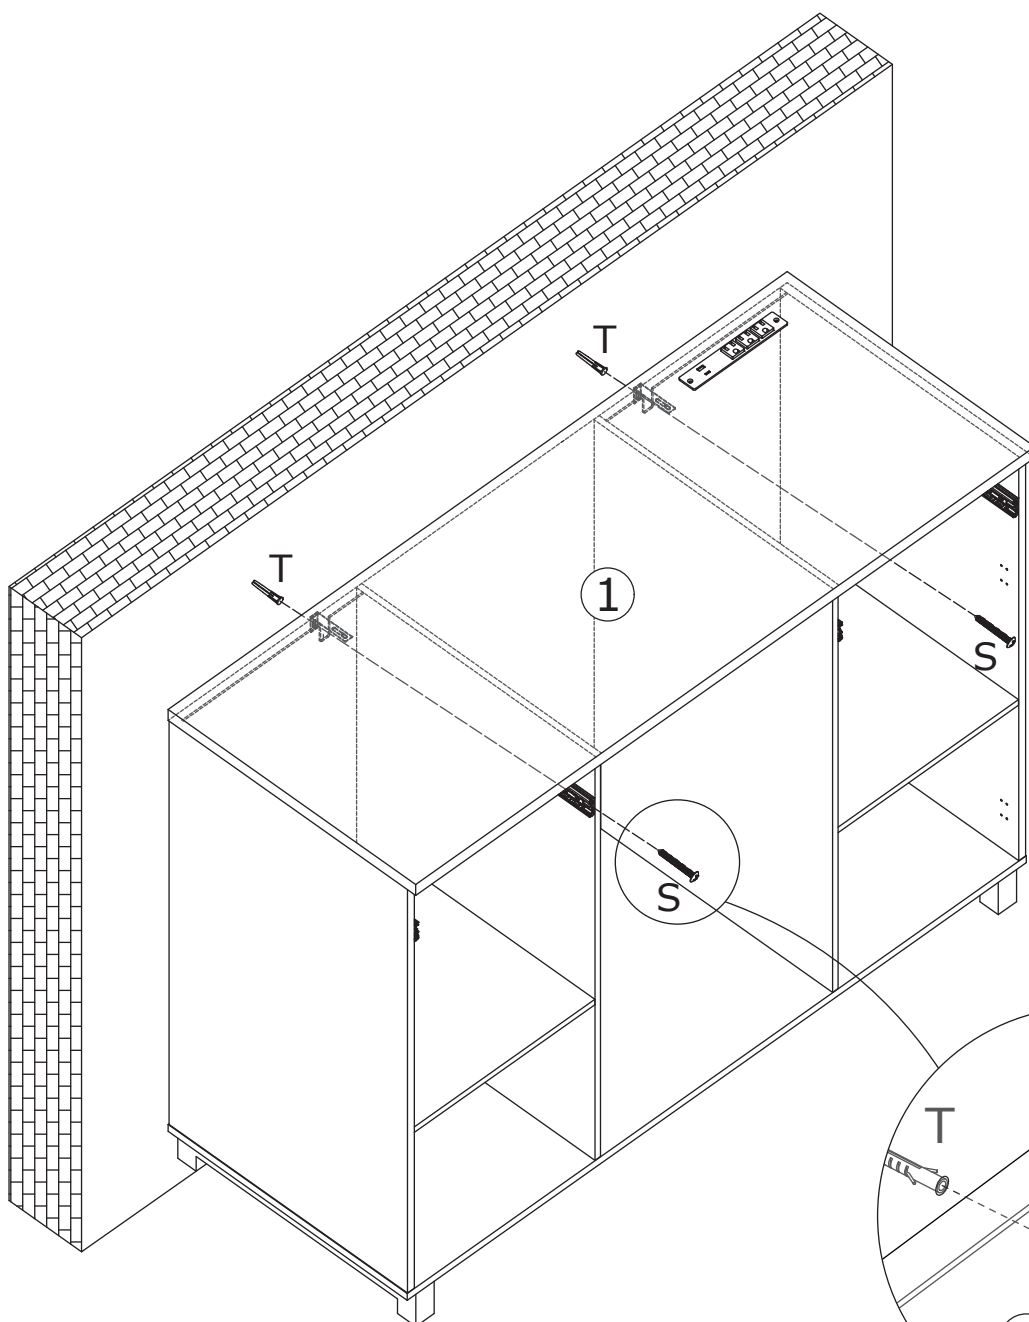


1.

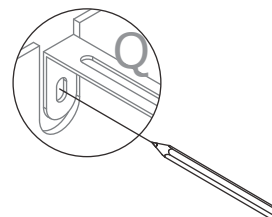



2.

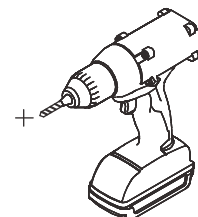

3.


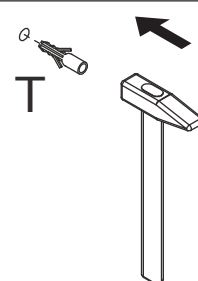


4.

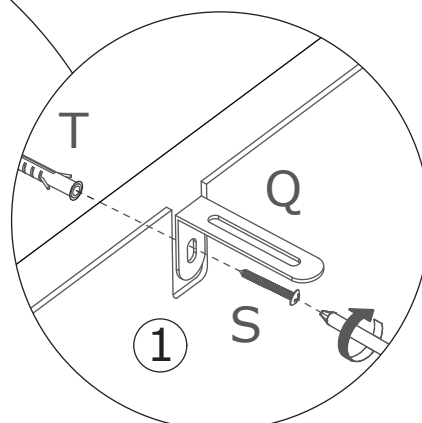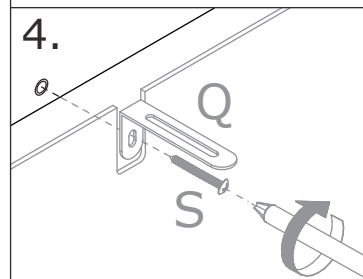


18

 A x 10
M6 x 35 mm

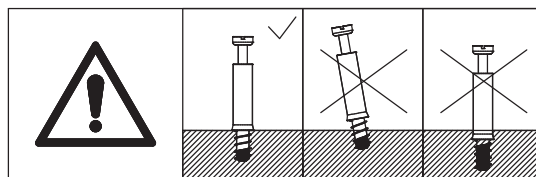

Screw eccentric rod (A) onto boards 10 and 11.

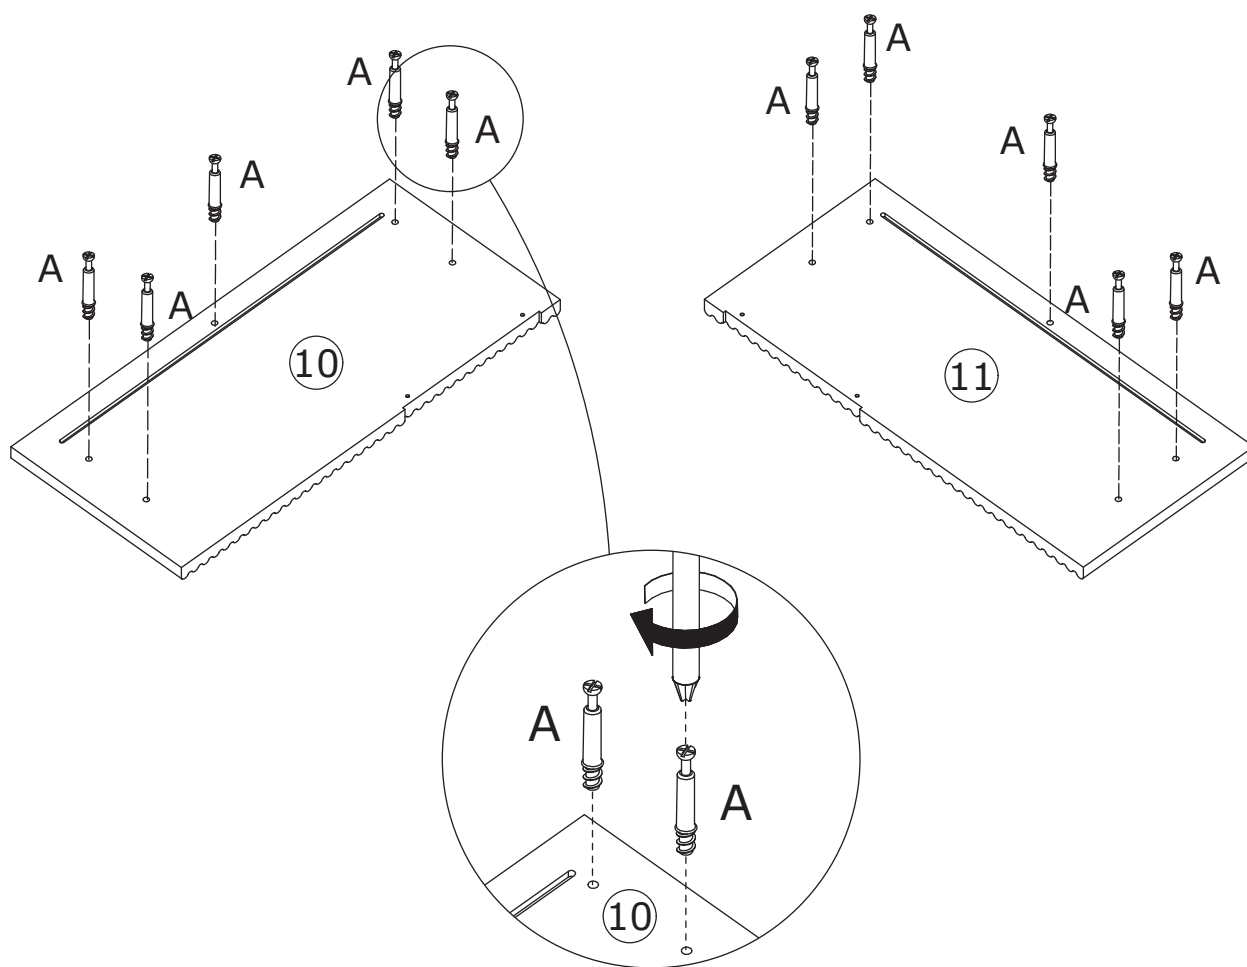


19


E x 10



 M4 x 35 mm




Secure boards 12, 13, and 15 to board 14 using screw (E).

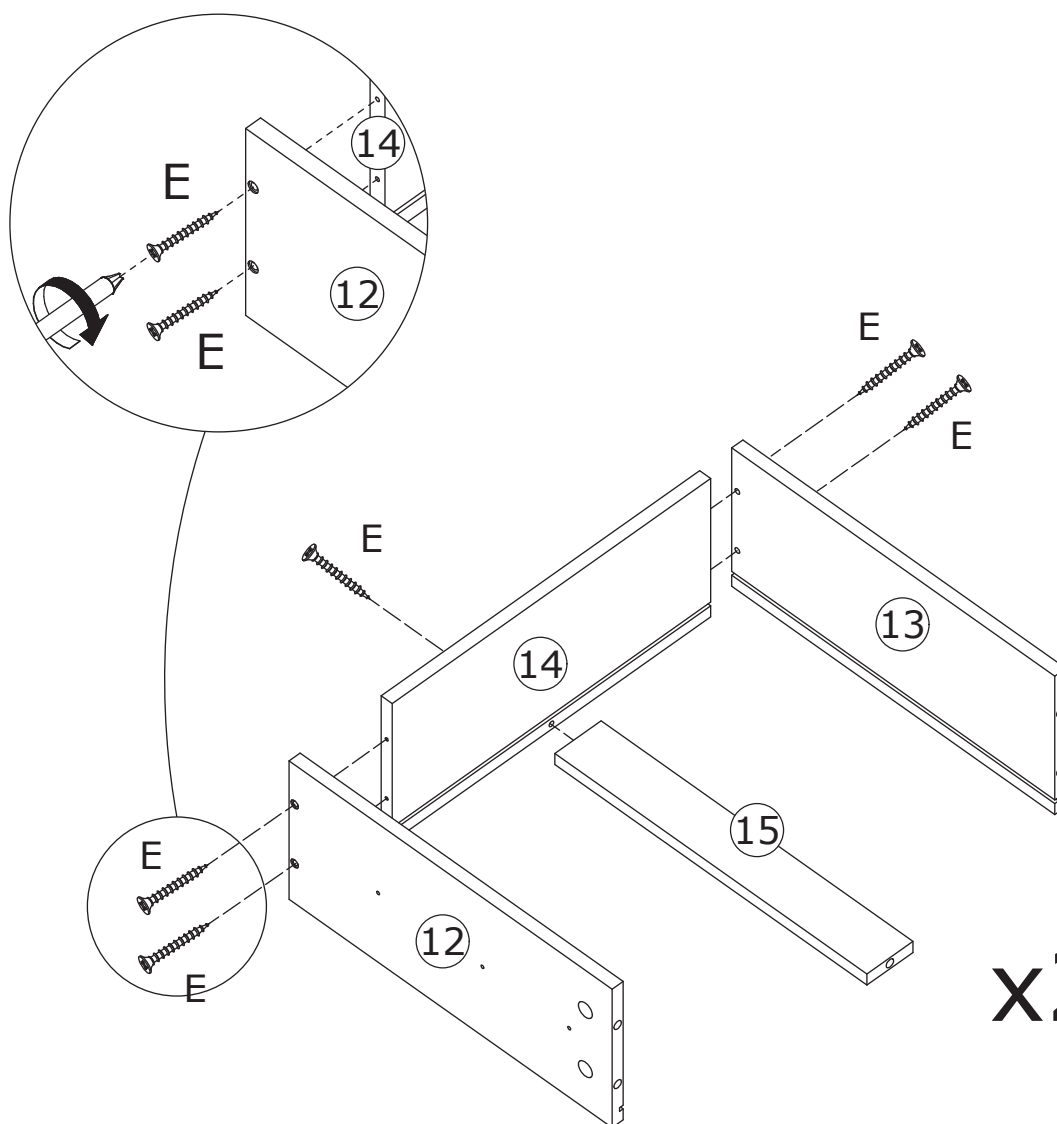

x2

20

Insert board 16 along the slots.

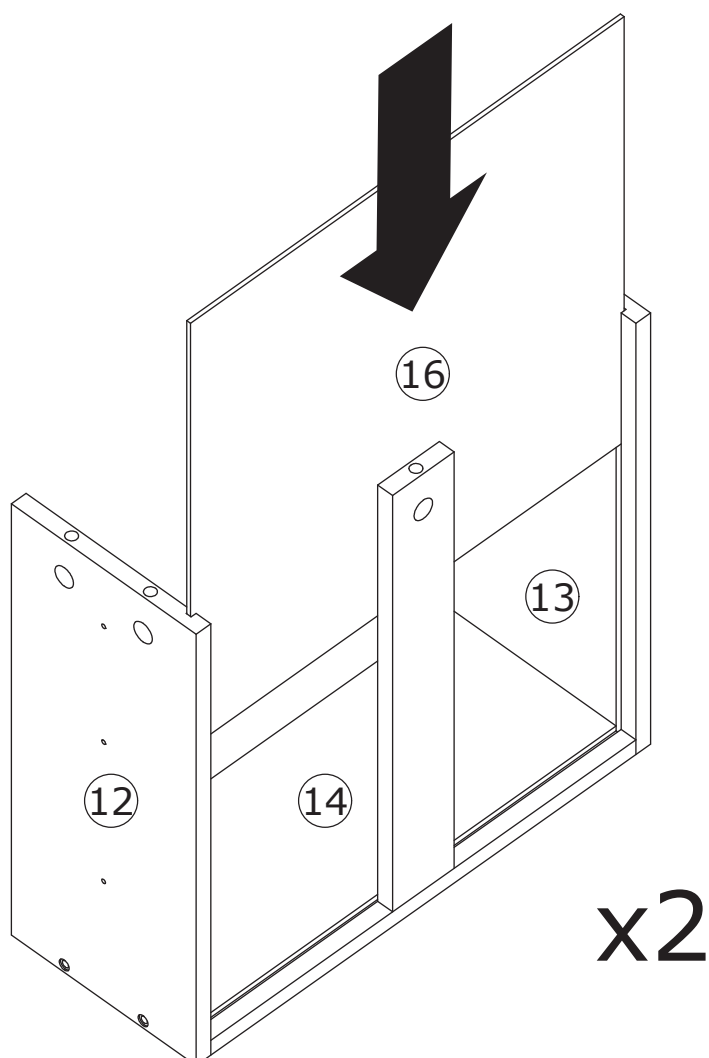

21

B x 10



 
 


Ø 15 mm

G x 8




Ø 20 mm

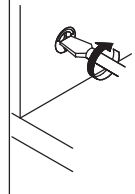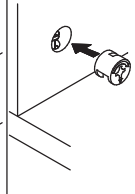

Connect boards 10 and 11 to boards 12, 15, and 13 respectively, then tighten by turning eccentric cam (B) clockwise.

If necessary, cover exposed screw holes with sticker (G).

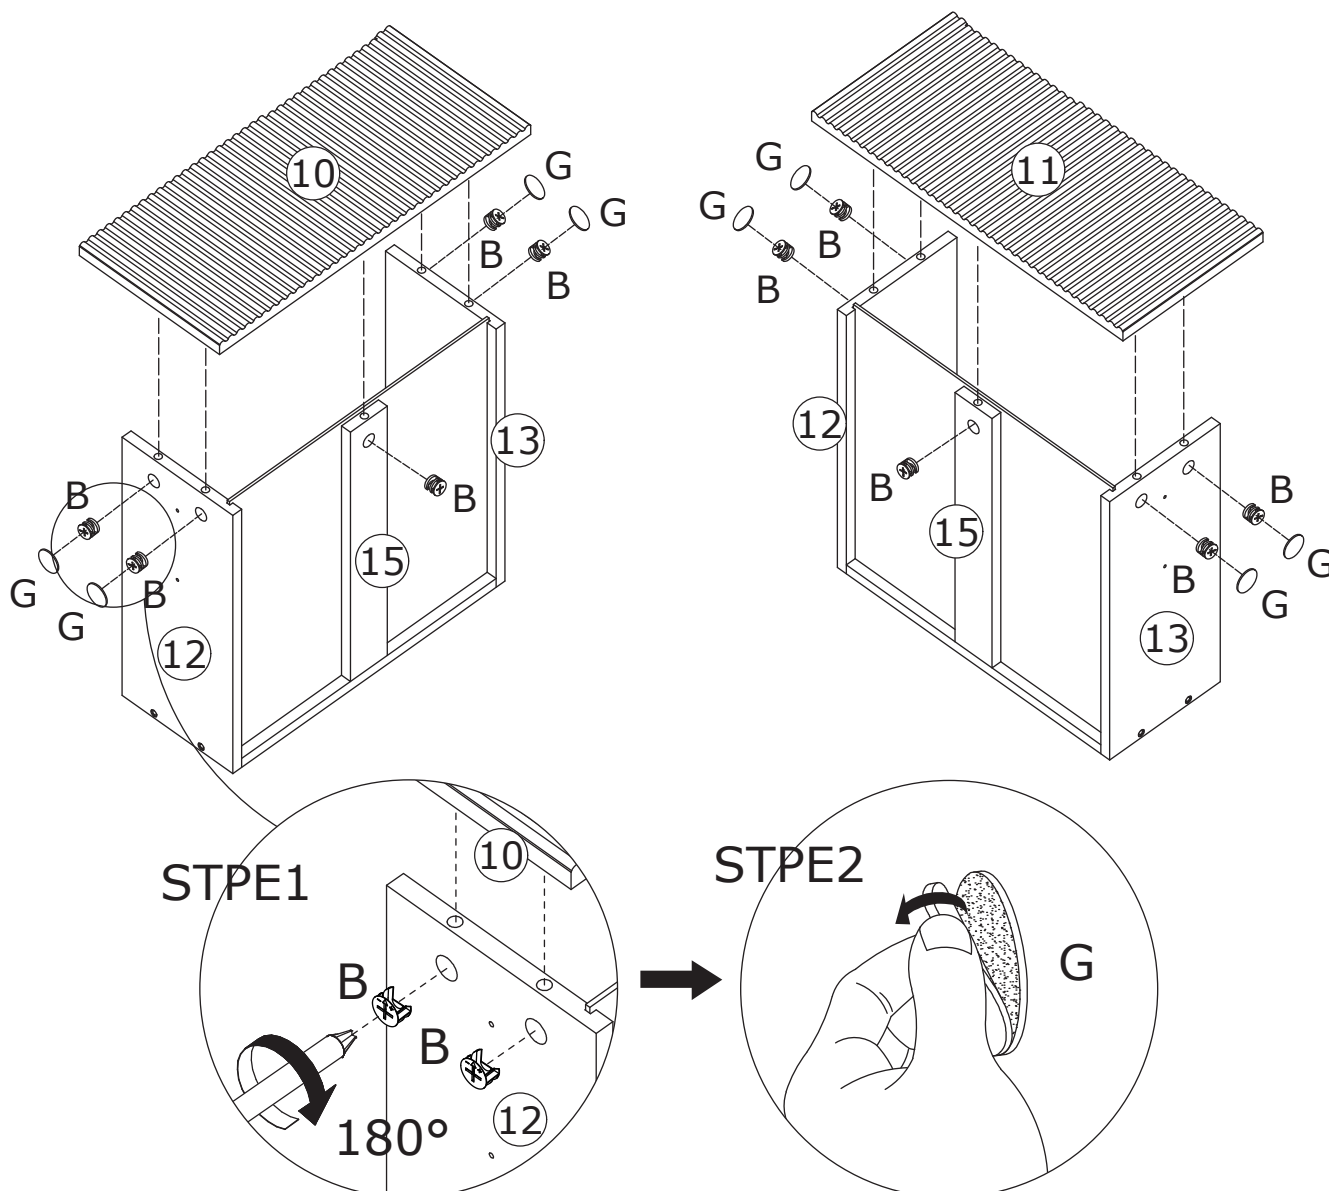

22

L x 12



 
M3.5 x 12 mm

N x 2



N-2

290 mm



D






M3.5 x 14 mm

L




M3.5 x 12 mm

Fix slide rail (N-2) to boards 12 and 13 using screw (L).

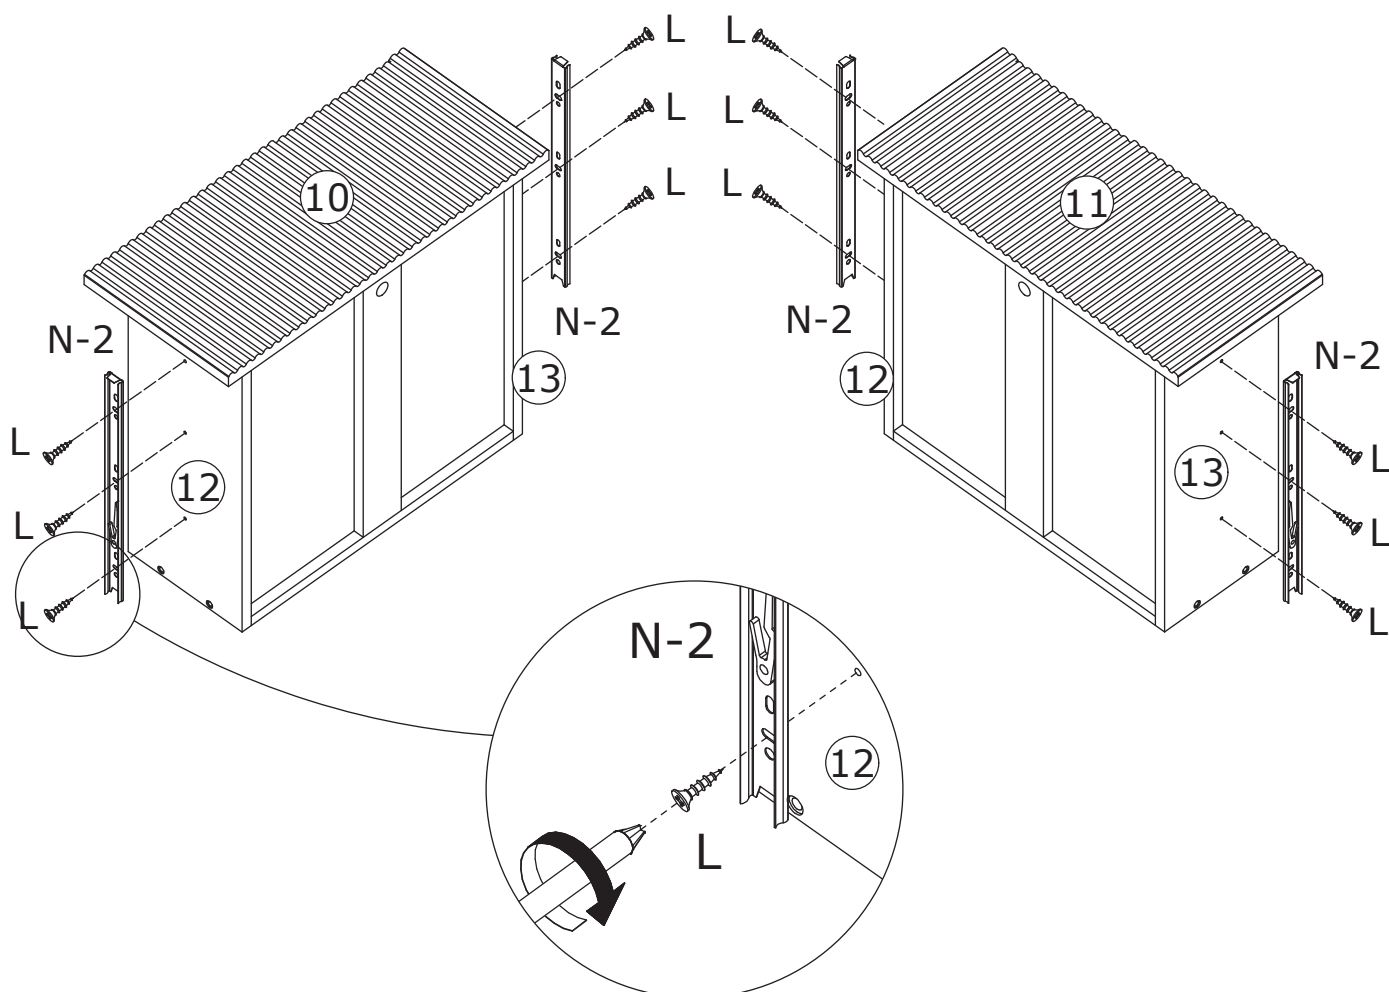
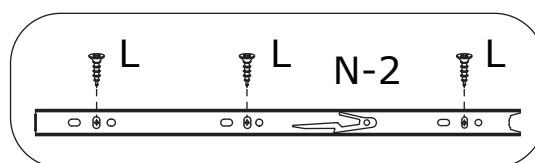
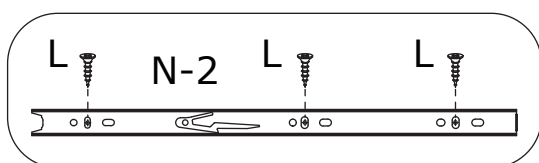


23

 
H x 2 	L x 4  M3.5 x 12 mm	
--	---	---

	D  M3.5 x 14 mm	L  M3.5 x 12 mm
--	--	---




Secure handle (H) to boards 10 and 11 using screw (L).

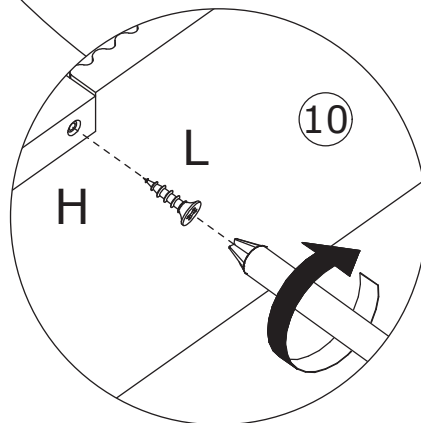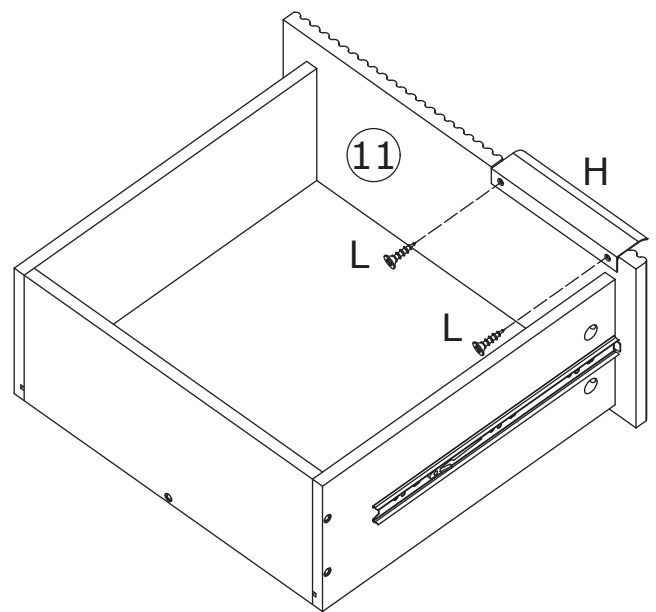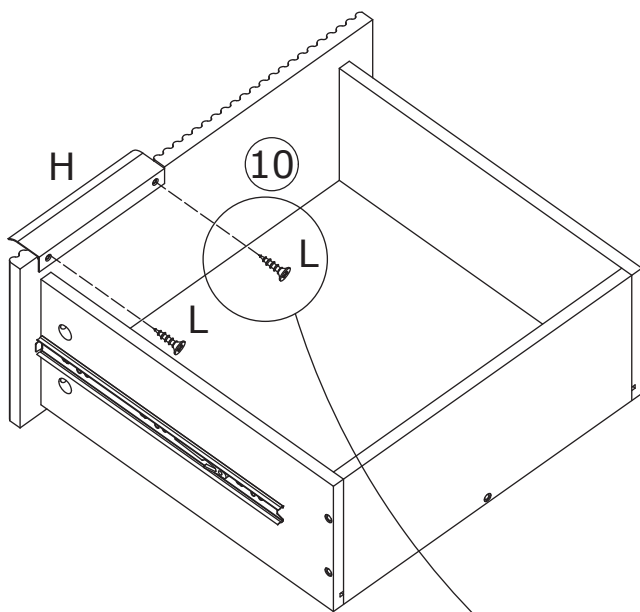




24

 


First pull out (N-1), then align it with (N-2), and then slowly push the drawer in.
(The vertical position of the drawer can be adjusted by adjusting the screw fixing position on part N-1 of the slide rail.)

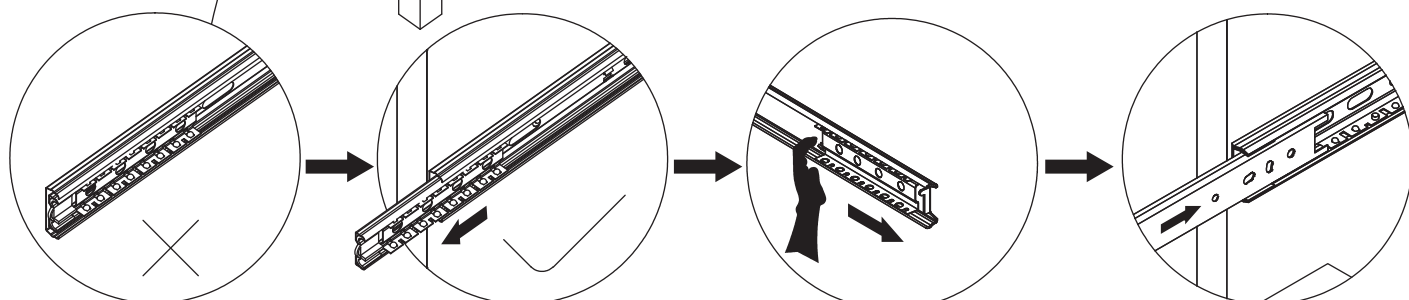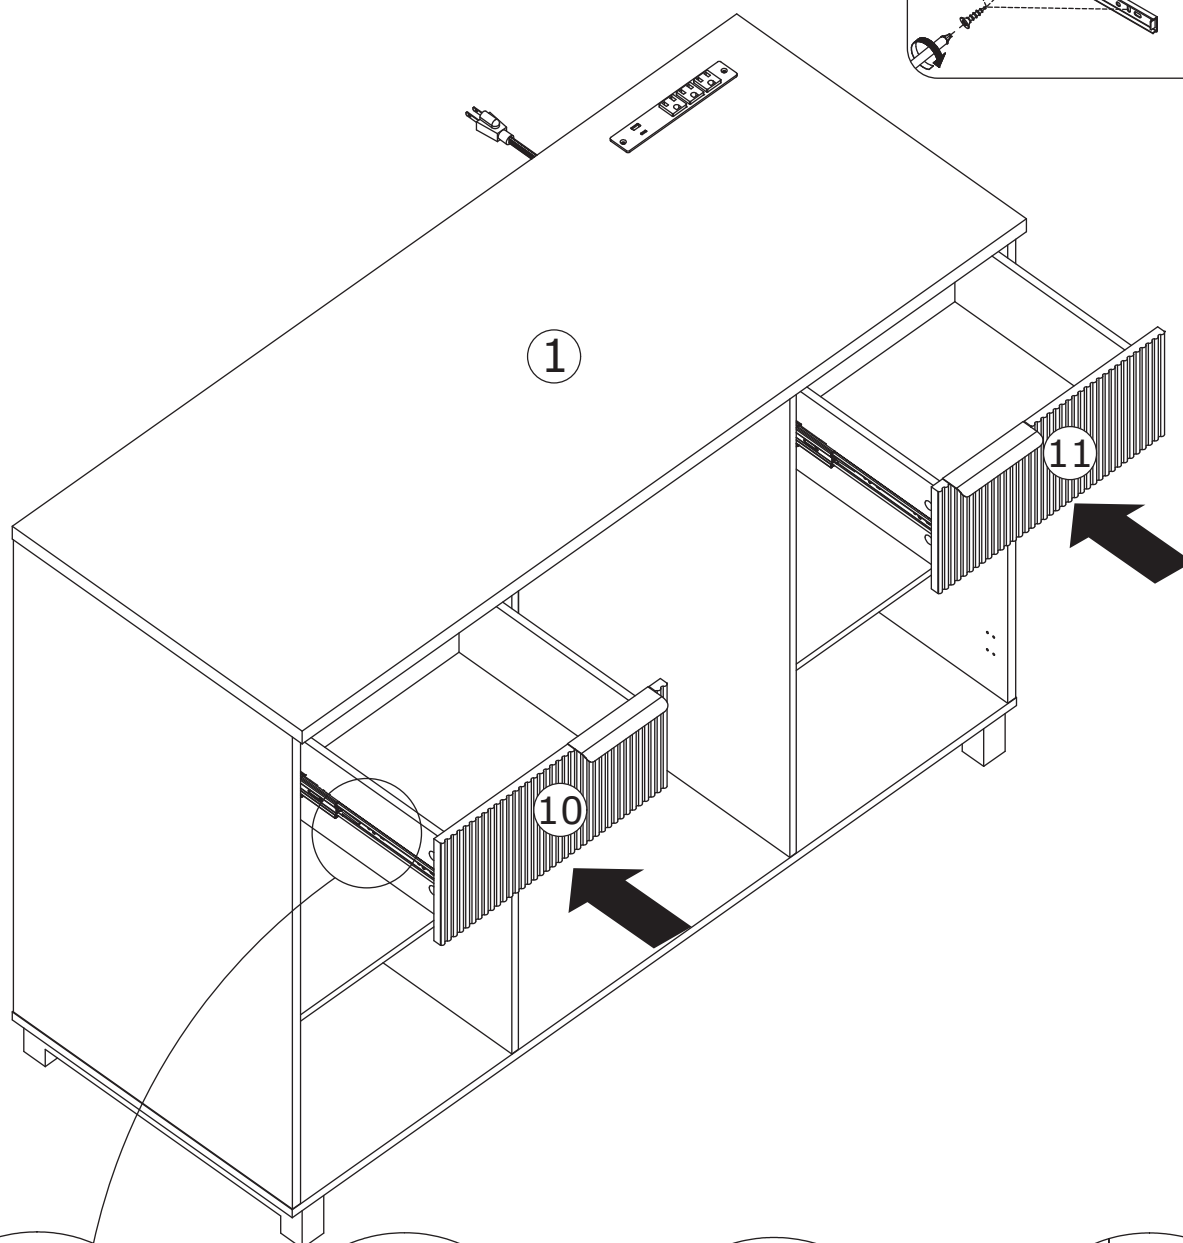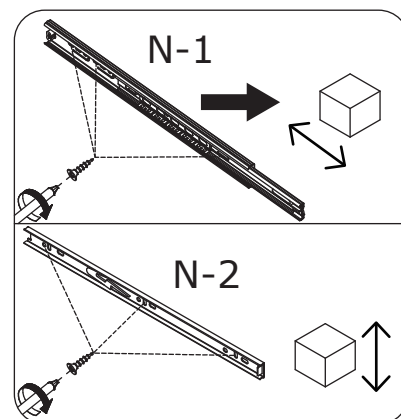

25

   D x 4  M3.5 x 14 mm	F x 4 	H x 2 	L x 4  M3.5 x 12 mm	
		D  M3.5 x 14 mm	L  M3.5 x 12 mm	

Secure hinge (F) to boards 8 and 9 using screw (D), then secure handle (H) using screw (L).

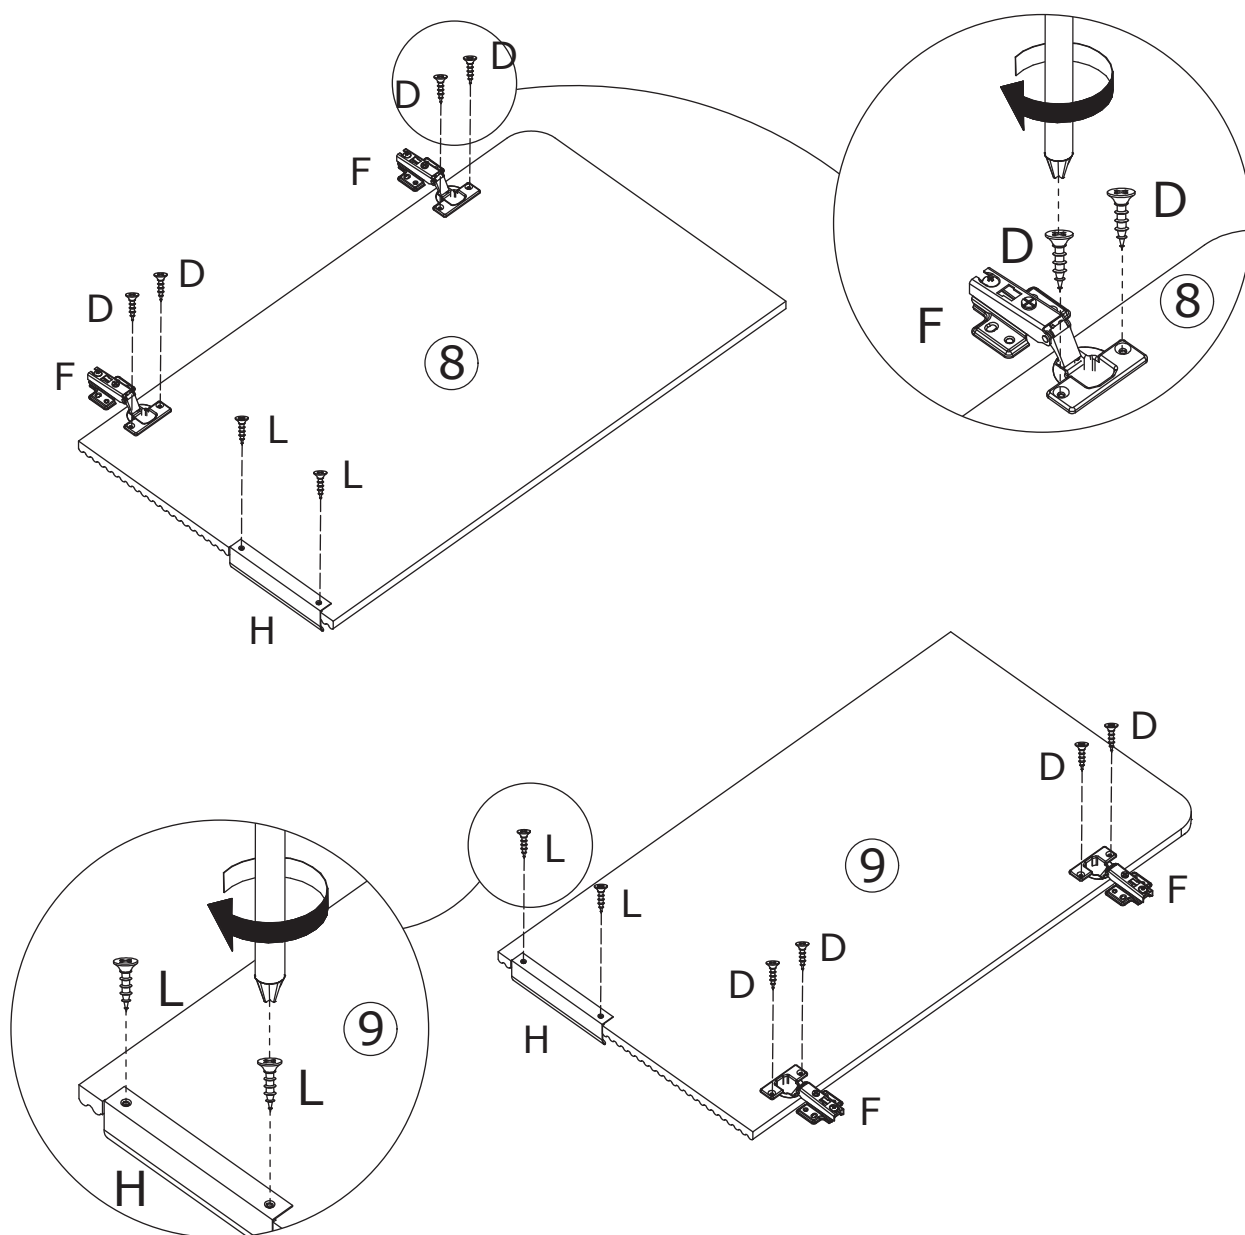


26

D x 16



 M3.5 x 14 mm




D




M3.5 x 14 mm

 
L



M3.5 x 12 mm

 Connect boards 8 and 9 to boards 3 and 4 via securing hinges using screw (D).


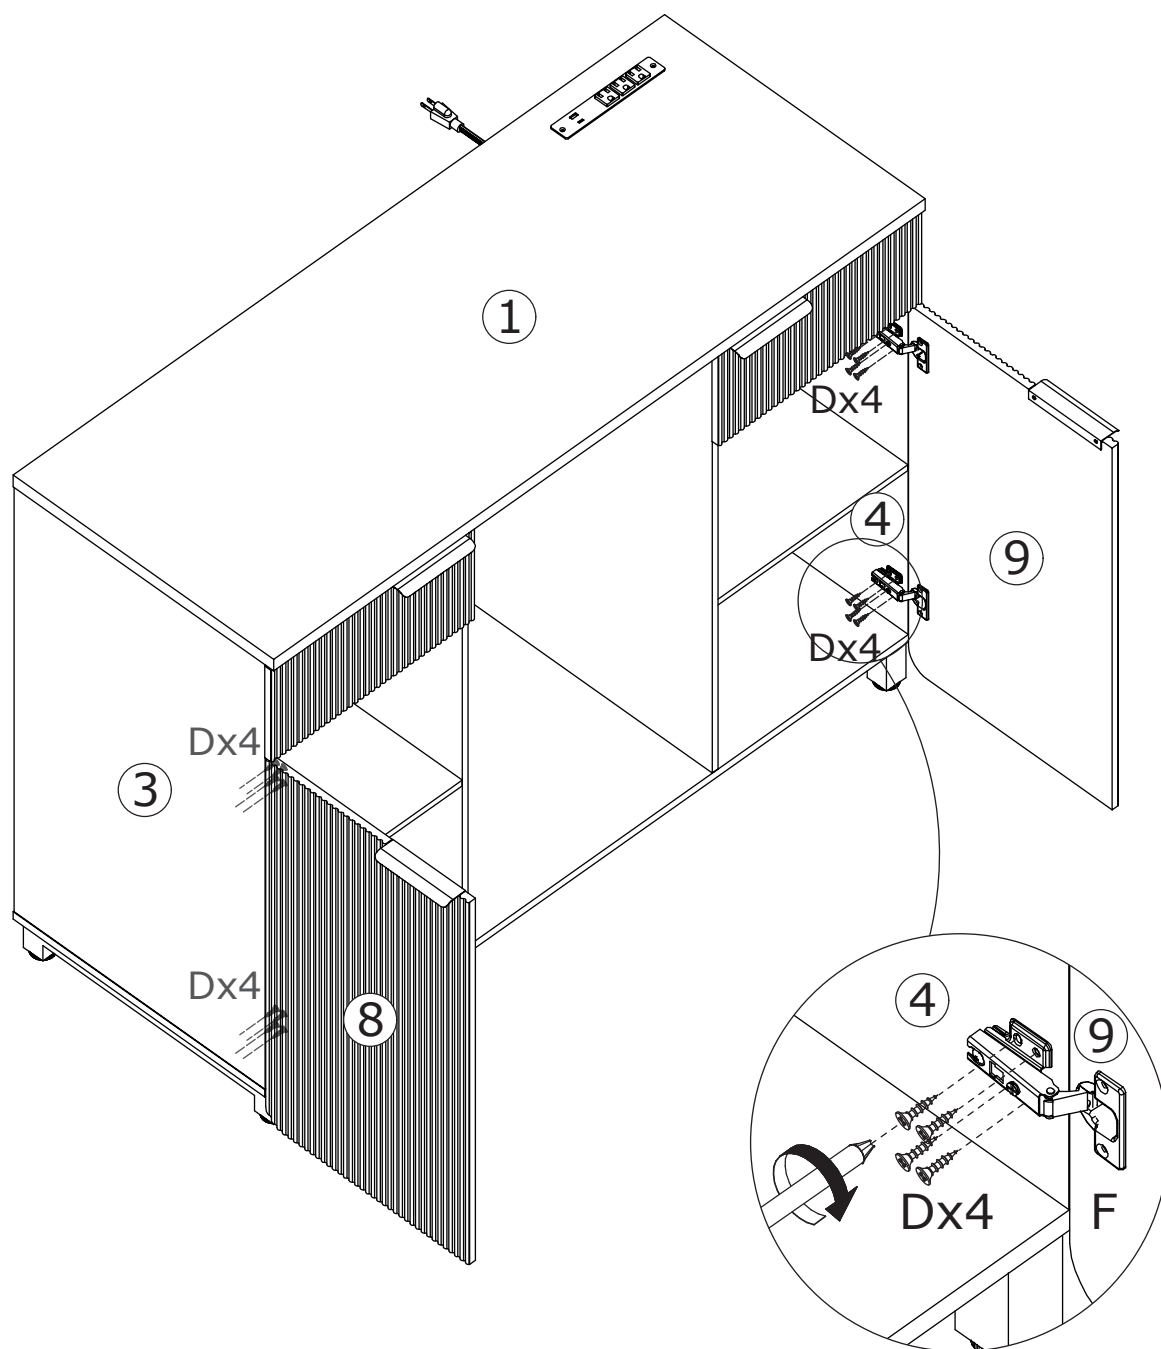





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.




<https://youtu.be/n0Lb36SoODM>

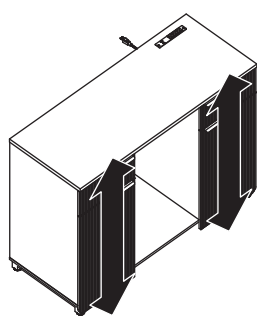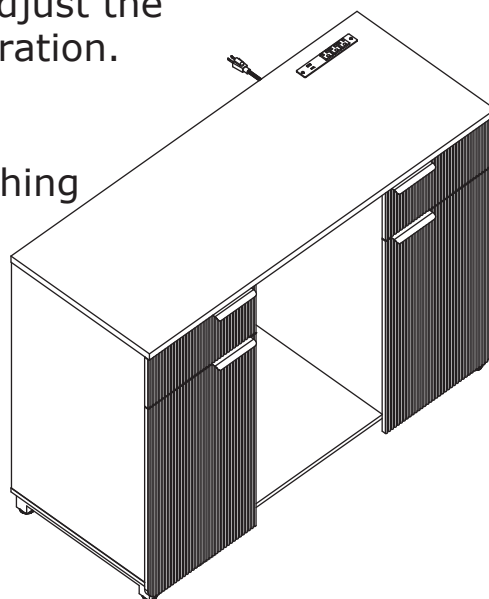


①

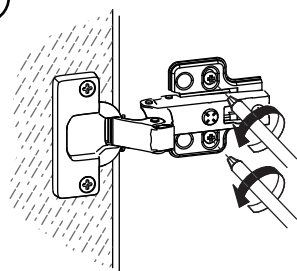






②

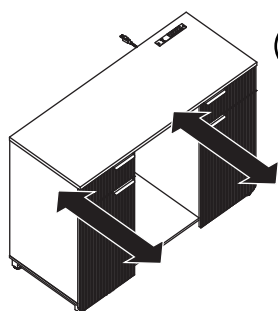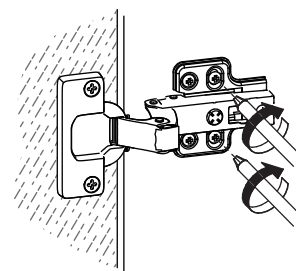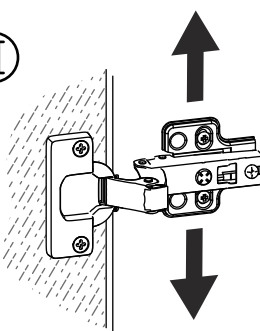

①

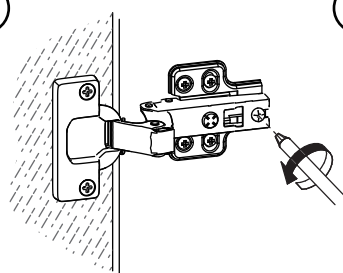

②

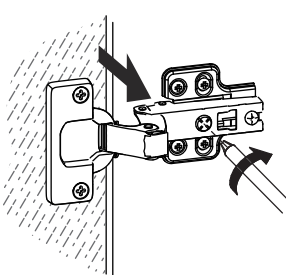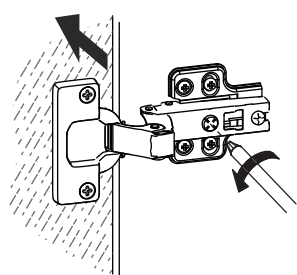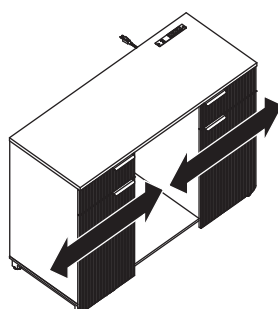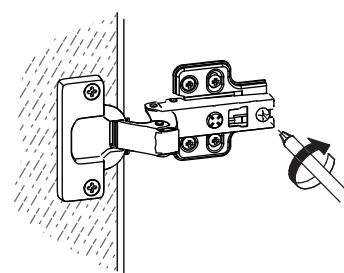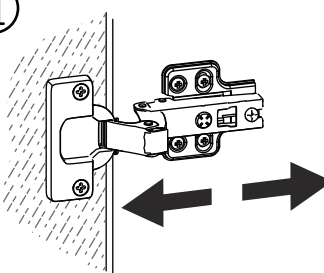

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068