

ZONE HEATING SAVES!

The concept of Zone Heating is simple. Use energy efficiency Comfort Glow quartz fireplace to heat the rooms you use most, during the times you use these areas and turn back the thermostat to your central heating system. To achieve the maximum benefit it is important to understand your heater and where best to locate it.

For Best Heating Results please follow these suggestions:

- 1) Close doors to areas you do not wish to heat.
- 2) Locate a three prong outlet along an interior wall if possible. Position the heater so that the warm air can blow unobstructed across the room towards the exterior walls.
- 3) Check your windows and doors for the infiltration of cold air and insulate as needed to avoid heat loss. Rapid heat loss will minimize the effectiveness of your Infrared heater as it would any conventional type heater.
- 4) Keep the area around the heater free of obstructions to insure maximum airflow. Keep electrical cords, drapery, furniture, and other combustibles 3 feet (0.9 M) away from the front of the heater and away from the sides.
- 5) Avoid locating your heater in high traffic areas or in direct sunlight.
- 6) Avoid locating your heater near your central heating thermostat.
- 7) For best results place your fireplace on an exterior wall or under a window.

About your Heater:

Quartz infrared heating tubes: Provide comfortable radiant heat like the sun.

Target Temperature function: Heater will operate until target temperature is reached at heaters location. Note: This may vary from the room temperature.

Timer Function: User can program heater to turn-on or turn-off in 1-12 hours.

WARNING: It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.