

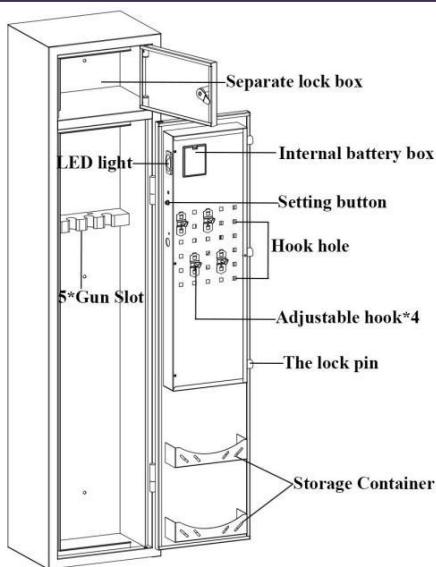
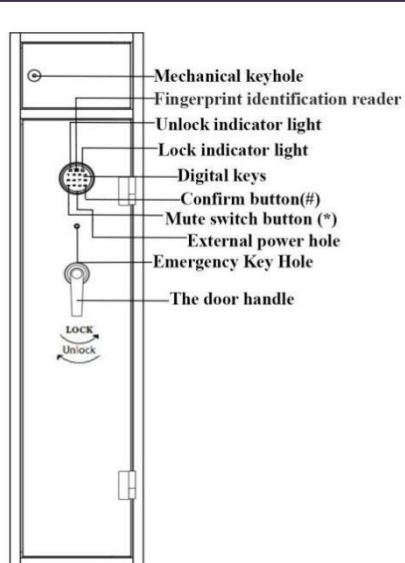
Hi friend, thank you for purchasing me, we finally meet! I am happy to be your firearms guardian. It is my responsibility and my pleasure to keep children away from firearms equipment and to keep your firearms safe.

After you received me, please take a few minutes to read the instruction manual so that you can use me better. If you have any questions, please contact my seller, they are always there. Please do not put the emergency opening accessories in the gun cabinet to avoid unnecessary trouble!





MANUAL FOR FINGERPRINT SAFE

⚠ Tip: Please do not put the emergency key, the external power box in the safe!

CHEMATIC DIAGRAM



PARTS LIST

Emergency key*2	
Expansion bolt* 4	
Hook*4	
External power box*1	

WARNING



Tip Over Hazard

- ~A child or adult can tip the safe and be killed or seriously injured.
- ~Serious injury may occur to children and adults if not secured before installation.
- ~Children should not play with or around the safe at any time.

OPENING THE SAFE FOR THE FIRST TIME

Please use the emergency key to open the safe for the first time. The operation as follows:

- 1.Open the emergency key cover.
- 2.Insert the emergency key into the keyhole and push it to rotate 75° counterclockwise
- 3.Rotate the handle 45 degree clockwise and the safe door open
- 4.Continue to install the battery.

INSTALL BATTERIES

1. Open the battery box cover plate.
2. Insert 4 AA batteries and restore battery cover. ⚠ (Caution: Do not use Rechargeable Battery)
3. Continue to the next step

PRODUCT PERFORMANCE

1. Initial password of the product, "1234"
2. The factory fingerprint of the product is empty (note: it cannot identify anyone's fingerprint).The total number of fingerprints is 20.


⚠ Note: Open the door and press the setting button for 5 seconds after the first power on.Reset the system.

SET USER PASSWORD

1. Open the door and press the set key.

2. Enter 1-8 digit password within 5 seconds, press # key, hear "di di" prompt sound, enter the same password again, press # key.
3. If you enter the same password twice and hear the long sound of "di ---", the new password will be set successfully.
4. If you type in a different password, you will hear a "Tick Tick". It means not succeeding.

ADD FINGERPRINT (need to repeat four times to register)

 A maximum of 20 stamps can be registered

1. Open the door, press the setting button,
2. Then place the registered finger in the center of the fingerprint collector, hear the "di" short sound, take away the finger to press again, repeat 4 times, hear the "di -" long sound, fingerprint registration is successful.
3. (To facilitate fingerprint identification, please register each finger 2-3 times)

PASSWORD · FINGERPRINT OPEN DOOR METHOD

1. Password to open the door: Press "#" key, then enter the correct password, and then press "#" key to confirm. Verify that the door opened successfully.
2. Fingerprint door opening: Press and input finger on the fingerprint collector, turn on the indicator light and identify successfully. Open the door.
3. When you enter the wrong password or wrong fingerprint, the error light will be on and the buzzer "beep" will be on.
4. If the password is wrong for 5 times, the system will lock for 1 minute

MUFFLER FUNCTION


1. Long press the number "*" button (about 3 seconds), the correct indicator light will be on and the sound will be muffled successfully. Press the "*" button for another long time (about 3 seconds). The correct light will be on and the sound will be on (Note: "*" button is used to switch the mute function, and the normal sound will be restored after power is cut off).

FACTORY DATA RESET

1. Open the door long press the setting button for 2~3 seconds, "di, di --" long sound, restore factory Settings. The user password is initialized to "1234" and the fingerprint is cleared.

LOW VOLTAGE PROMPT

1. When the power voltage is less than or equal to 4.5V (+/- 0.2V) and a short five-tone sound of "di-----" is heard during any operation, please replace the battery at this time.
2. Replace the battery: If the indicator light is not on, the emergency key can be used to open the door. Replace the battery.

 Note: it is recommended to use ordinary batteries, avoid lithium batteries and different types of batteries.

MOUNTING INSTRUCTIONS (The safe may be mounted to a wall or floor.)

- ~Drill the appropriate size holes for the anchors you are using
- ~Carefully press the anchor into the holes at this time
- ~Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely Floor Mounting
- ~Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete)
- ~Measure the location of the pre-set drill holes; mark their exact position onto the floor
- ~Drill the appropriate size holes for the anchors you are using
- ~Carefully press the anchor into the holes at this time
- ~Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

MOUNTING HOLES

~ Actual model may vary