

## DESCRIPTION

- 1.Stainless Steel construction
- 2.Flexible supply lines with 3/8" or 9/16" compression fittings
- 3.Includes Hot/Cold indicators

## FLOW

- 1.Water usage is limited to these maximum flow rates as indicated by the corresponding productings.
- 2.North America 1.8gpm max (6.8L/min ) at 60 psi
- 3.California 1.8gpm max (6.8L/min ) at 60 psi

## CARTRIDGE

- 1.Ceramic disk cartridge


## STANDARDS

- 1.Certified to CUPC
- 2.Certified to Ab1953
- 3.Certified to NSF/ANSI 61  
ADA for lever handle

## WARRANTY


- 1.Lifetime limited warranty against leaks,drips and finish defects to the original consumer purchaser
- 2.Five years warranty if used in commercial installations

# Specifications

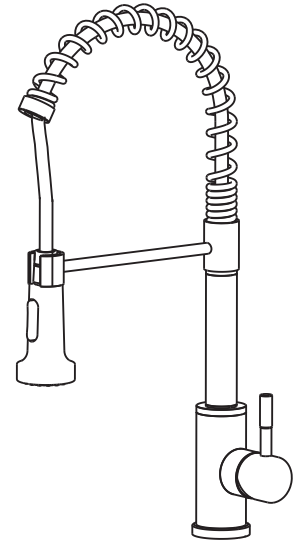

Kitchen Faucet


NOTE :THIS FAUCET IS DESIGNED TO BE INSTALLED THRU 1 HOLE  $\varnothing$ 1-3/8"MIN

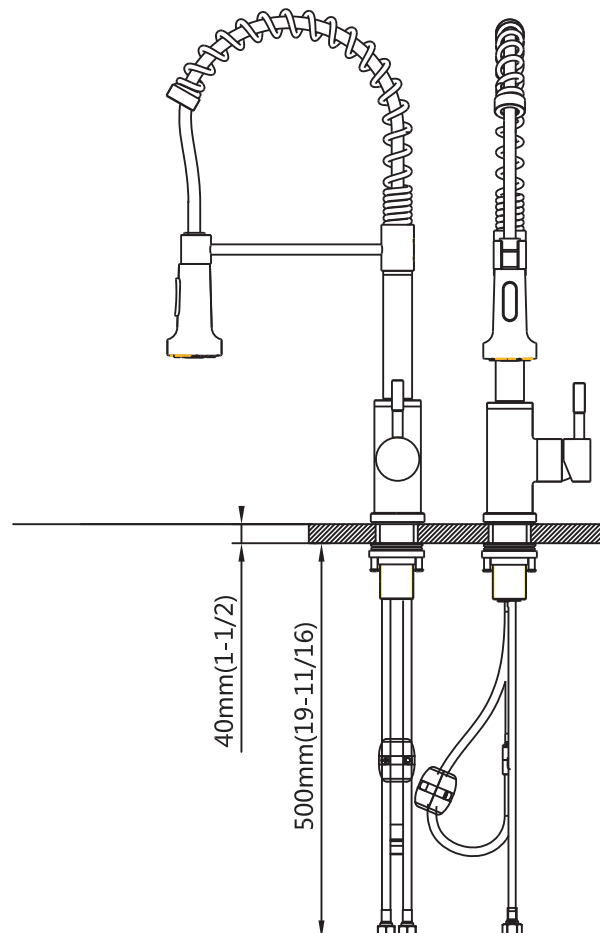


CRITICAL DIMENSIONS

# Kitchen Faucet Installation


## INSTALLATION MANUAL Tools You Will Need:

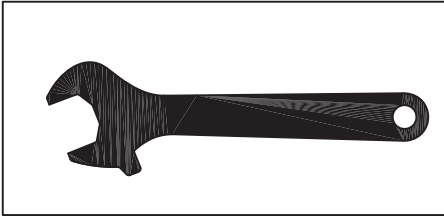

Adjustable wrench

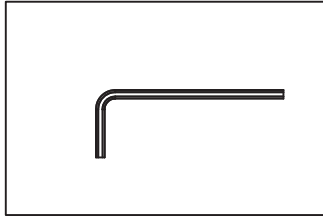

Hexagon wrench

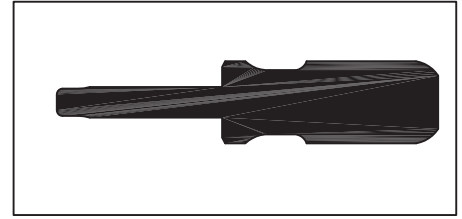

Phillips Screwdriver


## Notes before installation:

1. Please check that all components are present
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present
3. Ensure water pressure is between 20-125 PSI (includes combination of hot and cold feed lines)
4. Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber
5. If you will be away from home for an extended period you should shut off the main water supply.


## Daily maintenance

1. Use a soft cloth and vinegar to remove hard-water spots.
2. Check aerator (if present) regularly for calcium build up as when water stream is not optimum
3. DO NOT use caustic cleaning products as the use will break down finish and will void the product warranty.
4. Acceptable cleaners include vinegar or mild non-abrasive liquid detergents.
5. If the water pressure appears to be less than optimum remove, inspect, clean or replace aerator.

1. Insert the goose-head assembly ① into the main body ①
2. Remove the rubber washer, metal washer and locking nut from the faucet.
3. Install the rubber washer, followed by the metal washer

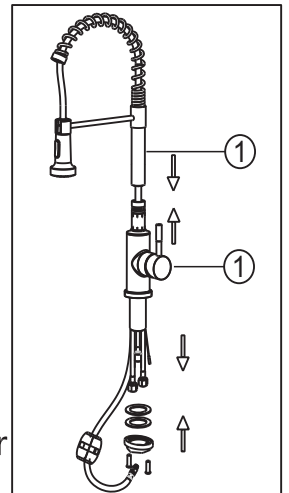

4. Pull the hose ② to the Quick coupling ②

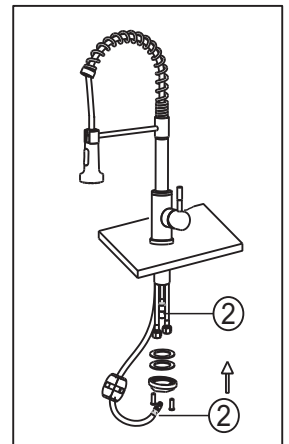

5. Attach flexible hose to water supply.

