

## 主要功能

全电子防雷功能            免提功能  
来电最后一组重拨功能

## 安装使用说明

- 1、将物品包装里的支架按方向放置在电话顶端的轴芯上，并用配置的螺丝固定方向
- 2、将电话机配置的直线一端接当地电信局安装的信号插孔另一端接电话机底部较大的话机插孔
- 3、将手柄上的曲线接电话机底部较小的插孔

## 拨打电话机

- 1、提起手柄或按下免提键，此时手柄听筒或喇叭出现嘟嘟的拨号声
- 2、听到拨号音后就可以开始拨号，将手指插入所要拨打号码的圆孔内顺时针旋转，直至RD按键并且把RD按键拨动，在听筒或喇叭里能听到拨号的音频声音后表示该号码拨出。
- 3、号码拨出后松开手指，使拨号盘自动返回到原来的位置再进行下一个号码的拨出，如此类推直至将所有的号码全部拨完
- 4、如拨完后对方无法接通或正在通话时需重新拨号，此时可直接按RD按键进行重拨

## 简易故障排除方法

- 1、无声：检查二芯直线插头与接线盒是否接触良好
- 2、杂音：检查电话线是否有松动，脱皮现象，接线盒是否生锈
- 3、电话铃声只响一声即断，但可拨号，检查接线盒是否进水潮湿或所接分机太多

## Instruction

### Main functions:

Thunder-proof  
Hands-free with calling  
The last coming numbers Re-dial

### Installation & USD

1. Taking out the supporting of telephone and putting it on the top of phone, then using the screw which we prepared for you fixes and the direction.
2. Install the telephone line to the native telephone company's signal jack, then install the big jack at the bottom of telephone.
3. Finally attaching the winding telephone cord to the smaller jack at the bottom of the telephone.

### Direction of call:

- a. Pick the phone up or press the < hands-free >, and then you can hear the beep sound from the telephone receiver or loudspeaker.
- b. You can start the report after you hear the dial tone and please insert your finger into the round hole to dial the number and then spin clockwise to the < RD > and toggle it. When you hear the audio sound in the receiver or loudspeaker, it means that the number is allocated.