











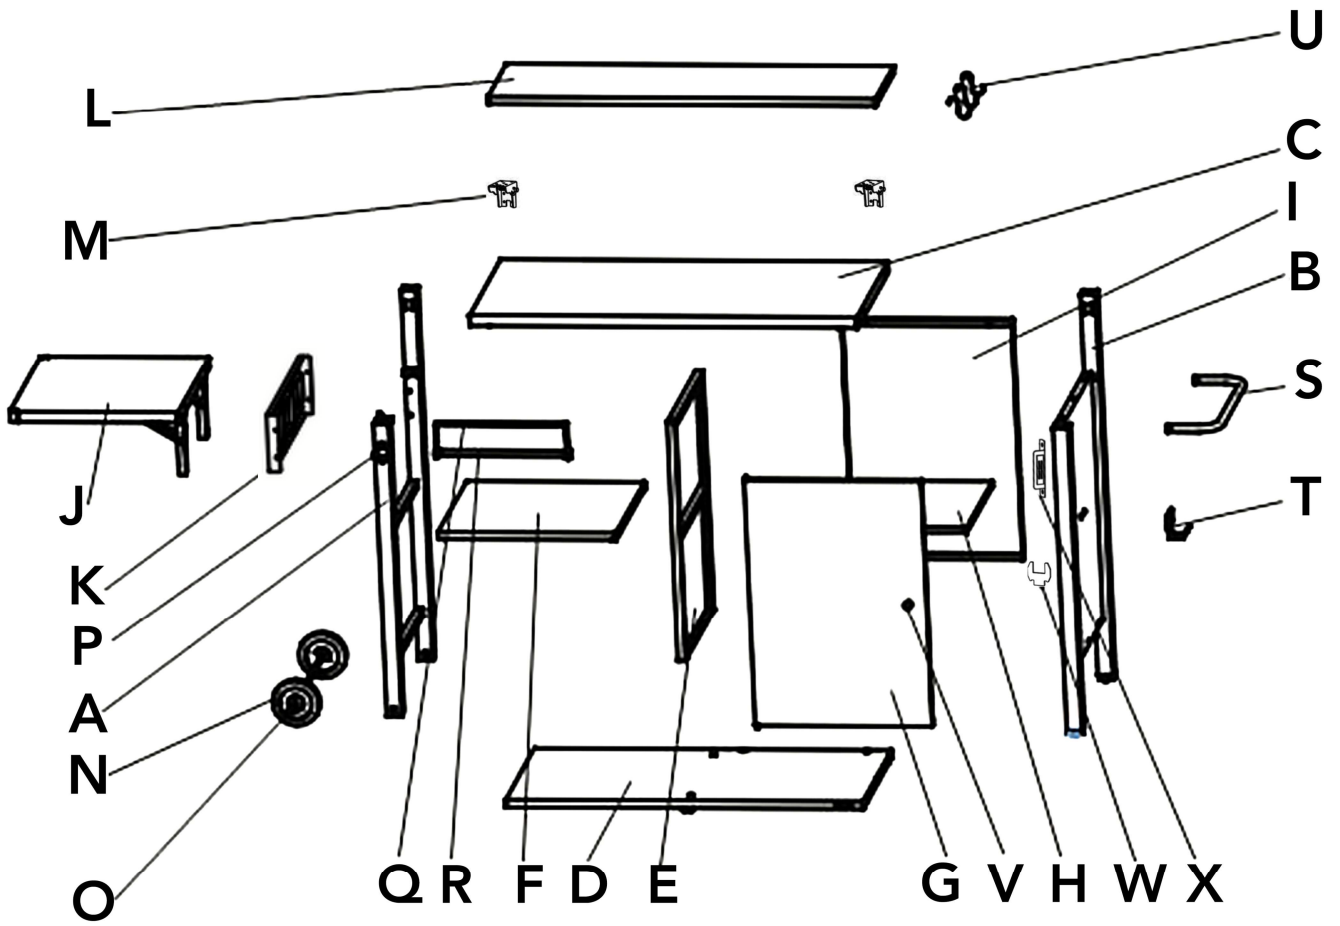


INSTRUCTION MANUAL

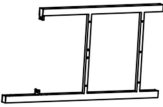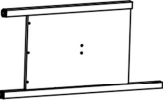Multi-functional Outdoor Prep Table Cart

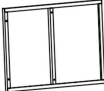










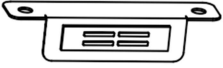
PARTS DIAGRAM







PARTS LIST

Part #	QTY	Description	image
A	1	Left Leg	
B	1	Right Leg	
C	1	Main Desktop	
D	1	Bottom Shelf	
E	1	Center Divider	
F	1	Left Shelf	
G	1	Cabinet Door	
H	1	Right Shelf	
I	1	Backplane	
J	1	Side Table	
K	1	Desktop Bracket	
L	1	Top Desktop	

PARTS LIST


Part #	QTY	Description	image
M	2	Hinge	
N	2	Caster	
O	1	Caster Shaft	
P	1	Bottle Opener	
Q	1	Tissue Holder	
R	1	Napkin Spindle	
S	1	Handle	
T	1	Gas Tank Hook	
U	6	Hook	
V	1	Doorknob	
W	4	Shelf Adjustment Fitting	
X	1	Magnet Support	

HARDWARE LIST

Part #	QTY	Description	image
Y	2	Flange Nut	
Z	45	M5x16	
AA	15	M5x35	
AB	1	Allen Wrench	

READ BEFORE ASSEMBLY

Tools Required (Included)

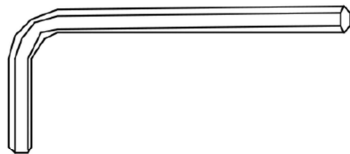

Allen Wrench (Provided)

Before beginning assembly, make sure all parts are present. If any parts are missing or damaged, do not attempt to assemble the products. Contact customer service for replacement parts via service email.

Approximate assembly time: 45 minutes. (Requires two people to install)


Note:

1. Please only tighten any bolts once all bolts place correctly and the product is lying flat. If you tighten one bolt, it may cause other bolts to get out of position.
2. This product contains small parts, please be careful of children accidentally swallowed. Keep children and pets away while assembling the table cart.
3. Please be careful not to let the corners scratch you during installation.
4. Model shown for illustration purpose only, specific please in kind prevail.
5. For the best results, complete each in the order presented.

ASSEMBLY

STEP 1


Fasten the main desktop (Part C) between the left leg (Part A) and the right leg (Part B) with the bolts (Parts Z and AA).

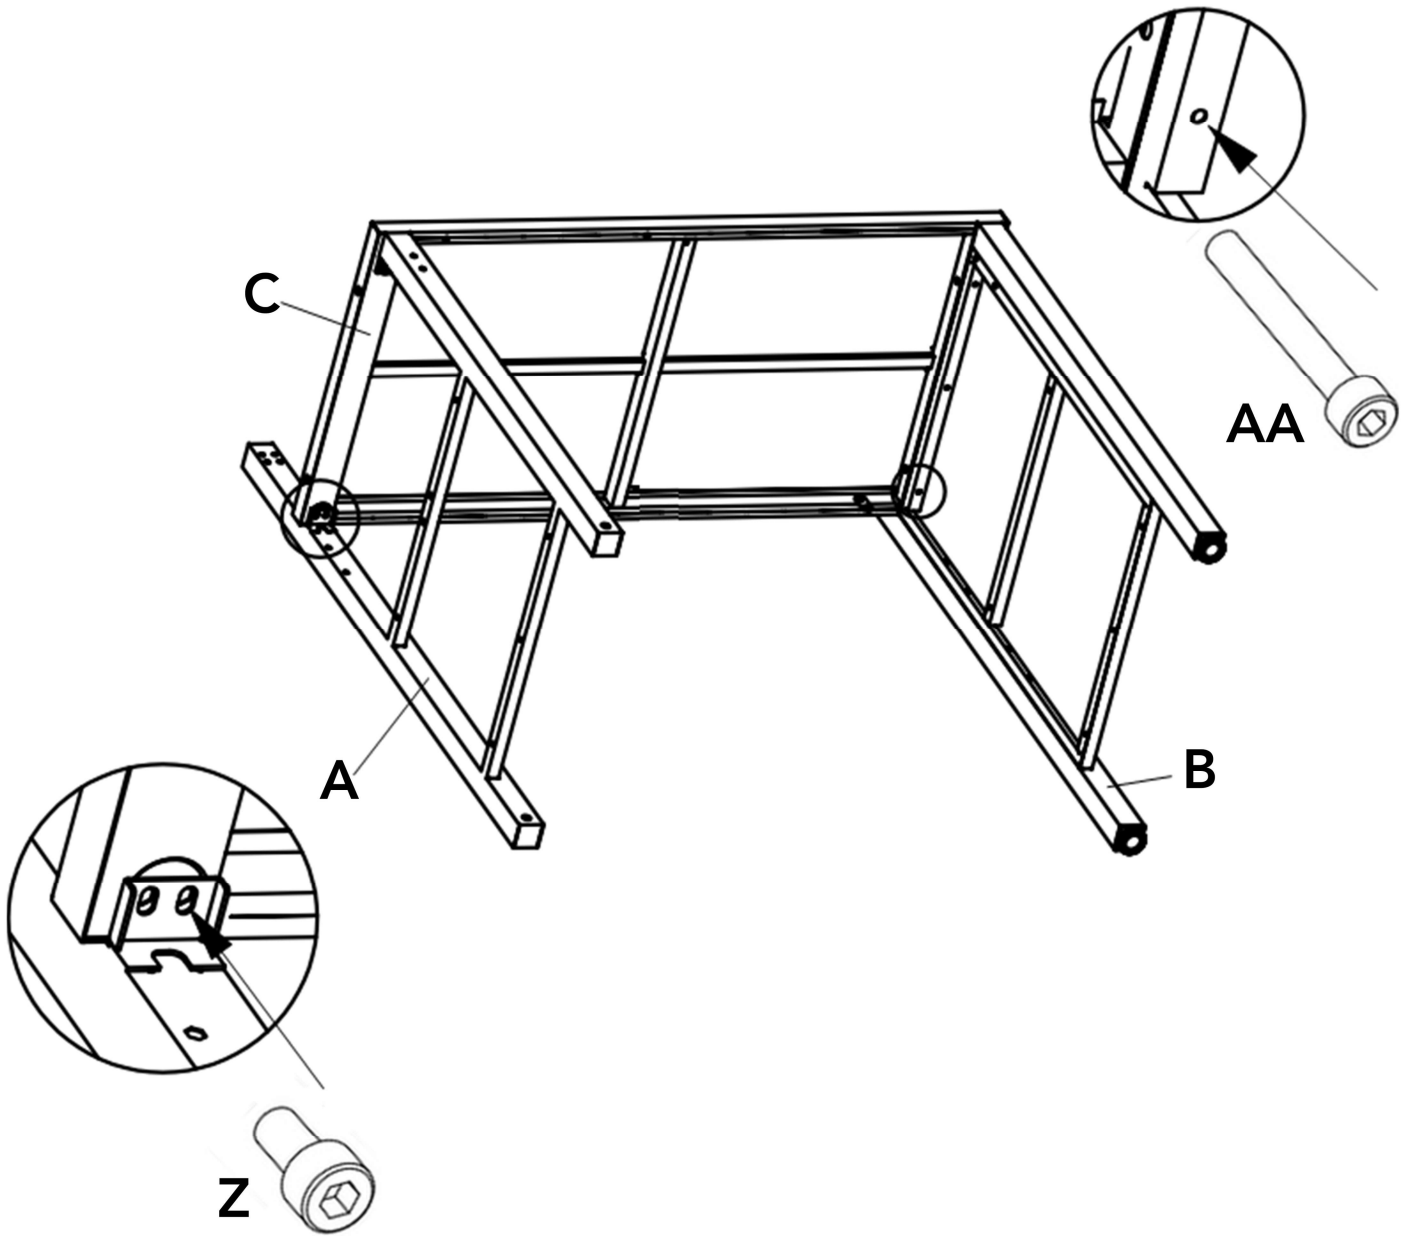

- | | | |
|--------------|-------------|-------------|
| A x1 | Z x4 | B x1 |
| AA x3 | C x1 | |

STEP 2


Place the center divider (Part E), back panel (Part I) and bottom shelf (Part D) over the corresponding mounting holes and secure with the bolts (Part Z and Part AA).

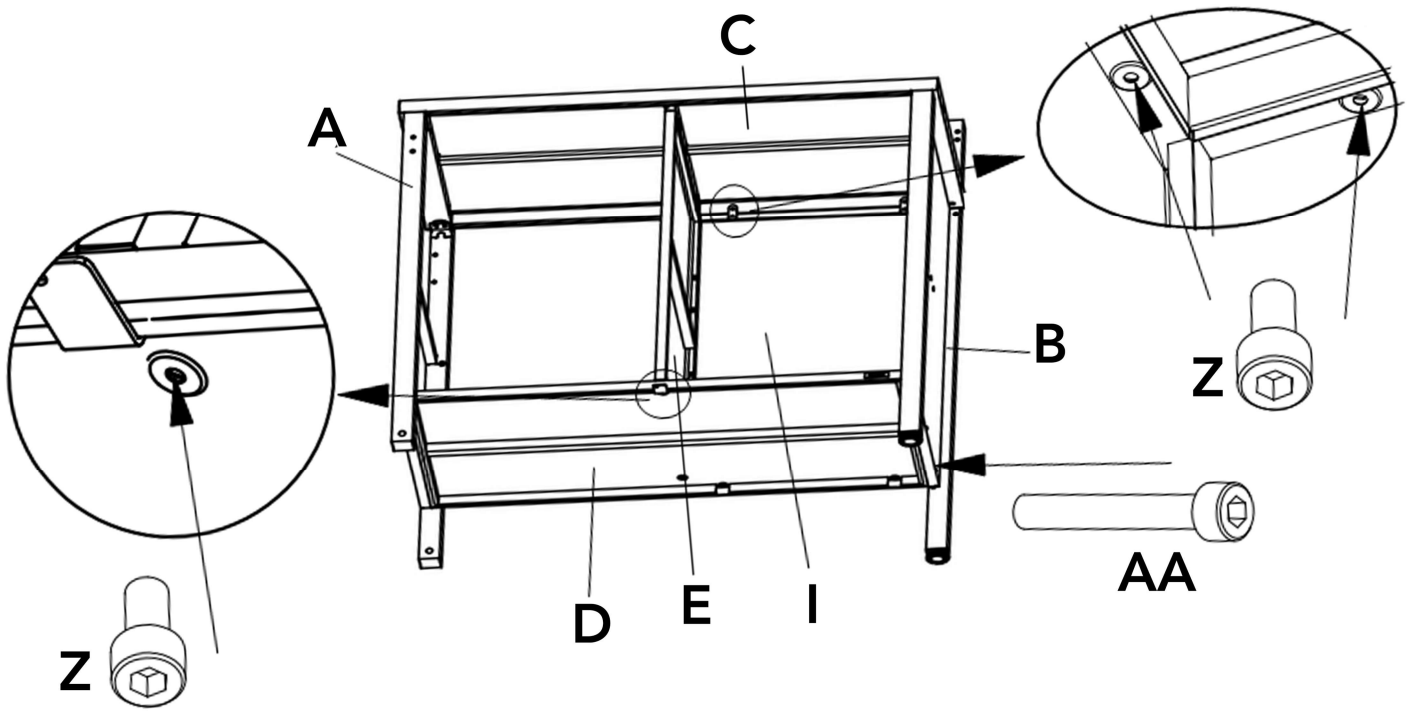

D x1	Z x8	E x1
AA x6	I x1	

STEP 4

Fasten the left shelf (Part F) between leg A and divider E with bolts(Part AA). Insert the door (Part G) into the hole in the bottom shelf D and main desktop C. Put the right shelf (Part H) between center divider E and right leg B (Adjust the height of the partitions with part W).

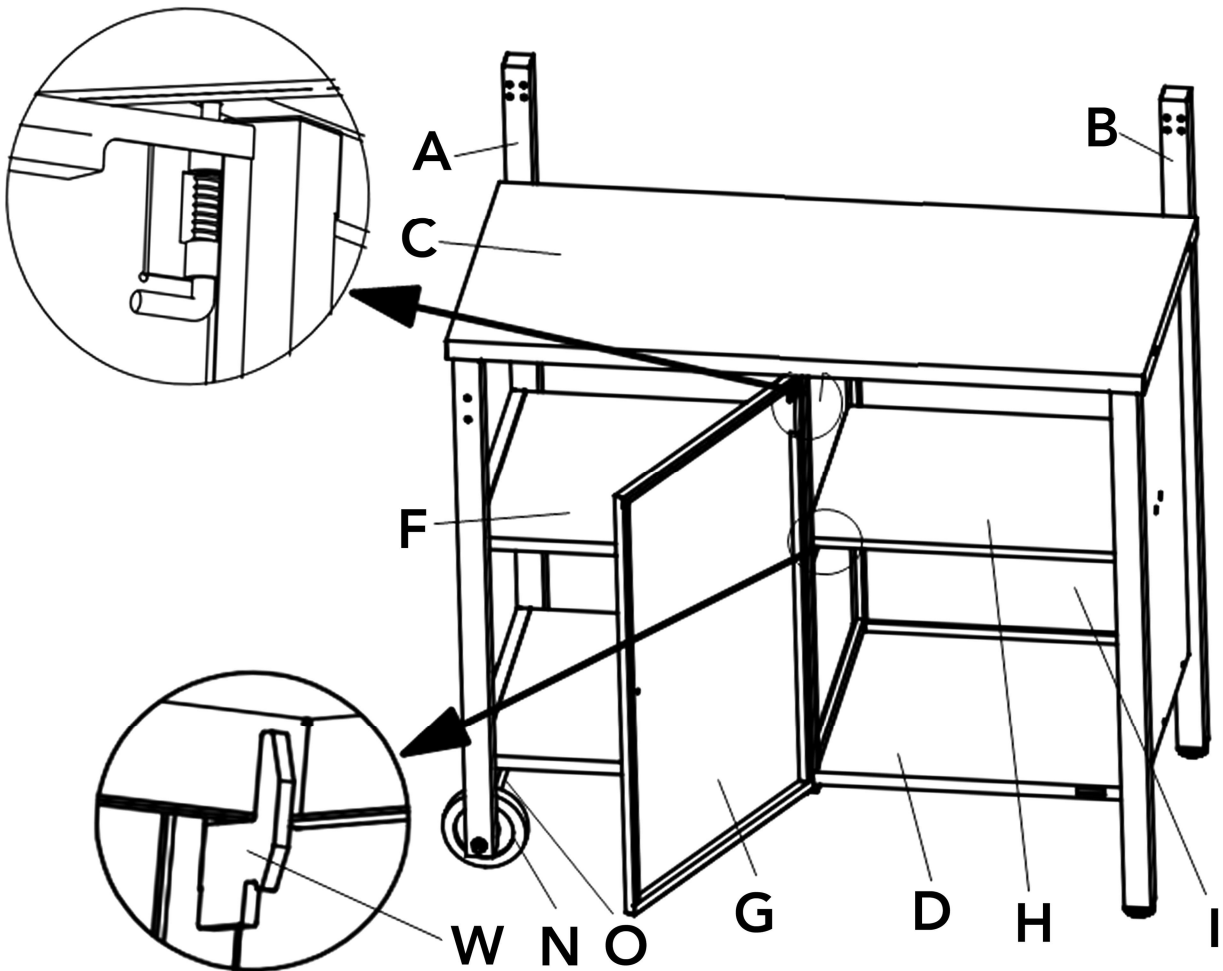


F x1 **G** x1 **W** x4
H x1 **AA** x4

STEP 5

Fasten the hinge (Part M) to the top desktop (Part L) with bolts (Part Z)(Flip button is on the outside).


Repeat for the other side (Note: the hinges are mounted symmetrically and the flip button is on the outside).

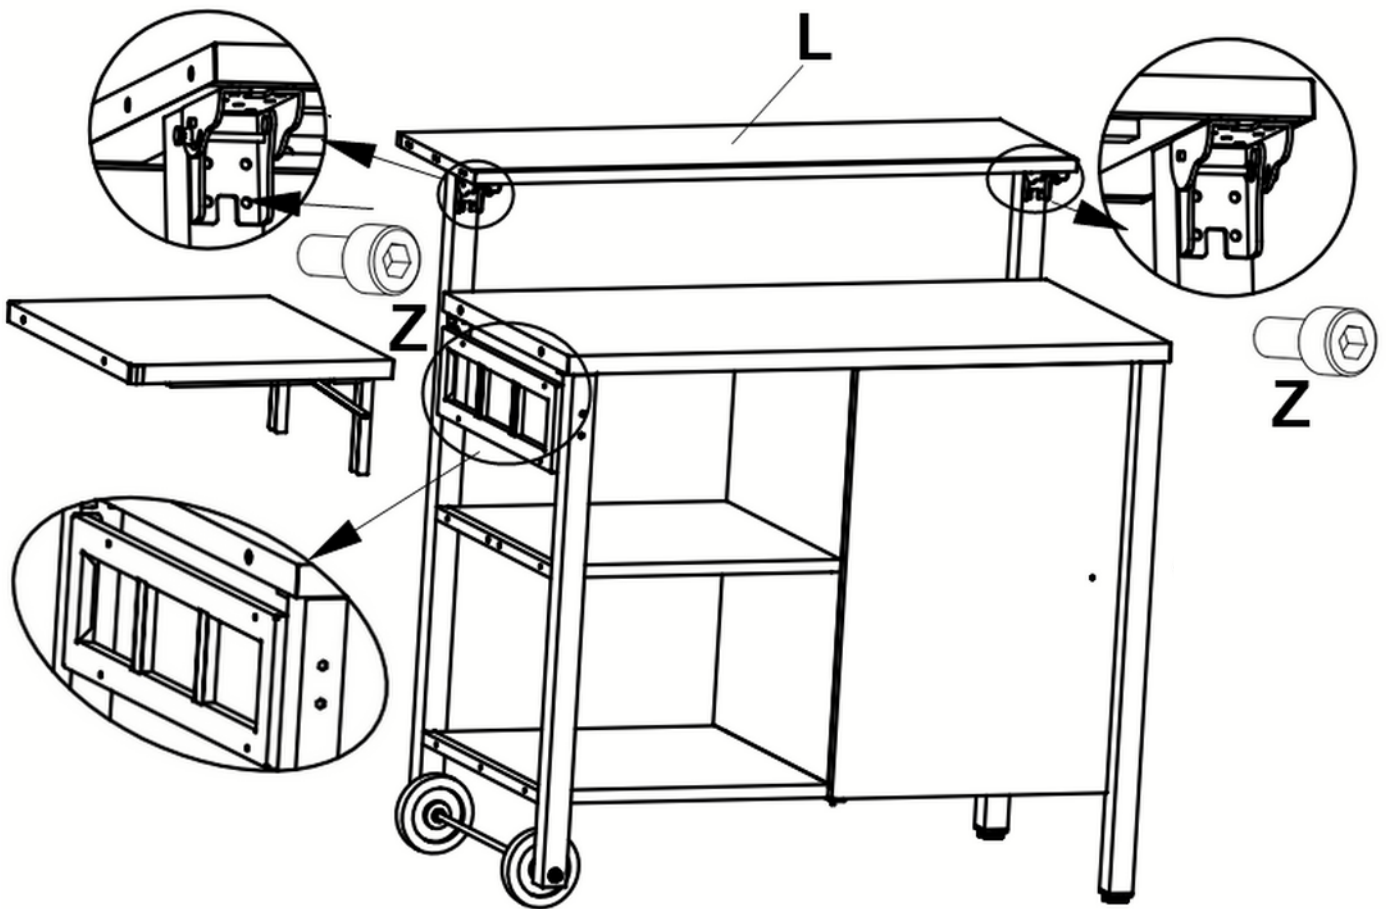

L x1 **M** x2 **Z** x16

STEP 6


Attach side desktop (Part J) to bracket (Part K) with bolts (Part Z)

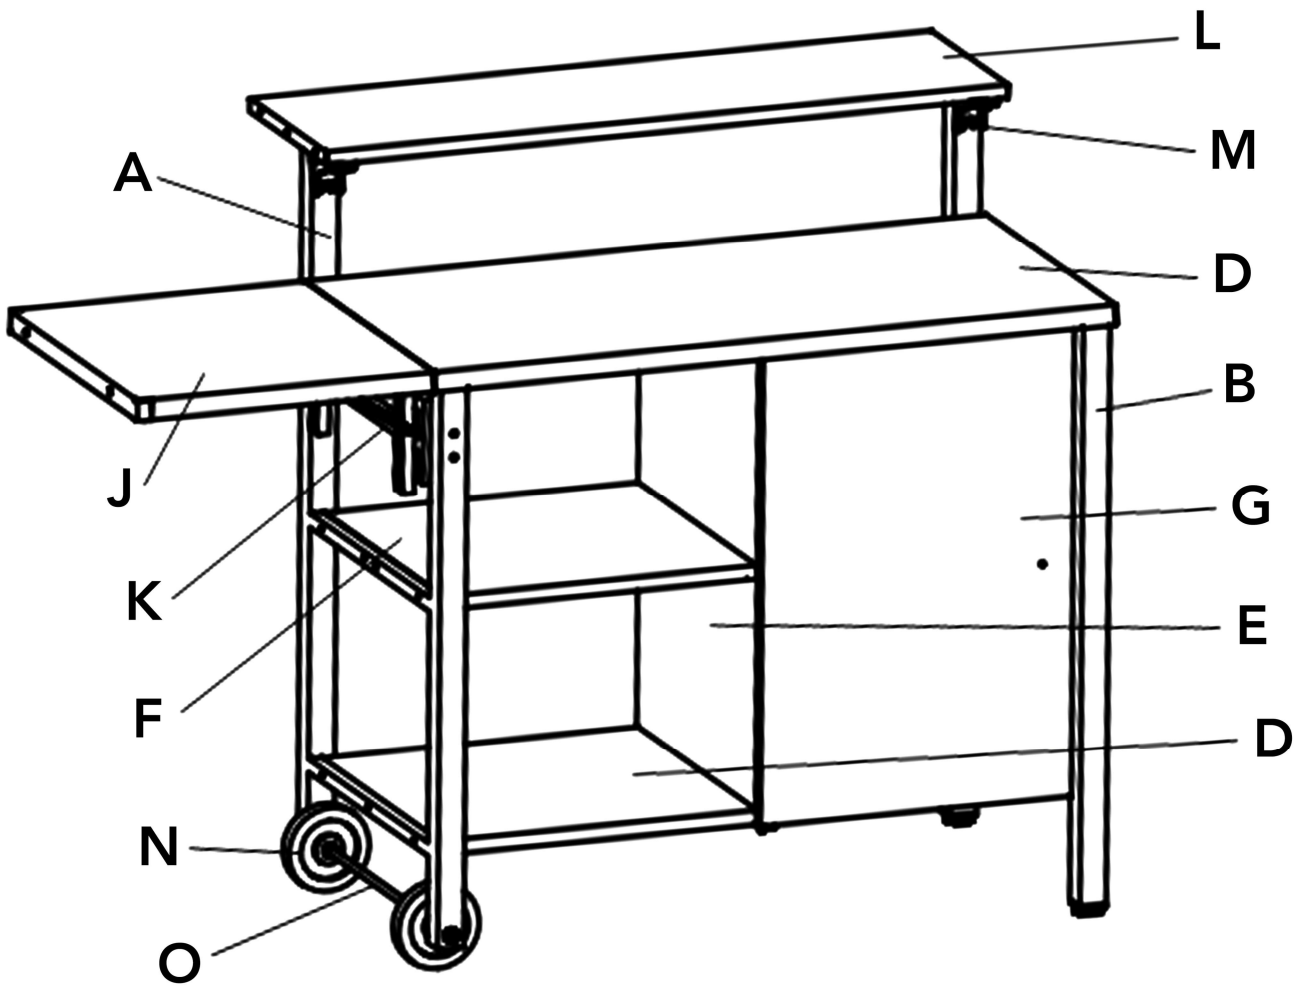

J x1 **Z** x4

STEP 7


Use bolts (Parts AA) to secure the handle (Part S) to the upper side of leg B.
Attach gas tank hook (Part T) to legs (Part A/B) upper side crosspiece with bolt (Part Z).
Fasten the tissue holder (Part Q) to the underside of the main desktop C (Hooks facing inward) with bolt (Part Z).
Put the napkin spindle (Part R) to the curved hooks (Part Q).

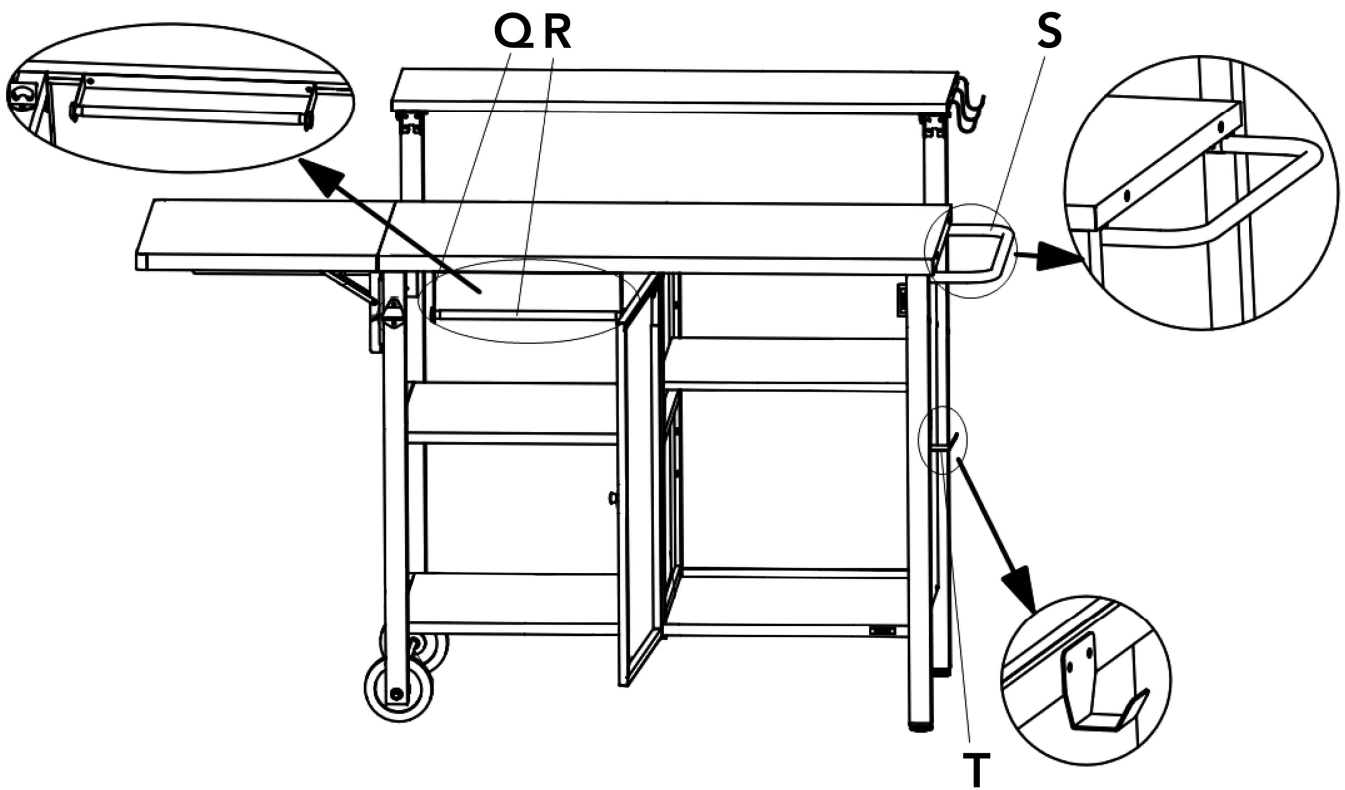

S x1	T x1	Q x1
R x1	AA x2	Z x4

STEP 8

Attach the bottle opener (Part P) to the front side of the leg (part A) with bolts (Part Z).
Install the Door Handle (Part V) to the door (Part G) with bolt (Part Z).
Attach the magnet support (Part X) to the inside upper side of the leg (Part B) with bolts (Part Z).

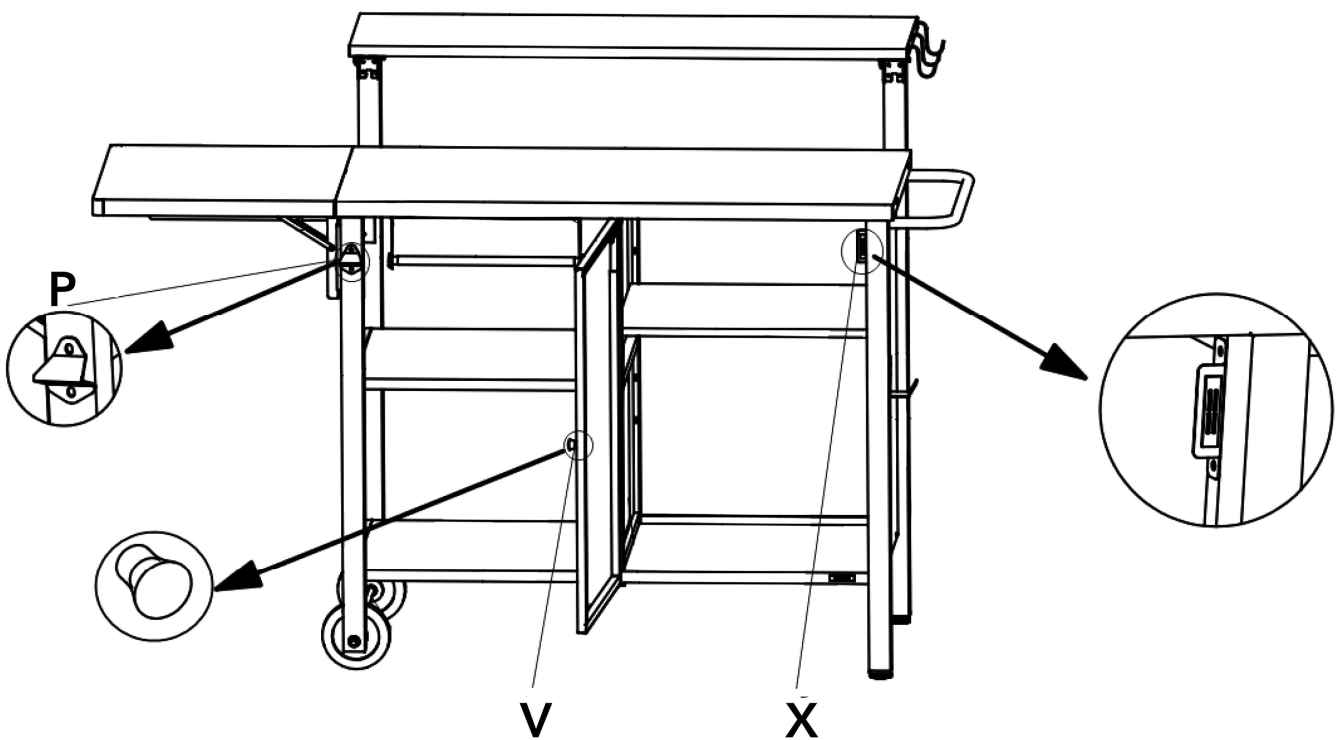


X x1 **V** x1 **P** x1 **Z** x5

HOW TO FLIP THE TABLE?

Flip Side Table: Press both sides of the part K switch at the same time to automatically flip it downward.

Flip Upper Desktop: Simultaneously press the outer buttons of the hinge inward and flip the desktop, and then you can use it with hooks(Part U)

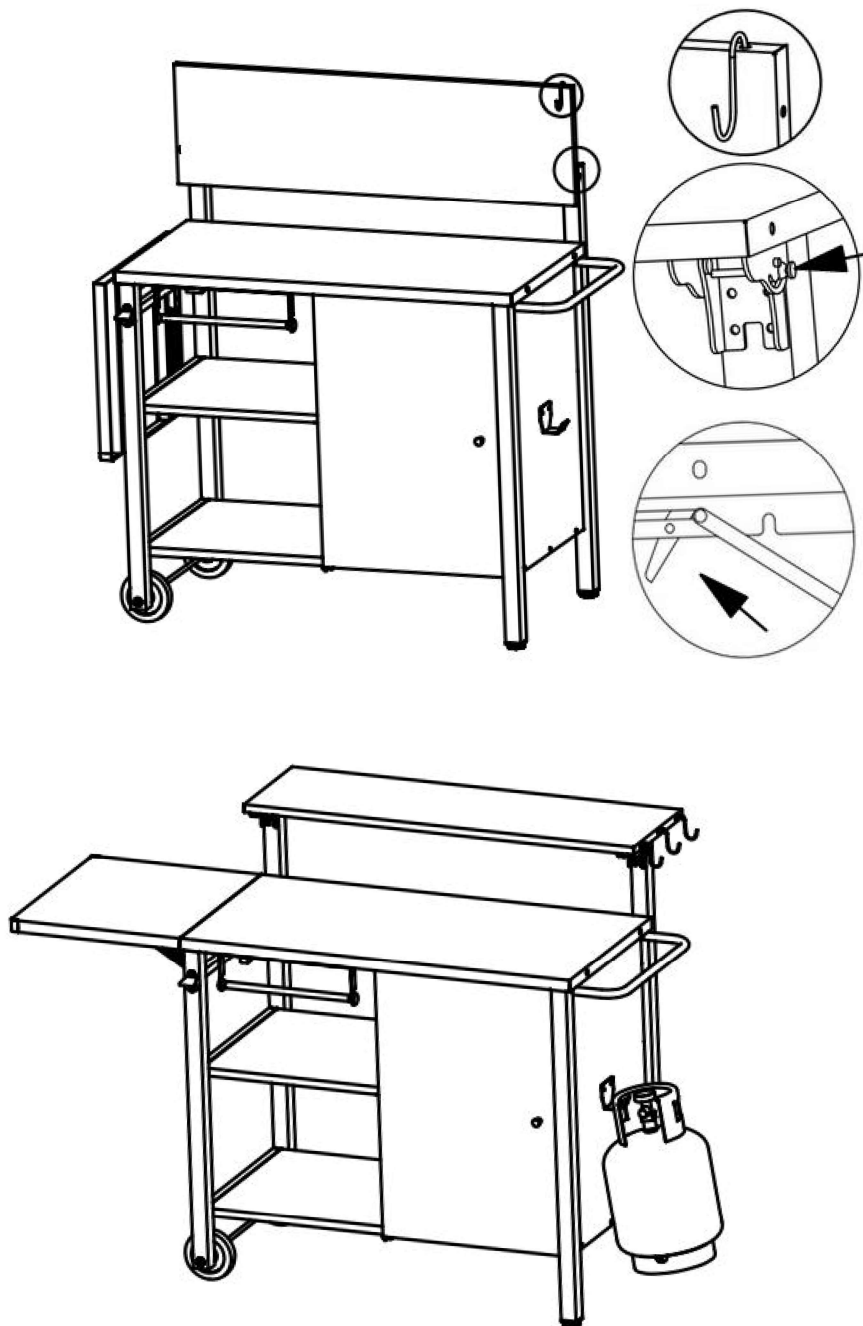

CARE AND MAINTENANCE

Follow the instructions for the product's material to ensure it stays in the best situation as long as possible. The information below is a general guideline. Don't hesitate to get in touch with us to learn more.

- Only rinse it thoroughly with clean water to wash away dirt and grime. Do not use abrasive cleaners on your furniture as they can erode the surface and leave scratches.
- For stubborn grime and stains, use a soft sponge and mild soapy water. Then dry it with a cloth or paper towel.
- Check the stability of the screws, nuts, and nut caps before each use. Then, tighten them up after one to two months' use whenever required.
- Avoid improper use, and be careful not to scratch or damage the surface with sharp objects.
- Product can tip over. Do not let children climb on or play with the product.
- Do not overload the product. Load the product evenly and place the heaviest items on the bottom shelf.

WARRANTY

Thank you for purchasing our outdoor furniture, We are pleased to offer a one year warranty on the quality of the product. This warranty covers any manufacturing defects or malfunctions that may occur within the first year of ownership.

LIMITED WARRANTY

The warranty does not cover commercial use, damages resultina from misuse, negligence, accidents, normal wear and tear, unauthorized repairs or modifications, improper assembly, or failure to adhere to the care and maintenance guidelines provided.

CALIFORNIA PROPOSITION 65

⚠️ WARNING: This product can expose you to Carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to **WWW.P65Warnings.ca.gov**