


MOUNT-IT!

Digital Control Panel For Electric Height Adjustable Desk

Installation Instruction & User Guide

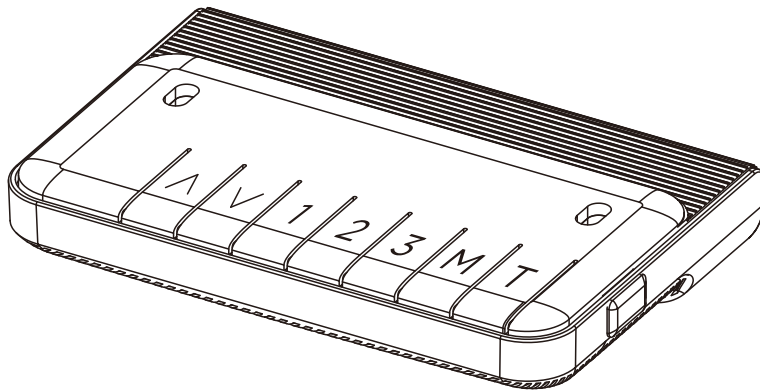


Model: MI-8030W
MI-8030B

VISIT US AT MOUNT-IT.COM FOR PRODUCT REGISTRATION AND WARRANTY INFORMATION.
CONTACT US AT SUPPORT@MOUNT-IT.COM OR 855-925-5668 FOR QUESTIONS OR COMMENTS.

1

Operating Control Panel

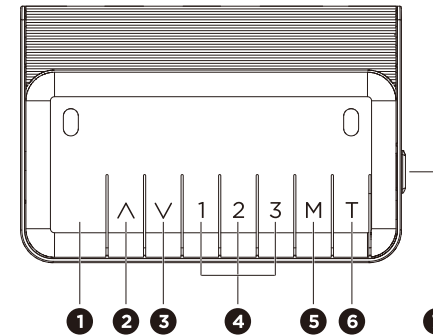

- ❶ Display
- ❷ Upward movement
- ❸ Downward movement
- ❹ Memory 1/2/3
- ❺ Memory/Screen lock (unlock)
- ❻ Timer
- ❼ USB port for charging (optional, according to the actual product received)

Note: Before first time use, please reset the system before operating.

Reset the System:

- To reset the system, press and hold the “Up” and “Down” buttons simultaneously. The unit will emit one beep, the display will show “Err” and the desk will automatically move down to the lowest position. Do not release the “Up” and “Down” buttons until the unit emits another beep. The desk will raise slightly, and the display will show the current height, then the reset is complete.

Height Adjustment: Press and hold the “UP”/“DOWN” button to raise/lower the desk to your desired height. Release the button at any time to stop at a specific height.

Timer:

- Press the “T” button to initiate the timer. Each press of the “T” button will start a 30-minute timer, up to a maximum of 2 hours (4 button presses.) After pressing the timer button, the screen will flash and then return to displaying the current height of the desk. A light on the top right of the panel will remain on to indicate that the timer is running.
- When the timer is up the unit will beep 5 times.
- To cancel the timer, press the “T” button multiple times until the maximum timer is exceeded and the screen returns to displaying the current height of the desk and the indicator light in the top right corner is off.

Memory Setting:

- To save a height setting, press the “M” button and the display will flash “5-”, then press the buttons 1, 2, or 3 to save that position to the corresponding button.
- To move the desk to the saved height setting, press the button 1, 2, or 3 and the desk will begin moving to the saved position. The display will show the height of the desk as it moves to the saved position and you may press any button to stop the movement of the desk.

Screen Locking Function:

- The control panel includes a locking function which must be activated to enable use of the lock. To activate/deactivate the locking function follow the Programming Guide in part 3 of this manual.
- To lock the control panel, press the “M” button for 3 seconds. Once locked the screen will only display a dashed bar “---” and no other button on the panel will function.
- To unlock the control panel, press the “M” button for 3 seconds. The screen will now display the height of the desk. If no buttons are pressed within 60 seconds the control panel will automatically lock again.

Change Measurement Unit – CM/IN: Press the “T” button for 3 seconds and the measurement unit will switch between Centimeters and Inches.

Power-Saving Mode: The control panel will automatically enter power saving mode after 10 minutes of no activity, and the screen will become dark. Press any button to activate the control panel.

2

Troubleshooting Guide



This troubleshooting guide is to be used to identify and resolve minor problems identified by the error code displayed on the screen.


If the following guide cannot be used to resolve the error, please contact Mount-It! for further assistance.

Error No.	Description	Error No.	Description
E01/E07	Electrical fault. Disconnect the power from the wall, plug it back in, then try again.	E12/E22	Electrical Fault. Disconnect the power from the wall, plug it back in, then try again.If this error code persists the control box may be faulty.
H0T	Overheating. Stop operation and allow the desk to remain idle for 20 minutes before resuming operation.	E13/E23	Motor wires may be damaged. Check all connections for damage. E14 corresponds to the M1 connection. E23 corresponds to the M2 connection.
E02	Alignment/Movement Error. Perform a system reset as described in Part 1 of this manual.	E14/E24	Hall wires may be damaged. Check all connections for damage. E14 corresponds to the M1 connection. E23 corresponds to the M2 connection.
E04	Control Panel not connected properly. Check all connections. Unplug the power cable from the wall, then plug it back in.	E15/E25	Short Circuit. Motors or Columns are damaged. Contact Mount-It! for further assistance. E15 corresponds to the M1 connection. E25 corresponds to the M2 connection.
E05	Collision avoidance system activated. Remove all obstructions before resuming operation.	E16/E26	Motor Unable to Move. Overload protection activated. The desk is over the weight limit. Remove objects from the desk surface then perform a system reset.
E06	Electrical Fault. Disconnect the power from the wall, plug it back in, then try again. If this error code persists the control box may be faulty.	E17/E27	Motor fault/motors not synchronized. Check all connections. E17 corresponds to the M1 connection. E27 corresponds to the M2 connection.
E08	•Collision avoidance system activated. Remove all obstructions before resuming operation. •Control Box is not installed properly. Ensure the control box is properly attached to the frame of the desk as shown in the installation manual, and ensure the desk is on an even surface. •The power cables may have pulled on the control box. Ensure the cables have enough slack in them during all height positions.	E18/E28	Overload protection activated. The desk is over the weight limit. Remove objects from the desk surface then perform a system reset.
		E42	Memory Error. Unplug the power cable from the wall, then plug it back in. If the error persists, perform a system reset or contact Mount-It! for further assistance.
E11/E21	The motor cords were disconnected. Check the cable connections. E11 corresponds to the M1 connection. E21 corresponds to the M2 connection.	E43	Collision avoidance system fault. The control box is not operating properly. Contact Mount-It! for further assistance.

3

Custom Programming Guide

Button Function:

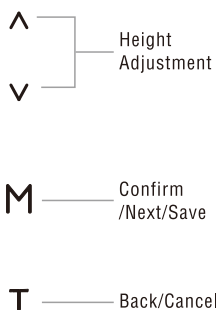

	S-1 Adjust Minimum Height Limit (62~118cm/24.4"~46.4")	S-2 Adjust Maximum Height Limit (72~128cm/28.3"~50.4")	S-3 Adjust Anti-Collision Sensitivity During Upward Movement (Level 0~Level 8)	S-4 Adjust Anti-Collision Sensitivity During Downward Movement (Level 0~Level 8)	S-5 Adjust Tilt Protection Sensitivity (Gyro Sensor) (Level 0~Level 8)	S-6 Change the Desktop Thickness (0~5cm/0~1.9")	S-7 Activate/Deactivate the Screen Lock Function (0:OFF/1:ON)
Step 1:Selecting	Press "M" and "T" buttons simultaneously for 5 seconds until the unit emits one beep and the display flashes "S-1". Press "Up"/"Down" button to switch through from "S-1" to "S-7" and stop at the setting you want to adjust. If no actions are taken within 10 seconds, the control panel will automatically exit the setup screen.						
Step 2:Programming	When the display is flashing "S-1", press the "M" button once. The current Minimum Height will be displayed (default setting is 62.0 cm.) Press the "Up"/"Down" buttons to set the minimum height.	When the display is flashing "S-2", press the "M" button once. The current Maximum Height will be displayed (default setting is 128 cm.) <small>(Note: Due to the size range of the display screen, if the Measurement Unit is set to Metric measurements past 100mm will not display micrometers. Multiple presses of the "Up"/"Down" buttons may be required before the displayed number changes.)</small>	When the display is flashing "S-3", press the "M" button once. The current Anti-Collision Sensitivity during upward movement will be displayed (default setting is 4 .) Press the "Up"/"Down" buttons to set the sensitivity level.	When the display is flashing "S-4", press the "M" button once. The current Anti-Collision Sensitivity during downward movement will be displayed (default setting is 4 .) Press the "Up"/"Down" buttons to set the sensitivity level.	When the display is flashing "S-5", press the "M" button once. The current Tilt Protection Sensitivity will be displayed (default setting is 4 .) Press the "Up"/"Down" buttons to set the sensitivity level.	When the display is flashing "S-6", press the "M" button once. The current desktop thickness will be displayed (default setting is 0.0 .) Press the "Up"/"Down" buttons to set the desktop thickness.	When the display is flashing "S-7", press the "M" button once. The current Screen Lock Setting will be displayed (default setting 1 is ON) Press the "Up"/"Down" buttons to change between 1=On or 0=Off.
Step 3:Saving	Press "M" to save. "L-S"- successful "L-F"- failed	Press "M" to save. "H-S"- successful "H-F"- failed	Press "M" to save. "S-S"- successful "S-F"- failed	Press "M" to save. "S-S"- successful "S-F"- failed	Press "M" to save. "S-S"- successful "S-F"- failed	Press "M" to save. "T-S"- successful "T-F"- failed	Press "M" to save. "A-S"- successful "A-F"- failed

Note:

- To leave the settings menu press the "T" button or wait for 10 seconds until the display automatically returns to displaying the height of the desk.
- The Min/Max height settings in "S-1" and "S-2" do NOT include the thickness of the desktop.