

LP1515

Rugged Waterproof LED Lantern

4 AAA
Batteries



Features

Compact-durable rubber design

360° LED technology

Collapsible hooks for hanging

Single button operation




Magnetic base

Floats in water

IPX7 waterproof rating

Batteries included (4 AAA)

ANSI/PLATO FL1 STANDARD

			
MODES	LUMENS	RUN TIME	BEAM DISTANCE
Lantern Modes			
High	340 lm	1h 45m	18m
Medium	130 lm	2h	--
Low	25 lm	21h	--
Flashlight Modes			
High	145 lm	5h 30m	36m
Low	11 lm	55h	--

Operation Instructions

Lantern On/Off & Cycle Modes: Press and release the button on the front of the light to turn the lantern on and off. Press the button repeatedly to cycle through lantern modes (Low/Medium/High).



Flashlight On/Off & Cycle Modes: Press and hold the button on the front of the lantern for 2 seconds to activate flashlight modes. Press button repeatedly to cycle through flashlight modes (High/Low).



Battery Replacement

The LP1515 uses 4 AAA batteries.

To replace the batteries, turn the base of the lantern counterclockwise to remove it. Tip the lantern downward to slide the batteries out of the battery tubes. Insert new batteries according to the (+/-) symbols outside of the battery tubes. These symbols indicate which side of the battery should be facing up. For best results, we recommend using brand new alkaline batteries that are the same voltage and brand.



Re-attach the base of the lantern by aligning the base to the lantern, pressing down lightly, and turning clockwise until tight.

If you know it will be a while between uses, we suggest removing the batteries from the lantern and storing it in a dry, protected place.

Product Warranty

The LP1515 has a Limited 90-Day Warranty Against Manufacturer's Defects from time of purchase.

For warranty claims please contact us by calling 801-553-8886 or sending an email to info@simpleproducts.com