

Riddle MOO This!™

IT IS
COLD

MADE
OF ICE


A SILLY RIDDLE
WORD GAME

ICICLE!

FORMED
BY DRIPPING
WATER...

300
WORD
CLUES!

MOO!

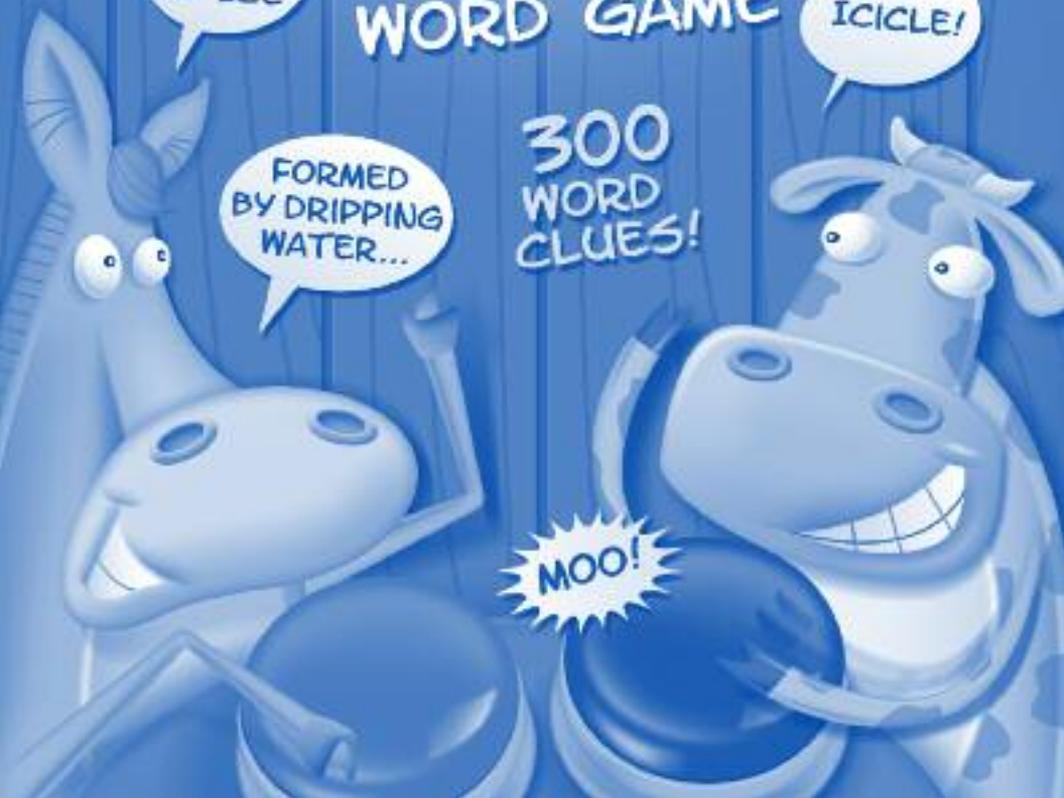

Get ready for a fast and funny riddle game! Be the first player to decipher the clues, buzz in, and solve the riddle. Ready, set, moo!

Contents

4 Animal sound buzzers

150 Double-sided cards

How to Play

1. Start off by choosing a buzzer.
2. Each player presses a buzzer, one at a time, so all players know the buzzer sounds.
3. Place the box of cards in the middle of the play area for all players to reach.
4. Choose a player to read first or have an adult read the clues aloud. Draw a card and read to the other players. All players, except the reader, can buzz in.
5. The first player to buzz in and answer correctly keeps the card. If the first player is incorrect, other players buzz in again for a chance to answer.
6. If no one answers correctly, the card goes to the back of the box.
7. If a player wins a card with a **Barn Teaser**, he or she can earn another card by changing one clue and making a riddle with a new answer. If the new riddle is correct, the player takes a card from the box as a barnyard bonus.
8. Play continues to the right. The next player becomes the reader and all other players buzz in.
9. The first player to collect 10 cards wins.

NOTE: You can always designate one player to be the reader for the whole game.

Battery Information

Installing or Replacing Batteries

WARNING! To avoid battery leakage, please follow these instructions carefully. Failure to follow these instructions can result in battery acid leakage that may cause burns, personal injury, and property damage.

Requires: 8 AAA batteries and a Phillips screwdriver

- Batteries should be installed or replaced by an adult.
- Riddle Moo This™ requires (2) two AAA batteries for each buzzer.
- The battery compartment is located on the bottom of the unit.
- To install battery, first undo the screw with a Phillips screwdriver and remove the battery-compartment door. Install batteries as indicated inside the compartment.
- Replace compartment door and secure with screw.

Battery Care and Maintenance Tips

- Use (2) two AAA batteries.
- Be sure to insert batteries correctly (with adult supervision) and always follow the toy and battery manufacturer's instructions.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries.
- Insert batteries with the correct polarity. Positive (+) and negative (-) ends must be inserted in the correct directions as indicated inside the battery compartment.
- Do not recharge non-rechargeable batteries.
- Only charge rechargeable batteries under adult supervision.
- Remove rechargeable batteries from the toy before charging.
- Only use batteries of the same or equivalent type.

- Do not short-circuit the supply terminals.
- Always remove weak or dead batteries from the product.
- Remove batteries if product will be stored for an extended period of time.
- Store at room temperature.
- To clean, wipe the surface of the unit with a dry cloth.
- Please retain these instructions for future reference.

Information to User

NOTE: This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the party for compliance could void the user's authority to operate the equipment.



Your opinion matters! Visit
www.LearningResources.com
to write a product review or to
find a store near you.



© Learning Resources, Inc., Vernon Hills, IL, US
Learning Resources Ltd., Oldmedow Road,
King's Lynn, Norfolk, PE30 4JX, UK

Please retain our address for future reference.
Made in China. LER3772-GUD

Fabriqué en Chine. Informations à conserver.
Made in China. Bitte bewahren Sie unsere
Adresse für spätere
Nachfragen auf.

Hecho en China. Conservar estos datos.