 
 
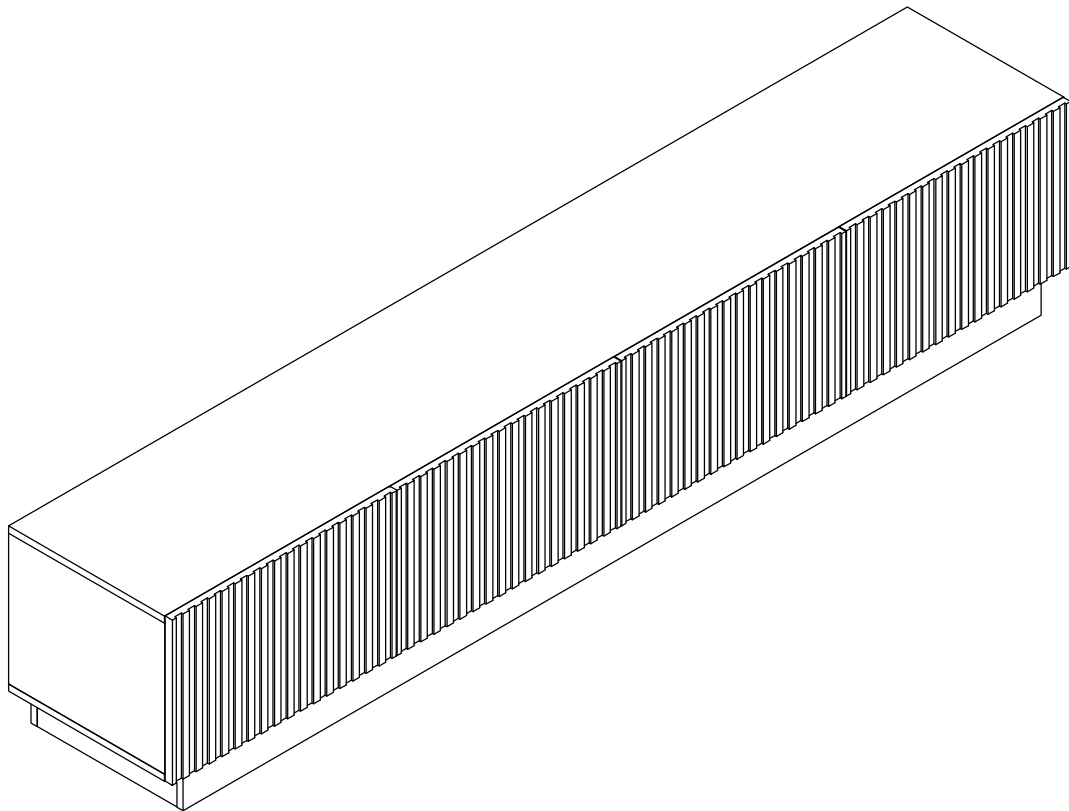 
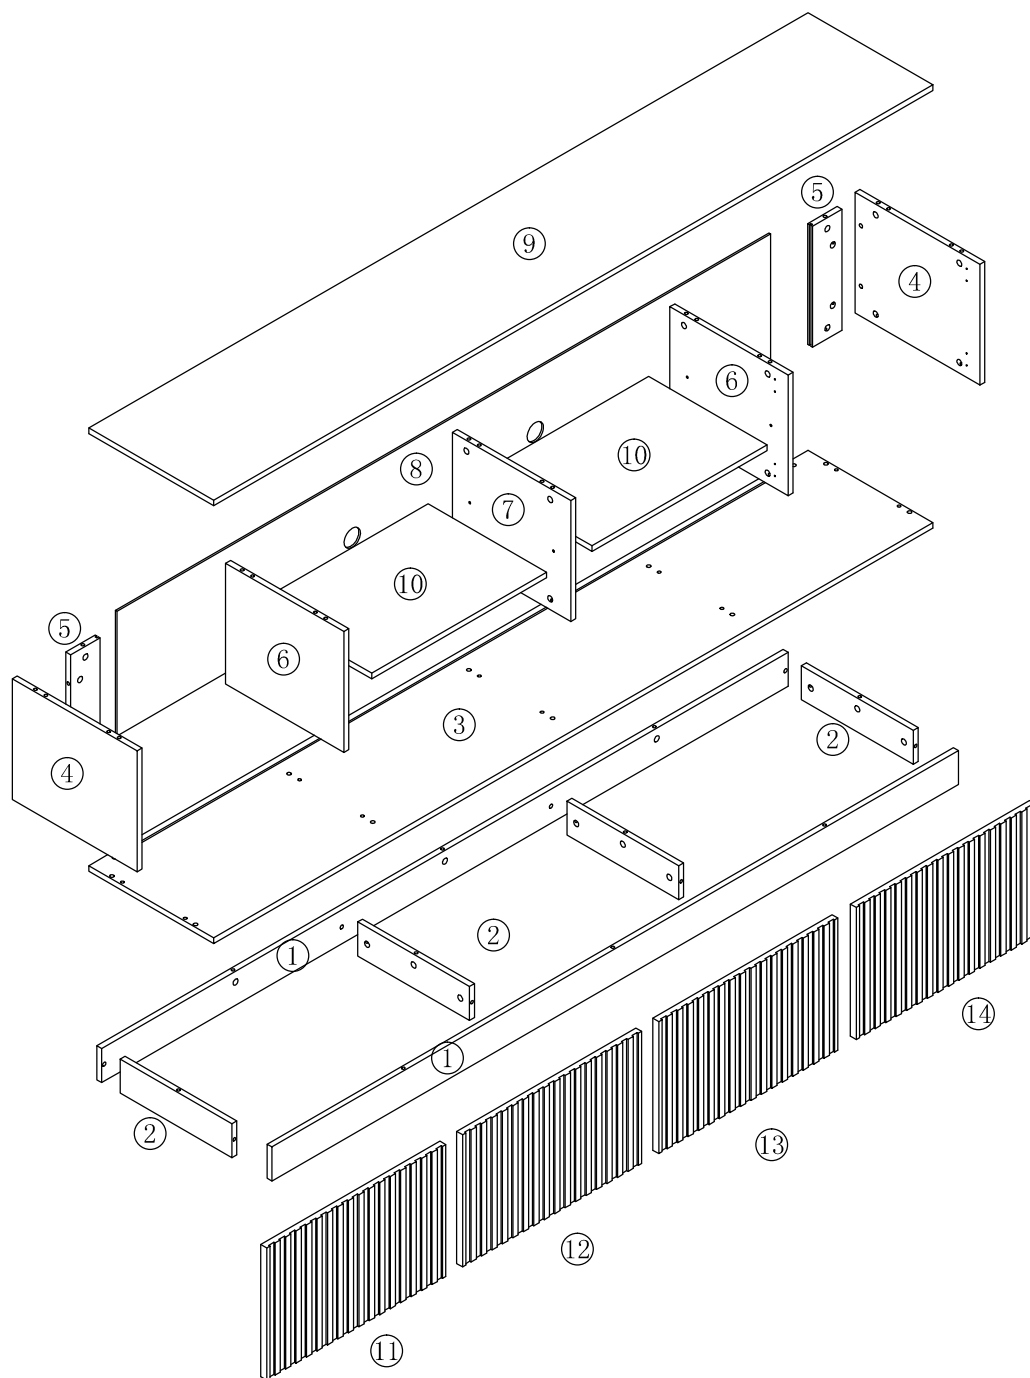 
 


TV stand


Installation Instructions






A 46PCS  ø6*35mm	B 46PCS  ø15*10mm	C 20PCS  ø8*30mm	D 8PCS  M6	E 58PCS  ø3.5*14mm	F 8PCS  ø5*15mm
G 4PCS 	H 4PCS 	I 10PCS 			

 1

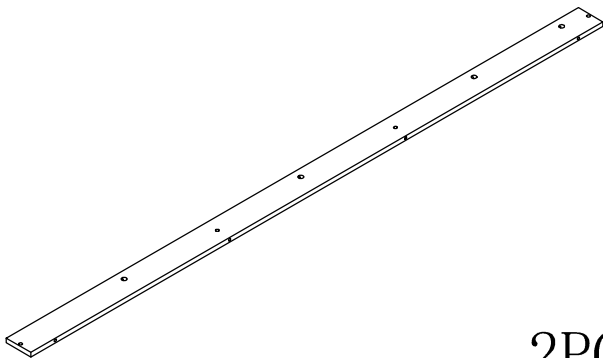


2PCS

 2




4PCS

 3

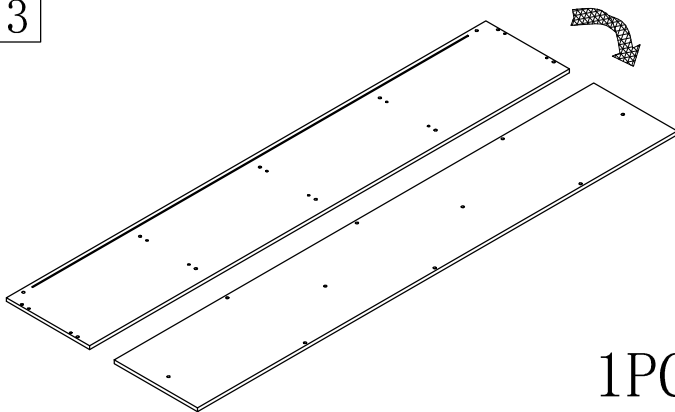


1PC

 4

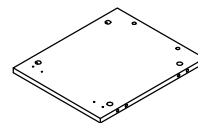


2PCS

 5




2PCS

 6




2PCS

 7

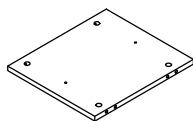


1PC

 8

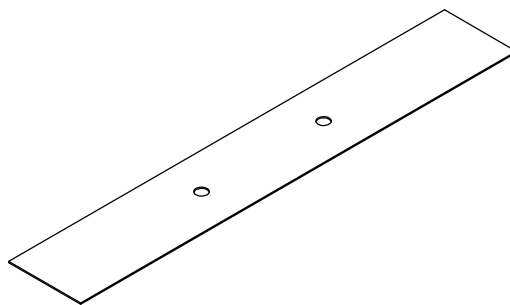


1PC

 9

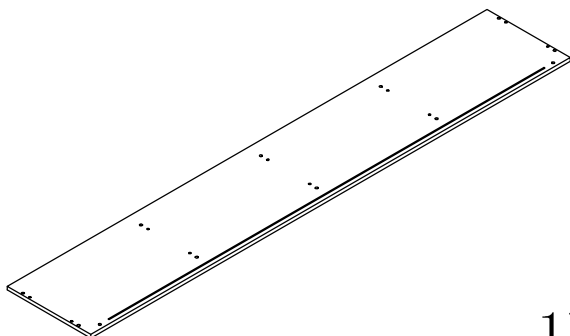


1PC

 10

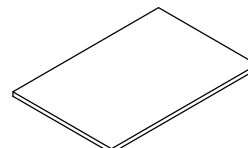


2PCS

 11

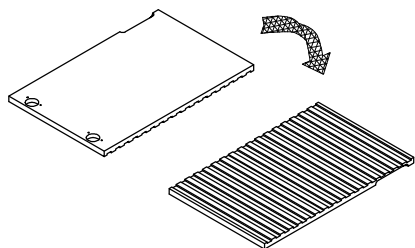

2PCS

 
12

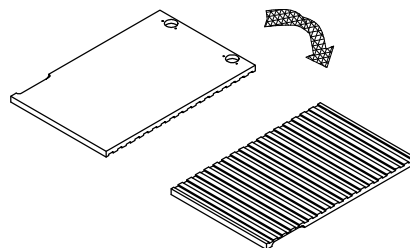

2PCS


"A" Hardware installation example

 I




This part cannot be separated ,
please install in strict
accordance with the assembly
requirements

 
II

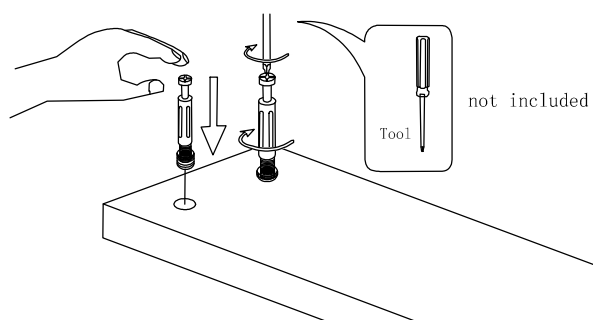

III

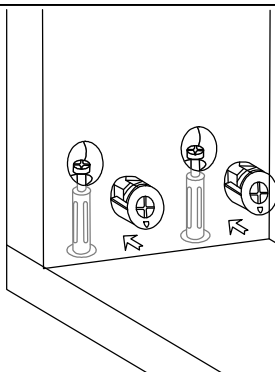 


IV

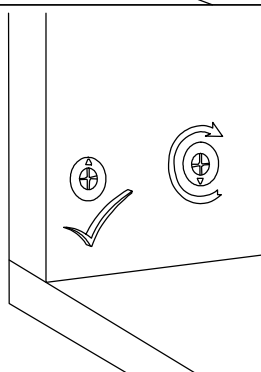 


Step 1

A	46PCS
	
Ø6*35mm	

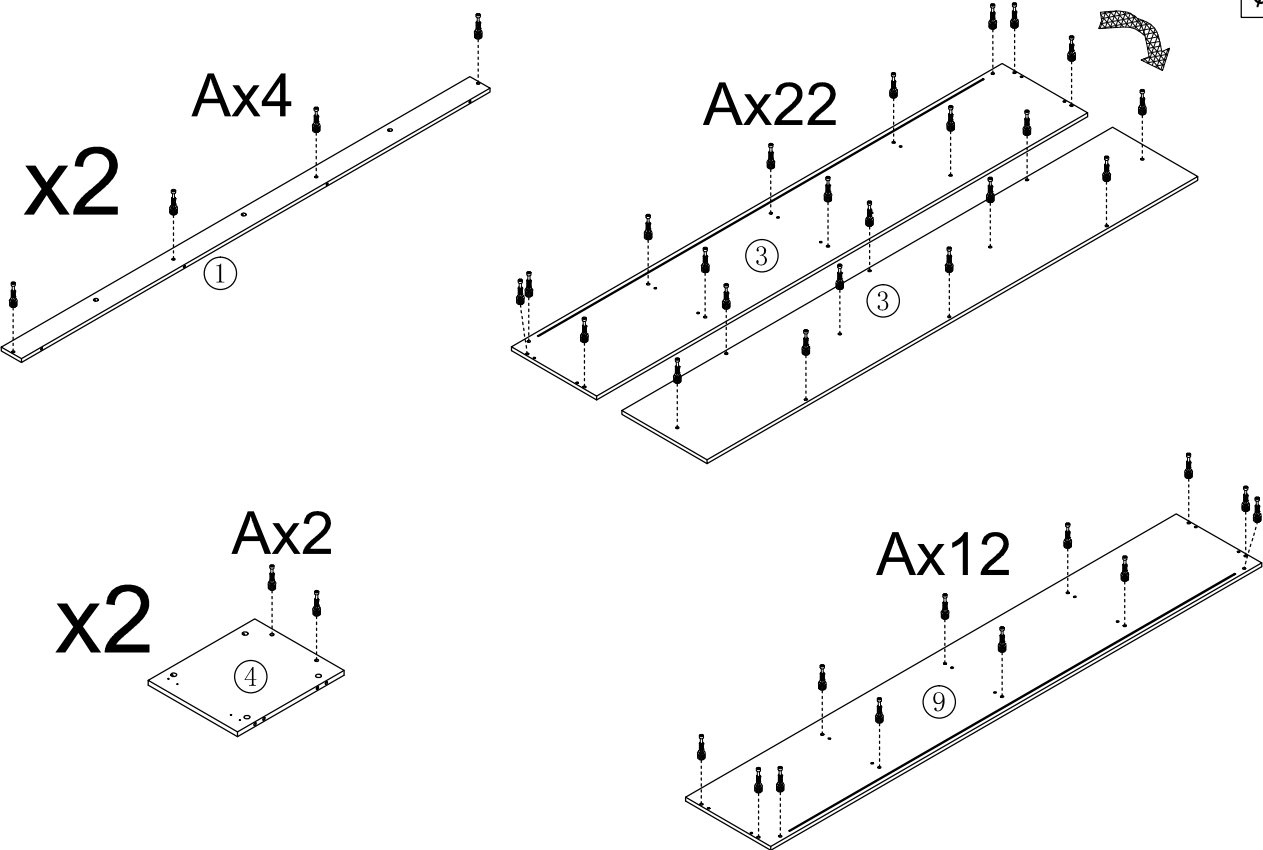 


Step 2

B	8PCS
	
Ø15*10mm	
D	8PCS
	
M6	

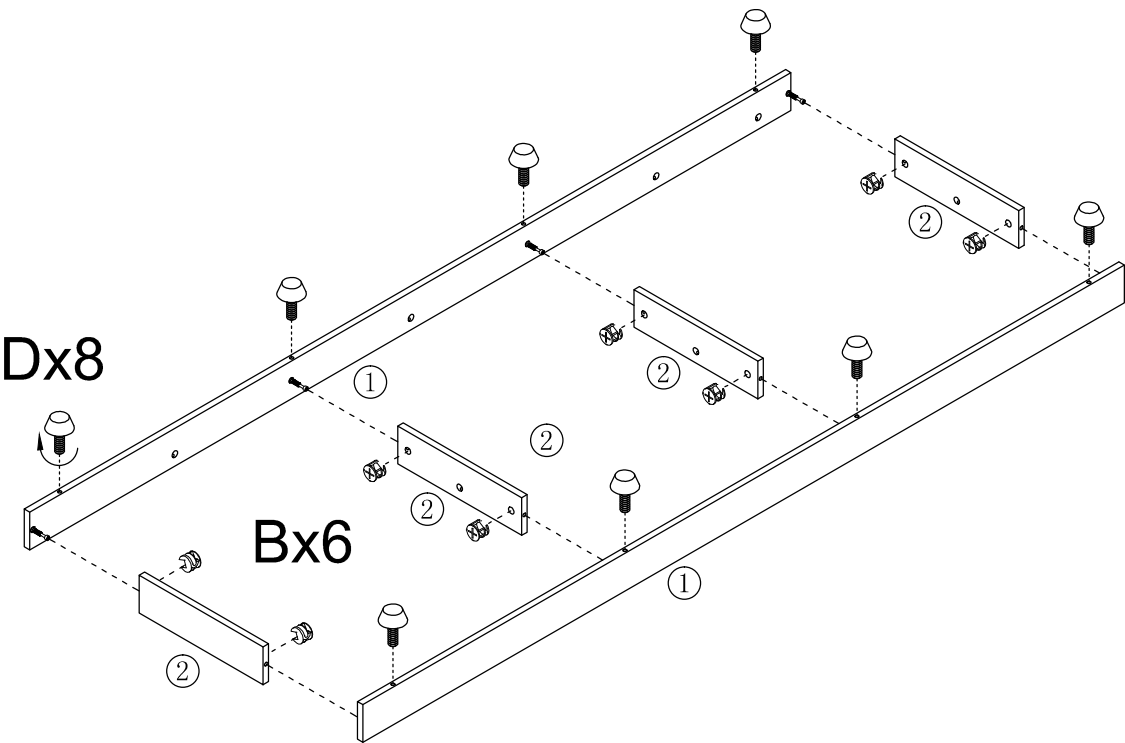 


Step 3

B	10PCS
	
ø15*10mm	

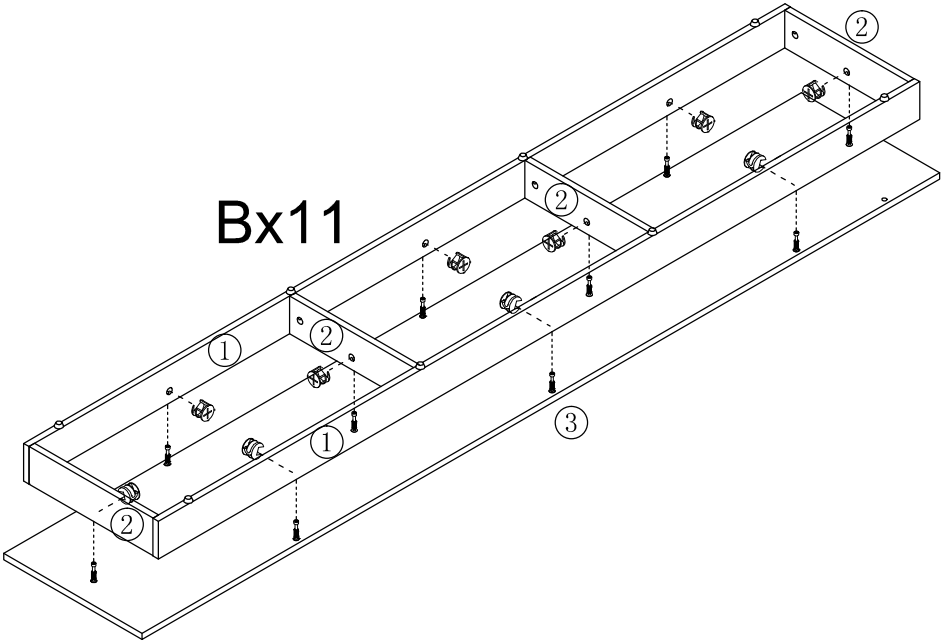 

Step 4


B	10PCS
	
ø15*10mm	
C	4PCS
	
ø8*30mm	

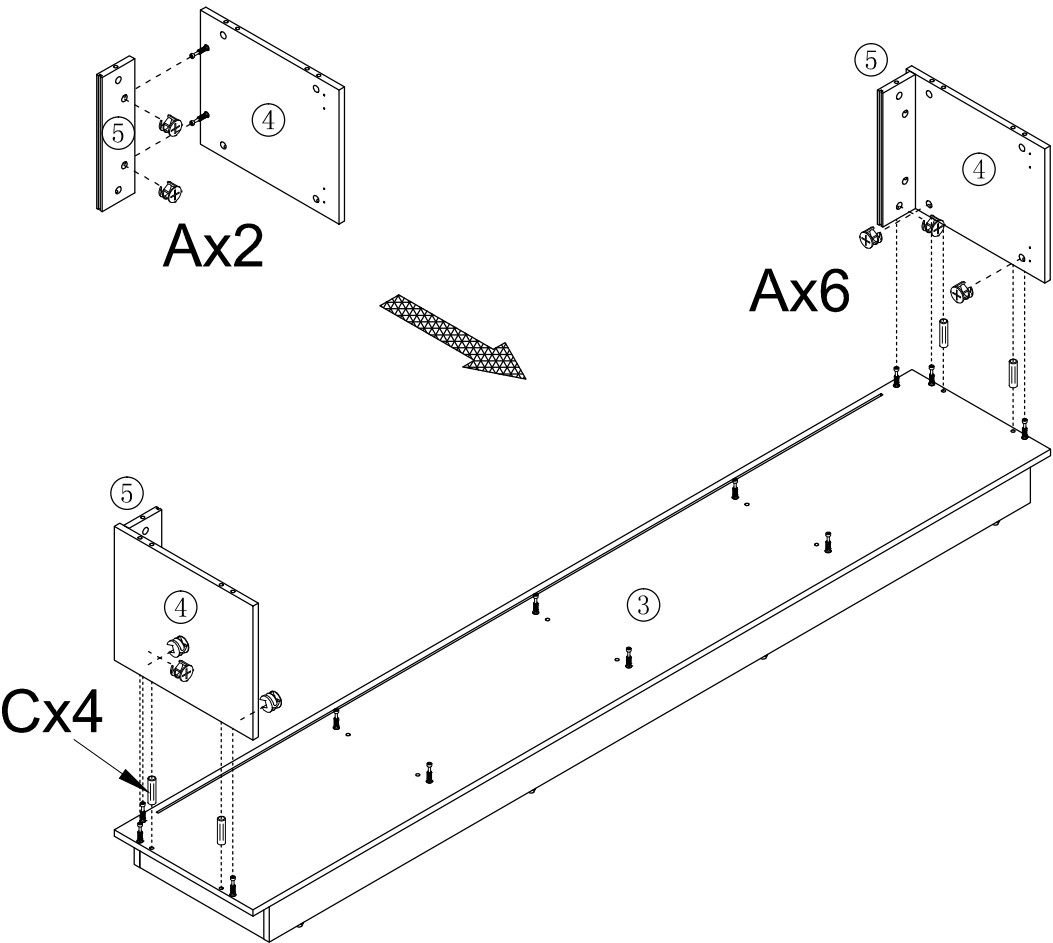 

Step 5

Panel 6 has shelf mounting holes—please note the orientation as shown in the diagram.

 Please refer to Step 8

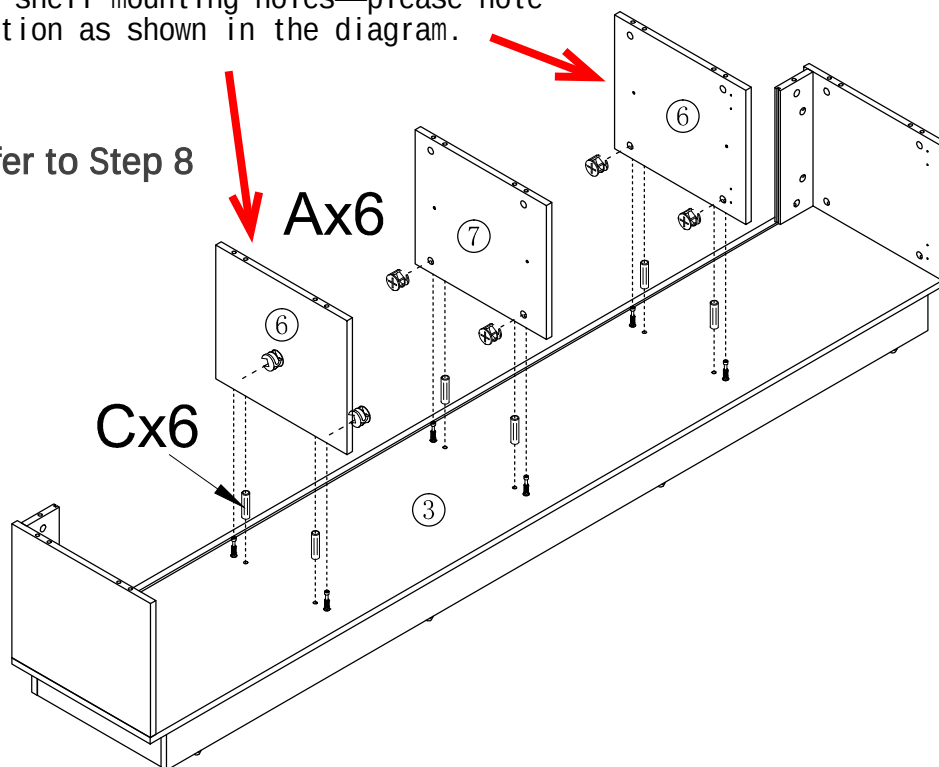

B 6PCS



 
Ø15*10mm

C 6PCS




Ø8*30mm

Step 6

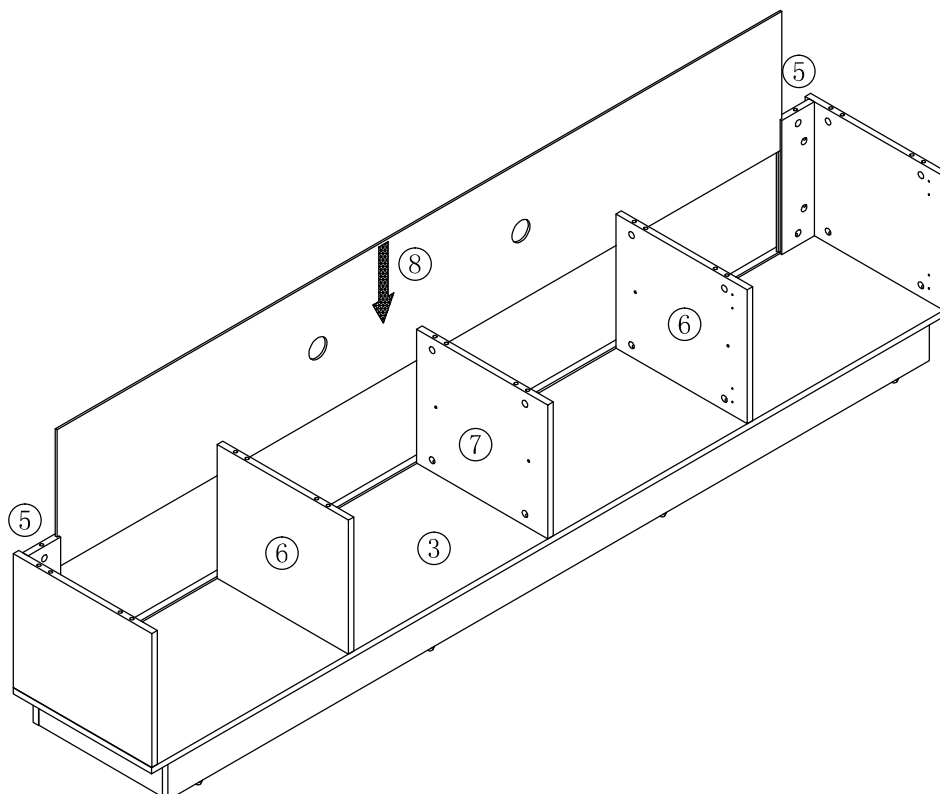


Step 7

B	12PCS
	
$\phi 15 \times 10 \text{mm}$	
C	10PCS
	
$\phi 8 \times 30 \text{mm}$	

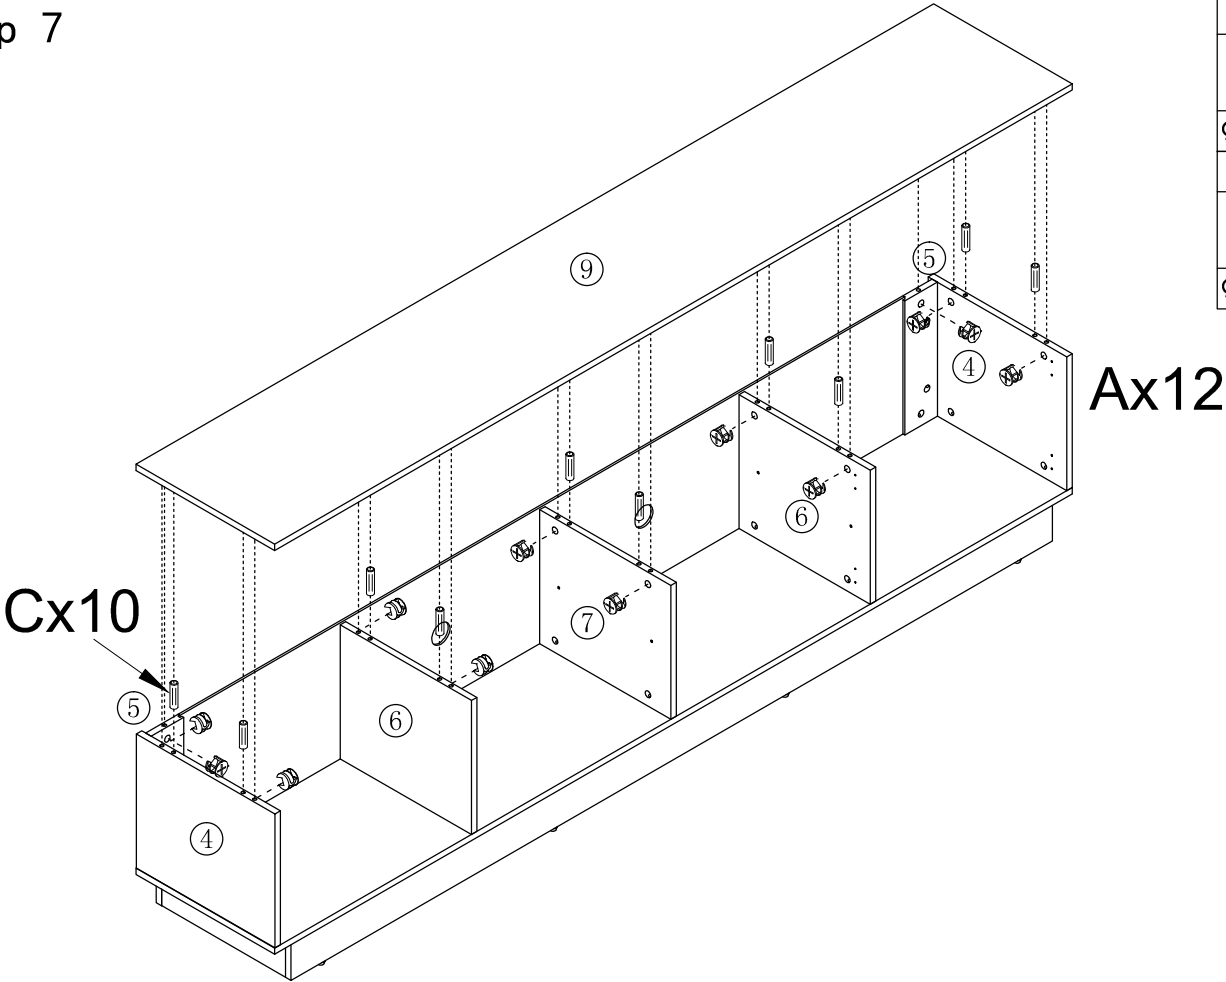 


Step 8





F	8PCS
	
$\phi 5 \times 15 \text{mm}$	

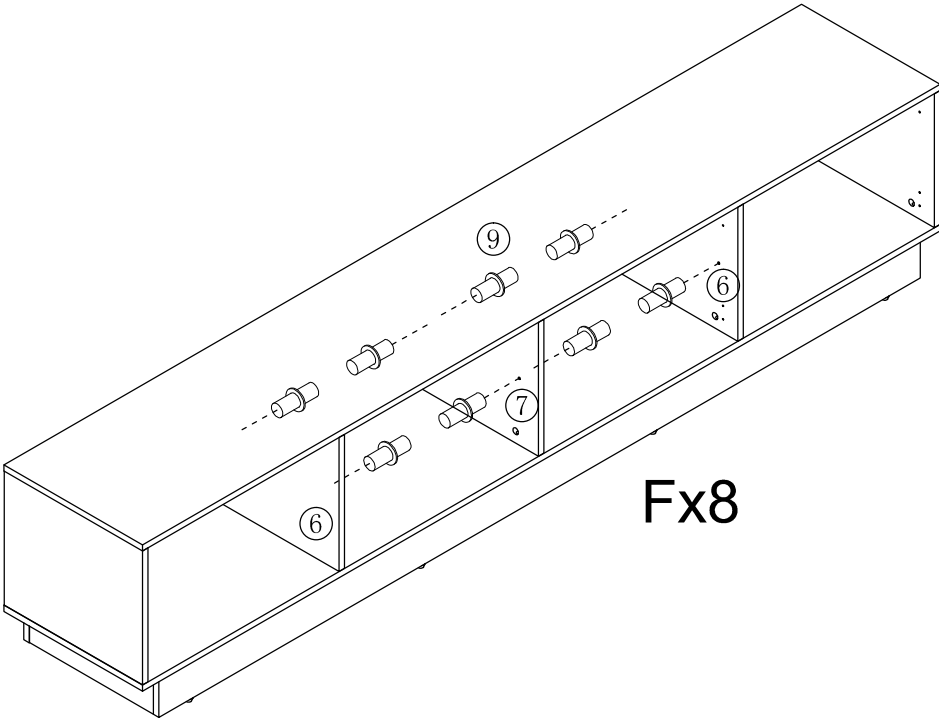 

 Step 9

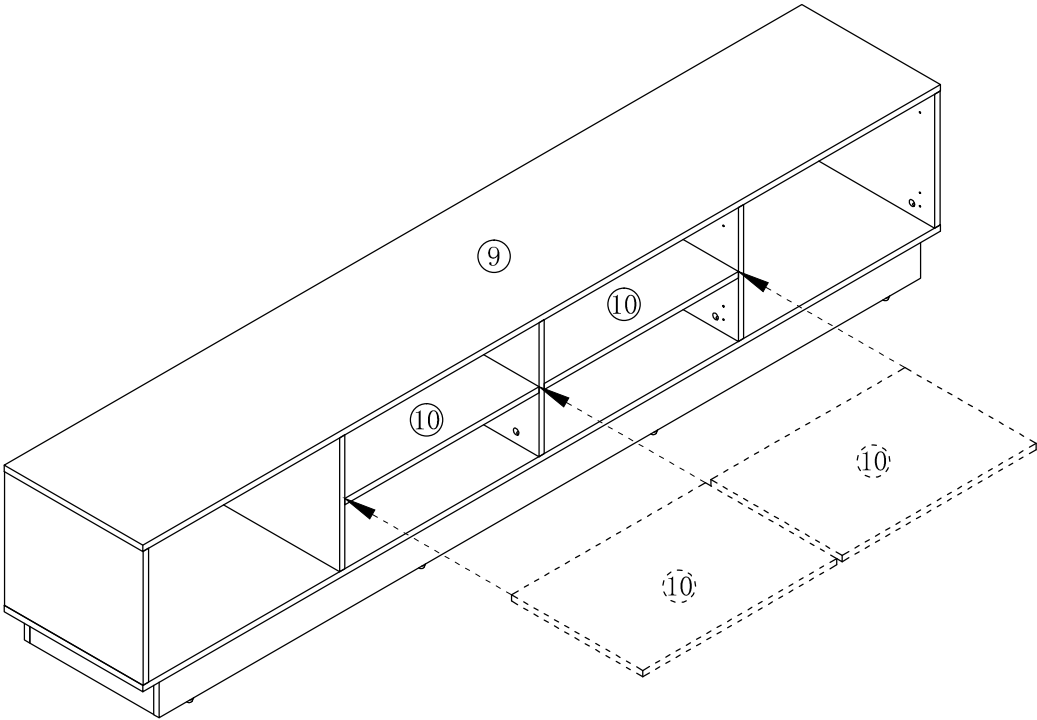

    Step 10

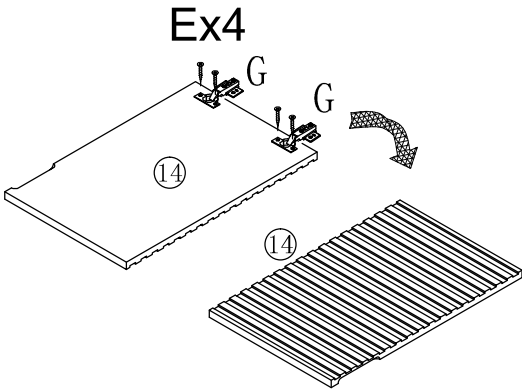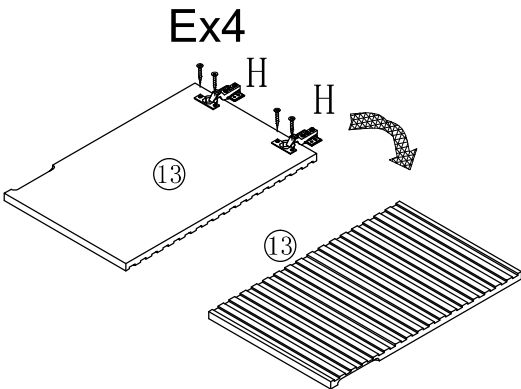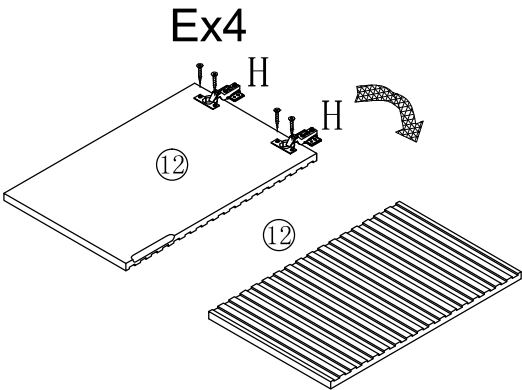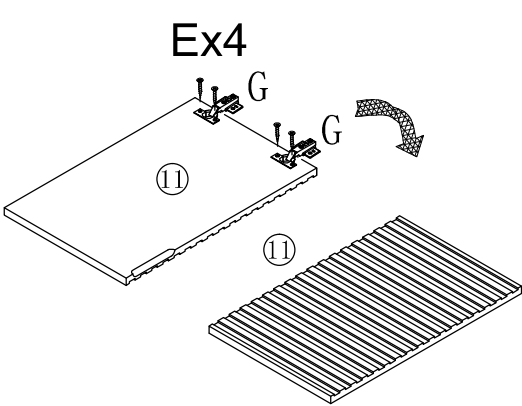


E	16PCS
	
ø3.5*14	
G	4PCS
	
H	4PCS
	

Step 11

Cabinet Door Adjustment Instructions


Height adjustment:

 - Locate the height adjustment screws on the hinge.
- Use the Phillips screwdriver to either tighten or loosen the screws to raise or lower the cabinet door as desired.

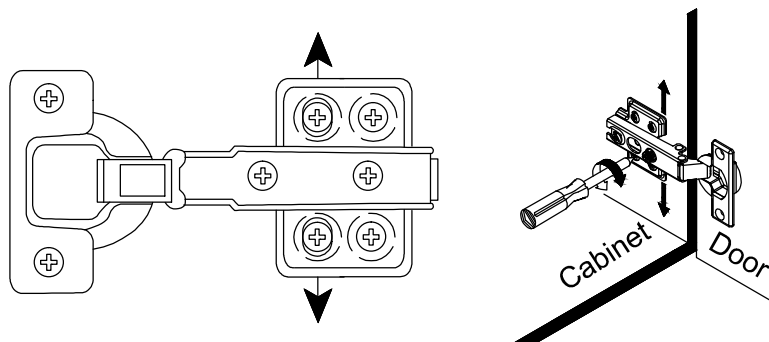


Side-to-side adjustment:

 - If the cabinet door needs to be moved closer to or away from the cabinet frame, locate the side-to-side adjustment screws on the hinge.
- Use the Phillips screwdriver to adjust these screws and gradually move the door in the desired direction.

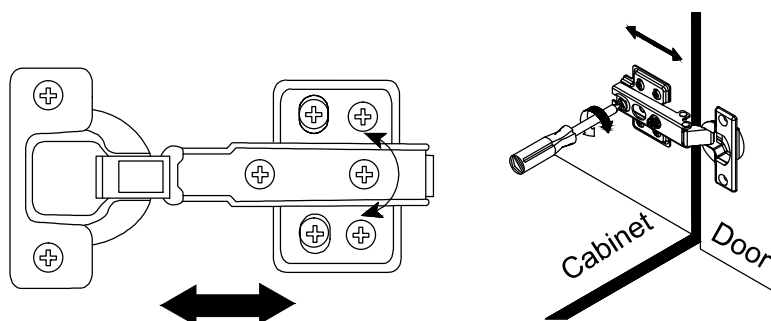


Depth adjustment (if applicable):

 - Check if the cabinet door needs to be brought closer to or further away from the cabinet frame.
- For-depth adjustment, locate the depth adjustment screws on the hinge.
- Use the Phillips screwdriver to turn these screws clockwise or counterclockwise accordingly.

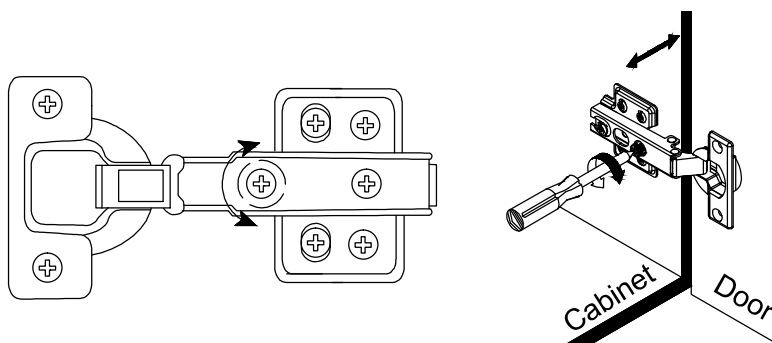


Step 12

E	8PCS
	
Ø3.5*14	

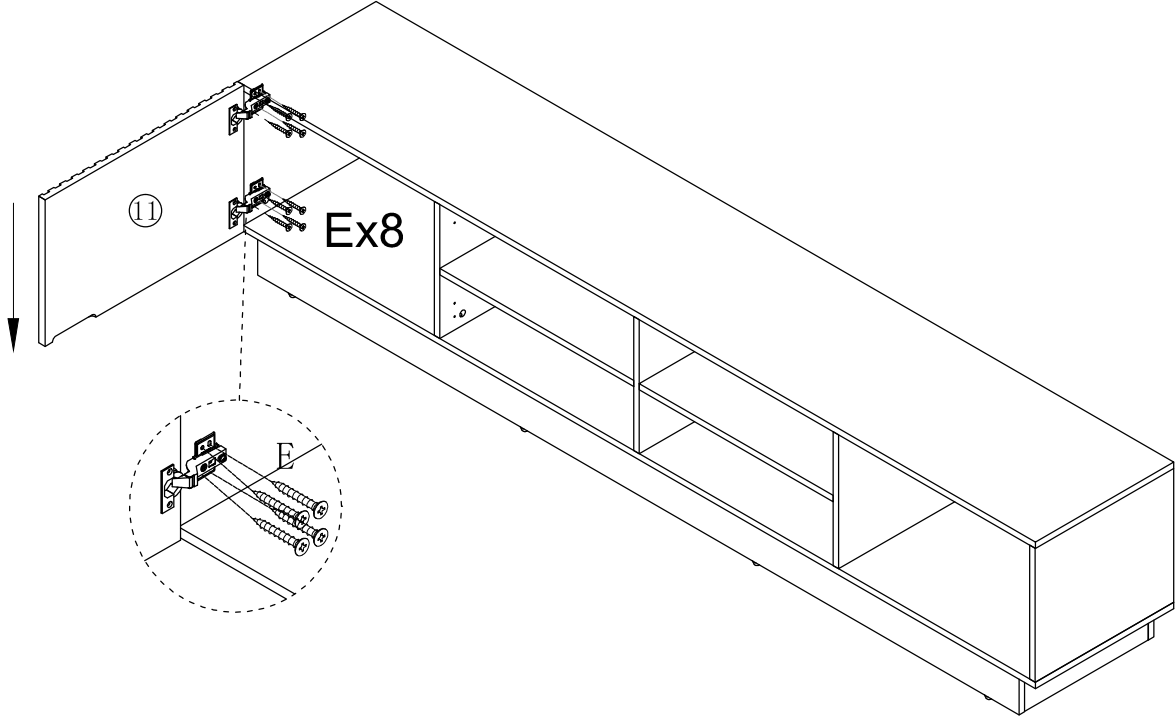 


Step 13

E	8PCS
	
Ø3.5*14	

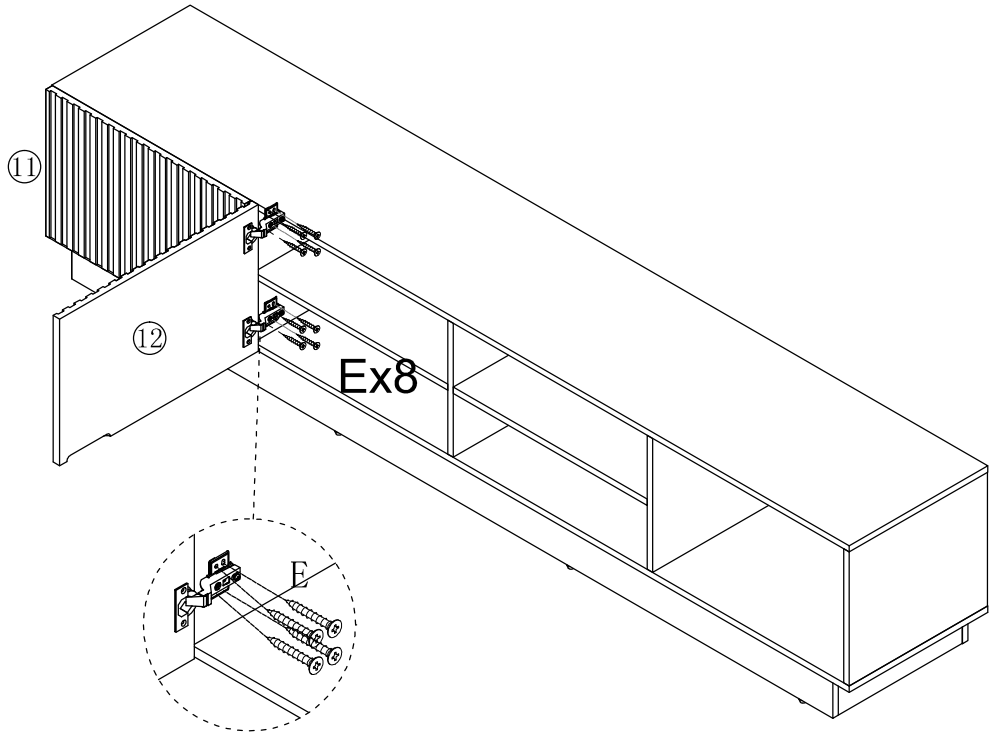 


Step 14

E	8PCS
	
ø3.5*14	

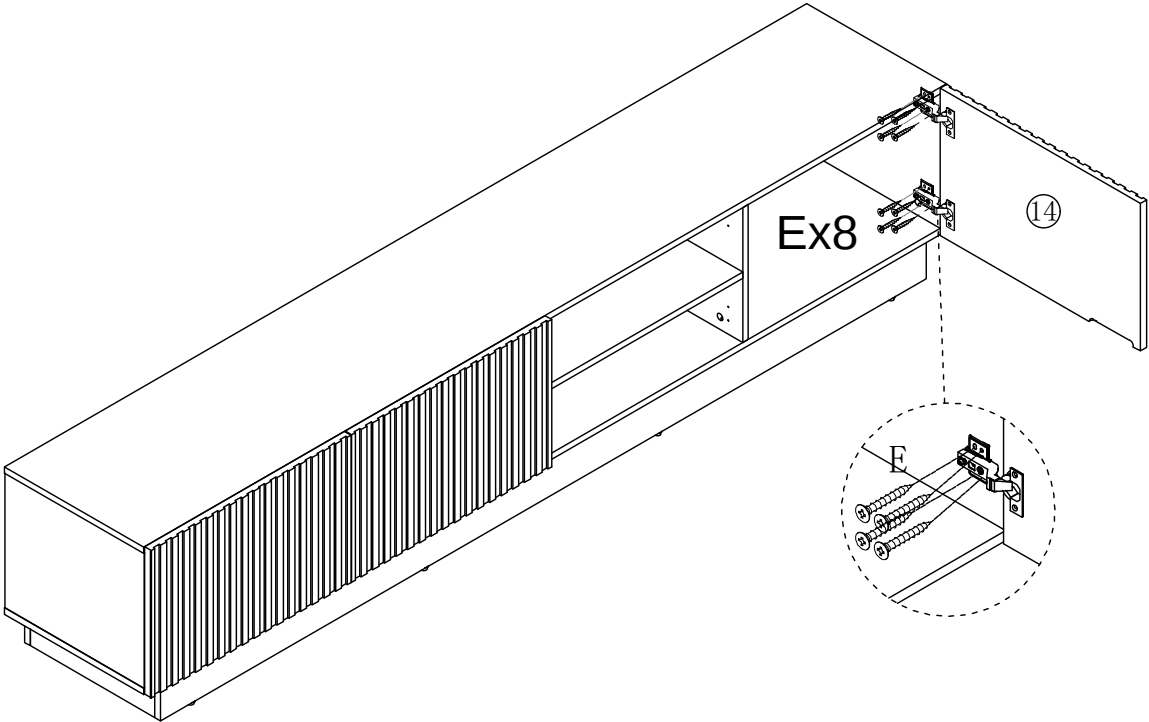 




Step 15


E	8PCS
	
ø3.5*14	

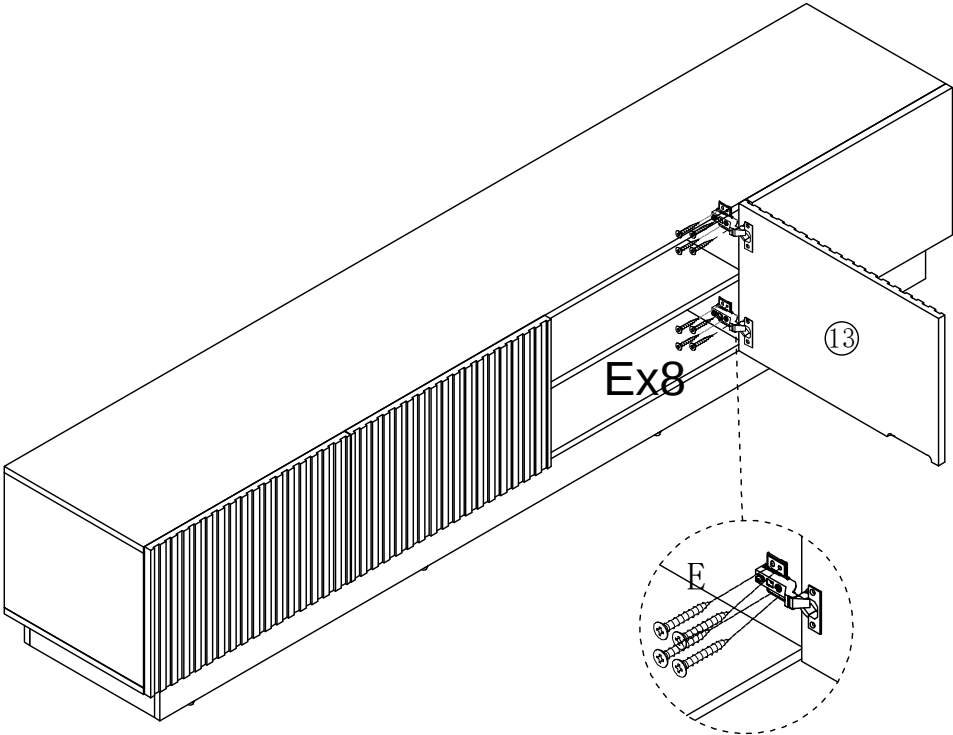 


Step 16

E	10PCS
	
Ø3.5*14	
I	10PCS
	

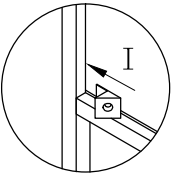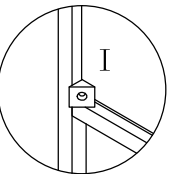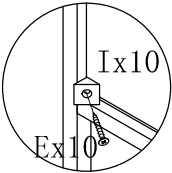   - 1
- 2
- 3

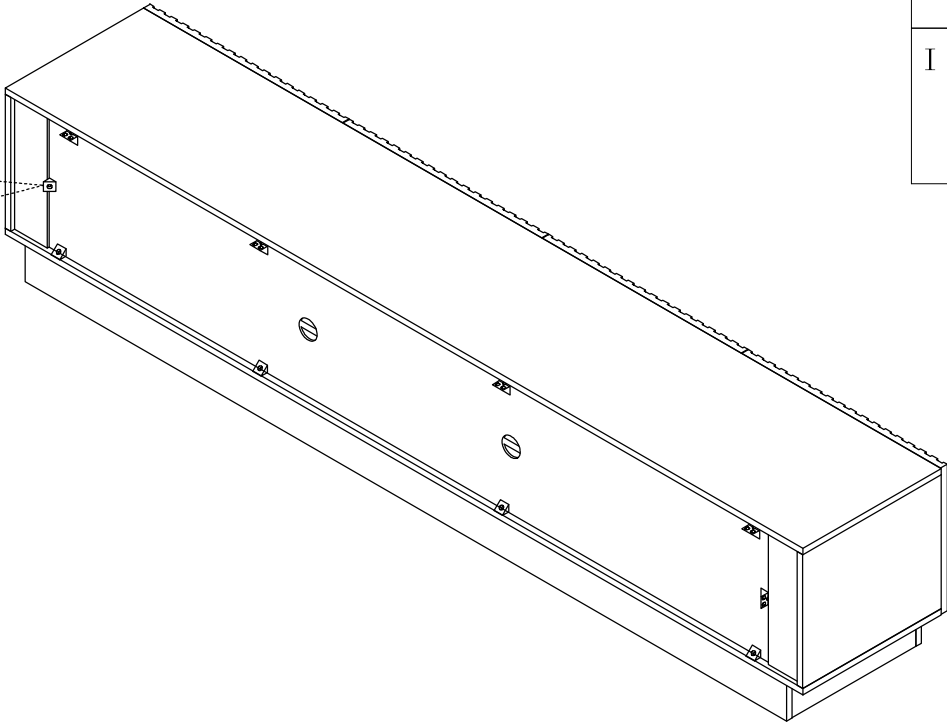 

 Step 17

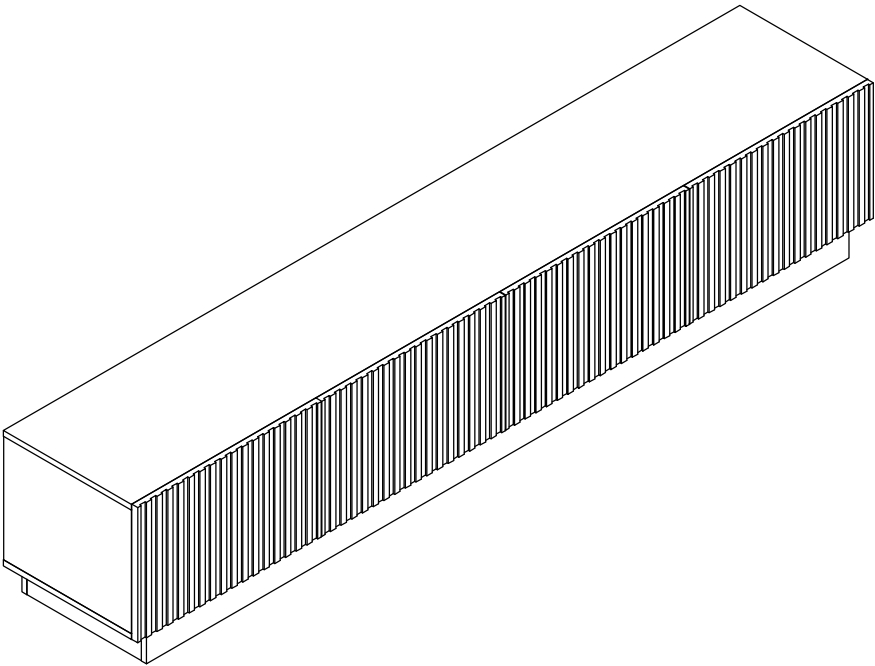

OK