



Canyon Creek

Model # 1803022

Wooden Swing Set

Owner's Manual & Assembly Instructions

MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive
Pittsburg, KS 66762
800-856-4445



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

*Installation services are only available
to U.S. customers.

average 2 person assembly time



assembly time may vary based on skill level

Before you begin >>>

**FOR QUICK &
EASY ASSEMBLY**
FIND 3D INSTRUCTIONS
FOR THIS PRODUCT IN

BILT.

DOWNLOAD THE FREE APP



For the most up to date assembly manual,
to register your set, or to order replacement parts please visit

www.backyarddiscovery.com

**SAVE THIS ASSEMBLY MANUAL FOR FUTURE REFERENCE IN THE
EVENT THAT YOU NEED TO ORDER REPLACEMENT PARTS.**

Para obtener instrucciones en español, visite www.backyarddiscovery.com



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

**Installation services are only available
to U.S. customers.*

With Go Con! gure, we bring you 18 years of experience right to your doorstep.
We service a wide array of indoor and outdoor recreation products that most consumers
don't have the time or ability to deliver & install themselves.

We do the heavy lifting, so you don't have to!

-
- 18+ Years of Experience Servicing Big Box Retailers and Direct Consumers
 - Highly Skilled, Specialized, Courteous, Professional Service Technicians
 - Over 140,000 Installations Annually
 - White Glove Service

- Satisfaction Guarantee
 - Flexible Appointments, including weekends
 - Coverage across the nation
- Visit www.goconfigure.com for more info!**
-

**Installation services are only available to U.S. customers.*



The store where you made your purchase
does not stock parts for this item.
If you have assembly questions or you are missing or
have damaged parts, please call

1-800-856-4445
or visit www.backyarddiscovery.com

Please have the following information ready when you make your call:

- Model Number of the product located on the front of the assembly manual
 - Description of the part from the parts list
-
- Read entire assembly manual, paying special attention to the important tips and safety information.
 - Ensure there are no missing pieces by first separating and identifying all parts.
 - Make sure to check packing material for small parts that may have fallen out during shipment.
 - Structures are not intended for public use. The Company does not warranty any of its residential structures subjected to commercial use such as: Daycare, Preschool, Nursery School, Recreational Park, or any similar Commercial Application.
 - This manual contains helpful information concerning assembly preparation, installation procedure and required maintenance.
 - Always keep safety in mind as your structure is being built.
 - Keep these instructions for future reference.





Please read entire booklet completely before beginning the assembly process

Please retain these instructions and your receipt for future reference. Keep them in a safe place where you can refer to them as needed. In order to provide you with the most efficient service, it is required that you provide us with the part numbers when ordering parts.

For Your Records:

Please take time and fill out the information below. This information will be needed for warranty issues.

Where Purchased: _____
Date of Purchase: _____
Installation Date: _____
Installed by: _____
Tracking Number: _____

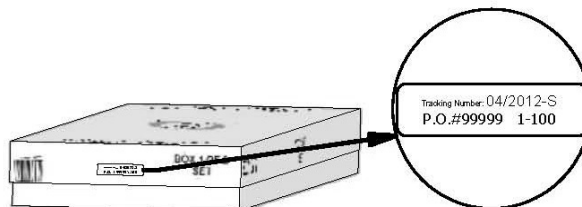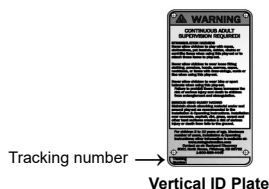

Tracking Number Reference Label

Tracking ID number on the carton and on the bottom of the vertical ID plate are included for tracking purposes associated with warranty claims.

This Limited Warranty by Backyard Discovery applies to products manufactured under the Backyard Discovery brand or its other brands including but not limited to Backyard Botanical, Adventure Playsets, and Leisure Time Products.

Backyard Discovery warrants that this product is free from defect in materials and workmanship for a period of one (1) year from the original date of purchase. This one (1) year warranty covers all parts including wood, hardware, and accessories. All wood carries a five (5) year pro-rated warranty against rot and decay. Refer to the schedule below for charges associated with replacement of parts under this Limited Warranty. In addition, Backyard Discovery will replace any parts within the first 30 days from date of purchase found to be missing from or damaged in the original packaging.

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to assure maximum life and performance of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in the Owner's Manual.

This Limited Warranty does not cover:

- Labor for any inspection
- Labor for replacement of any defective item(s)
- Incidental or consequential damages
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use, failure due to loading or use beyond the capacities stated in the applicable Assembly Manual.
- Acts of nature including but not limited to wind, storms, hail, floods, excessive water exposure
- Improper installation including but not limited to installation on uneven, unlevel, or soft ground
- Minor twisting, warping, checking, or any other natural occurring properties of wood that do not affect performance or integrity

Backyard Discovery products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification voids any and all warranties and Backyard Discovery assumes no liability for any modified products or consequences resulting from failure of a modified product.

This product is warranted for RESIDENTIAL USE ONLY. Under no circumstance should a Backyard Discovery product be used in public settings. Such use may lead to product failure and potential injury. Any and all public use will void this warranty. Backyard Discovery disclaims all other representations and warranties of any kind, express or implied.

Pro Rated Part Replacement Schedule

Product Age

All Parts

0-30 days from date of purchase
31 days to 1 year

Wood Rot and Decay Only

1 year
2 year
3 year
4 year
5 year
Over 5 years

Customer Pays

\$0 and free shipping
\$0 + S&H

\$0 and free shipping
20% + S&H
40% + S&H
60% + S&H
80% + S&H
100% + S&H



NOTE:

Your Children's Safety Is Our #1 Concern!

Observe the following statements and warnings to reduce the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.



WARNING:

BURN HAZARD

- Pay special attention to plastic and metal surfaces as they may be hot enough to cause burns.
- Always check the temperature of the product before letting your children play on it.
- Remember that the product may cause burns if left in direct sunlight.
- Always be aware of the sun and weather conditions, and do not assume that the equipment is safe because the air temperature is not very high.

- Children **MUST NOT** use this playcenter until unit has been completely assembled and inspected by an adult to ensure set has been properly installed and anchored.
- Equipment is recommended for use by children 3 to 10 years of age.
- This Playcenter is designed for specific number of occupants whose combined weight should not exceed the designated weight on the elevated floor or the swing area. The total unit capacity is outlined in the Basic Setup Dimensions section of instruction manual. The maximum fall height and recommended play area is also available in the Basic Setup Dimensions section of the manual for the specific unit.
- On-site, continuous adult supervision is **REQUIRED**. **MOST SERIOUS INJURIES AND DEATHS ON PLAYGROUND EQUIPMENT HAVE OCCURRED WHILE CHILDREN WERE UNSUPERVISED!**
- **DO NOT** allow children to walk close to, in front of, behind, or between moving swings or other moving playground equipment.
- **DO NOT** let children stand on swings.
- Children should **NOT** twist the chains and ropes and should not loop them over the top support bar, this could reduce the strength of the chain or rope.
- **DO NOT** let children push empty seats. The seat could hit them and cause serious injury.
- Instruct and teach children to sit in the center of the swings with their full weight on the seats.
- **DO NOT** allow children to use the equipment in a manner other than intended.
- Instruct children to **ALWAYS** go down slides feet first. Never slide head first.
- Instruct children to **LOOK** before they slide to make sure no one is at the bottom.
- **DO NOT** allow children to run up a slide, as this increases their chances of falling.
- **DRESS CHILDREN APPROPRIATELY.** (Examples would include wearing well-fitting shoes and the avoidance of ponchos, scarfs, and other loose-fitting clothing that is potentially hazardous while using equipment).
- **DO NOT** allow children to climb when the equipment is wet.
- Children should **NEVER** jump from a fort deck. They should always use the ladder, ramp or slide.
- Children should **NEVER** be allowed to crawl or walk across the top of monkey bars.
- **DO NOT** allow children to crawl on top of a fort roof.
- Verify that any suspended climbing ropes, chain, or cable are secured at both ends and that they cannot be looped back on themselves as to create an entanglement hazard.
- **DO NOT** let children attach items to the playground equipment that are not specifically designed for use with the equipment. Items such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain can cause a strangulation hazard.
- Children should **NEVER** wrap their legs around swing chain.
- **DO NOT** allow children to slide down the swing chain.
- Instruct children to remove their bike or other sports helmet before playing on playground equipment.



Positioning Your Playcenter

- The playcenter is designed to be installed on a level surface by an adult with an adult helper. Place in a flat area of your yard to minimize ground preparation.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing material washing away during heavy rains.
- Place the equipment not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Provide enough room so that the children can use the equipment safely. For example, for structures with multiple play activities, a slide should not exit in front of a swing.
- It is a good idea to place your playcenter in an area that is convenient for adults to watch children at play.
- Create a site free of obstacles that could cause injuries – such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete. Additional suggestions in the Suggested Playground Surfacing Section.
- Do not build your playset on top of surfacing material.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.
- Separate active and quiet activities from each other. For example, locate sandboxes away from swings or use a guardrail or barrier to separate the sandbox from the movement of the swings.

Suggested Playground Surfacing

- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.
- Shredded bark mulch, wood chips, fine sand and fine gravel, are added as shock absorbing materials after assembly. If used properly these materials can absorb some of the impact of a child's fall.
- All surface material should extend a minimum of 6ft (1.8m) feet in all directions around the play area.
- Do not apply playground surfacing until after the unit is completely constructed. Playset should not be built on top of surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.
- Installations of rubber tiles or poured-in-place surfaces (other than loose-fill materials) generally require a professional and are not “do-it-yourself” projects.
- Shall use Playground Surfacing Materials (other than loose-fill material) which comply with the safety standard ASTM F1292 Standard Specification of Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.

The following chart explains the fall height in feet from which a life threatening head injury would not be expected

Critical Heights in feet (m) of Tested Materials

Material	Uncompressed Depth			Compressed Depth
	6" (152mm)	9" (228mm)	12" (304mm)	to 9" (228mm)
Wood Chips	7' (2.13m)	10-12' (3.0-3.6m)	11' (3.35m)	10' (3.05m)
Double-Shredded Bark Mulch	6' (1.83m)	10-12' (3.0-3.6m)	11' (3.35m)	7' (2.13m)
Engineered Wood Fibers	6' (1.83m)	7' (2.13m)	>12' (3.66m)	6' (1.83m)
Fine Sand	5' (1.52m)	5' (1.52m)	9' (2.74m)	5' (1.52m)
Coarse Sand	5' (1.52m)	5' (1.52m)	6' (1.83m)	4' (1.22m)
Fine Gravel	5' (1.52m)	7' (2.13m)	10' (3.05m)	6' (1.83m)
Medium Gravel	5' (1.52m)	5' (1.52m)	6' (1.83m)	5' (1.52m)
Shredded Tires*	10-12' (3.0-3.6m)	N/A	N/A	N/A

*This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.



APPENDIX A

The following information is from the United States Consumer Product Safety Commission's Information Sheet for playground surfacing material; also see the following website for additional information: www.cpsc.gov

X3. SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK⁹

X3.1 Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

X3.1.1 Loose-Fill Materials:

X3.1.1.1 Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing overtime. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.

X3.1.2 Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

X3.1.3 Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

X3.1.3.1 Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.

X3.1.3.2 Do not install loose-fill surfacing over hard surfaces such as concrete or asphalt.

X3.1.4 Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles — You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

X3.1.4.1 Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.

X3.1.4.2 Review surface specification before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment

X3.1.4.3 Check the protective surfacing frequently for wear.

X3.1.5 Placement — Proper placement and maintenance of protective surfacing is essential. Be sure to:

X3.1.5.1 Extend surfacing at least 6 feet from the equipment in all directions.

X3.1.5.2 For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

⁹This information has been extracted from the CPSC publications “Playground Surfacing — Technical Information Guide” and “Handbook for Public Playground Safety.” Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

The American Society for Testing and Materials takes no position respecting the validity of any parent right asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such parent rights, and the risk of infringement of such rights, are entirely their own responsibility.

The standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either approved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards. 100 Barr Harbor Drive, West Conshohocken, PA 19428.



IT IS IMPORTANT TO CHECK AND TIGHTEN ALL HARDWARE AT THE BEGINNING AND DURING THE SEASON AS THEY MAY LOOSEN DUE TO WOOD EXPANSION AND CONTRACTION.

At the beginning of each play season

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, & corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season.

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each season or when the temperature drops below 32° F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Additional Maintenance

- Check the swing beam and hardware every two weeks due to wood expansion and contraction. It is particularly important that this procedure be followed at the beginning of each season.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sand may be necessary to maintain a safe playing environment. Treat your playset with stain regularly, to help prevent severe checking/splitting and other weather damage.
- A waterborne transparent stain has been applied to your playset. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your playset. Please note this is a requirement of your warranty.
- Assembling and maintaining the playset on a level location is very important. As your children play, your playset will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the playset is level and true one each year or at the beginning of each play season.

Disposal Instructions

When the Playcenter use is no longer desired, it should be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the unit is discarded.

Third Party Assembly

Customer may, in their sole discretion, elect to use a third party person or service to assemble this product. Backyard Discovery assumes no responsibility or liability for any charge incurred by the Customer for any assembly services'. Please see our warranty for more information about damaged and missing part replacement coverage. Backyard Discovery will not reimburse Customer for the price of parts purchased.



Your Backyard Discovery structure is designed and constructed of quality materials. As with all outdoor products it will weather and wear. To maximize the enjoyment, safety and life of your structure it is important that you properly maintain it.

About Our Wood

Backyard Discovery uses 100% Cedar (C. Lanceolata) wood. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my product?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. Checking is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.

2. Warping results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.

3. Fading happens as a natural change in the wood color as it is exposed to sun-light and will turn grey over time.

How can I reduce the amount of weathering to wood product?


1. Your wood product is coated with a water-based stain. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product). You must apply some type of protection (sealant) to the wood of your product. **Please note this is a requirement of your warranty.** Most weathering is just the normal result of nature and will not affect safety. However if you are concerned that a part has experienced a severe weathering problem please call our customer service department for further assistance.

2. Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.




Protrusion Hazard

Incorrect

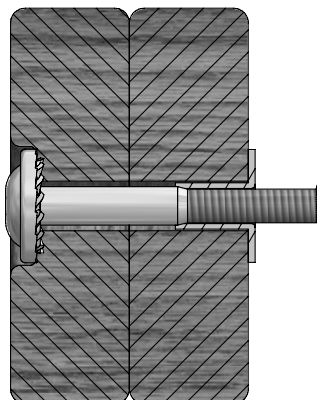

If you see exposed threads and your bolt protrudes beyond the T-Nut you may have over tightened the bolt or used incorrect hardware. If you've overtightened, remove the bolt and add washers to eliminate the protrusion.


Correct

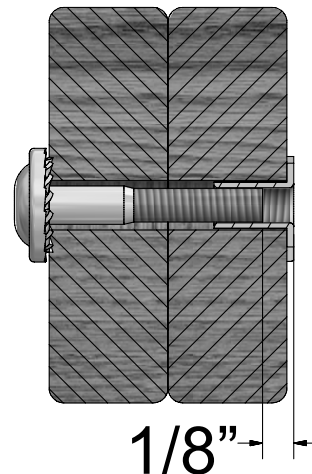

Proper Hardware Assembly


Bolt and T-Nut Assembly

Tap T-nut into the provided hole. Insert your bolt through the lock washer and insert into the provided hole opposite from the T-Nut. Turn clockwise to thread into T-nut. Do not completely tighten until instructed.

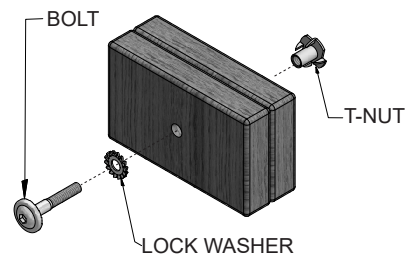


Bolt and Barrel Nut Assembly

Insert barrel nut through the lock washer and press the pair through the provided hole. Insert your bolt through the second lock washer and insert the pair into the provided hole opposite from the barrel nut. Turn clockwise to thread into the barrel nut. Do not completely tighten until instructed.

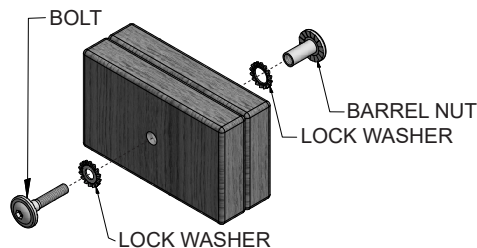

Lag Assembly

Normally there will be a pre-drilled pilot hole on assemblies that require a Lag Screw. If there is no pilot hole, line up the two boards as they are to be attached and use the factory drilled hole as a guide to drill another pilot hole into the adjoining board. This will keep the wood from splitting. Only a lock washer is required for steps with Lag Screws.

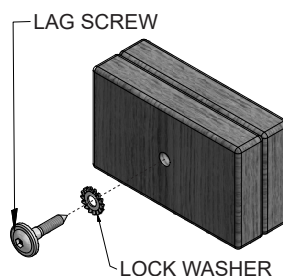




ASSEMBLY TIP:

Keep an eye out for these boxes which will contain helpful pictures and information making the assembly process as quick and painless as possible.

Sorting Wood

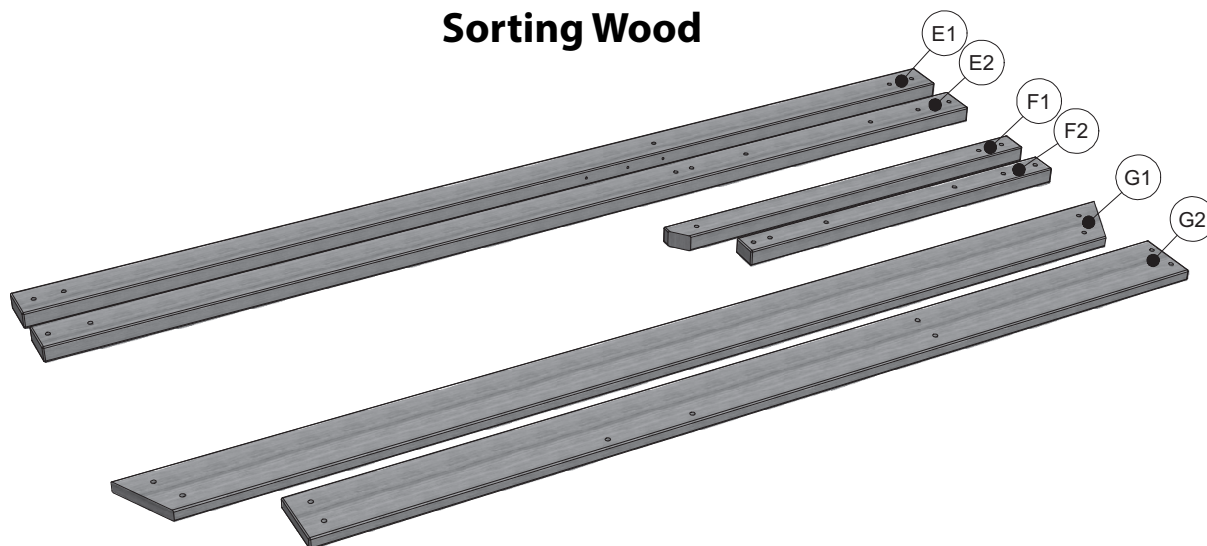

When removing the wood from the boxes we recommend arranging them by part number before you begin assembly. This will allow for faster assembly and easily identify any parts that may be missing or damaged.

Sorting Hardware

 
NUT BARREL
H100545



SCREW
H100695




T-NUT
H100699




WASHER FLAT
H100706



 BOLT HEX
H100716



BOLT
H100718

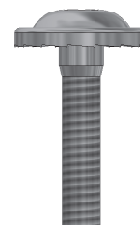



SCREW PWH
H100742



To help with assembly we recommend sorting your hardware bags with the seven digit alpha-numeric number printed on the bags or by hardware type (i.e. bolts, nuts, etc.). Organizing your hardware will make assembly easier.

Hardware Identification

Hardware bags are printed with a seven digit alpha-numeric part number. During assembly you only need to reference the last three digits of the part number as noted in each step. This will make finding the correct hardware easier.

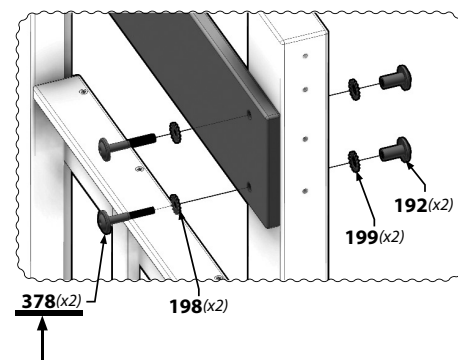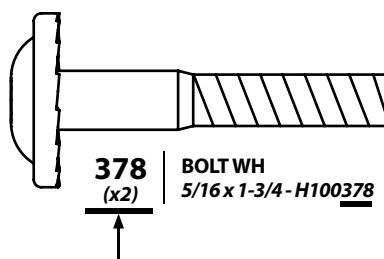




(These are the tools that are generally required for assembly of our outdoor products. These tools are not included with the outdoor product purchase.)



(Level 24")

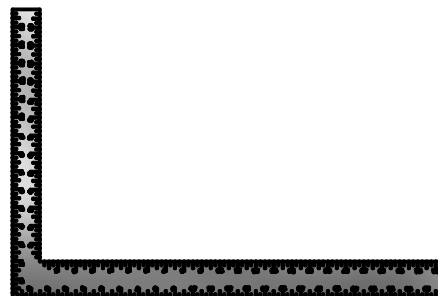

(Square)



(Phillips Screw Driver)



 
(Open End Wrenches 1/2")




(Tape Measure)



(Claw Hammer)




(Rubber Mallet - Optional)

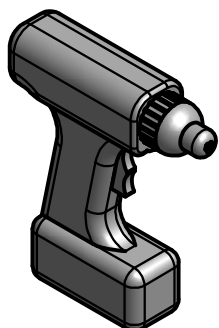

(Cordless Drill or Electric Drill)



***(Drill Attachments:
Phillips Head)***

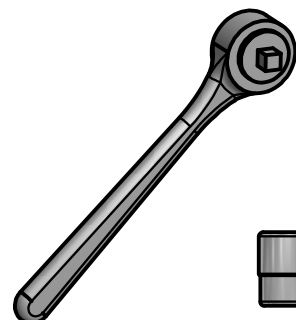

***(3/8" Drive Ratchet, 1/2" STD
Sockets 1/2" Deep Sockets)***



***(An Adult w/ an
Adult Helper)***



(Ladder)



(1/8", 3/8" & 7/16" Drill Bits)

Basic Setup Dimensions



Place the set on level ground, not less than 6 ft [2 m] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

General Information:

Your set has been designed and engineered for children only and for residential use only. A maximum of 150 lbs. per child is recommended for play activities designed for individual use.

A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use.

A maximum of 9 children is recommended for this swing set.

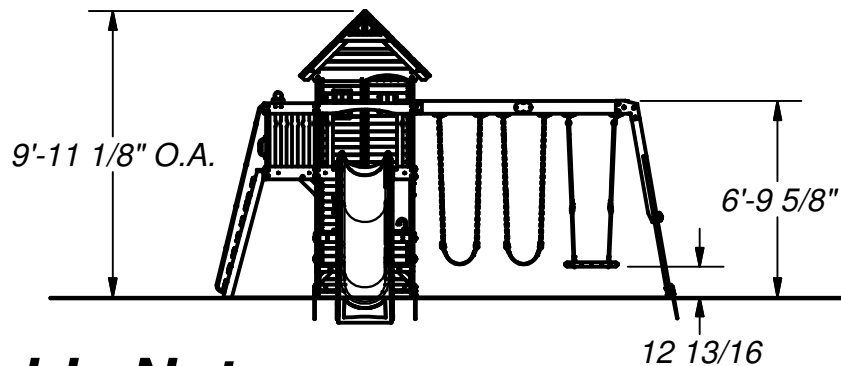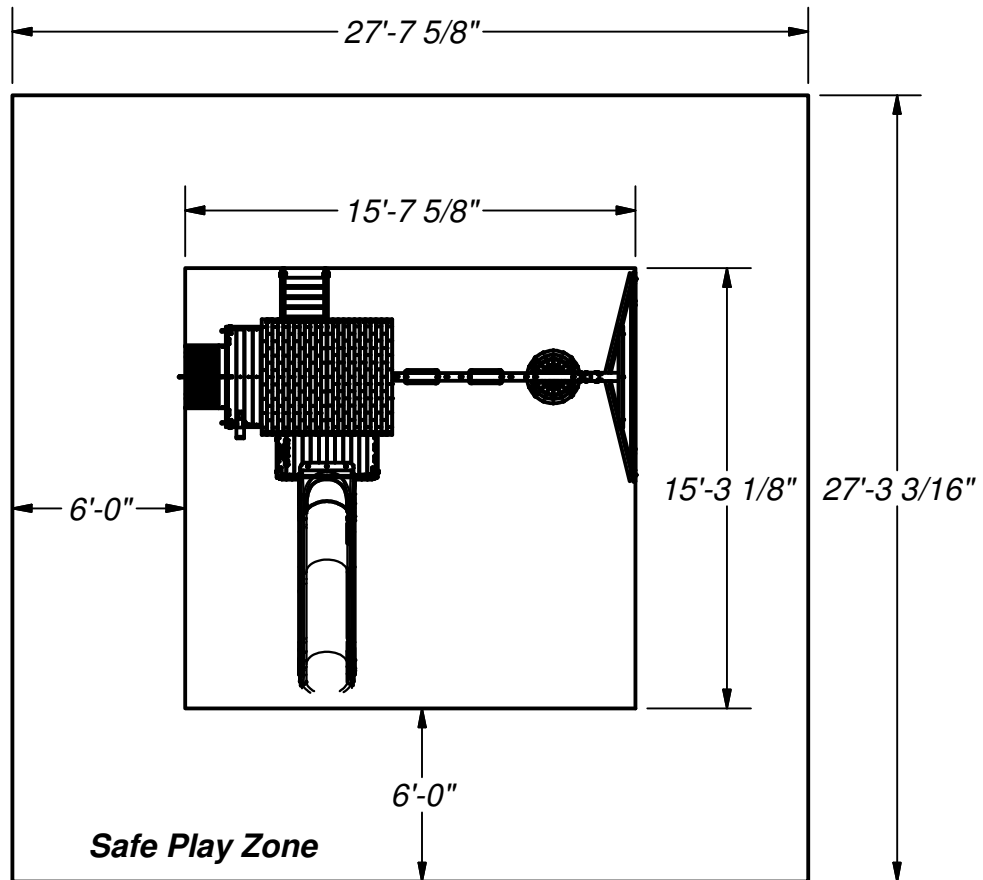

Important Assembly Notes

Safe play height: 15'-11 1/8" [4.7 m]
Maximum fall height: 6'-3 1/2" [1.8 m]

- 1) While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to ensure the fort is square.
- 2) Tighten bolts securely, tighten nuts on bolts flush to the tube or member.
- 3) Pay close attention to the ITEMS NEEDED FOR EACH PHASE. They can be a valuable aid when sorting your wood and hardware. Assembly will be made easier if items are sorted by phase.
- 4) Pay close attention to make sure you are using the correct hardware in the correct phases. Using incorrect hardware may result in improper assembly.
- 5) Whenever a T-nut is used, follow these directions. Place T-nut in pre-drilled hole. Tap in with hammer. Place bolt with washers in the opposite side. Hand tighten to make sure the bolt is in the T-nut. DO NOT over tighten.
- 6) Read the steps of each phase thoroughly. The written steps may include important information not shown in the illustrations.

Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **A74 - HEAVY DUTY SWING BEAM EXT.WEB SWING - W4L11647**
3 3/8"x5 1/4"x89 1/2" (86x134x2274)



- (1) **E1 - RIGHT REAR UPRIGHT - W2A02496**
1 3/8"x3 3/8"x51 3/4" (36x86x1314)



- (1) **E2 - LEFT REAR UPRIGHT - W4L11117**
1 3/8"x3 3/8"x51 3/4" (36x86x1314)



- (1) **E3 - LEFT FRONT UPRIGHT - W4L11118**
1 3/8"x3 3/8"x51 3/4" (36x86x1314)



 
- (1) **E4 - RIGHT FRONT UPRIGHT - W4L11119**
1 3/8"x3 3/8"x51 3/4" (36x86x1314)




- (1) **E5 - RIGHT FRONT BALCONY UPRIGHT - W4L11126**
1 3/8"x3 3/8"x80 3/4" (36x86x2052)



- (1) **E6 - LEFT REAR UPRIGHT - W4L11133**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



 - (1) **E7 - RIGHT REAR UPRIGHT - W4L11134**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)




- (1) **E8 - LEFT FRONT UPRIGHT - W4L11135**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



- (1) **E9 - RIGHT FRONT UPRIGHT - W4L11136**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



 - (2) **E10 - MOUNTING BLOCK - W4L11155**
1 3/8"x3"x4 3/4" (36x76x120)




- (1) **E11 - RIGHT FRONT BALCONY UPRIGHT - W4L11157**
1 3/8"x3 3/8"x80 3/4" (36x86x2052)


Parts Identification

Wood Components

 (NOT TO SCALE)



 
(1) E72 - LEFT RAIL - W4L11168
1 3/8"x3 3/8"x54 7/8" (36x86x1395)



(1) E73 - RIGHT RAIL - W4L11169
1 3/8"x3 3/8"x54 7/8" (36x86x1395)



 (2) E77 - ANGLE BRACE - W4L11648
1 3/8"x3 3/8"x73 1/8" (36x86x1859)



(1) E79 - END SUPPORT - W4L11650
1 1/2"x3 1/2"x42" (36x86x1072)



(1) F1 - RIGHT BALCONY UPRIGHT - W4L11130
1 3/8"x2 3/8"x31 3/4" (36x60x805)



(1) F2 - LEFT BALCONY UPRIGHT - W4L11131
1 3/8"x2 3/8"x31 3/4" (36x60x805)



(1) F3 - SUPPORT BLOCK - W4L11159
1 3/8"x2 3/8"x9 1/4" (36x60x234)



 
(1) F4 - SUPPORT BLOCK - W4L11160
1 3/8"x2 3/8"x9 1/4" (36x60x234)



(1) G1 - SWING BEAM MOUNT - W4L11137
1"x5 1/4"x62 1/8" (24x134x1577)



(1) G80 - GROUND BOARD - W4L11649
1"x5 1/4"x87 3/8" (24x134x2218)




(1) H2 - TABLE SUPPORT - W4L11148
1"x3 3/8"x11 5/8" (24x86x295)




(1) H1 - TABLE SUPPORT - W4L11147
1"x3 3/8"x22 3/8" (24x86x567)



 (4) H4 - DECK BRACE - W4L11156
1"x3 3/8"x12 3/4" (24x86x325)



 (1) H3 - TABLE SUPPORT - W4L11149
1"x3 3/8"x11 5/8" (24x86x295)



(4) H76 - LADDER RUNG - W4L07620
1"x3 3/8"x17 1/4" (24x86x437)

Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **H77 - LEFT UPRIGHT - W4L11173**
1"x3 3/8"x58" (24x86x1474)



- (1) **H78 - RIGHT UPRIGHT - W4L11174**
1"x3 3/8"x58" (24x86x1474)



- (1) **J1 - PORCH GROUND BOARD - W4L11128**
1"x2 3/8"x40 1/2" (24x60x1030)



- (1) **J2 - PORCH GROUND BOARD - W4L11129**
1"x2 3/8"x40 5/8" (24x60x1032)



- (2) **J3 - BENCH SUPPORT - W4L11150**
1"x2 3/8"x9" (24x60x230)



- (2) **J4 - ANGLE BRACE - W4L11151**
1"x2 3/8"x10" (24x60x254)



- (2) **J5 - SUPPORT BLOCK - W4L11152**
1"x2 3/8"x2 7/8" (24x60x72)



- (2) **J6 - SUPPORT BLOCK - W4L11153**
1"x2 3/8"x6 1/4" (24x60x160)



- (1) **J7 - SUPPORT BLOCK - W4L11158**
1"x2 3/8"x3 3/8" (24x60x86)



- (1) **J8 - FLOOR JOIST - W4L07602**
1"x2 3/8"x40 1/2" (24x60x1029)

 


- (1) **J9 - FLOOR JOIST - W4L07603**
1"x2 3/8"x20 1/4" (24x60x513)


Parts Identification

Wood Components


(NOT TO SCALE)



 
(1) **K1 - GROUND BOARD - W4L11113**
5/8"x5 1/4"x41 7/8" (16x134x1064)



 
(1) **K2 - GROUND BOARD - W4L11114**
5/8"x5 1/4"x41 7/8" (16x134x1064)



 (1) **K3 - GROUND BOARD - W4L11115**
5/8"x5 1/4"x40 1/2" (16x134x1030)



 
(1) **K4 - GROUND BOARD - W4L11116**
5/8"x5 1/4"x40 1/2" (16x134x1030)




(1) **K5 - RIGHT CENTER WALL RAIL - W4L11120**
5/8"x5 1/4"x62 3/4" (16x134x1593)



 (1) **K6 - FRONT CENTER WALL RAIL - W4L11121**
5/8"x5 1/4"x61 3/8" (16x134x1560)



 (1) **K7 - REAR CENTER WALL RAIL - W4L11122**
5/8"x5 1/4"x61 3/8" (16x134x1560)



(1) **K8 - LEFT CENTER WALL RAIL - W4L11123**
5/8"x5 1/4"x40 5/8" (16x134x1032)

 
Parts Identification

Wood Components


(NOT TO SCALE)



(1) **K9 - LEFT BALCONY WALL RAIL - W4L11124**
5/8"x5 1/4"x20 3/4" (16x134x528)



 (1) **K10 - FRONT BALCONY WALL RAIL - W4L11125**
5/8"x5 1/4"x40 5/8" (16x134x1032)




(1) **K11 - LEFT SIDE WALL BOARD - W4L11132**
5/8"x5 1/4"x41 7/8" (16x134x1064)




(1) **K12 - ARCHED WALL RAIL - W4L11143**
5/8"x5 1/4"x40 5/8" (16x134x1032)



 
(1) **K13 - ARCHED WALL RAIL - W4L11144**
5/8"x5 1/4"x40 5/8" (16x134x1032)



 
(1) **K14 - ANGLED WALL RAIL - W4L11145**
5/8"x5 1/4"x45 3/4" (16x134x1162)



 (1) **K15 - ANGLED WALL RAIL - W4L11146**
5/8"x5 1/4"x45 3/4" (16x134x1162)



 (1) **K16 - TABLE BOARD - W4L07594**
5/8"x5 1/4"x23" (16x134x583)



(2) **K17 - FLOOR BOARD - W4L07596**
5/8"x5 1/4"x21 1/8" (16x134x537)

Parts Identification

Wood Components

 
(NOT TO SCALE)




(1) **L1 - ARCHED WALL RAIL - W4L11138**
5/8"x4 3/8"x40 5/8" (16x112x1032)




(1) **L2 - WALL RAIL - W4L11139**
5/8"x4 3/8"x23 1/4" (16x112x590)



 
(1) **L3 - WALL RAIL - W4L11140**
5/8"x4 3/8"x20 7/8" (16x112x529)



 
(1) **L4 - ARCHED WALL RAIL - W4L11141**
5/8"x4 3/8"x43 3/8" (16x112x1103)



 
(2) **L5 - GROUND BOARD - W4L11652**
5/8"x4 3/8"x24 1/8" (16x112x612)



 (1) **M1 - WALL RAIL - W4L11154**
5/8"x3 3/8"x40 1/2" (16x86x1030)



 
(2) **M2 - BENCH BOARD - W4L07591**
5/8"x3 3/8"x23" (16x86x583)



(4) **M3 - TABLE BOARD - W4L07593**
5/8"x3 3/8"x23" (16x86x583)



 (8) **M4 - FLOOR BOARD - W4L07597**
5/8"x3 3/8"x21 1/8" (16x86x537)



(1) **M5 - FLOOR BOARD - W4L07598**
5/8"x3 3/8"x19 1/4" (16x86x488)



(1) **M6 - COUNTER TOP - W4L07605**
5/8"x3 3/8"x37 5/8" (16x86x957)



(2) **M7 - COUNTER TOP - W4L07606**
5/8"x3 3/8"x38 5/8" (16x86x981)

Parts Identification

Wood Components

(NOT TO SCALE)



 
- (1) **M8 - FLOOR BOARD - W4L07607**
5/8"x3 3/8"x20 1/8" (16x86x512)




- (10) **M9 - FLOOR BOARD - W4L07608**
5/8"x3 3/8"x20 1/8" (16x86x512)



- (1) **M10 - FLOOR BOARD - W4L07609**
5/8"x3 3/8"x40 5/8" (16x86x1031)



 - (15) **M11 - FLOOR BOARD - W4L07610**
5/8"x3 3/8"x40 5/8" (16x86x1031)



- (2) **M12 - FLOOR BOARD - W4L07611**
5/8"x3 3/8"x40 5/8" (16x86x1031)



- (1) **M13 - FLOOR BOARD - W4L07671**
5/8"x3 3/8"x20 1/8" (16x86x512)



- (1) **M73 - REAR SUPPORT - W4L07619**
5/8"x3 3/8"x18 1/4" (16x86x465)



 
- (7) **M74 - ROCK WALL BOARD - W4L07624**
5/8"x3 3/8"x25" (16x86x635)



- (4) **M75 - ROCK WALL BOARD - W4L07627**
5/8"x3 3/8"x25" (16x86x635)



- (4) **M76 - ROCK WALL BOARD - W4L07626**
5/8"x3 3/8"x25" (16x86x635)



- (1) **M77 - ROCK WALL BOARD - W4L11171**
5/8"x3 3/8"x25" (16x86x635)

Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **M102 - ATTACHMENT BOARD - W4L11167**
5/8"x3 3/8"x26 1/4" (16x86x667)



- (1) **M108 - TOP BOARD - W4L11170**
5/8"x3 3/8"x26 1/4" (16x86x667)



- (1) **M110 - ATTACHMENT BOARD - W4L11172**
5/8"x3 3/8"x18 1/4" (16x86x465)



- (2) **N1 - PORCH GROUND BOARD - W4L11127**
5/8"x2 3/8"x21 1/8" (16x60x537)



 
- (18) **N2 - PICKET - W4L07612**
5/8"x2 3/8"x24 3/4" (16x60x628)



- (2) **N3 - BENCH BOARD - W4L07592**
5/8"x2 3/8"x23" (16x60x583)




- (1) **O70 - SLIDE MOUNTING BOARD - W4L09040**
5/8"x1 3/8"x20 3/8" (16x34x517)



- (1) **Q1 - ARCHED WALL RAIL - W4L11142**
1"x4 3/8"x40 5/8" (24x112x1032)



 
- (1) **SP1 - SWING BEAM SUPPORT - W4L11651**
3 3/8"x3 3/8"x49 5/8" (86x86x1260)




- (3) **T1 - SUPPORT BOARD - W4L07599**
1"x1 3/8"x37 5/8" (24x34x957)



 - (1) **T2 - SUPPORT BOARD - W4L07600**
1"x1 3/8"x37 3/4" (24x34x959)



 - (2) **T3 - SUPPORT BOARD - W4L07601**
1"x1 3/8"x18 3/4" (24x34x477)




- (1) **T4 - SUPPORT BOARD - W4L07613**
1"x1 3/8"x37 3/4" (24x34x958)


Parts Identification

Wood Components


(NOT TO SCALE)

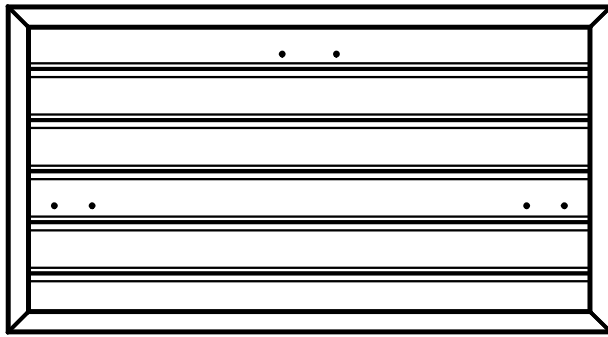


(1) WP1 - FRONT WALL PANEL - W2A02082
1"x20 3/8"x37 3/4" (24x517x958)

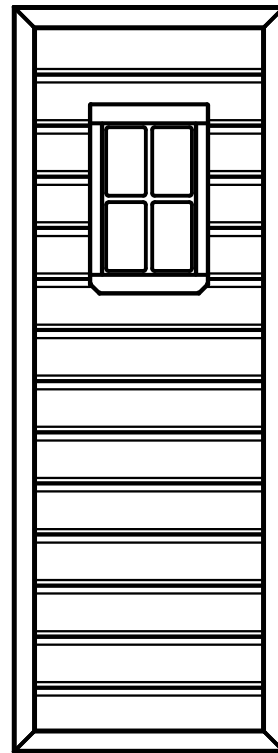


(2) WP2 - RIGHT LOWER WALL PANEL - W2A02083
1"x16 7/8"x46 1/2" (24x430x1181)

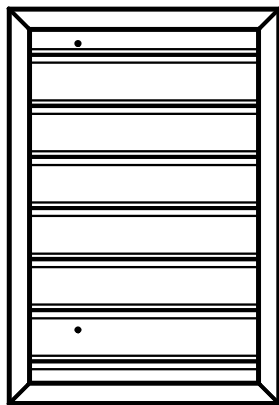


(1) WP3 - TOP RIGHT FRONT WALL PANEL - W2A02497
1"x16 7/8"x24 5/8" (24x430x627)

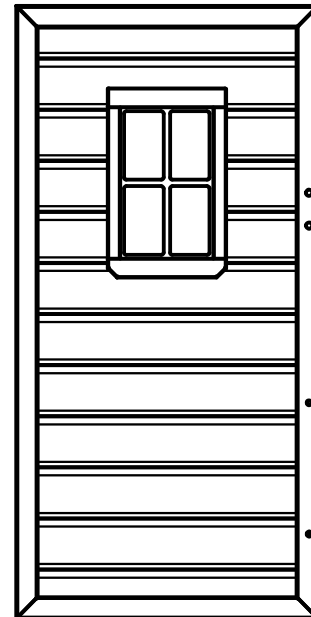

(1) WP4 - TOP RIGHT FRONT WALL PANEL - W2A02498
1"x16 7/8"x24 5/8" (24x430x627)

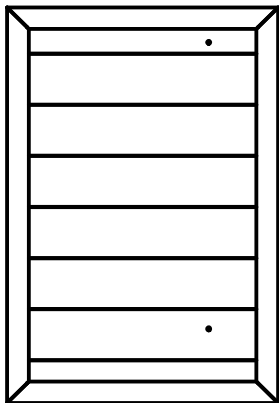

(1) WP5 - TOP LEFT REAR WALL PANEL - W2A02086
1"x16 7/8"x46 1/2" (24x430x971)

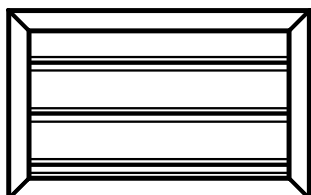


(1) WP6 - TOP REAR WALL PANEL - W2A02087
1"x18 7/8"x11 3/4" (24x479x300)


Parts Identification

Wood Components


(NOT TO SCALE)

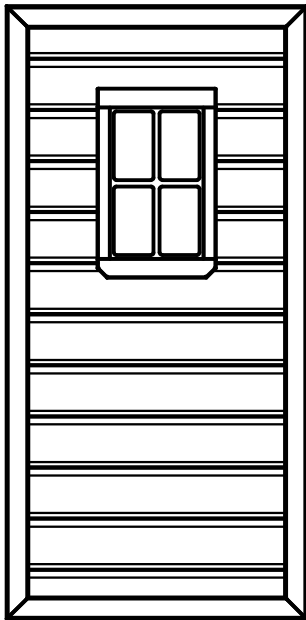


(1) WP7 - TOP FRONT WALL PANEL - W2A02088
1"x16 7/8"x38 1/4" (24x476x971)

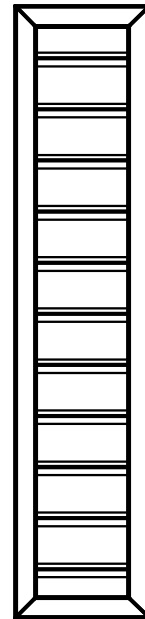


(2) WP8 - TOP LEFT WALL PANEL - W2A02089
1"x11 3/4"x38 1/4" (24x214x971)

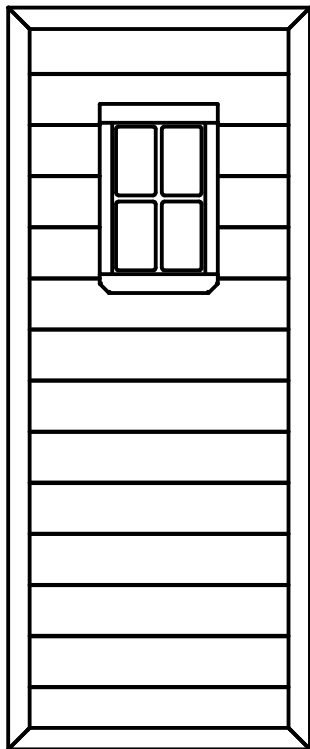

(2) WP9 - LOWER WALL PANEL - W2A02090
1"x18 7/8"x46 1/4" (24x479x1176)

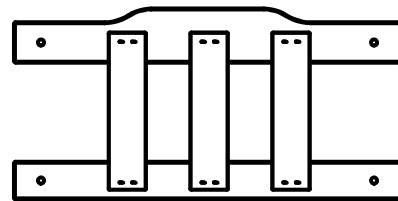

(2) WP10 - BENCH BACK ASSEMBLY - W2A02081
1 1/8"x11 7/8"x17 5/8" (27x303x615)

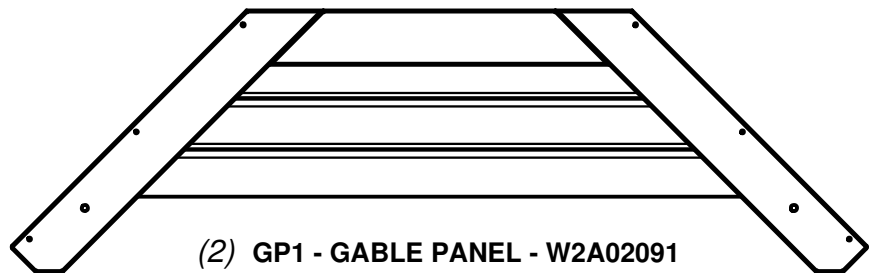


(2) GP1 - GABLE PANEL - W2A02091
1 1/8"x53 1/2"x16 3/8" (27x1359x414)


Parts Identification

Wood Components


(NOT TO SCALE)

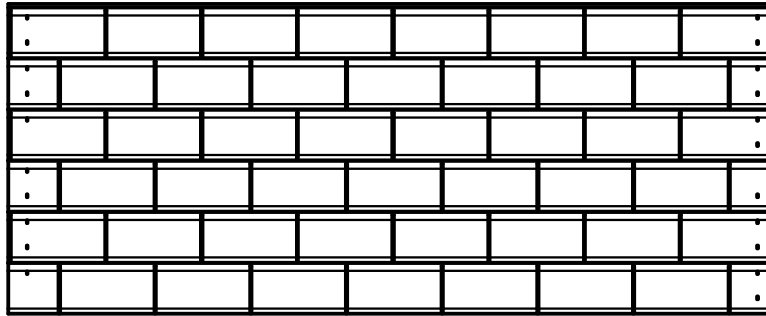

(2) RP1 - BOTTOM ROOF PANEL - W2A02494
1 3/8"x48"x19 3/8" (35x1220x491)

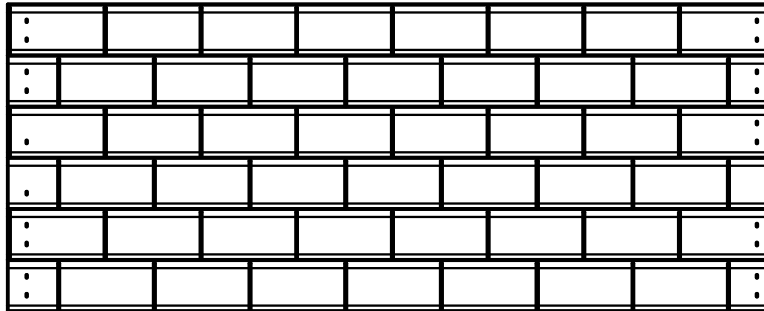


(2) RP2 - TOP ROOF PANEL - W2A02495
1 3/8"x48"x19 1/8" (35x1220x486)

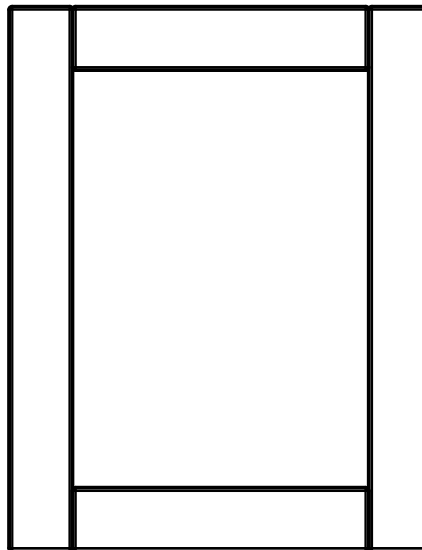

(1) - CHALKBOARD - A4M00906

Parts Identification

 Hardware



(86) - SCREW PFH 8x1-1/8" - H100088



(7) - SCREW PFH 8x1-1/4" - H100087



(249) - SCREW PFH 8x1-1/2" - H100086



(13) - SCREW PFH 8x1-3/4" - H100089



(71) - SCREW PFH 8x1 1/4 BLK - H100387



(17) - SCREW PFH 8x1-1/2 BLK - H100200



(4) - SCREW PFH 8x1 3/4 BLK - H100382



(24) - SCREW PFH 8x2 BLK - H100391



(17) - SCREW PWH 8x5/8 - H100128



(9) - SCREW PWH 8x1-1/4 - H100180




(4) - SCREW PWH 8x1/2 BLK - H100408



(28) - T-NUT 1/4 - H100072




(2) - T-NUT 1/4 BLK - H100398

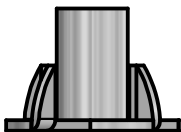

(3) - T-NUT 5/16 - H100074




(79) - T-NUT 5/16 BLK - H100379

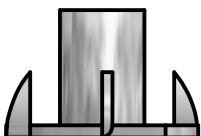

(13) - T-NUT 3/8 - H100073



(1) - BOLT WH 5/16X6 BLK - H100363

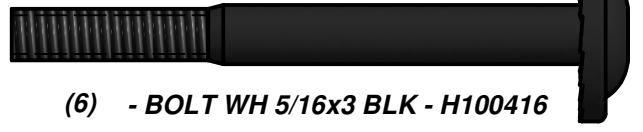

(6) - BOLT WH 5/16x3 BLK - H100416



(3) - BOLT WH 5/16x2-3/4 BLK - H100195



(13) - BOLT WH 5/16x2-1/4 BLK - H100205



(48) - BOLT WH 5/16x2 BLK - H100457




(4) - BOLT WH 5/16x1 3/4 BLK - H100378



(7) - BOLT WH 5/16x1 1/2 BLK - H100407



(9) - BOLT WH 5/16x1 1/4 BLK - H100459

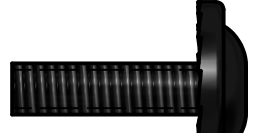


(4) - BOLT WH 5/16x1 BLK - H100468




(18) - BOLT WH 5/16x1/2 BLK - H100396

Parts Identification


Hardware

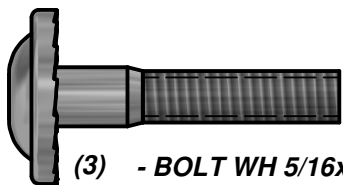


(3) - BOLT WH 5/16x1 1/2 - H100010

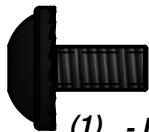


(1) - BOLT WH 1/4x1/2 BLK - H100401

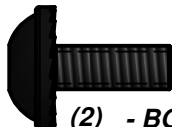

(2) - BOLT WH 1/4x5/8 BLK - H100486

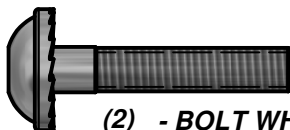

(2) - BOLT WH 1/4x1-1/4 - H100142

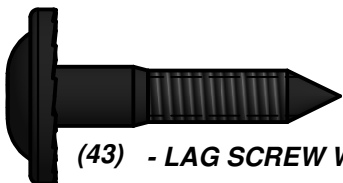


(43) - LAG SCREW WH 5/16x1 1/2 BLK - H100471




(7) - LAG SCREW WH 5/16x2 BLK - H100458



(4) - LAG SCREW WH 5/16x3 BLK - H100206

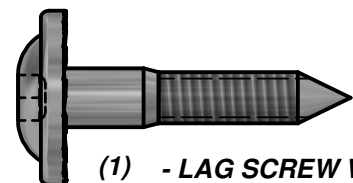

(1) - LAG SCREW WH 5/16x1 1/2 - H100026

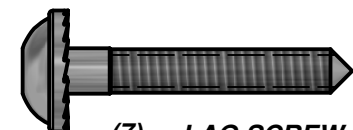

(7) - LAG SCREW WH 1/4x1-1/2 - H100145




(4) - LAG SCREW WH 1/4x1-1/2 BLK - H100403



(2) - LAG SCREW WH 1/4x2 BLK - H100487




(26) - BOLT PTH 1/4x3/4 - H100063

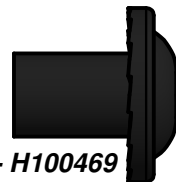

(15) - NUT BARREL WH 5/16x5/8 BLK - H100469



(20) - NUT BARREL WH 5/16x7/8 BLK - H100192

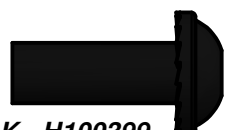

(1) - NUT BARREL WH 1/4x7/8 BLK - H100399



(2) - BOLT HEX 5/16x4 1/4 BLK - H100476



(4) - BOLT HEX 5/16x1 1/4 BLK - H100481

Parts Identification


Hardware




(2) - NUT LOCK 5/16 BLK - H100479




(7) - WASHER LOCK EXT 6x15 BLK - H100405

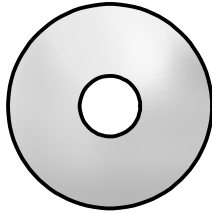

(1) - WASHER FLAT 8x27 - H100105

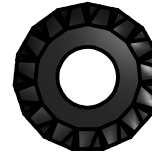


(137) - WASHER LOCK EXT 8x19 BLK - H100198

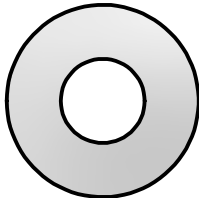


(13) - WASHER FLAT 11x25 - H100102




(29) - WASHER LOCK EXT 12x19 BLK - H100199

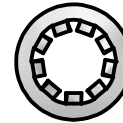


(26) - WASHER LOCK INT 8x15 - H100108

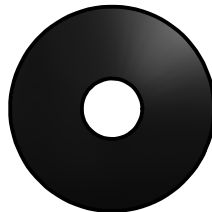

(9) - WASHER FLAT 8x27 BLK - H100478

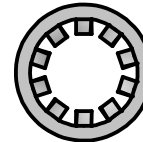


(13) - WASHER LOCK INT 10x18 - H100107

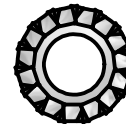

(9) - WASHER LOCK EXT 6x15 - H100138




(4) - WASHER SPLIT 5/16 BLK - H100477

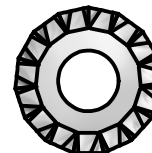


(3) - WASHER LOCK EXT 8x19 - H100030

Parts Identification

Hardware

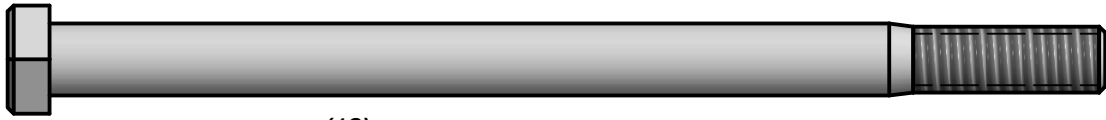

(13) - BOLT HEX 3/8x5-1/2 - H100654

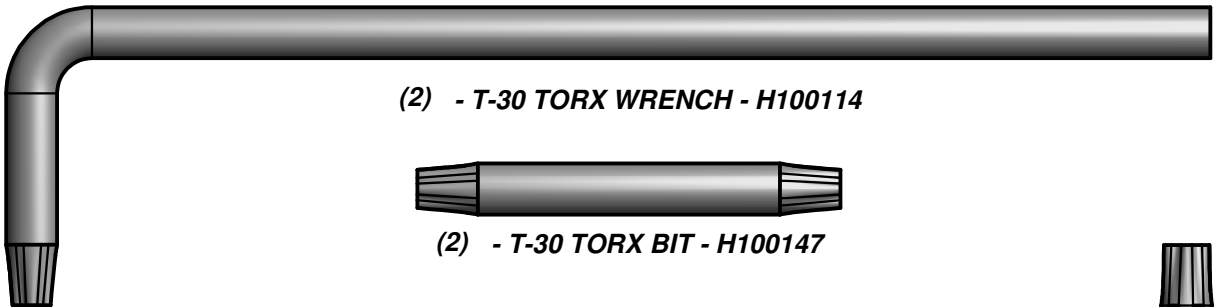


(2) - T-30 TORX WRENCH - H100114



(2) - T-30 TORX BIT - H100147




(2) - T-40 TORX BIT - A100042

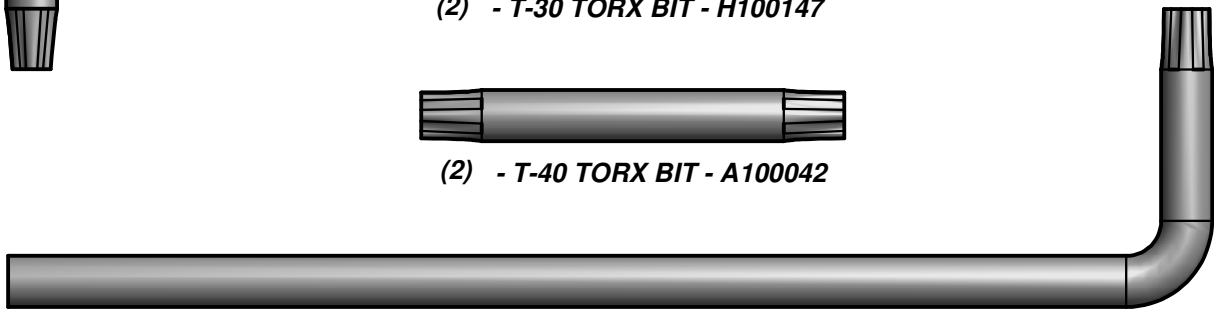

(2) - T-40 TORX WRENCH - A100041

Parts Identification

Accessories
(NOT TO SCALE)

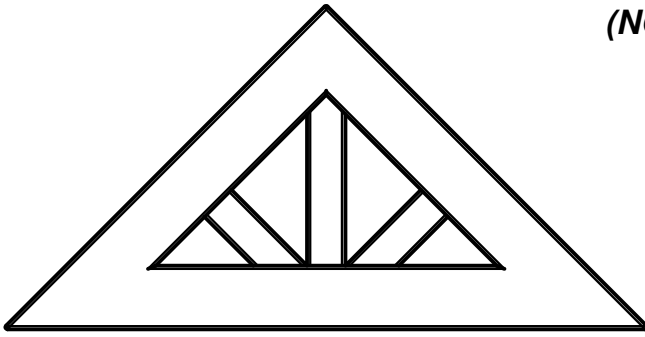


(2) SY - PLASTIC SUNBURST - A100322



(1) - BYD ID TAG (LARGE) AGES 3-10 - A100164



(1) QU - SLIDE VF 10 FT - A100287

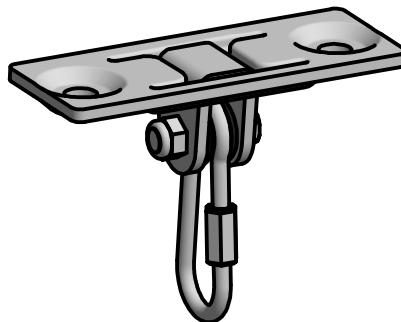

(6) BY - SWING HANGER QUICK LINK - A4M00505-3




(6) - GROUND STAKE REBAR - A4M00527



(4) - CHAIN GREEN 51.25" - A100068

Parts Identification


Accessories (NOT TO SCALE)

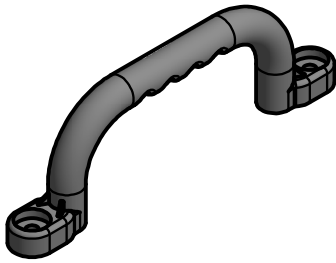


(4) DQ - HAND GRIP GREEN PLASTIC - A100028




(1) - "A" REVISION TAG - A100314

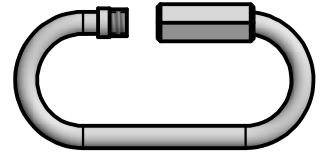


(4) FA - QUICK LINK - A100069

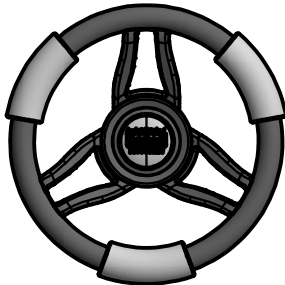


(1) LP - STEERING WHEEL - A100105

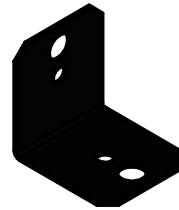


(2) - 90° L-BRACKET - BLK - A4M00555

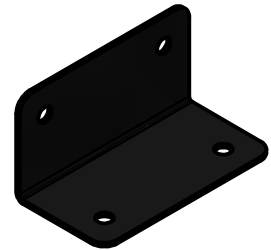


(2) - L BRACKET 66x66x127 - BLK - A4M00619

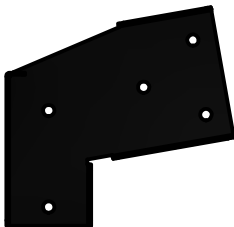


(1) - SWING BEAM EXTENSION BRACKET-LEFT - A4M00617

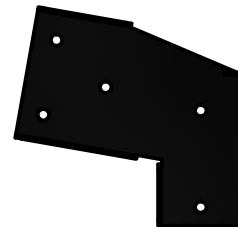

(1) - SWING BEAM EXTENSION BRACKET-RIGHT - A4M00618

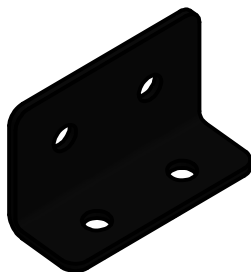


(2) - L BRACKET 51x32x82x3.175 - A4M00855

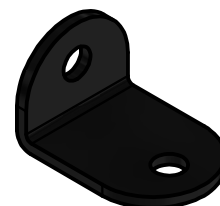


(2) - L BRACKET BLACK 32x51 - A4M00710

Parts Identification


Accessories
(NOT TO SCALE)

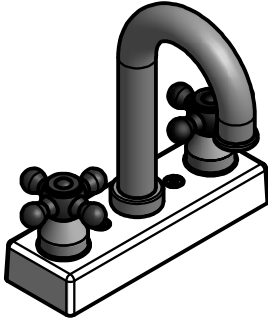


(1) - FAUCET KIT - A6P00024

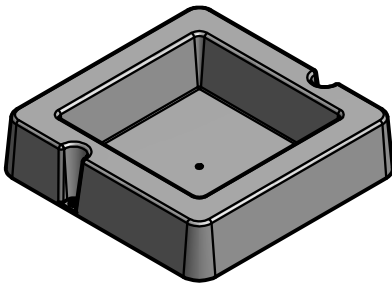


(1) - SURFACE MOUNT BASIN - A6P00032

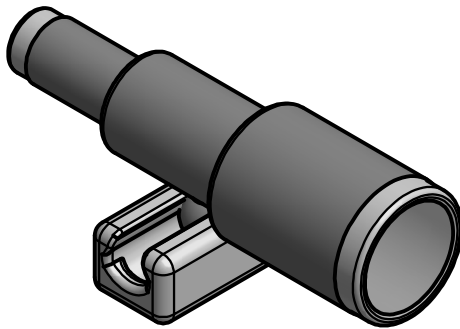

(1) LN - Telescope - A6P00096

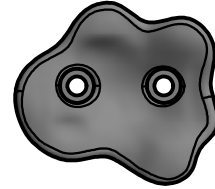


(3) - GREEN HC ROCK #1 - A6P00036

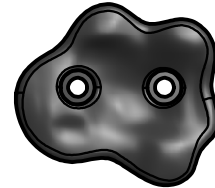

(3) - RED HC ROCK #1 - A6P00038



(3) - BLUE HC ROCK #2 - A6P00040

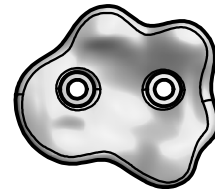


(3) - YELLOW HC ROCK #1 - A6P00042



(1) GRILL FOOD SET - 141154

Parts Identification


Accessories
(NOT TO SCALE)

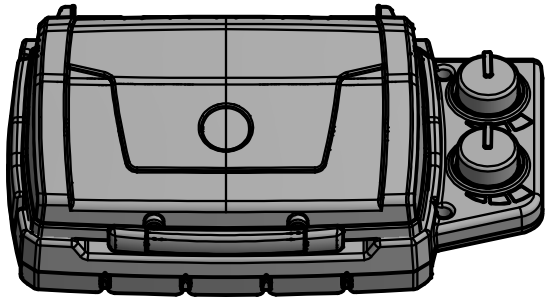

(1) GRILL - A6P00282



(1) - CLIMBING ROPE - A6P00260

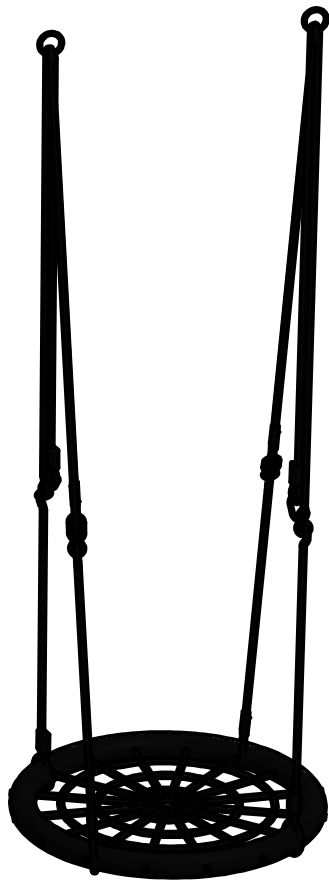

(1) - 21" WEB SWING SEAT - A6P00285



(2) - SWING SEAT GREEN 22IN - A6P00054




(1) **H77 - LEFT UPRIGHT - W4L11173**
1"x3 3/8"x58" (24x86x1474)




(4) **H76 - LADDER RUNG - W4L07620**
1"x3 3/8"x17 1/4" (24x86x437)

4 FT LADDER WITH ATTACHMENT BOARD

STEP 1

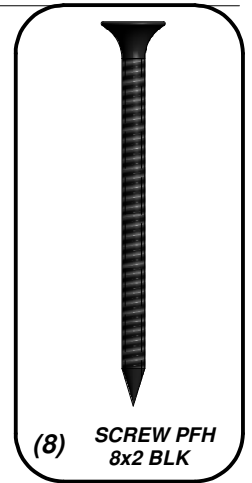



(8) **SCREW PFH**
8x2 BLK

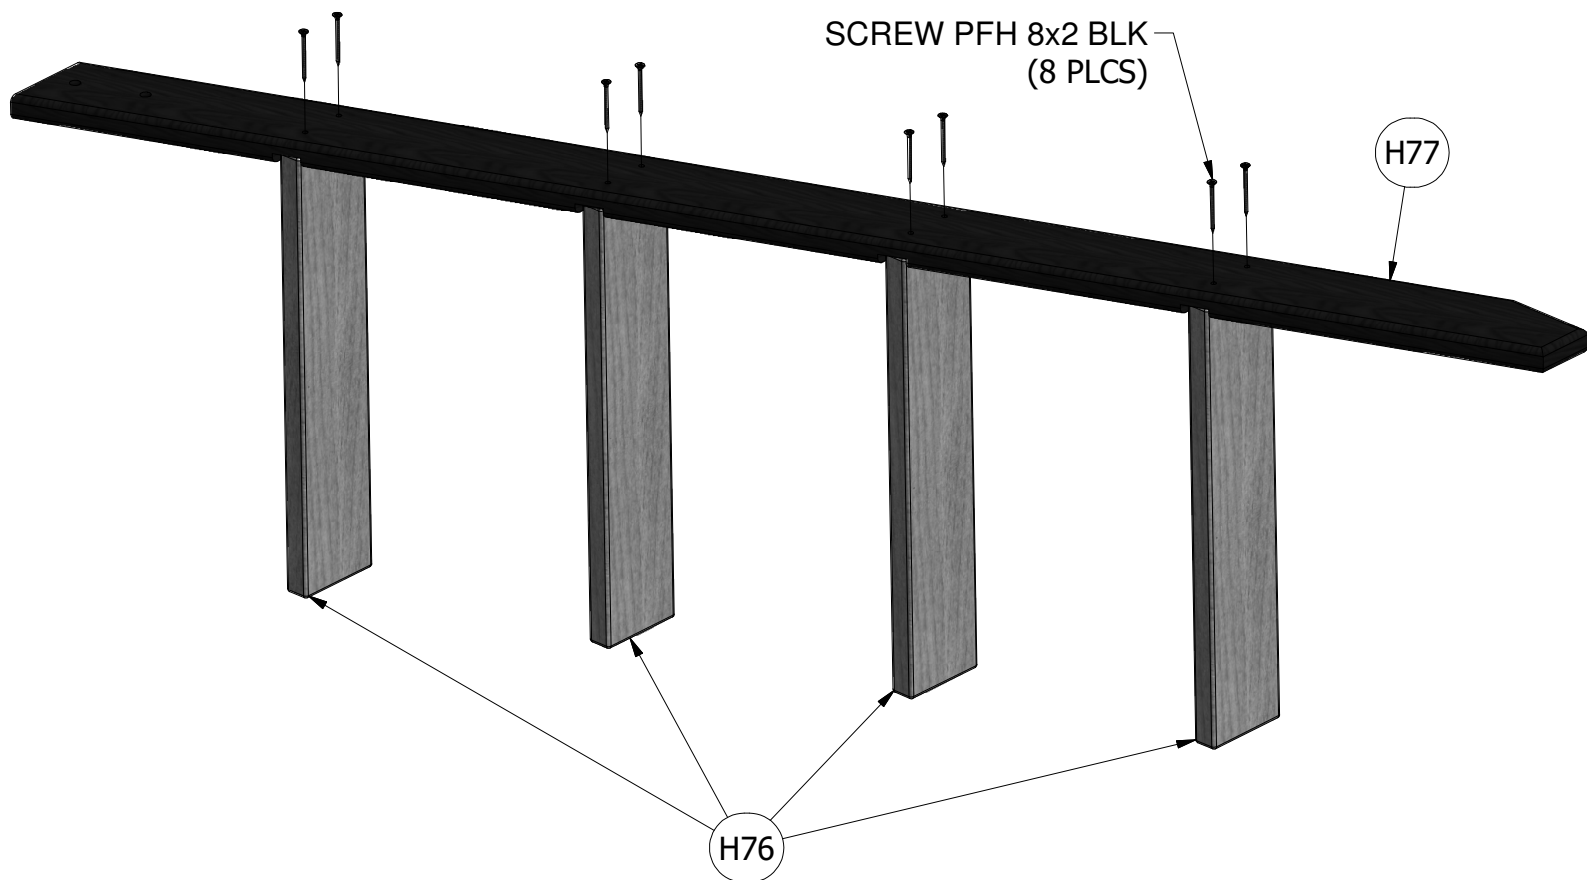



- (1) **H78 - RIGHT UPRIGHT - W4L11174**
1"x3 3/8"x58" (24x86x1474)

STEP 2

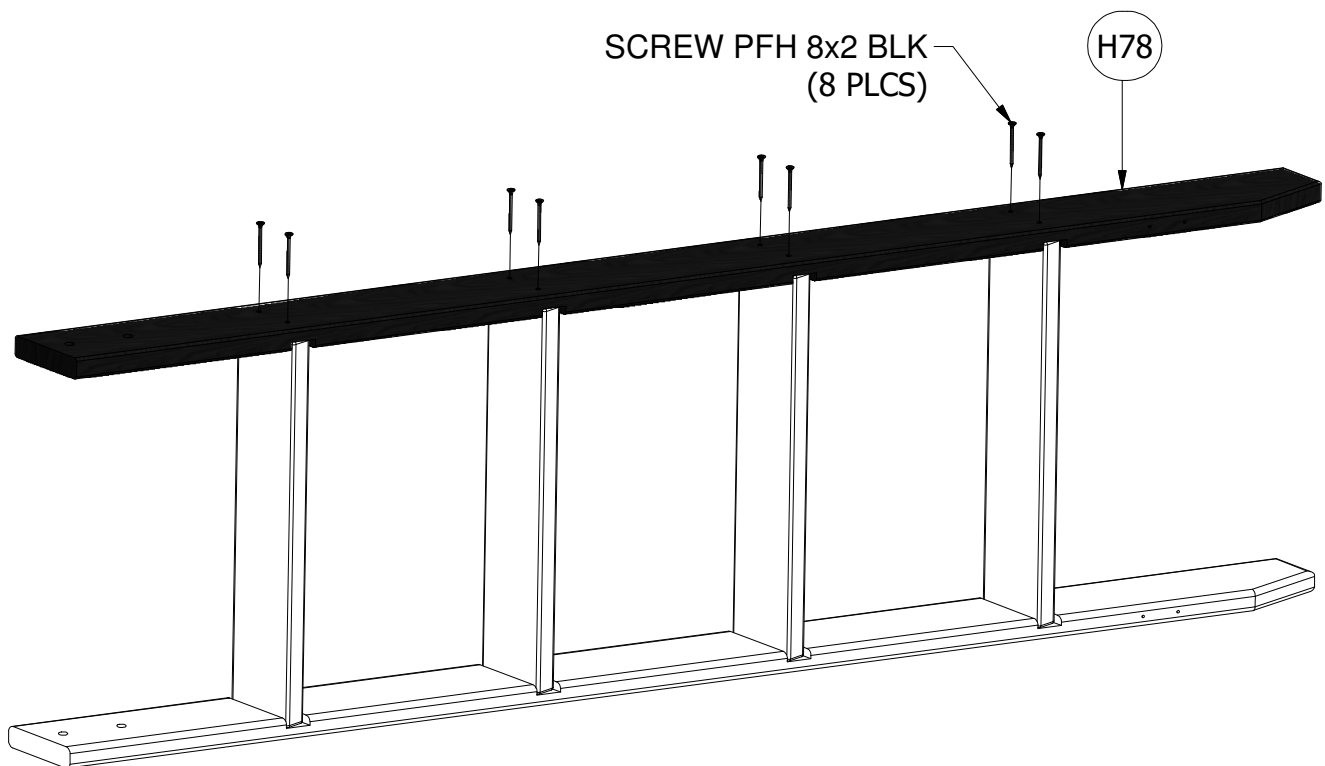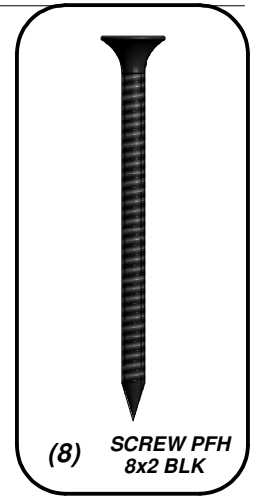





(1) **M110 - ATTACHMENT BOARD - W4L11172**
5/8"x3 3/8"x18 1/4" (16x86x465)



(1) **M73 - REAR SUPPORT - W4L07619**
5/8"x3 3/8"x18 1/4" (16x86x465)

STEP 3

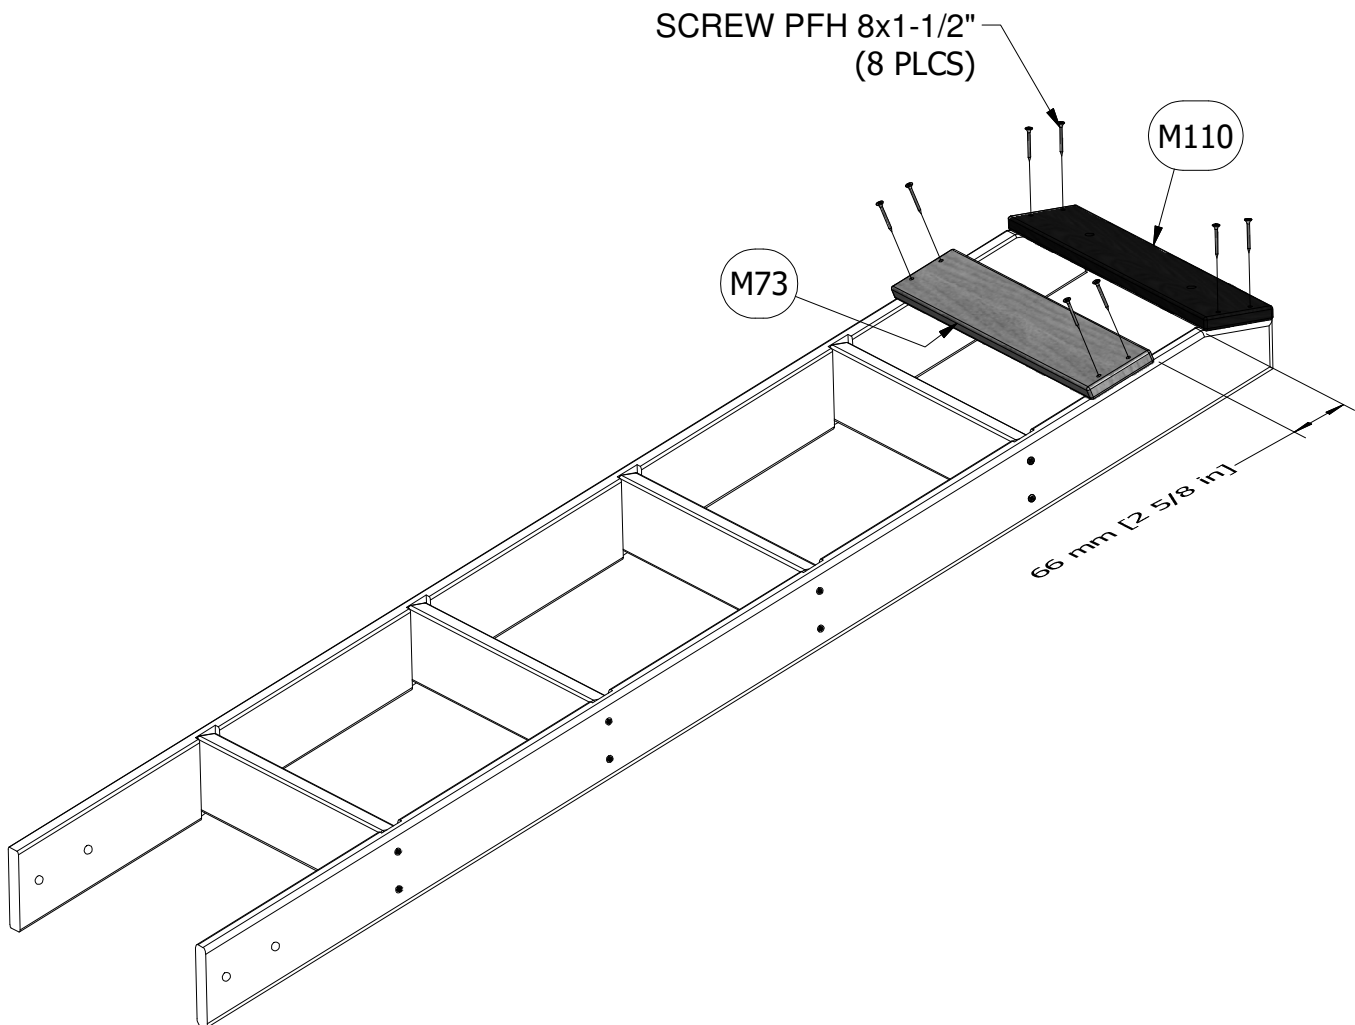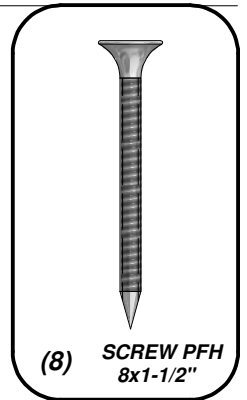

(1) E72 - LEFT RAIL - W4L11168
1 3/8"x3 3/8"x54 7/8" (36x86x1395)

(1) E73 - RIGHT RAIL - W4L11169
1 3/8"x3 3/8"x54 7/8" (36x86x1395)



(1) M108 - TOP BOARD - W4L11170
5/8"x3 3/8"x26 1/4" (16x86x667)

(1) M77 - ROCK WALL BOARD - W4L11171
5/8"x3 3/8"x25" (16x86x635)



(4) M75 - ROCK WALL BOARD - W4L07627
5/8"x3 3/8"x25" (16x86x635)





(4) M76 - ROCK WALL BOARD - W4L07626
5/8"x3 3/8"x25" (16x86x635)

(7) M74 - ROCK WALL BOARD - W4L07624
5/8"x3 3/8"x25" (16x86x635)

ROCKWALL STEP 1

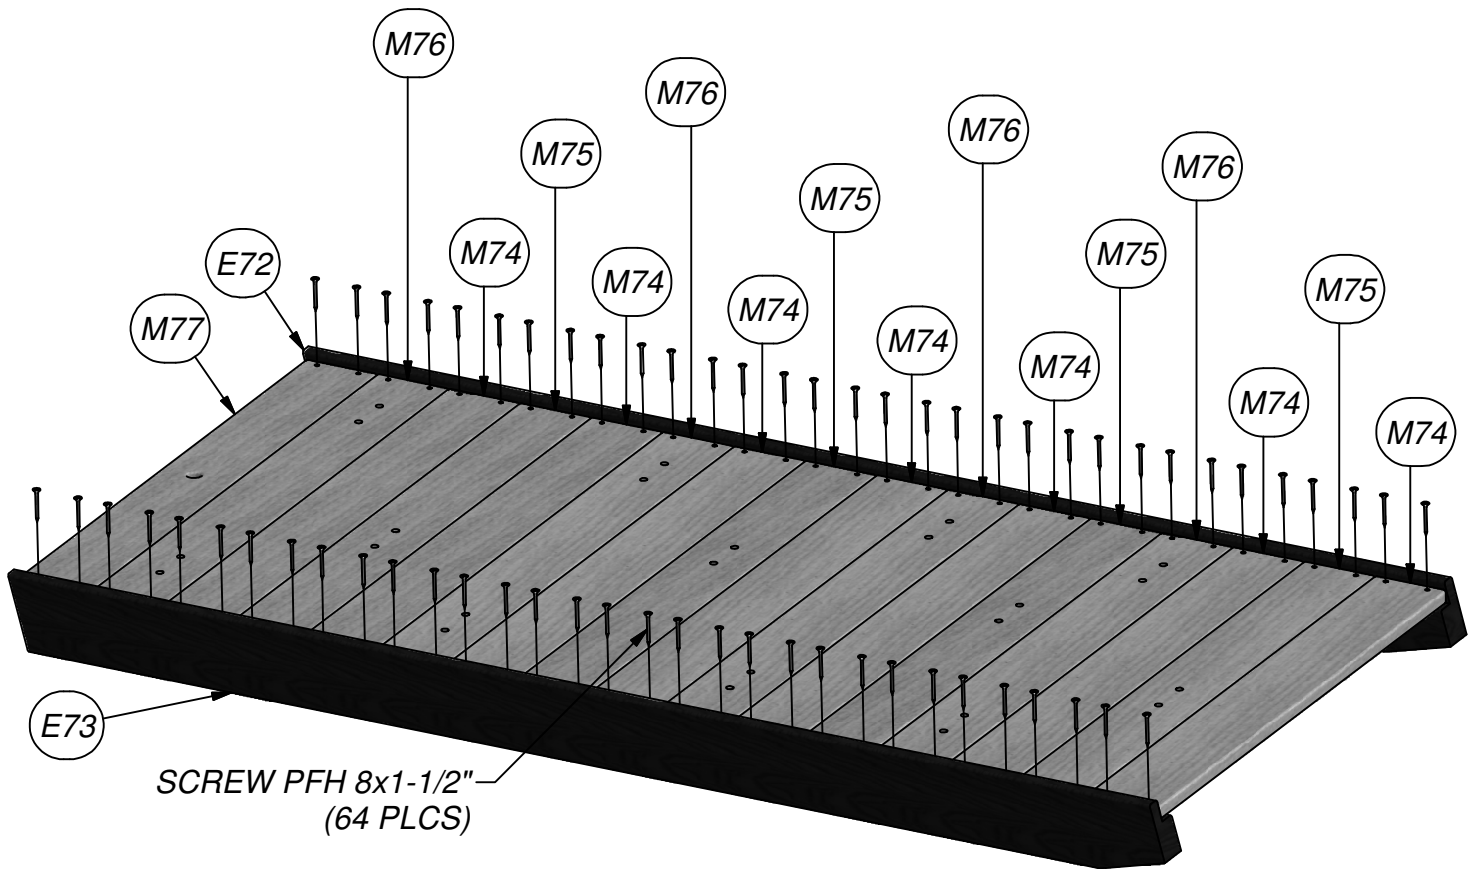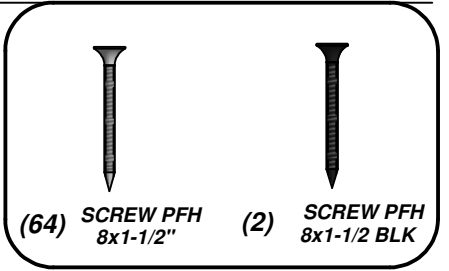



NOTE:
HOLE LOCATION IS
CLOSER TO BOTTOM

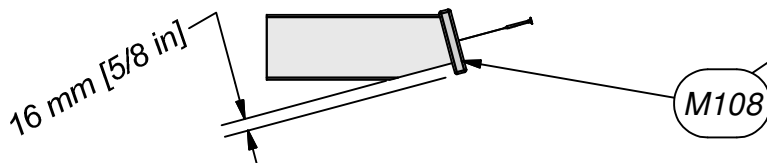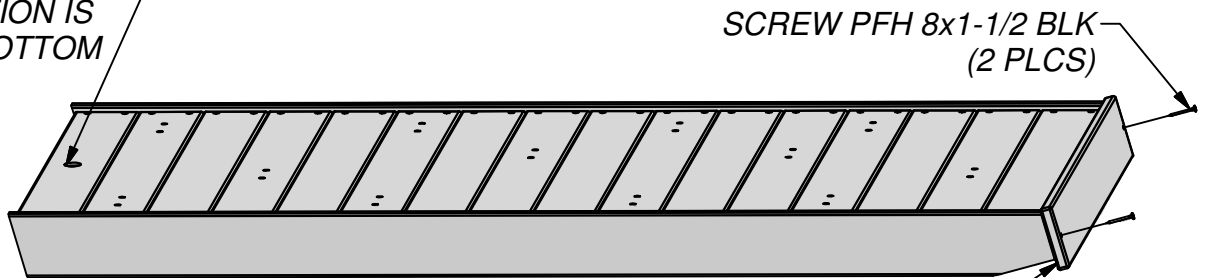



- (1) **M102 - ATTACHMENT BOARD - W4L11167**
5/8"x3 3/8"x26 1/4" (16x86x667)

ROCKWALL STEP 2

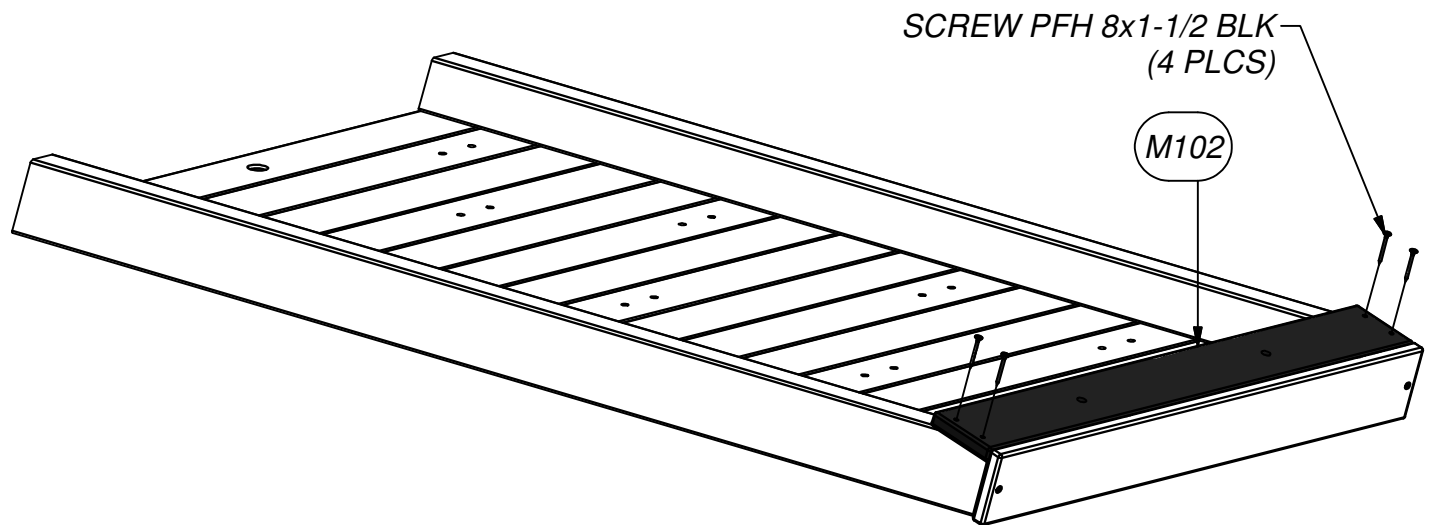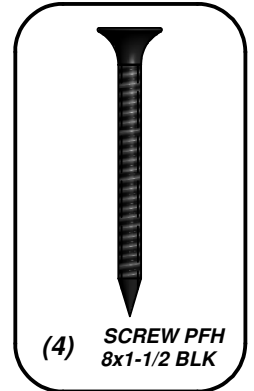




(3) - GREEN HC ROCK #1 - A6P00036



(3) - RED HC ROCK #1 - A6P00038






(3) - BLUE HC ROCK #2 - A6P00040

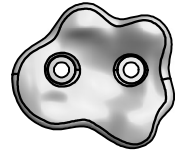

(3) - YELLOW HC ROCK #1 - A6P00042


ROCKWALL STEP 3

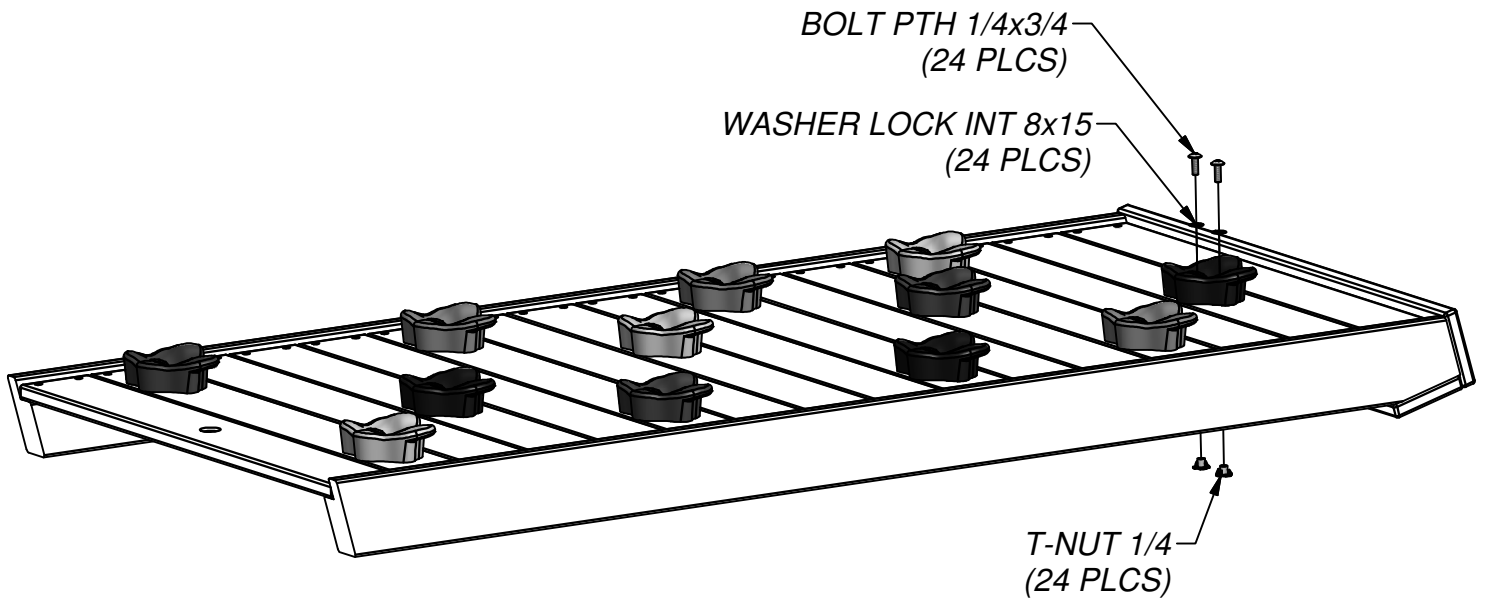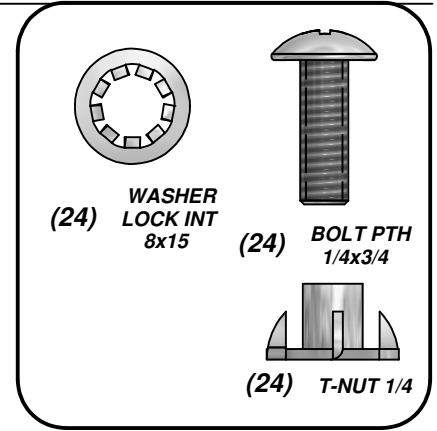

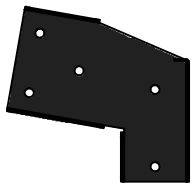

- (1) **A74 - HEAVY DUTY SWING BEAM EXT.WEB SWING - W4L11647**
 3 3/8"x5 1/4"x89 1/2" (86x134x2274)

- (1) - **SWING BEAM EXTENSION BRACKET-RIGHT - A4M00618**


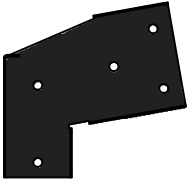


- (1) - **SWING BEAM EXTENSION BRACKET-LEFT - A4M00617**



- (2) - **L BRACKET 66x66x127 - BLK - A4M00619**

SWING BEAM ASSEMBLY STEP 1

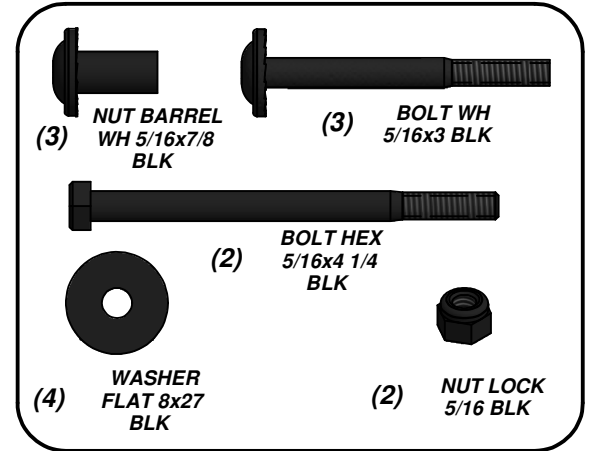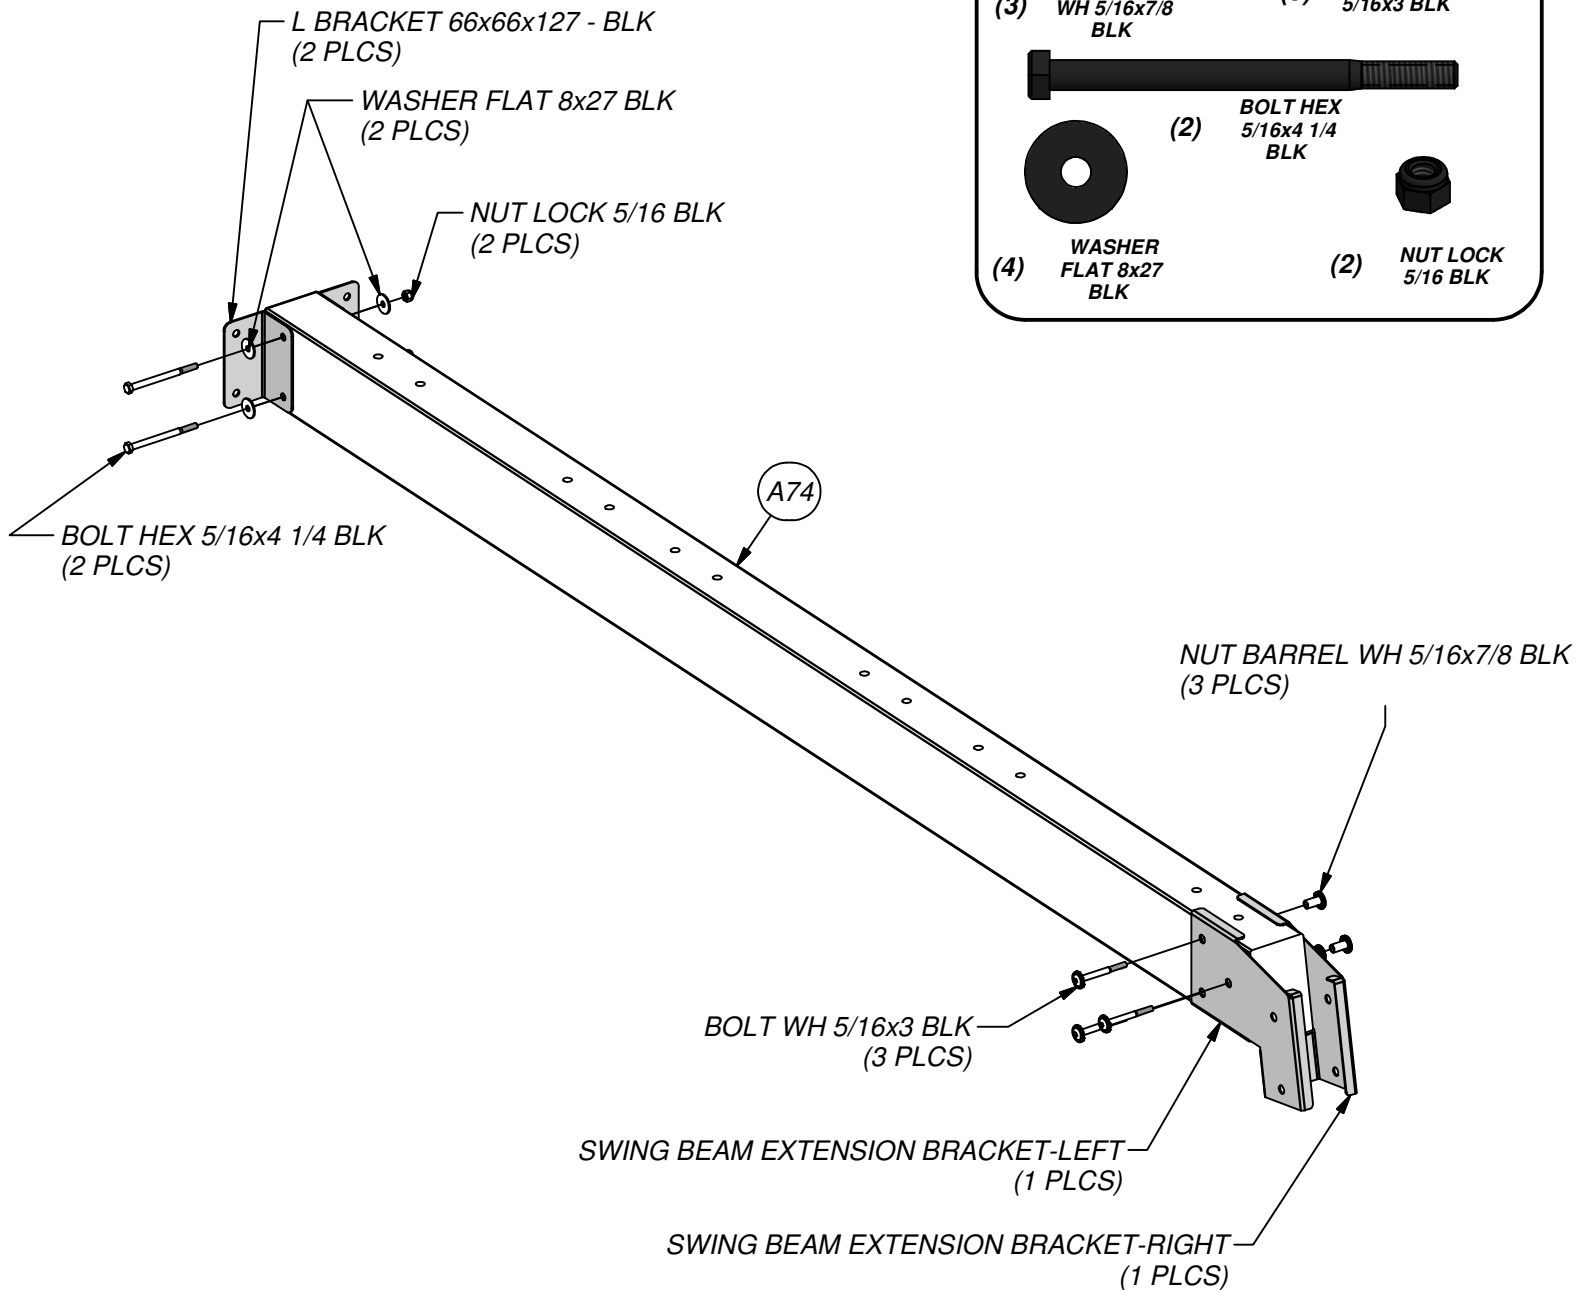


(1) **E79 - END SUPPORT - W4L11650**
1 1/2"x3 1/2"x42" (36x86x1072)

(1) **G80 - GROUND BOARD - W4L11649**
1"x5 1/4"x87 3/8" (24x134x2218)



(1) **SP1 - SWING BEAM SUPPORT - W4L11651**
3 3/8"x3 3/8"x49 5/8" (86x86x1260)


(2) **E77 - ANGLE BRACE - W4L11648**
1 3/8"x3 3/8"x73 1/8" (36x86x1859)

SWING BEAM ASSEMBLY STEP 2

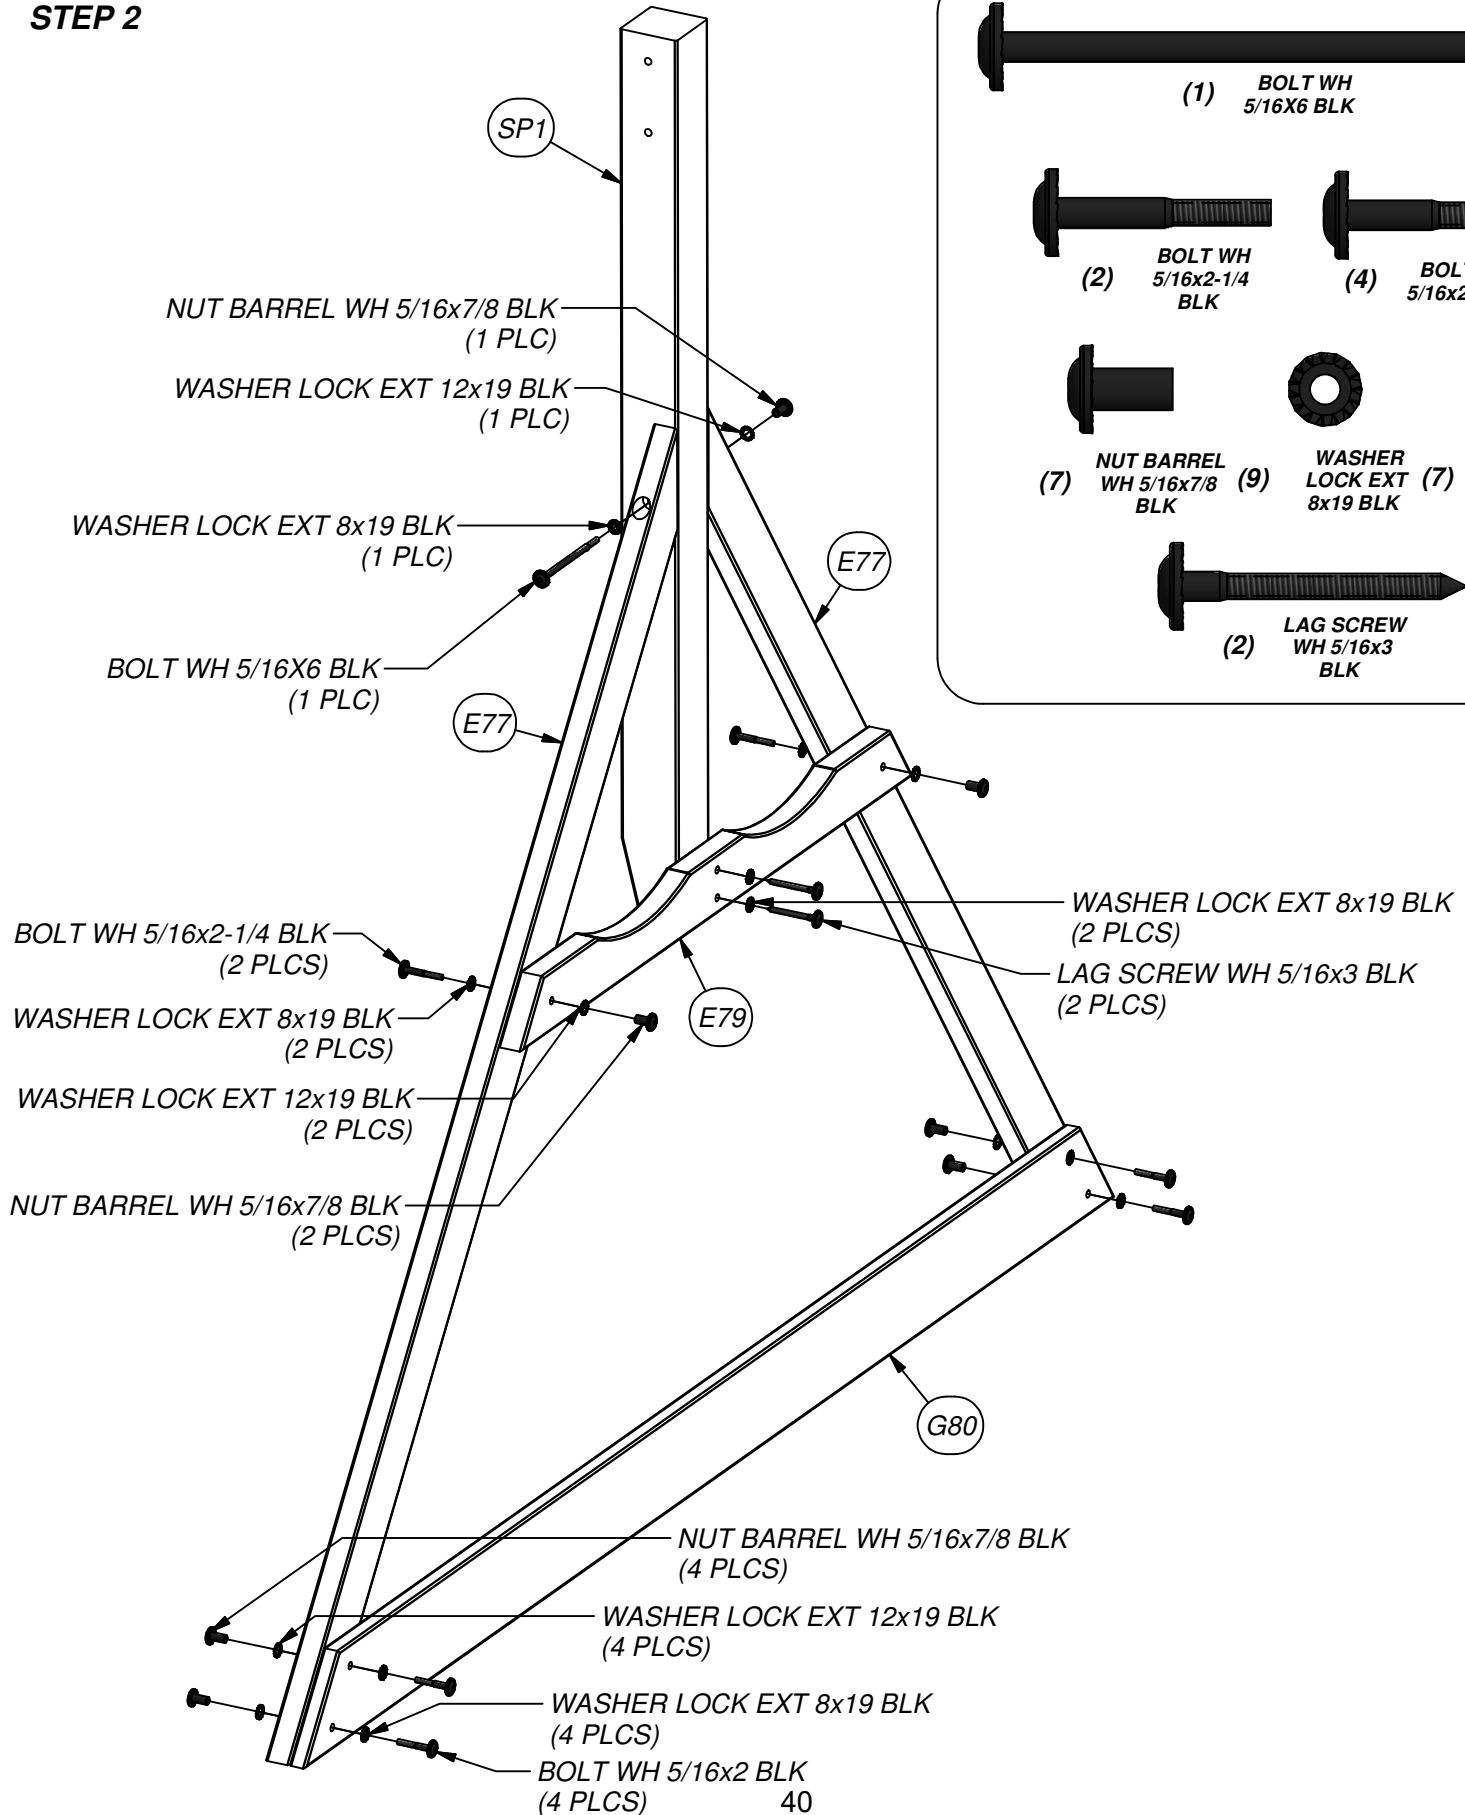

SWING BEAM ASSEMBLY
STEP 3

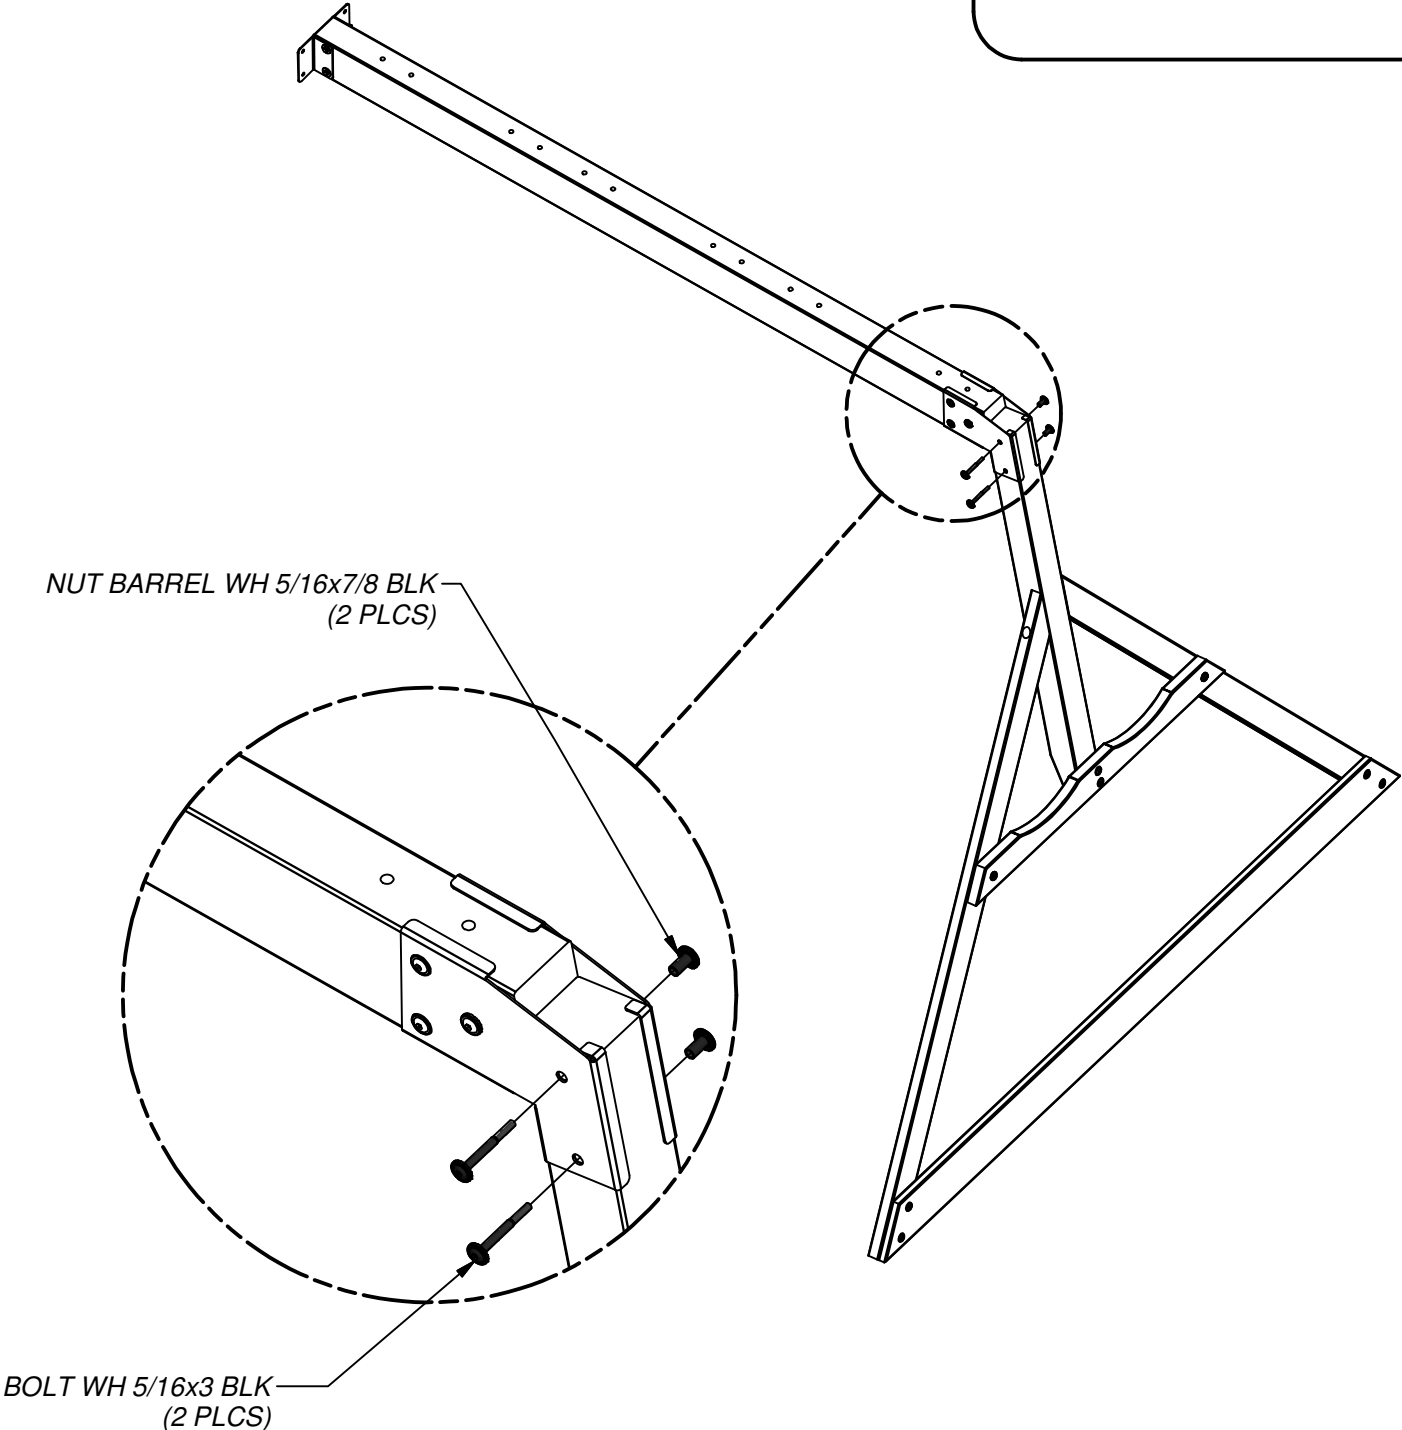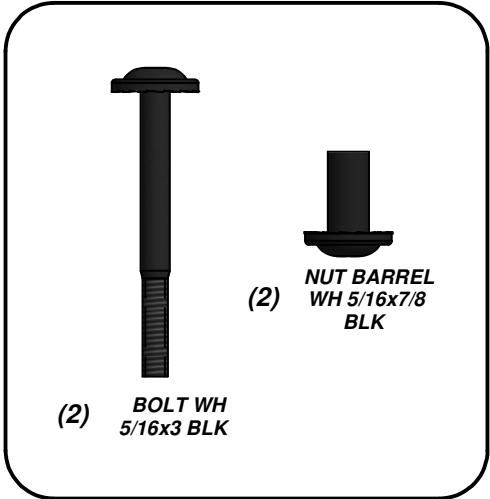

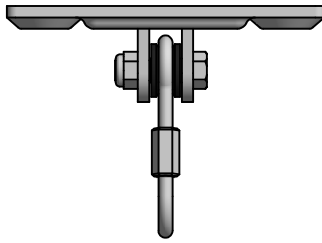

(6) *BY - SWING HANGER QUICK LINK - A4M00505-3*

 
SWING BEAM ASSEMBLY STEP 4



(12) *BOLT HEX
3/8x5-1/2*




(12) *T-NUT 3/8*




(12) *WASHER
FLAT 11x25*



 (12) *WASHER
LOCK INT
10x18*

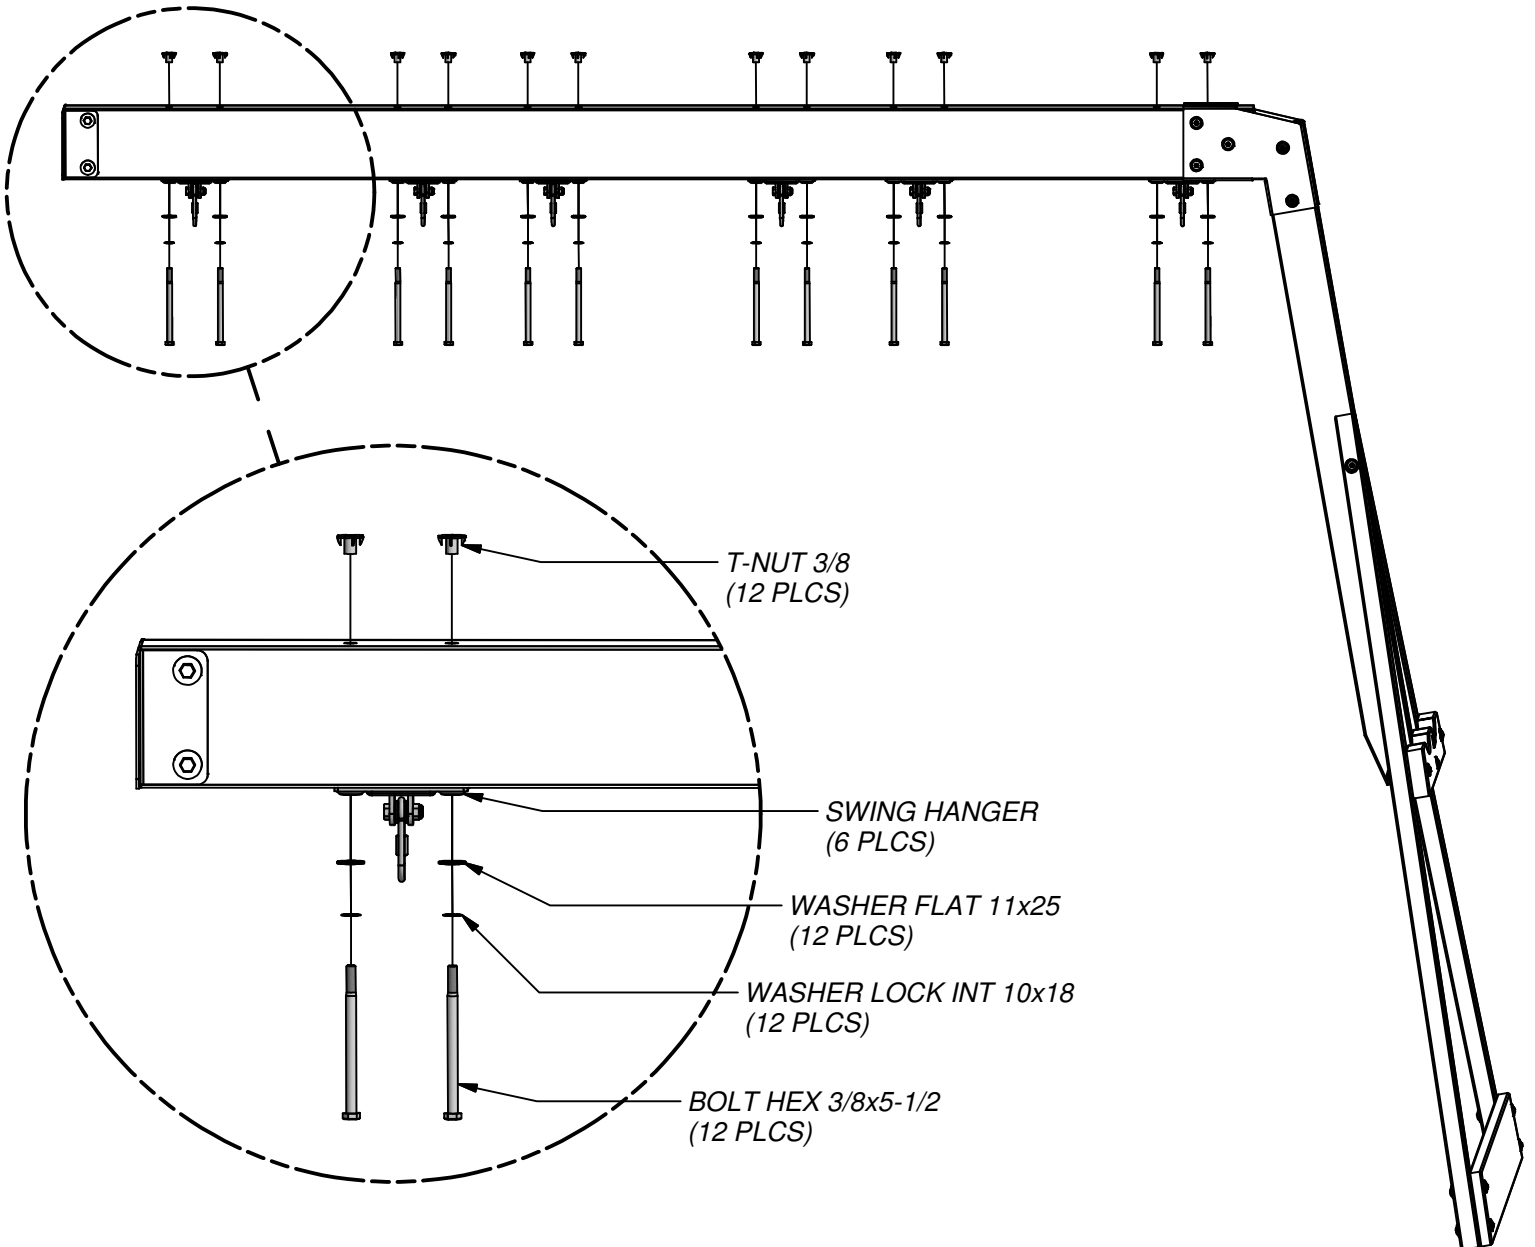



(1) **E7 - RIGHT REAR UPRIGHT - W4L11134**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



(1) **E9 - RIGHT FRONT UPRIGHT - W4L11136**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



(1) **K12 - ARCHED WALL RAIL - W4L11143**
5/8"x5 1/4"x40 5/8" (16x134x1032)



(1) **G1 - SWING BEAM MOUNT - W4L11137**
1"x5 1/4"x62 1/8" (24x134x1577)

STEP 1



NOTE: PAY CLOSE ATTN TO ALL BOARD FEATURES & HOLES FOR CORRECT PLACEMENT & ORIENTATION ON ALL STEPS.

BOLT WH 5/16x2-1/4 BLK
(4 PLCS)

WASHER LOCK EXT 8x19 BLK
(4 PLCS)



NOTE HOLE LOCATIONS

T-NUT 5/16 BLK
(14 PLCS)



(8) **WASHER
LOCK EXT
8x19 BLK**




(4) **BOLT WH
5/16x2-1/4
BLK**




(14) **T-NUT 5/16
BLK**




(4) **BOLT WH
5/16x2 BLK**

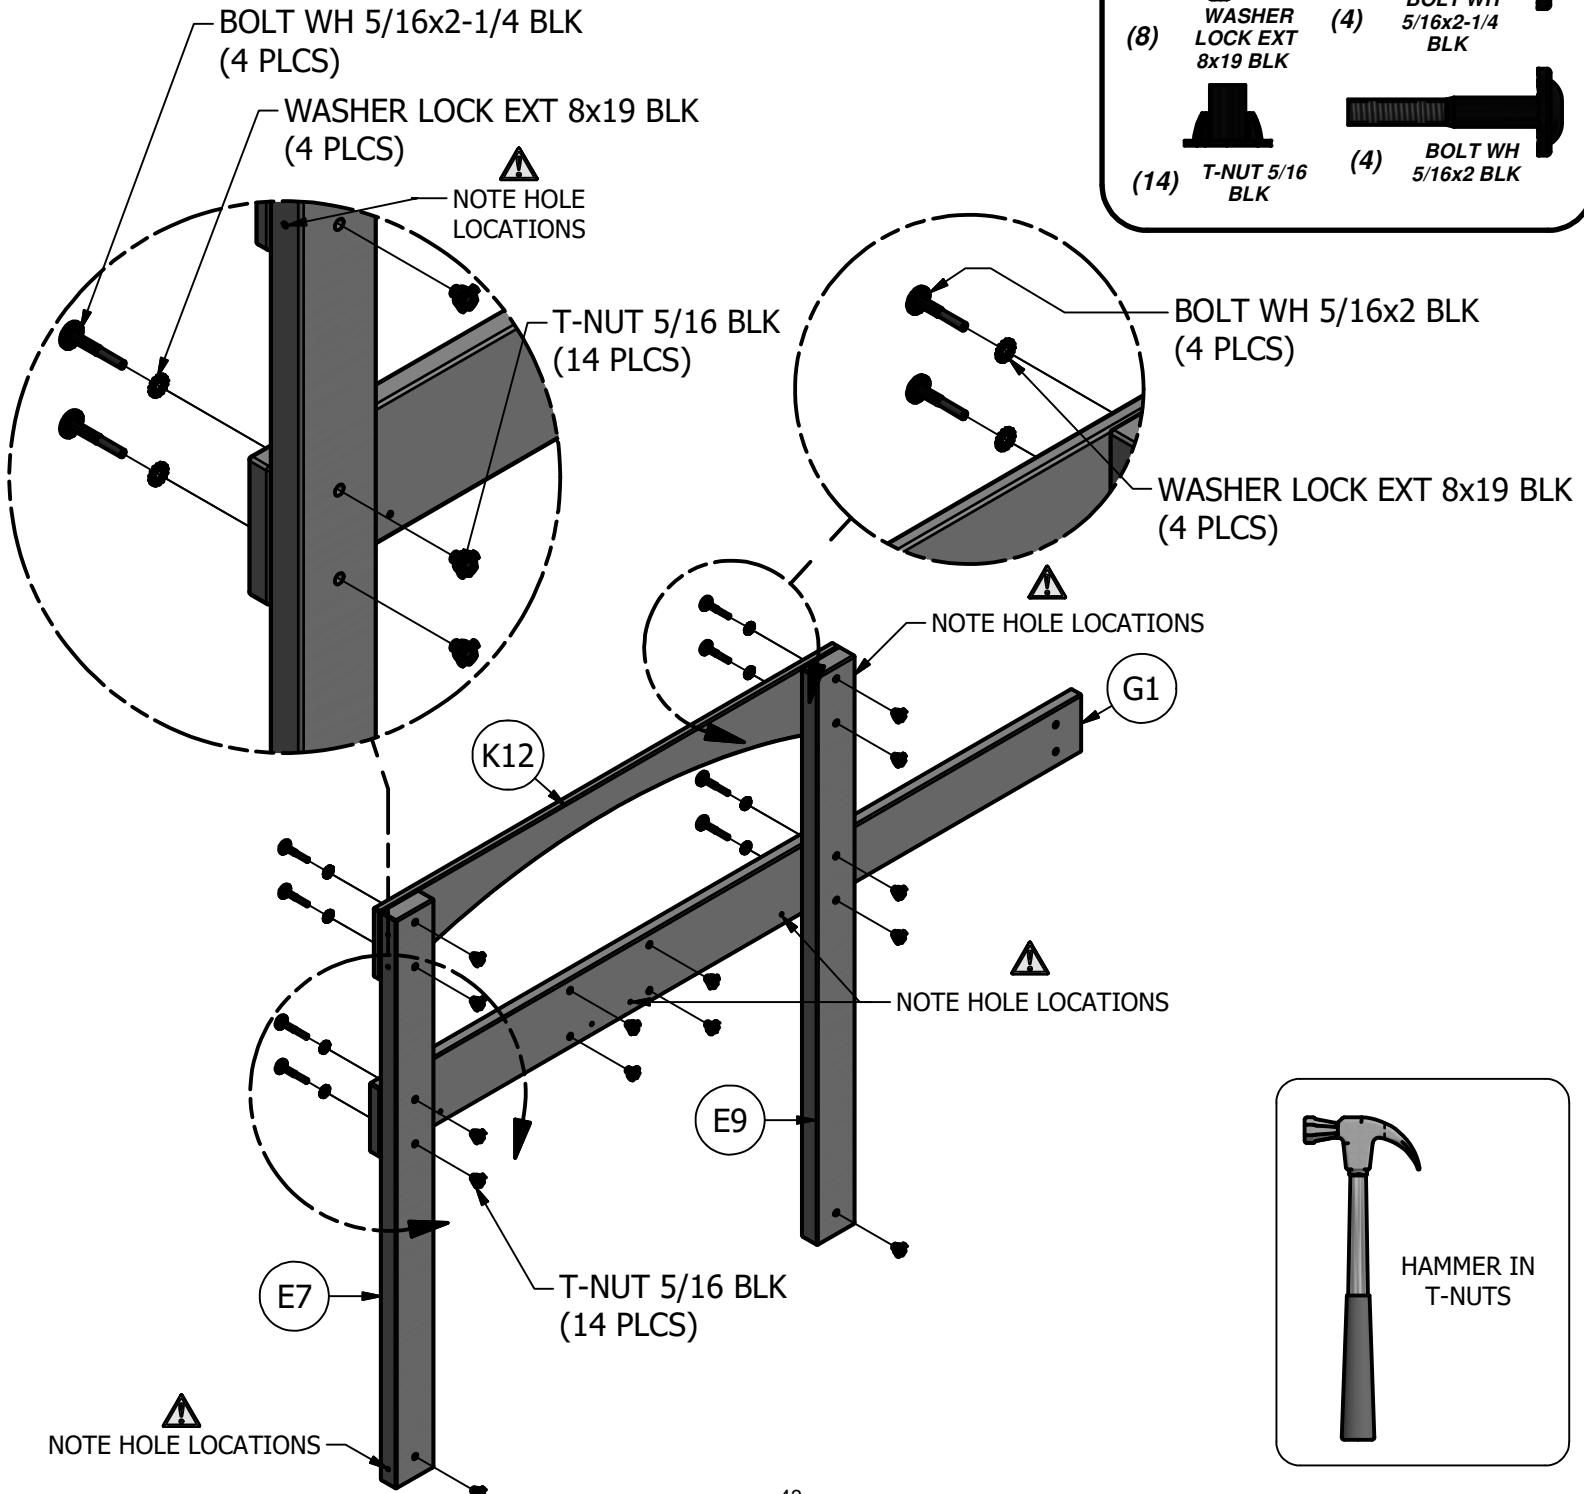

HAMMER IN
T-NUTS

 

 (1) E1 - RIGHT REAR UPRIGHT - W2A02496
1 3/8"x3 3/8"x51 3/4" (36x86x1314)



(1) K1 - GROUND BOARD - W4L11113
5/8"x5 1/4"x41 7/8" (16x134x1064)



(1) E4 - RIGHT FRONT UPRIGHT - W4L11119
1 3/8"x3 3/8"x51 3/4" (36x86x1314)









(1) - "A" REVISION TAG - A100314




(1) K5 - RIGHT CENTER WALL RAIL - W4L11120
5/8"x5 1/4"x62 3/4" (16x134x1593)

STEP 2

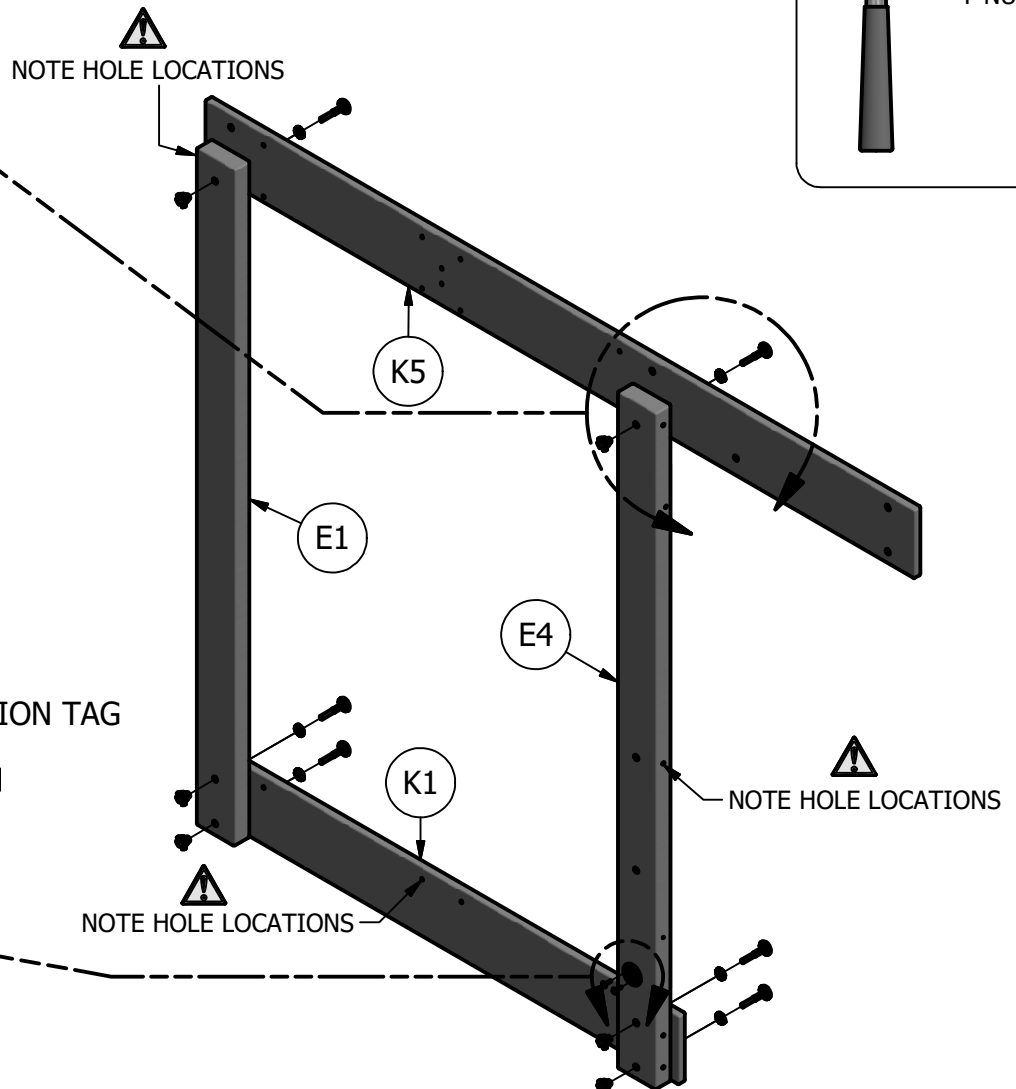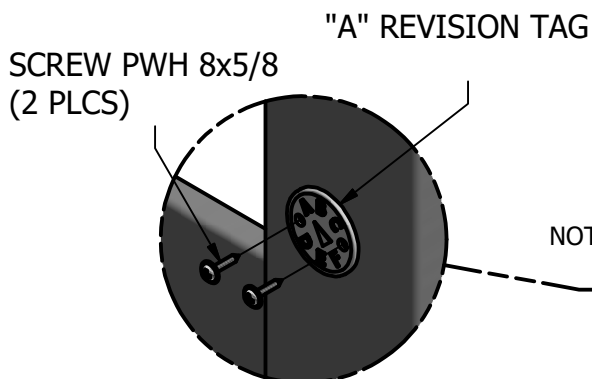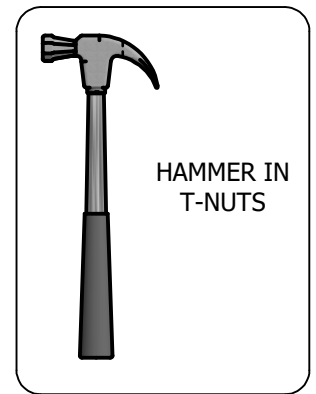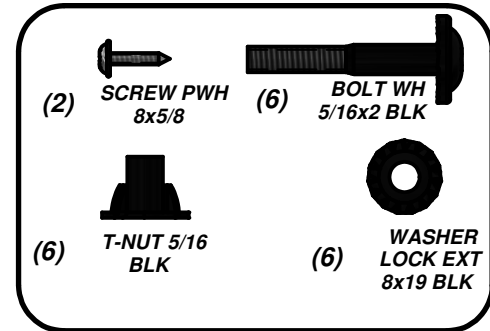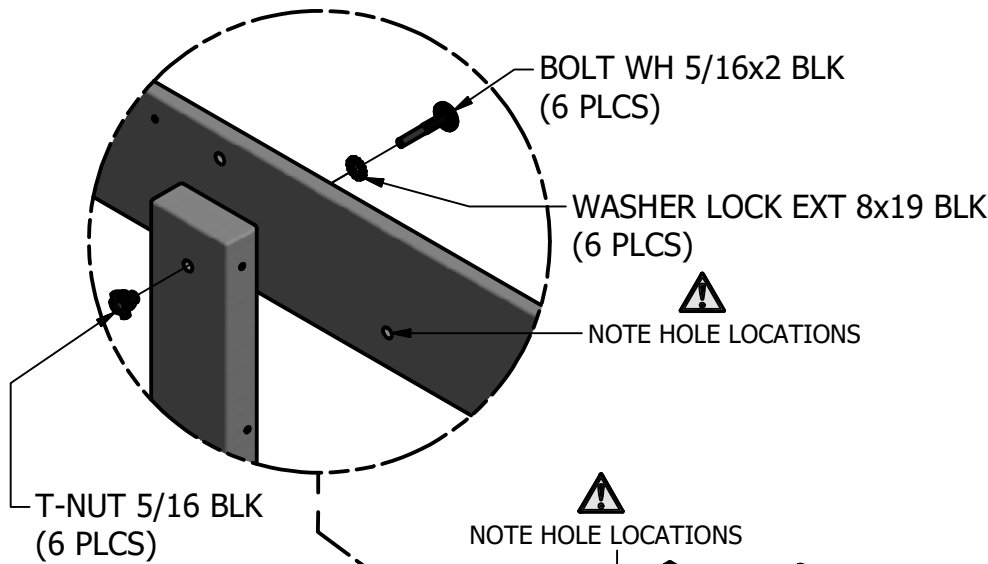


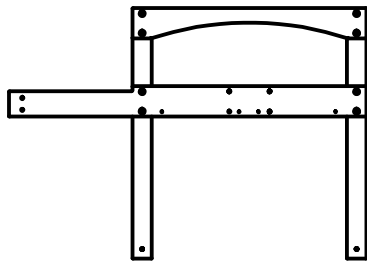



PRE-ASSEMBLED PARTS
FROM STEPS 1 & 2

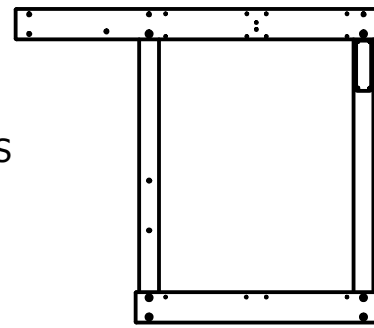


STEP 3

 ● **ASSEMBLE THE TOP AND BOTTOM OF THE RIGHT UPRIGHT.**

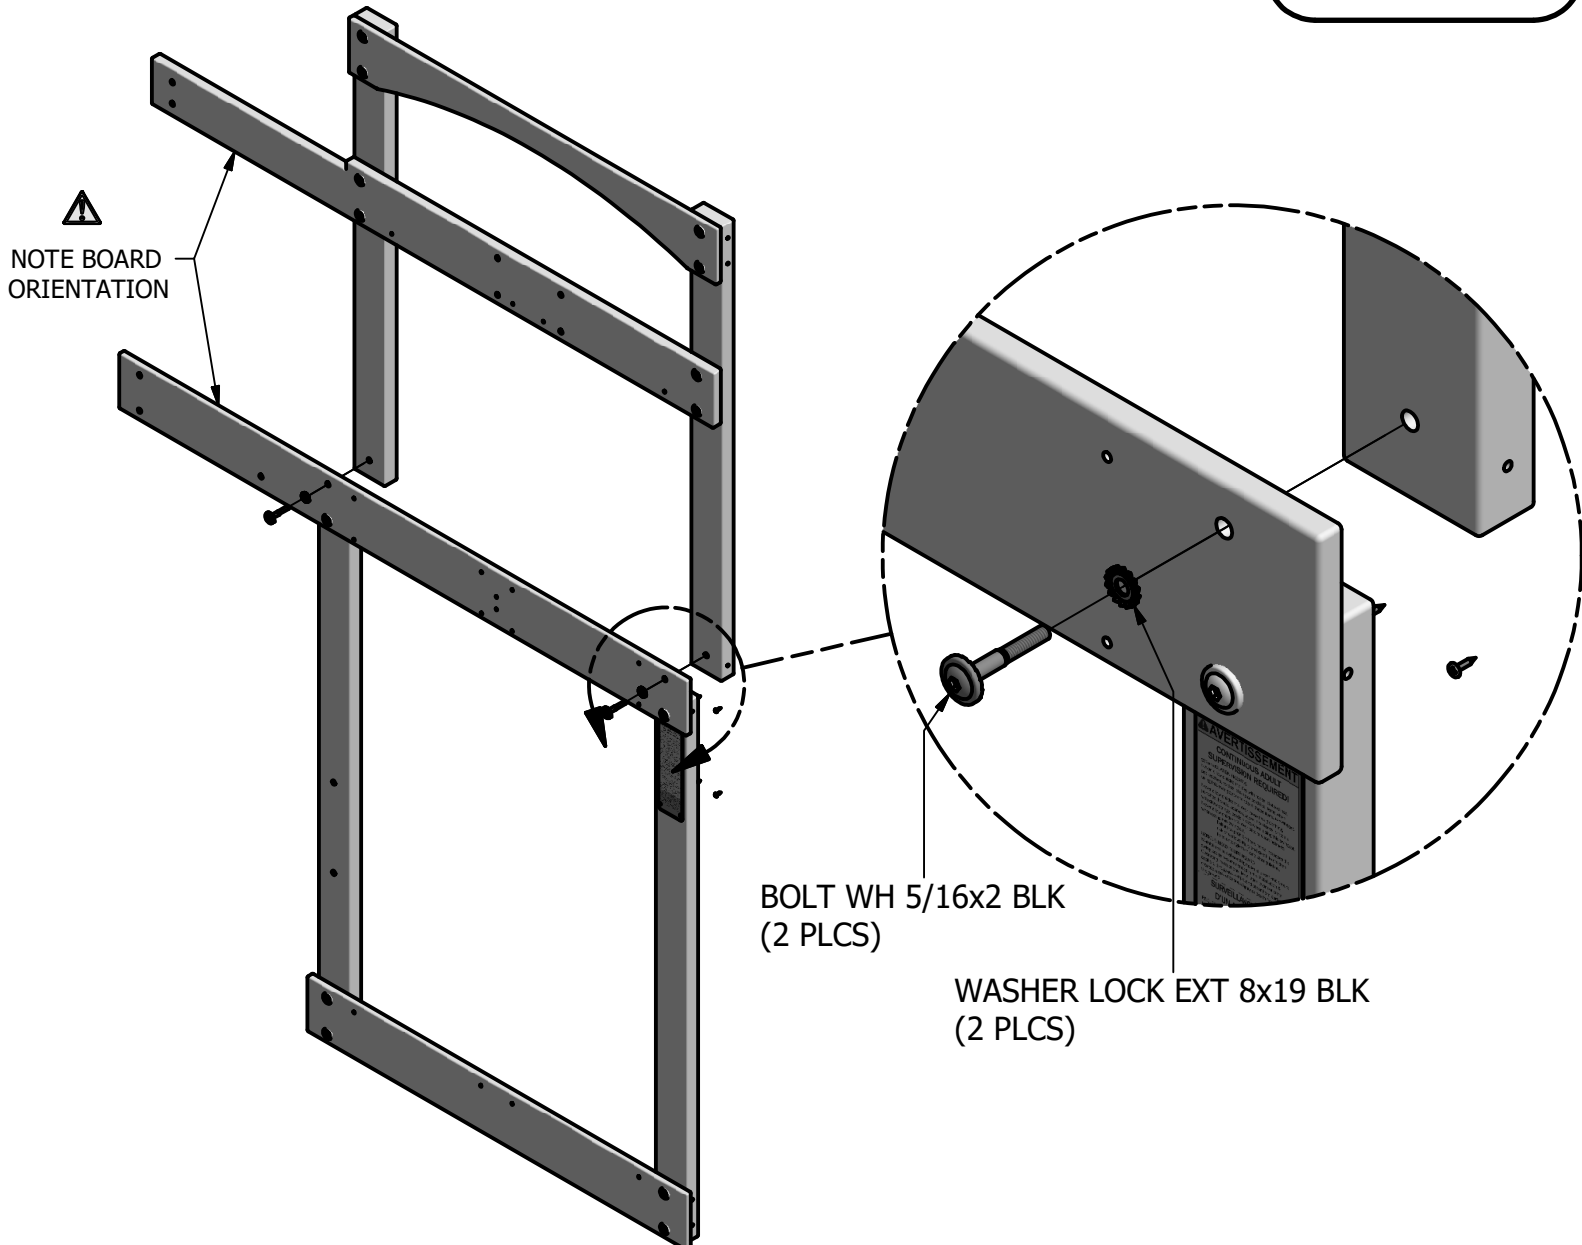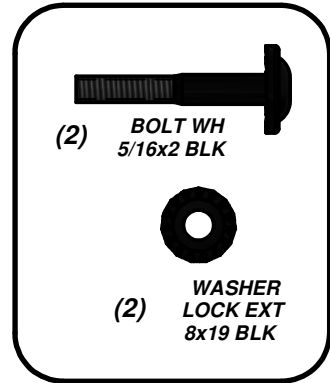



 
(1) **E2 - LEFT REAR UPRIGHT - W4L11117**
1 3/8"x3 3/8"x51 3/4" (36x86x1314)




(1) **E3 - LEFT FRONT UPRIGHT - W4L11118**
1 3/8"x3 3/8"x51 3/4" (36x86x1314)



 
(1) **E6 - LEFT REAR UPRIGHT - W4L11133**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



 (1) **E8 - LEFT FRONT UPRIGHT - W4L11135**
1 3/8"x3 3/8"x43 1/2" (36x86x1104)



 (1) **K2 - GROUND BOARD - W4L11114**
5/8"x5 1/4"x41 7/8" (16x134x1064)





(1) **K8 - LEFT CENTER WALL RAIL - W4L11123**
5/8"x5 1/4"x40 5/8" (16x134x1032)



(1) **K13 - ARCHED WALL RAIL - W4L11144**
5/8"x5 1/4"x40 5/8" (16x134x1032)


STEP 4

ASSEMBLE LEFT UPRIGHT

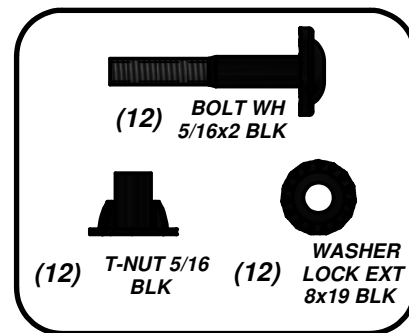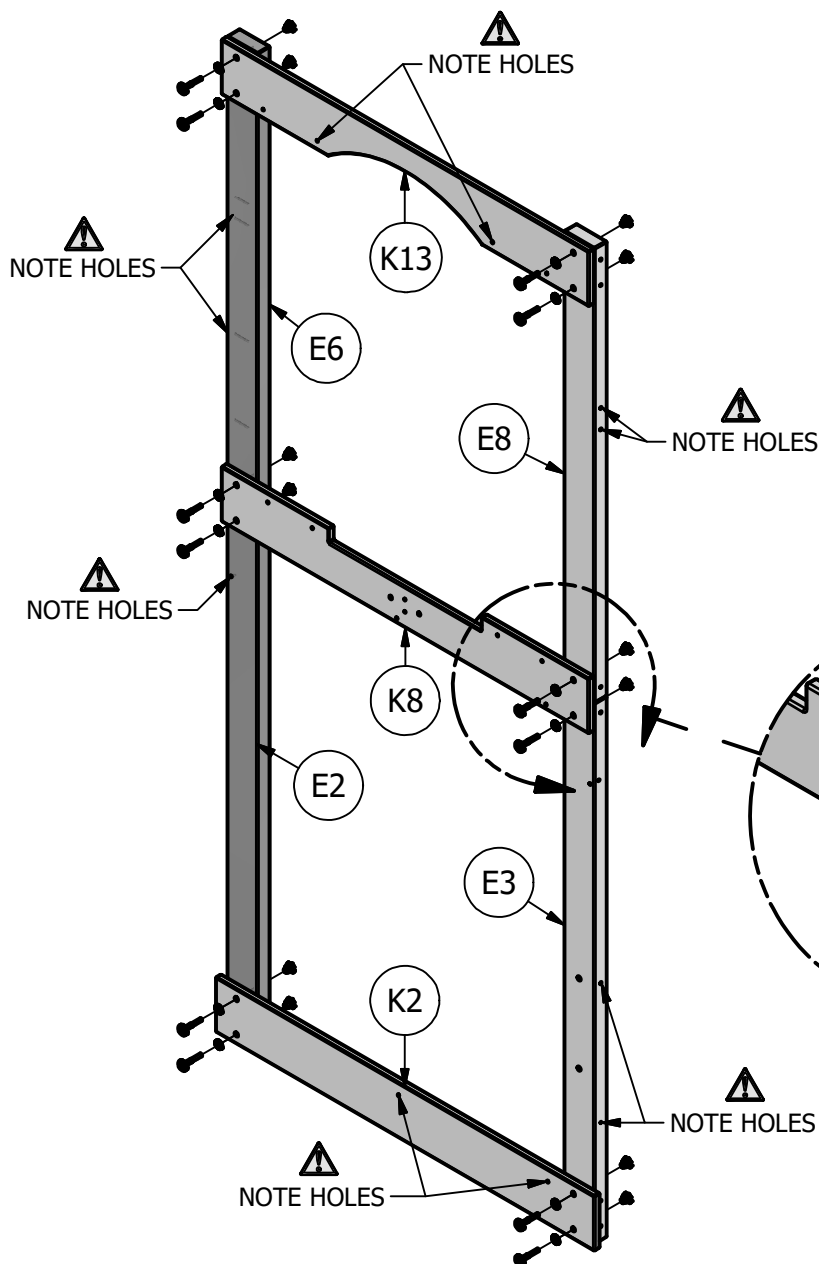



 
(1) **K15 - ANGLED WALL RAIL - W4L11146**
5/8"x5 1/4"x45 3/4" (16x134x1162)




(1) **K4 - GROUND BOARD - W4L11116**
5/8"x5 1/4"x40 1/2" (16x134x1030)



 
(1) **K6 - FRONT CENTER WALL RAIL - W4L11121**
5/8"x5 1/4"x61 3/8" (16x134x1560)



 (1) **J1 - PORCH GROUND BOARD - W4L11128**
1"x2 3/8"x40 1/2" (24x60x1030)



(1) **M1 - WALL RAIL - W4L11154**
5/8"x3 3/8"x40 1/2" (16x86x1030)

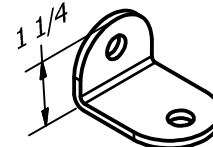

(1) **- L BRACKET BLACK 32x51 - A4M00710**

STEP 5

LAG SCREW WH 5/16x1-1/2 BLK
(4 PLCS)

WASHER LOCK EXT 8x19 BLK
(4 PLCS)

K15

K6

M1

K4

J1



LAG SCREW
(10) WH 5/16x1-1/2 BLK




WASHER LOCK EXT
8x19 BLK



LAG SCREW
(1) WH 5/16x2 BLK



LAG SCREW
(2) WH 5/16x3 BLK

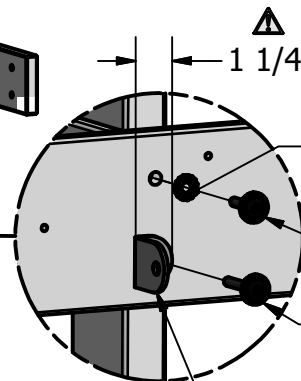

WASHER LOCK EXT 8x19 BLK
(2 PLCS)

LAG SCREW WH 5/16x1-1/2 BLK
(2 PLCS)

LAG SCREW WH 5/16x2 BLK
(1 PLCS)

L BRACKET BLACK 32x51
(1 PLCS)

HOLES LOCATED TOWARD BOTTOM OF BOARD

WASHER LOCK EXT 8x19 BLK
(2 PLCS)

 
LAG SCREW WH 5/16x1-1/2 BLK
(2 PLCS)

NOTE HOLES


WASHER LOCK EXT 8x19 BLK
(4 PLCS)

LAG SCREW WH 5/16x1-1/2 BLK
(2 PLCS)


LAG SCREW WH 5/16x3 BLK
(2 PLCS)



 (1) **K14 - ANGLED WALL RAIL - W4L11145**
5/8"x5 1/4"x45 3/4" (16x134x1162)




 (1) **K3 - GROUND BOARD - W4L11115**
5/8"x5 1/4"x40 1/2" (16x134x1030)




(1) **K7 - REAR CENTER WALL RAIL - W4L11122**
5/8"x5 1/4"x61 3/8" (16x134x1560)

STEP 6

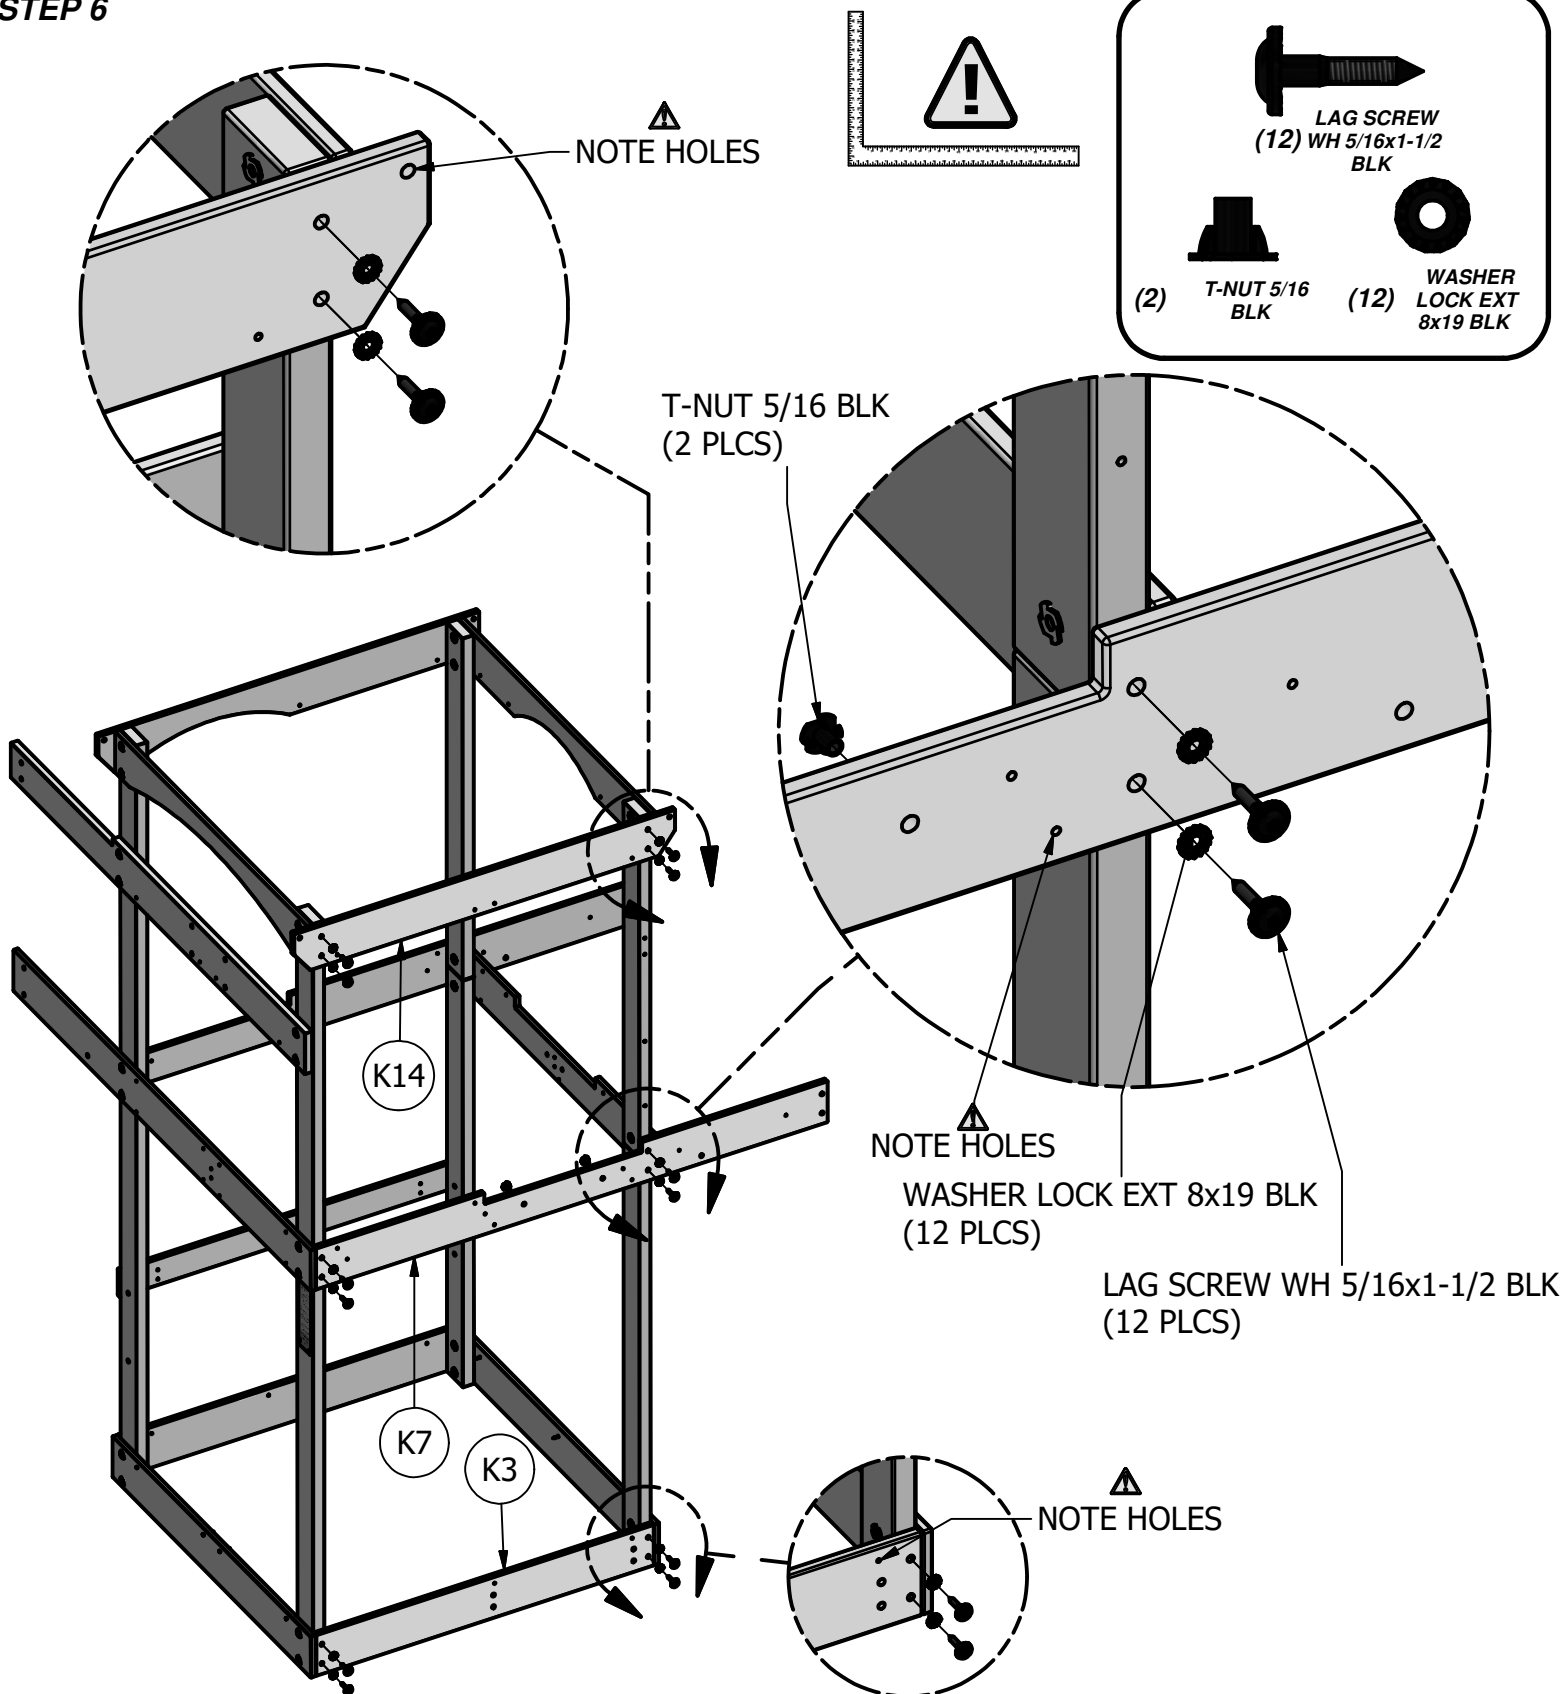




(1) **L2 - WALL RAIL - W4L11139**
5/8"x4 3/8"x23 1/4" (16x112x590)

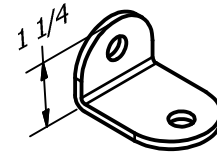

 
(1) - **L BRACKET BLACK 32x51 - A4M00710**



(1) **L4 - ARCHED WALL RAIL - W4L11141**
5/8"x4 3/8"x43 3/8" (16x112x1103)


STEP 7

L BRACKET BLACK 32x51
(1 PLC)



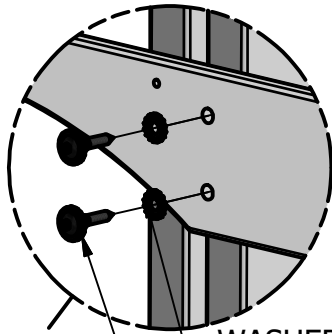



WASHER LOCK EXT 8x19 BLK
(3 PLCS)

LAG SCREW WH 5/16x1-1/2 BLK
(3 PLCS)

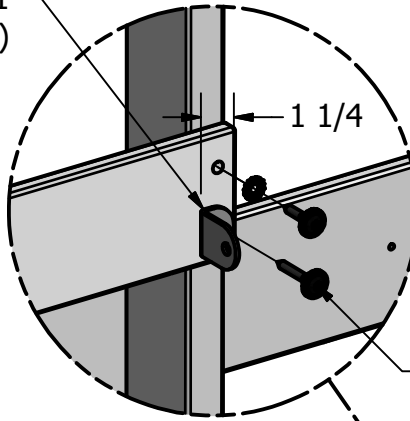

LAG SCREW WH 5/16x2 BLK
(1 PLC)

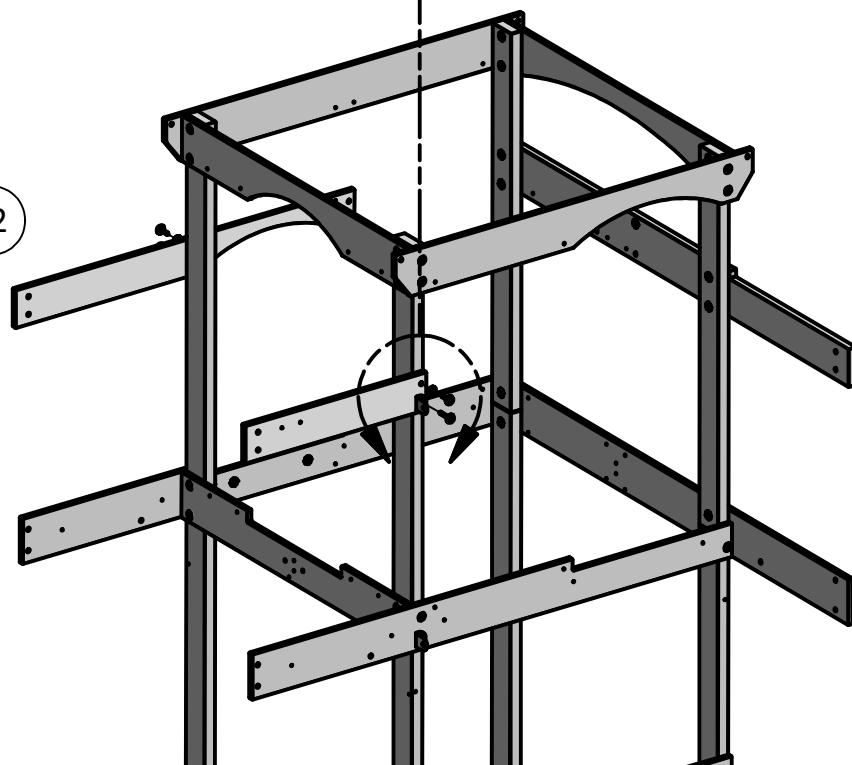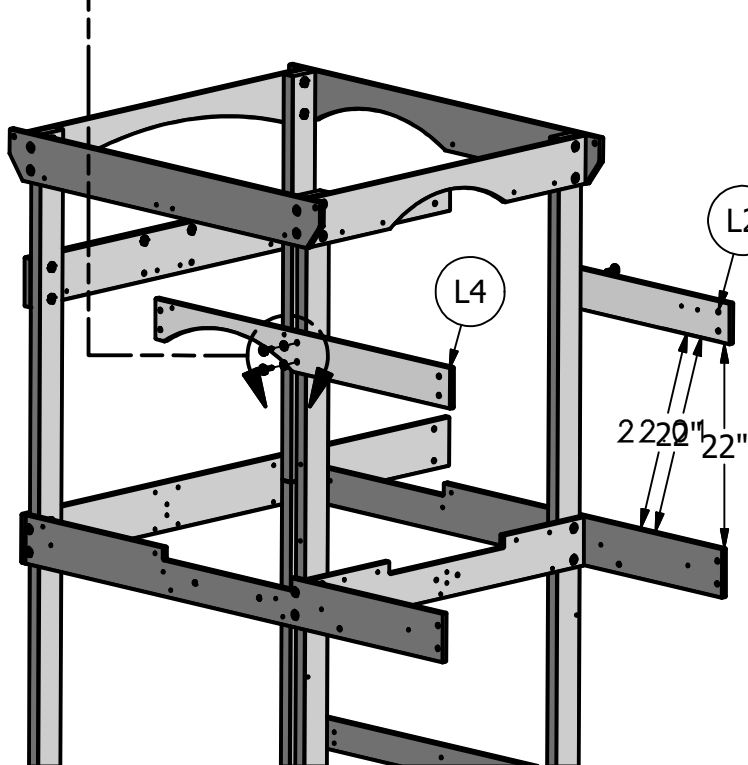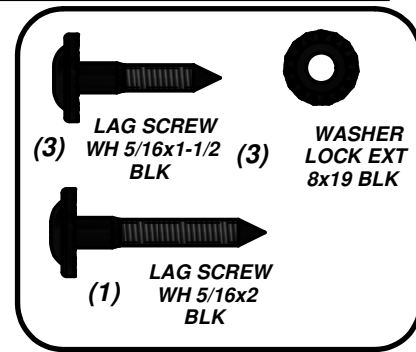


 

(1) **Q1 - ARCHED WALL RAIL - W4L11142**
1"x4 3/8"x40 5/8" (24x112x1032)



 (1) **F1 - RIGHT BALCONY UPRIGHT - W4L11130**
1 3/8"x2 3/8"x31 3/4" (36x60x805)





(1) **K11 - LEFT SIDE WALL BOARD - W4L11132**
5/8"x5 1/4"x41 7/8" (16x134x1064)




(1) **F2 - LEFT BALCONY UPRIGHT - W4L11131**
1 3/8"x2 3/8"x31 3/4" (36x60x805)


STEP 8

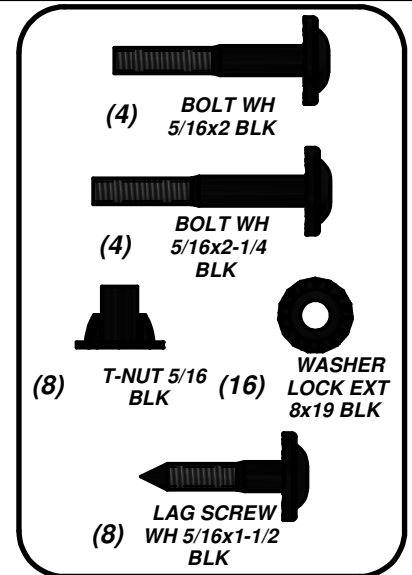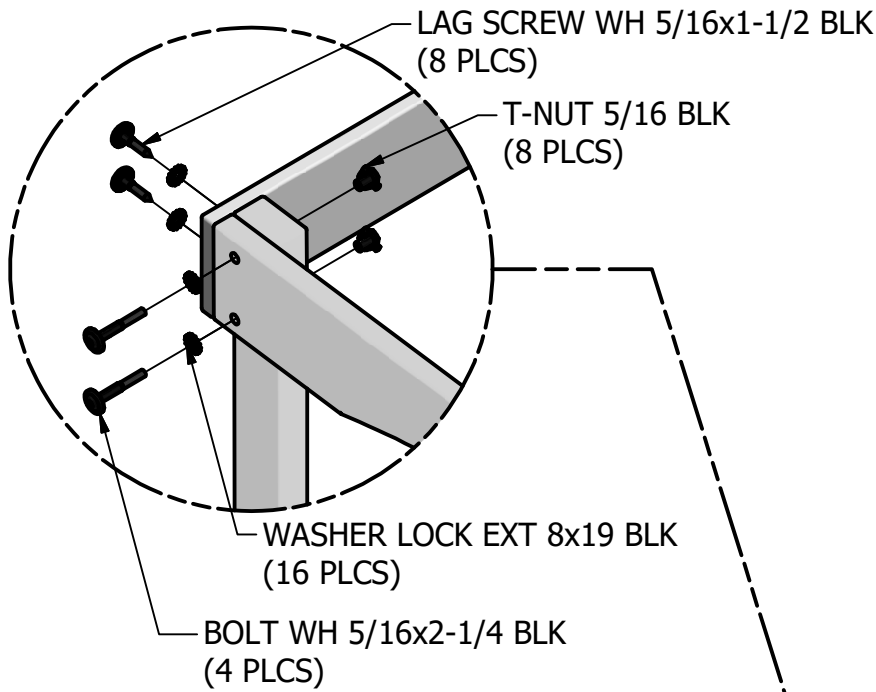

FRONT VIEW

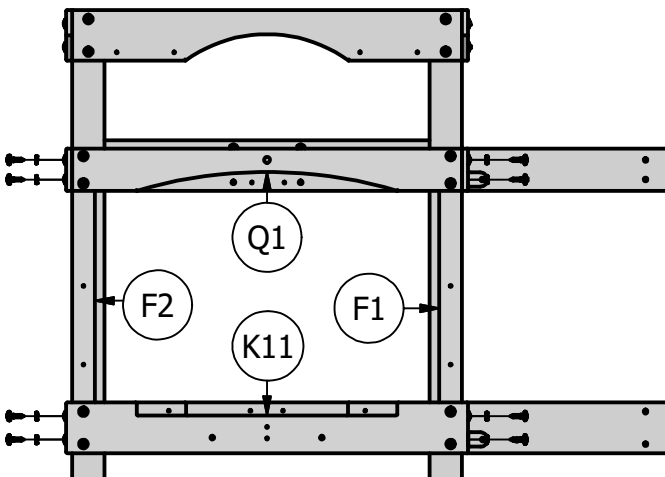



TOP VIEW

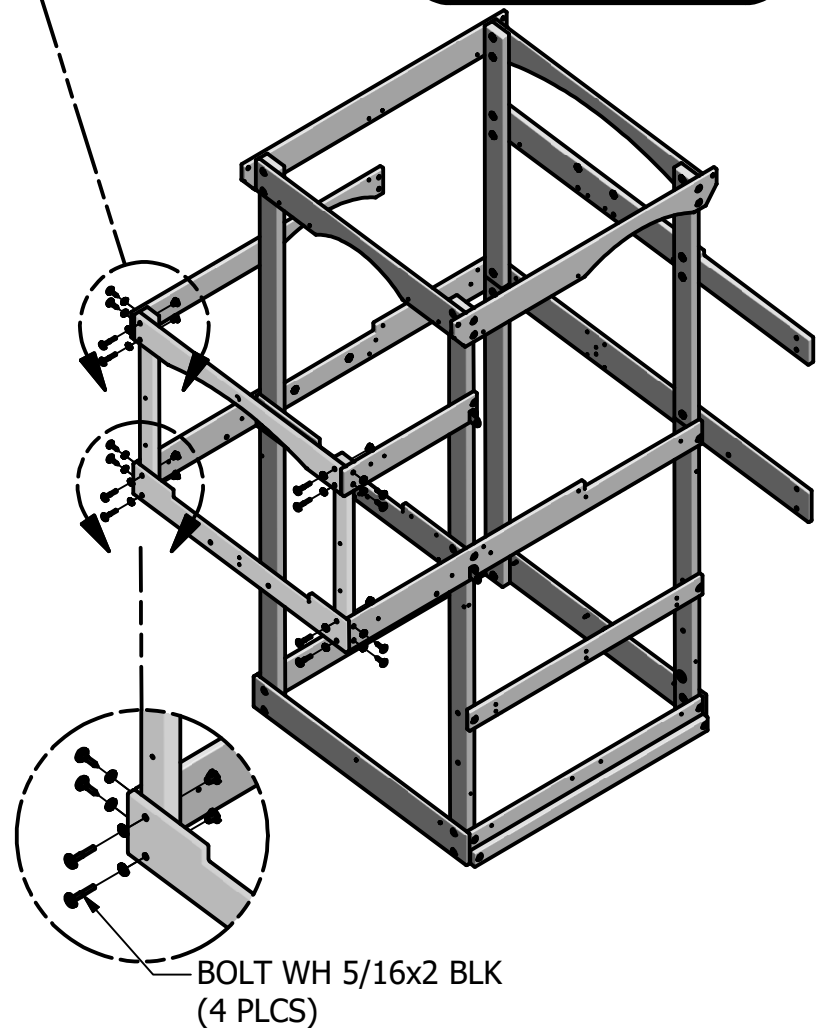




(2) **H4 - DECK BRACE - W4L11156**
1"x3 3/8"x12 3/4" (24x86x325)

STEP 9

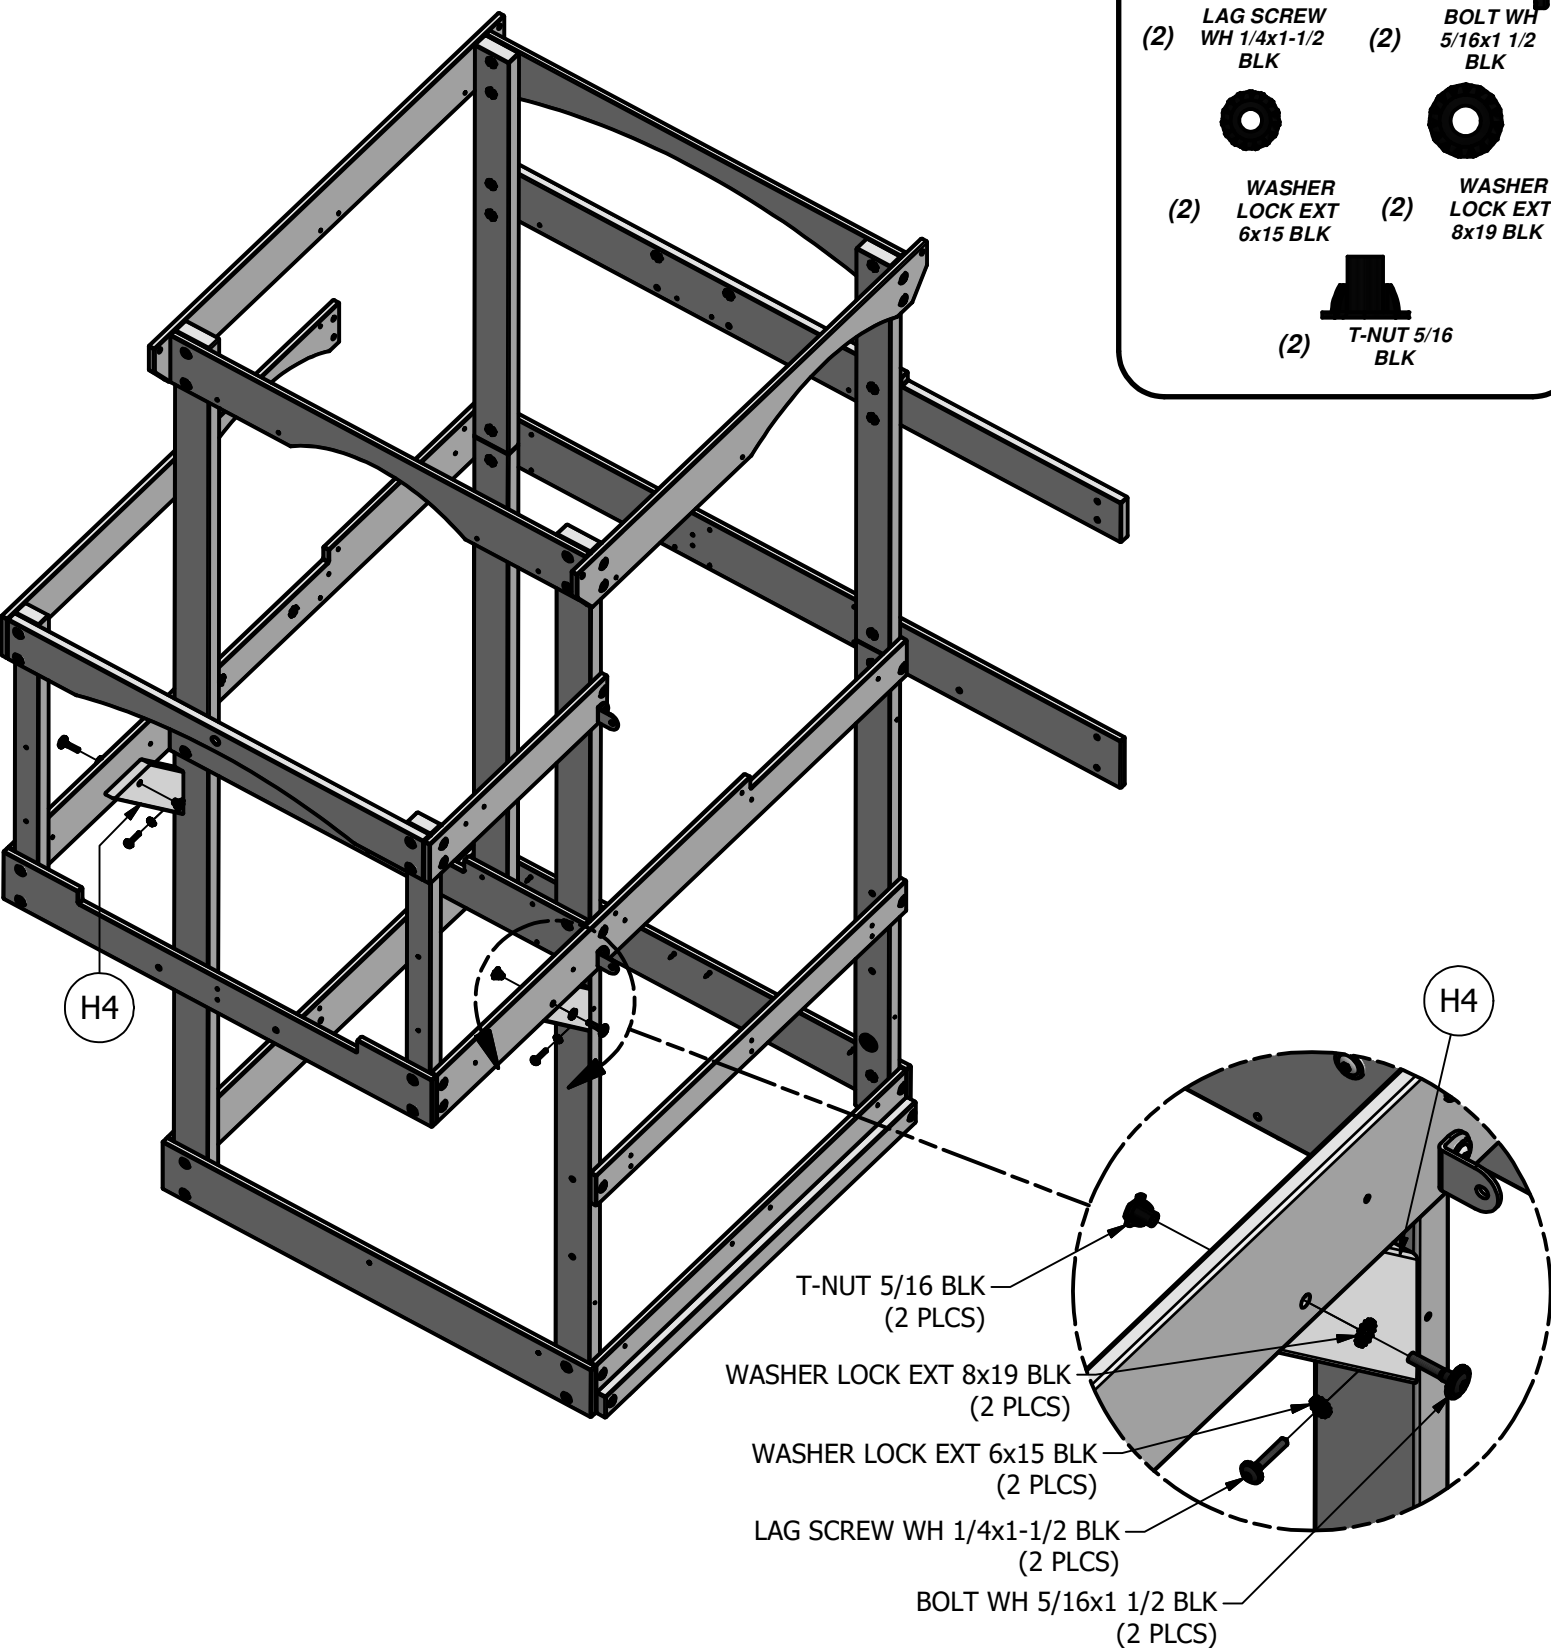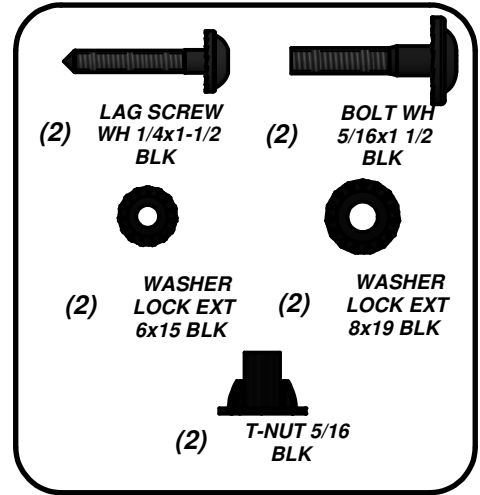



 (1) **K9 - LEFT BALCONY WALL RAIL - W4L11124**
5/8"x5 1/4"x20 3/4" (16x134x528)




(1) **L3 - WALL RAIL - W4L11140**
5/8"x4 3/8"x20 7/8" (16x112x529)



(2) **N1 - PORCH GROUND BOARD - W4L11127**
5/8"x2 3/8"x21 1/8" (16x60x537)

STEP 10

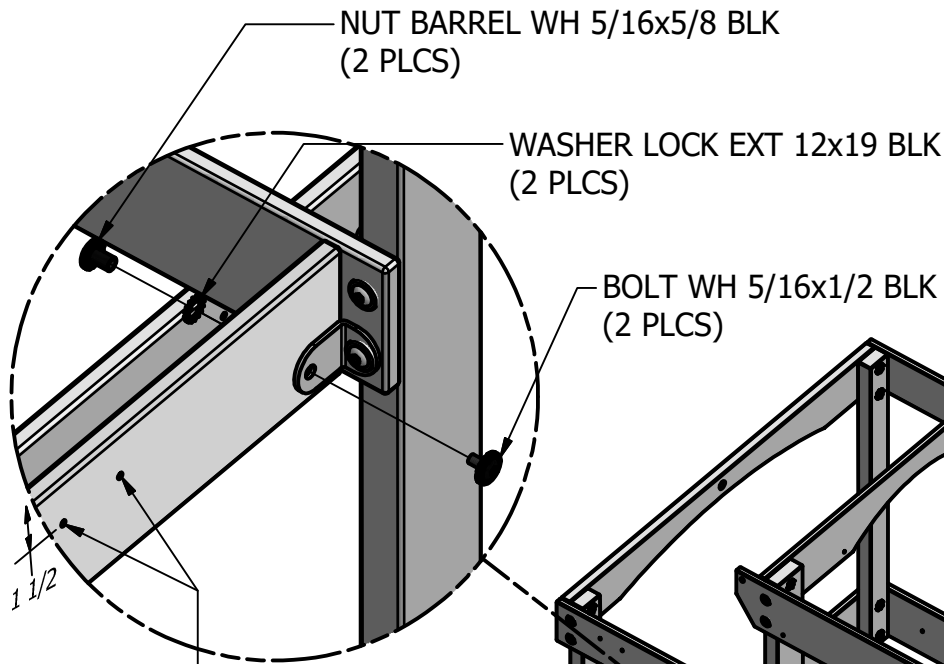


⚠
NOTE HOLES ARE
ABOVE CENTER OF BOARD

⚠
NOTE SMALL HOLE LOCATION

L3


K9

SCREW PFH 8x1-1/2 BLK
(4 PLCS)

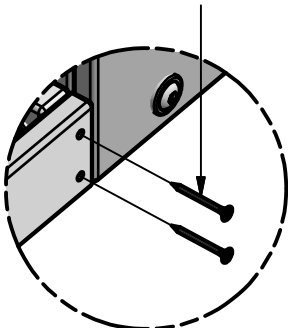


N1

N1

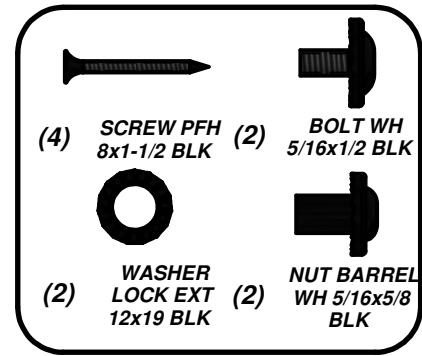



 
(1) **E5 - RIGHT FRONT BALCONY UPRIGHT - W4L11126**
1 3/8"x3 3/8"x80 3/4" (36x86x2052)



(1) **E11 - RIGHT FRONT BALCONY UPRIGHT - W4L11157**
1 3/8"x3 3/8"x80 3/4" (36x86x2052)


STEP 11

•INSTALL T-NUTS INTO PARTS BEFORE ASSEMBLY OF PARTS.

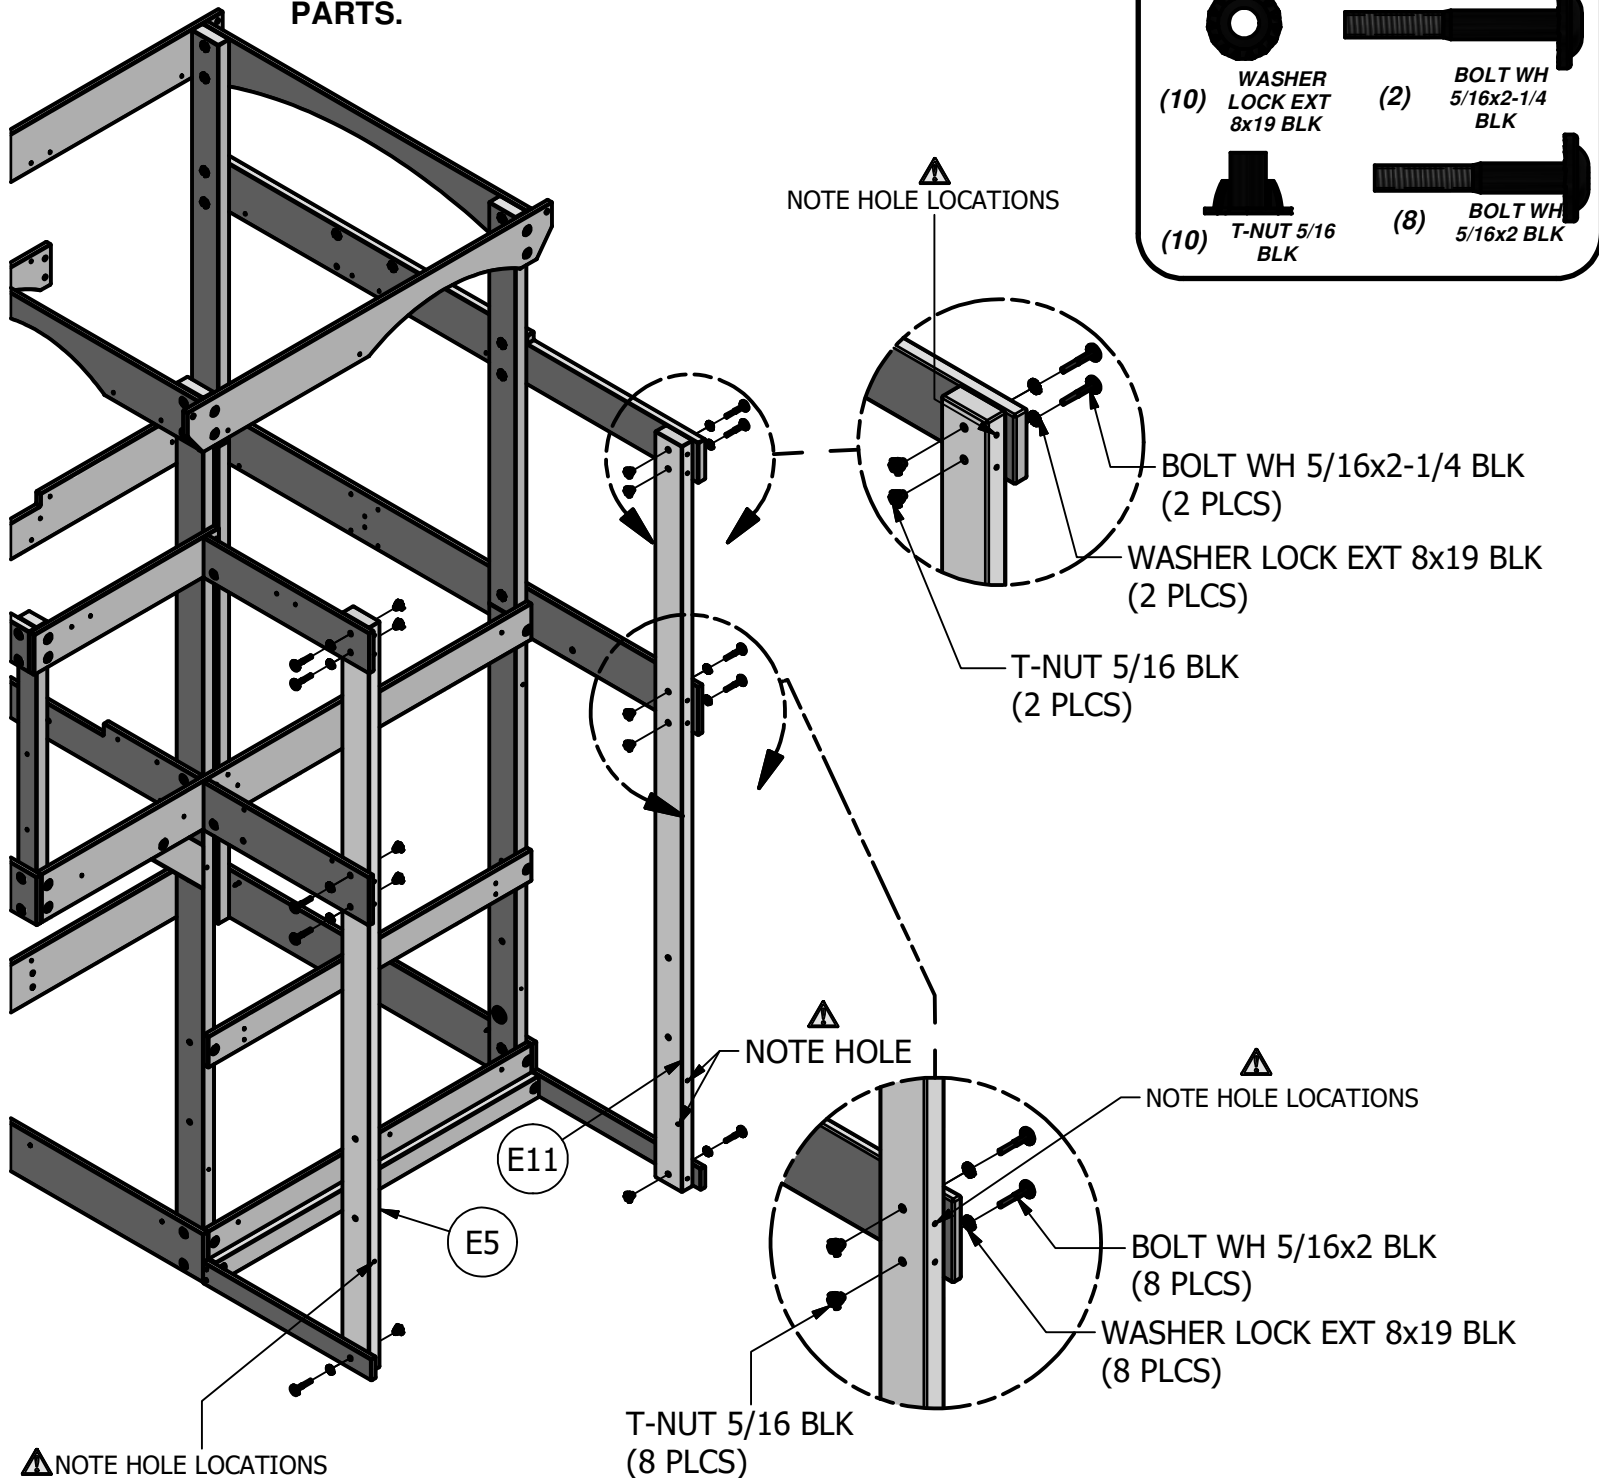




 (1) **J2 - PORCH GROUND BOARD - W4L11129**
1"x2 3/8"x40 5/8" (24x60x1032)





 (1) **L1 - ARCHED WALL RAIL - W4L11138**
5/8"x4 3/8"x40 5/8" (16x112x1032)




(1) **K10 - FRONT BALCONY WALL RAIL - W4L11125**
5/8"x5 1/4"x40 5/8" (16x134x1032)

STEP 12

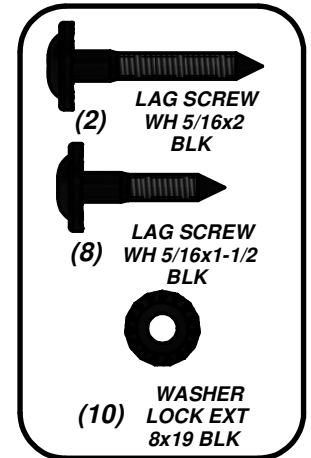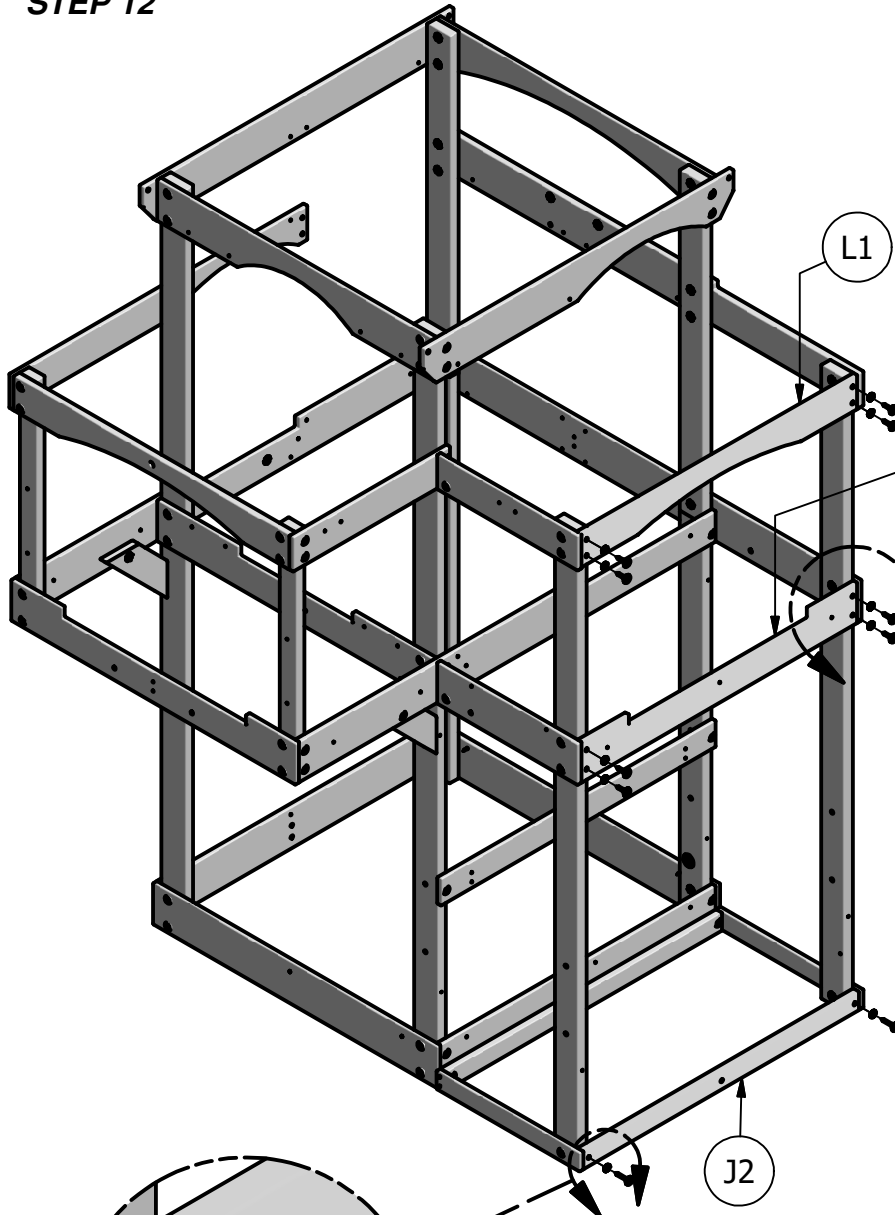

WASHER LOCK EXT 8x19 BLK
(8 PLCS)

LAG SCREW WH 5/16x1-1/2 BLK
(8 PLCS)

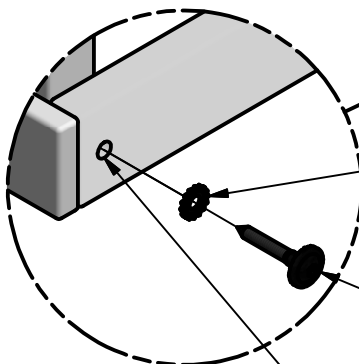

WASHER LOCK EXT 8x19 BLK
(2 PLCS)




LAG SCREW WH 5/16x2 BLK
(2 PLCS)

NOTE PILOT HOLES



(2) **H4 - DECK BRACE - W4L11156**
 1"x3 3/8"x12 3/4" (24x86x325)

STEP 13

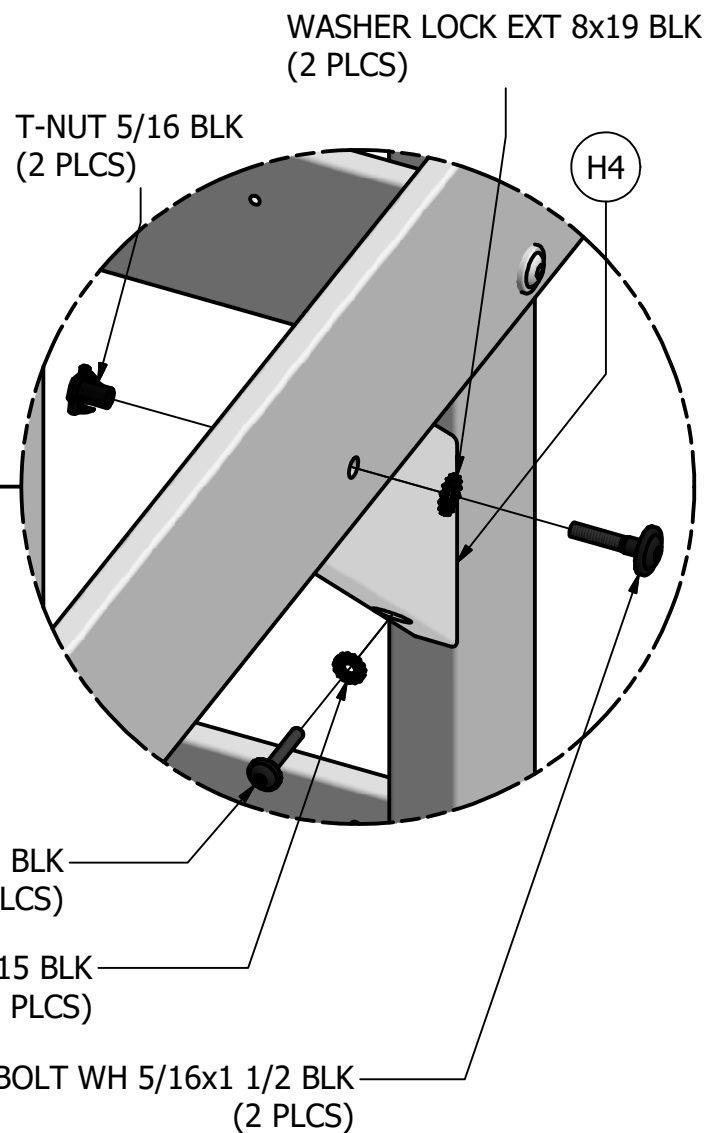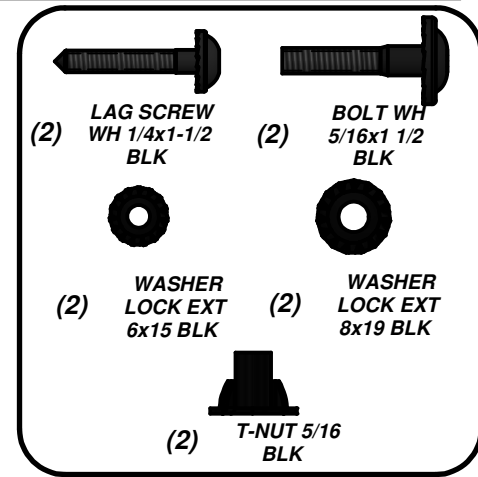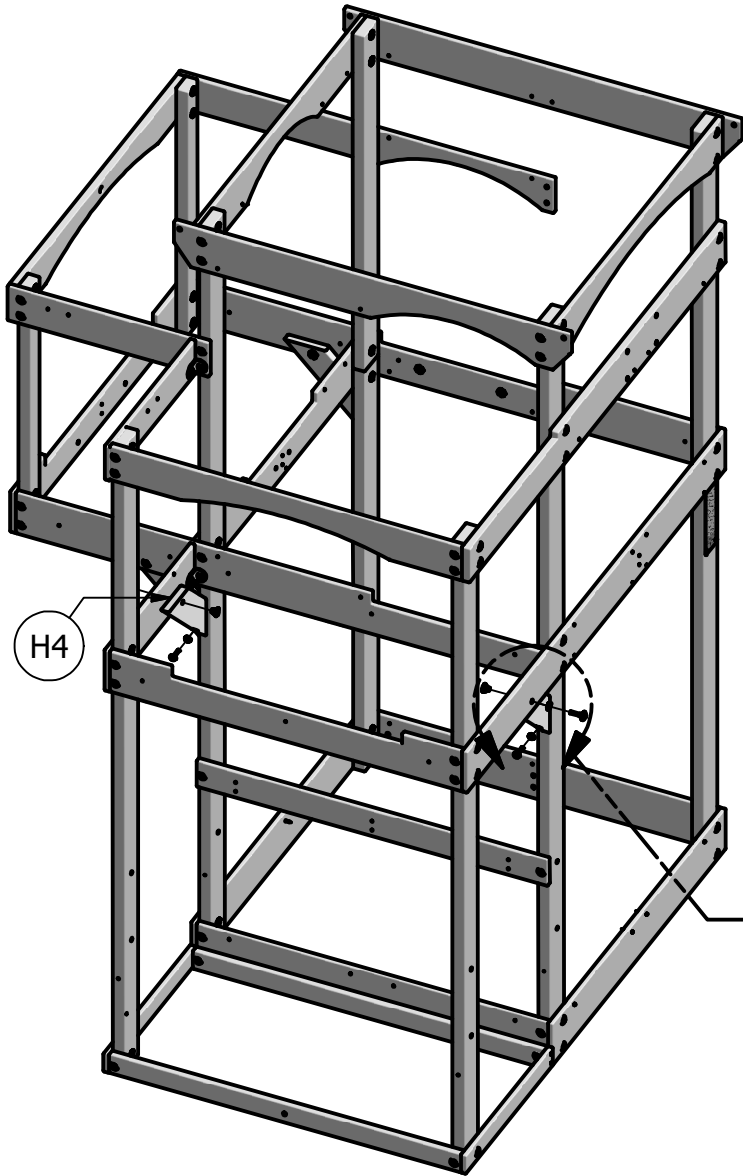





(2) **T1 - SUPPORT BOARD - W4L07599**
1"x1 3/8"x37 5/8" (24x34x957)



(1) **J8 - FLOOR JOIST - W4L07602**
1"x2 3/8"x40 1/2" (24x60x1029)


STEP 14

**INSTALL
CENTER FLOOR SUPPORTS**

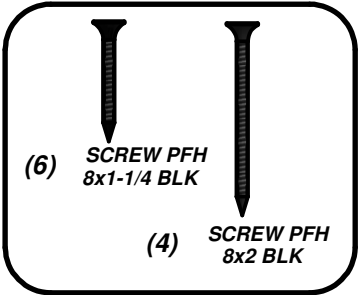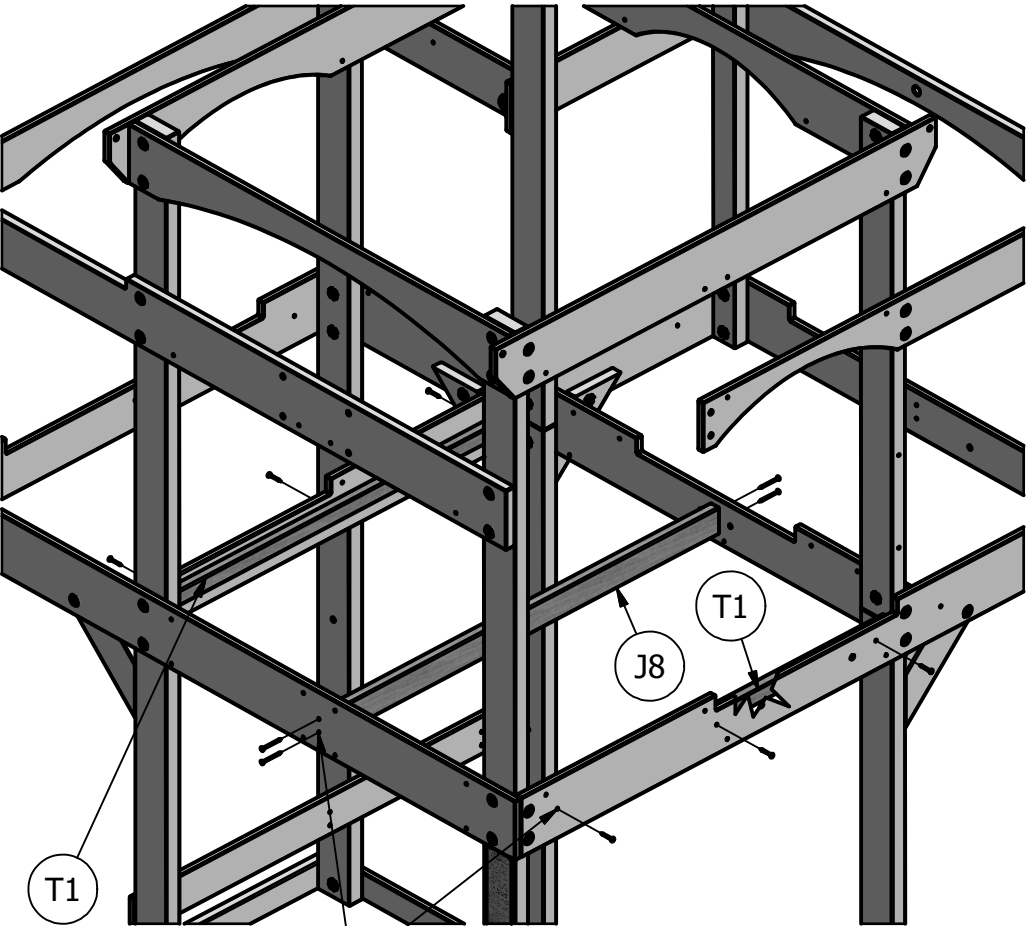


NOTE PILOT HOLES

TOP VIEW

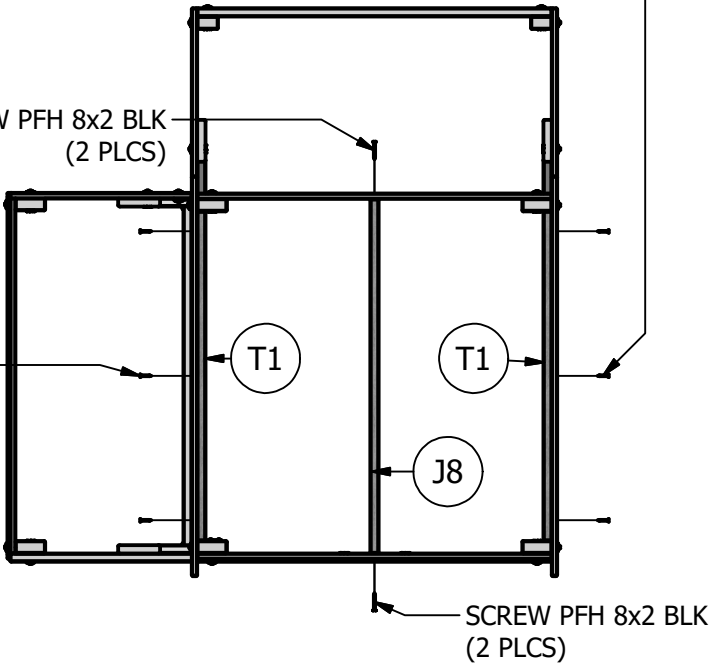


SIDE VIEW

SUPPORT PLACEMENT

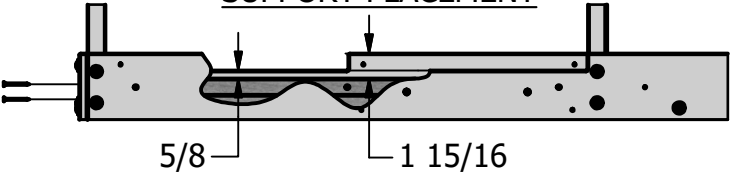




 (2) **T3 - SUPPORT BOARD - W4L07601**
1"x1 3/8"x18 3/4" (24x34x477)






(1) **J9 - FLOOR JOIST - W4L07603**
1"x2 3/8"x20 1/4" (24x60x513)

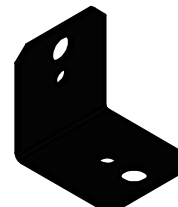


(2) - **90° L-BRACKET - BLK - A4M00555**


STEP 15

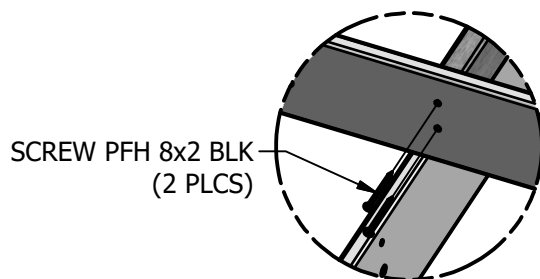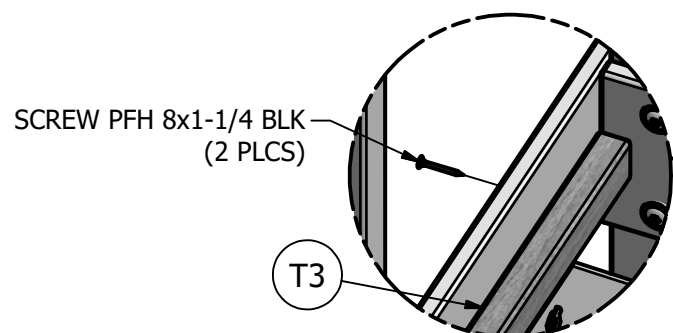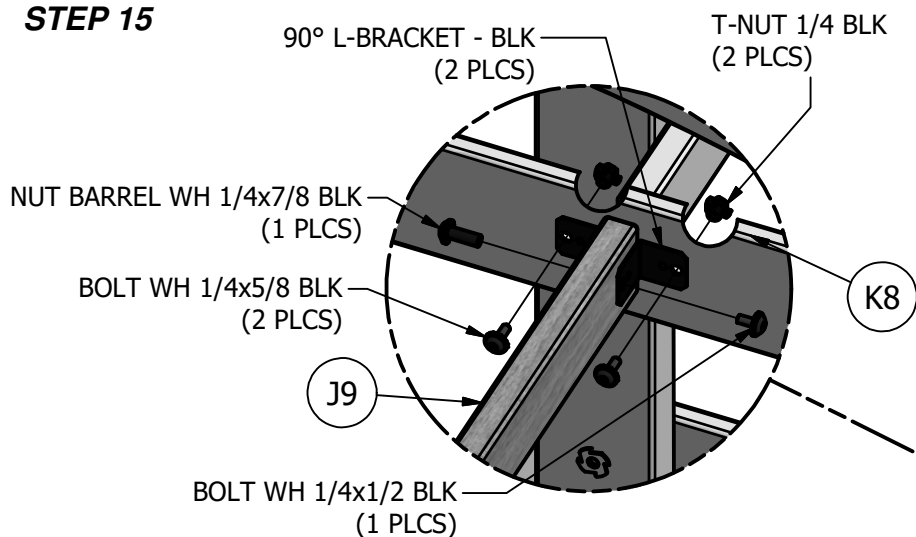


SCREW PFH 8x1-1/4 BLK (2 PLCS)

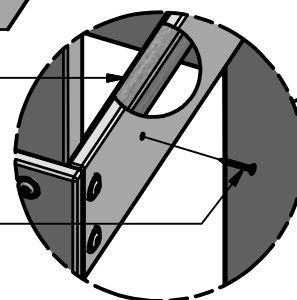


TOP VIEW

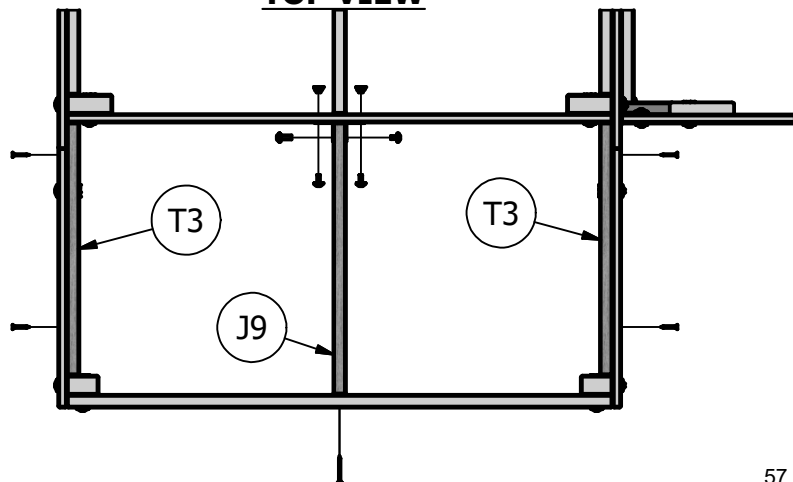

SIDE VIEW SUPPORT PLACEMENT

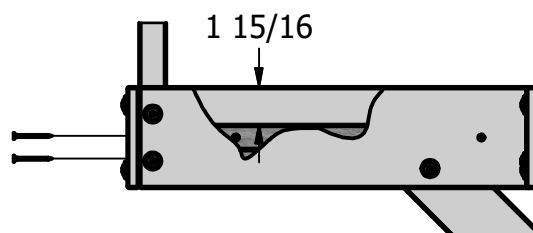

 


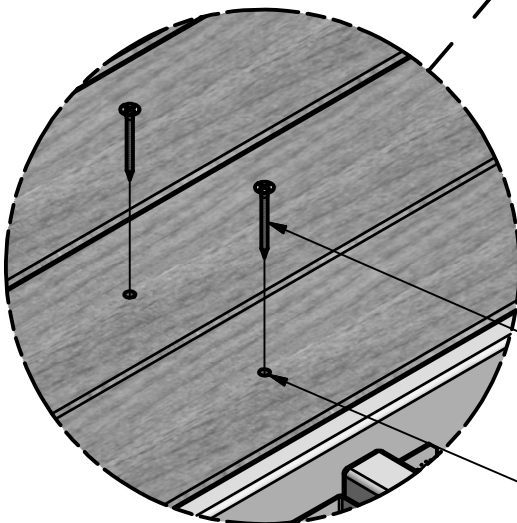
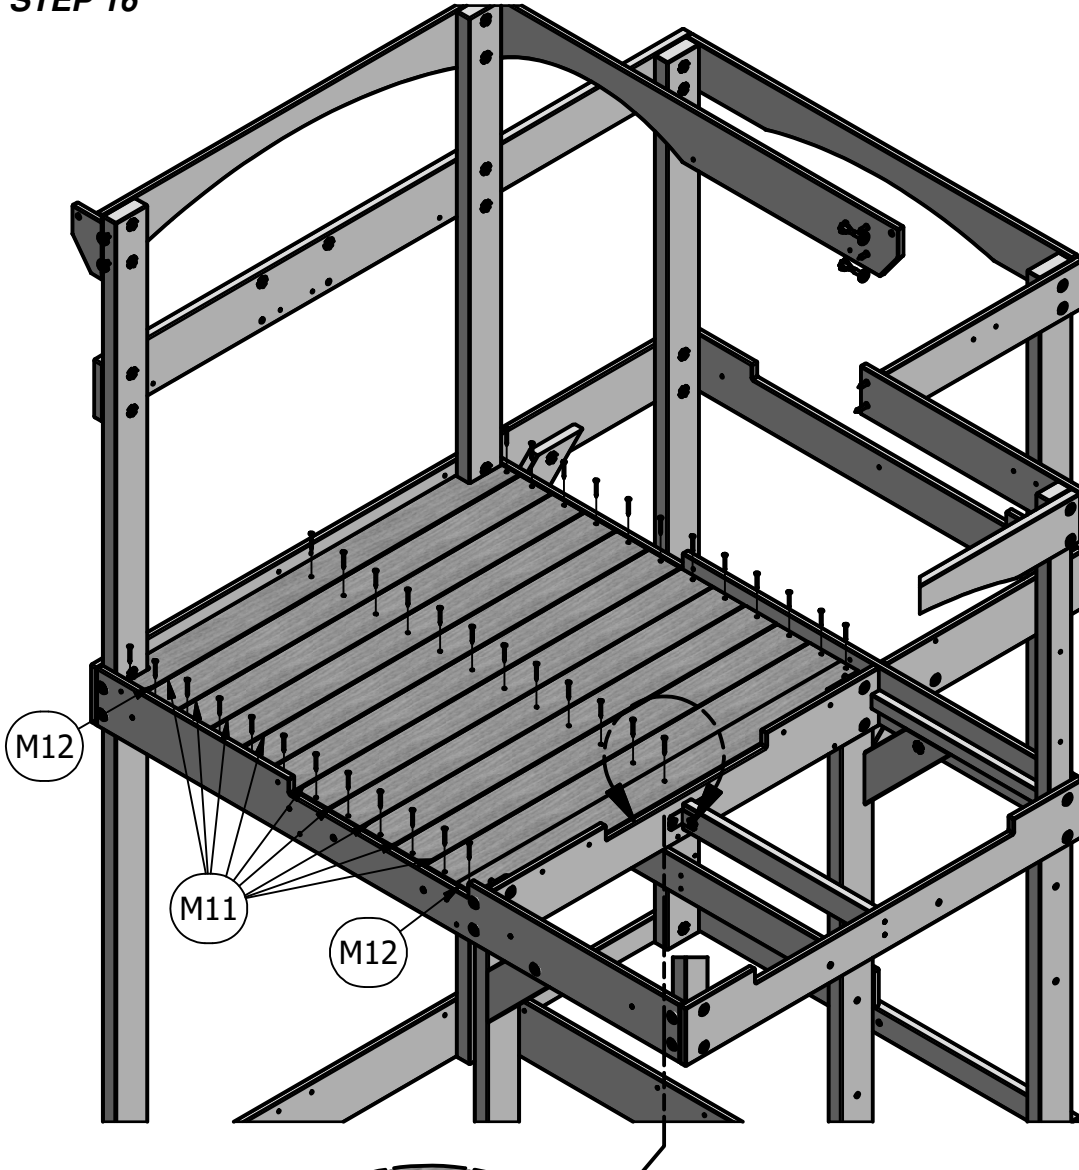
(10) **M11 - FLOOR BOARD - W4L07610**
5/8"x3 3/8"x40 5/8" (16x86x1031)



(2) **M12 - FLOOR BOARD - W4L07611**
5/8"x3 3/8"x40 5/8" (16x86x1031)

 
STEP 16


(36) **SCREW PFH**
8x1-1/2"



SCREW PFH 8x1-1/2"
(36 PLCS)

NOTE PILOT HOLES





(5) *M11 - FLOOR BOARD - W4L07610*
5/8"x3 3/8"x40 5/8" (16x86x1031)



(1) *M10 - FLOOR BOARD - W4L07609*
5/8"x3 3/8"x40 5/8" (16x86x1031)

STEP 17

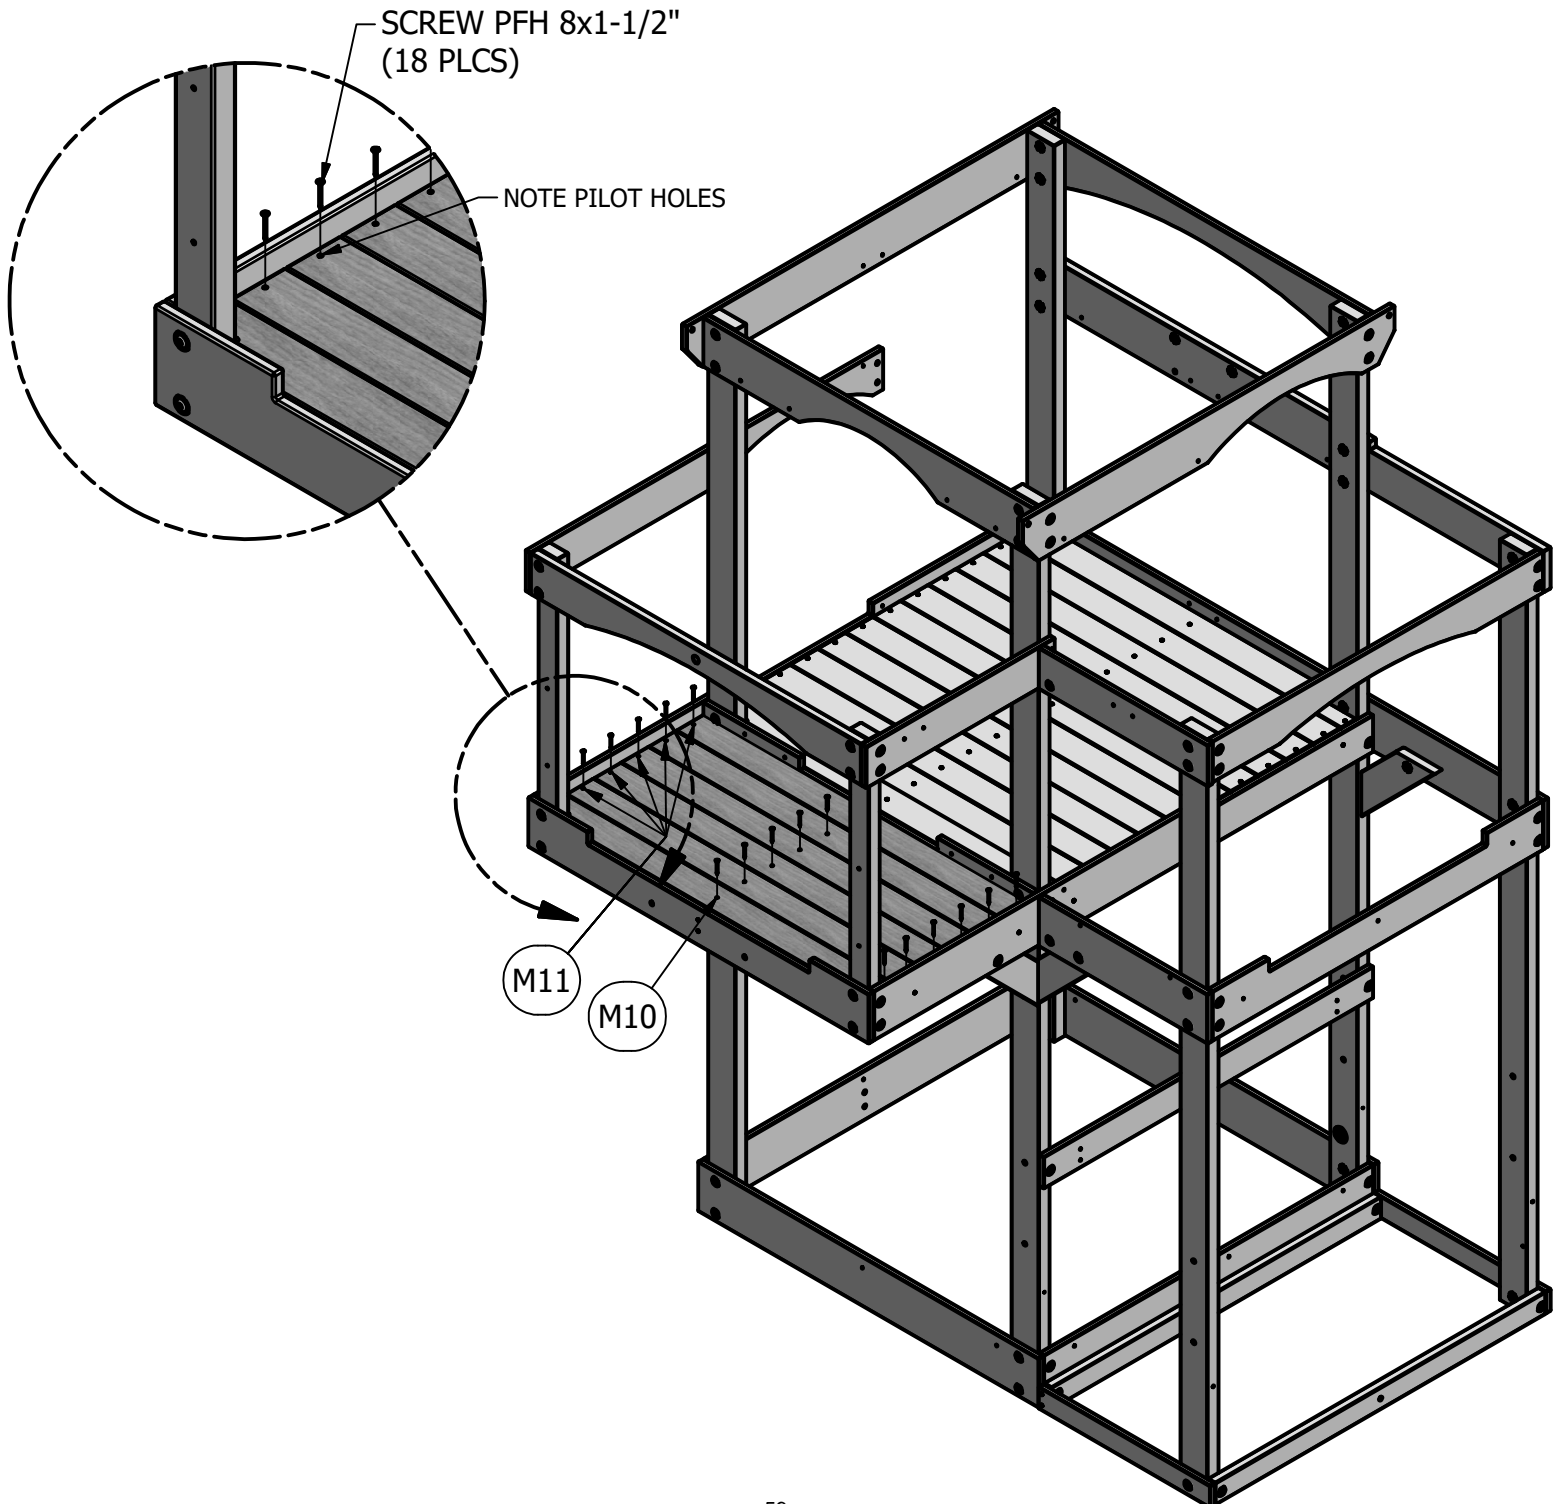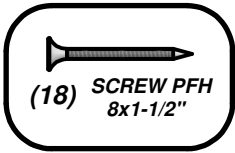




(1) **T1 - SUPPORT BOARD - W4L07599**
1"x1 3/8"x37 5/8" (24x34x957)




(1) **T2 - SUPPORT BOARD - W4L07600**
1"x1 3/8"x37 3/4" (24x34x959)

STEP 18

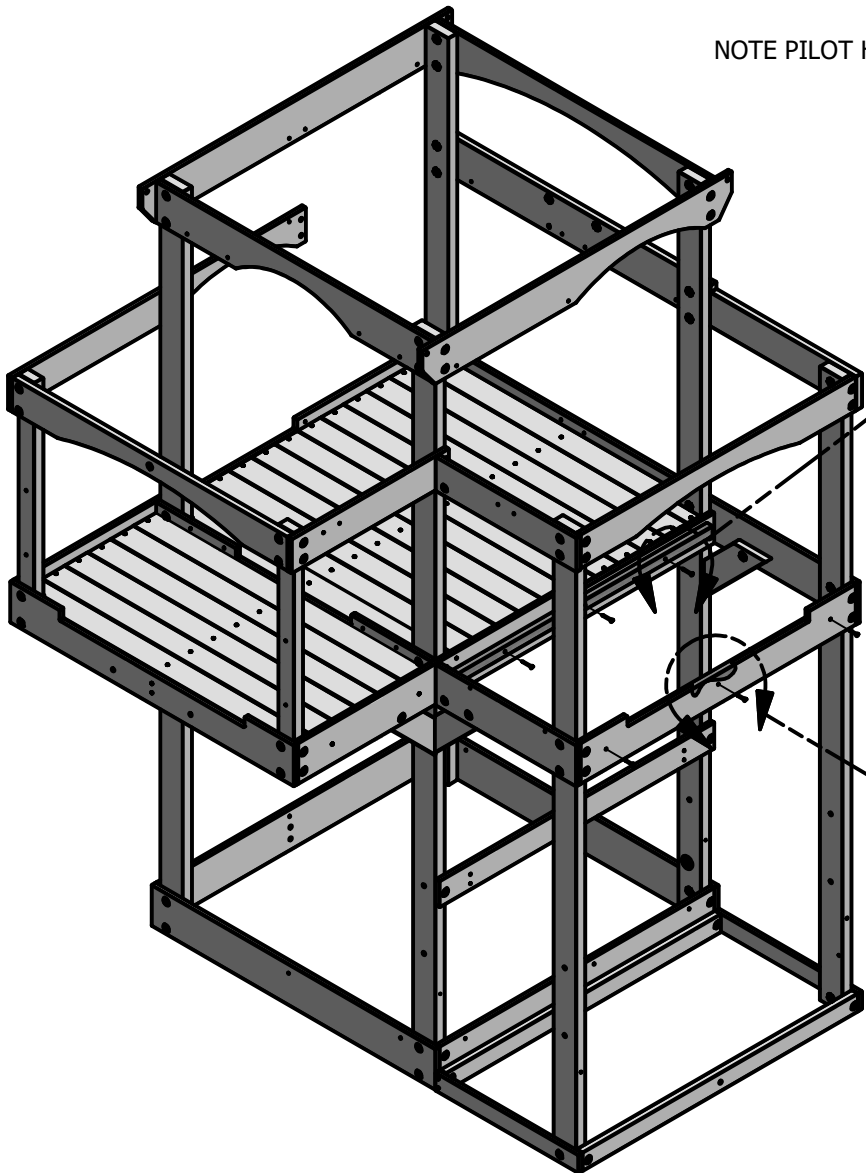


NOTE PILOT HOLES

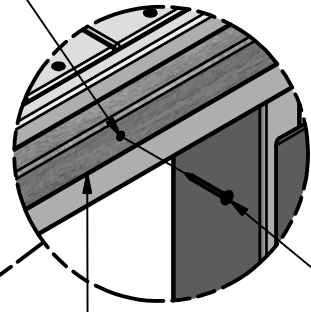

T2

SCREW PFH 8x1-1/2"
(3 PLCS)

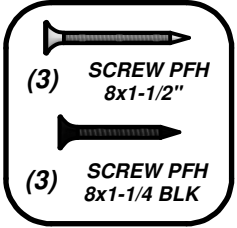


(3) SCREW PFH 8x1-1/2"

(3) SCREW PFH 8x1-1/4 BLK

T1


NOTE PILOT HOLES

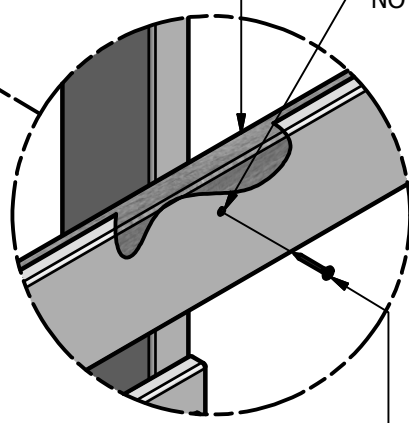

SCREW PFH 8x1-1/4 BLK
(3 PLCS)

SIDE VIEW

SUPPORT PLACEMENT

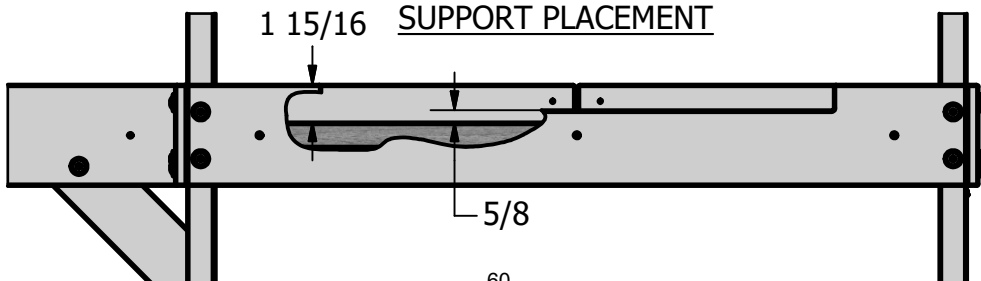



(1) **M8 - FLOOR BOARD - W4L07607**
5/8"x3 3/8"x20 1/8" (16x86x512)



(10) **M9 - FLOOR BOARD - W4L07608**
5/8"x3 3/8"x20 1/8" (16x86x512)




(1) **M13 - FLOOR BOARD - W4L07671**
5/8"x3 3/8"x20 1/8" (16x86x512)


STEP 19




(24) **SCREW PFH**
8x1-1/2"

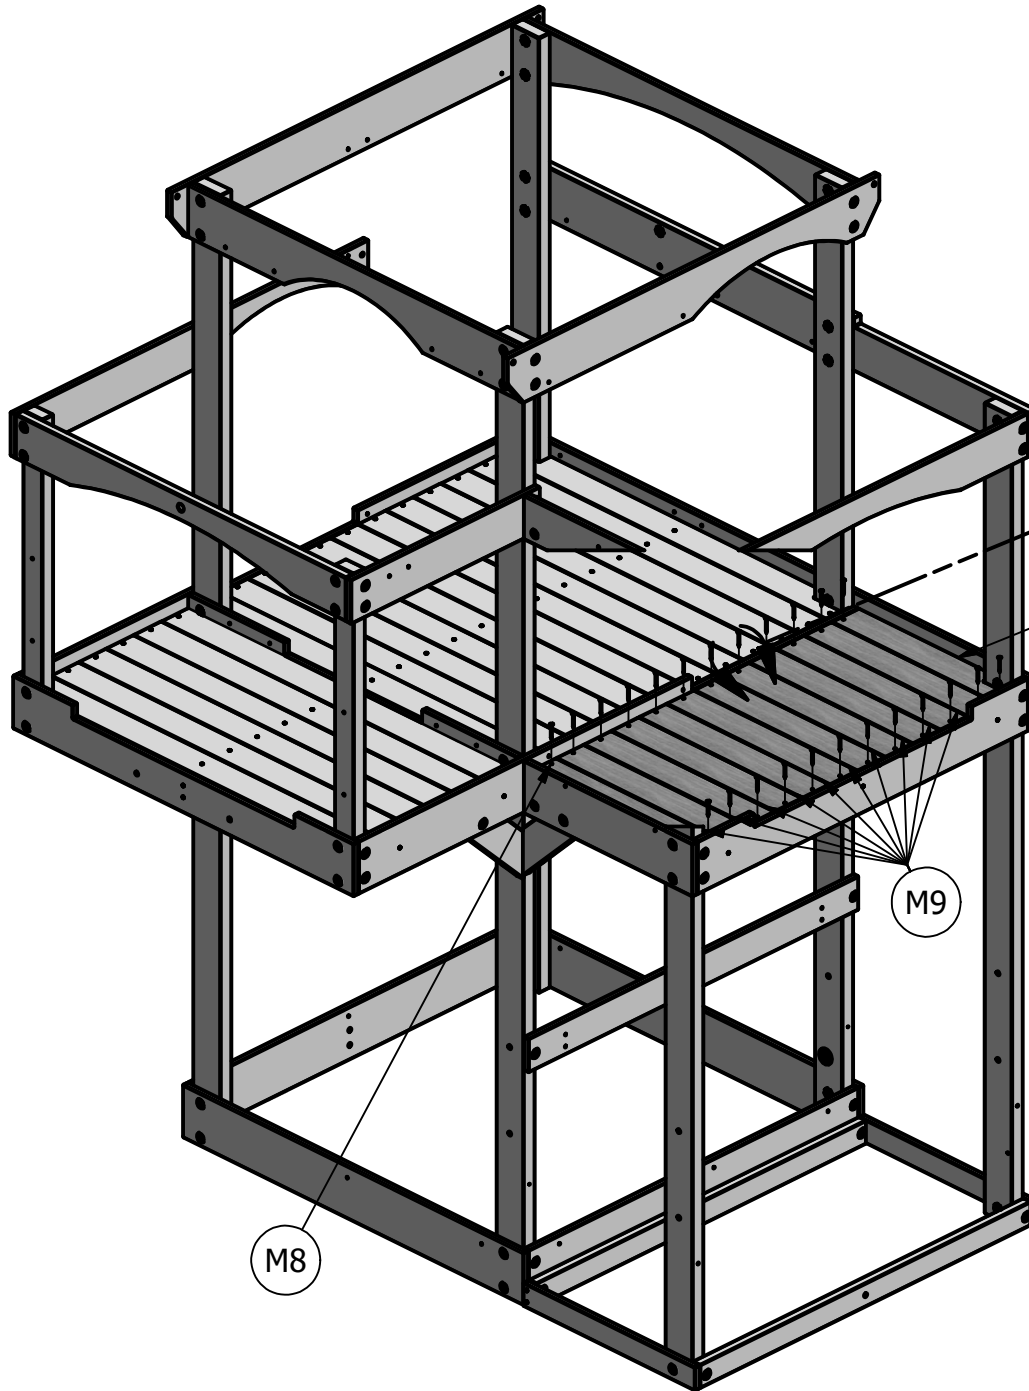

SCREW PFH 8x1-1/2"
(24 PLCS)

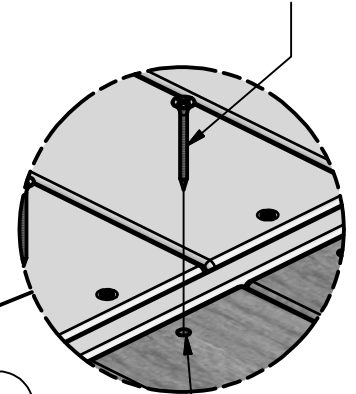


NOTE PILOT HOLES

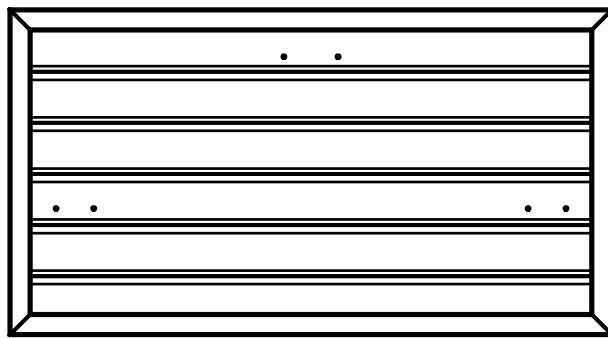


(1) WP1 - FRONT WALL PANEL - W2A02082
1"x20 3/8"x37 3/4" (24x517x958)

STEP 20

SCREW PFH 8x1-1/4 BLK
(3 PLCS)

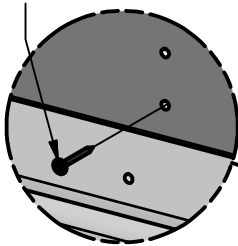


(7) SCREW PFH
8x1-1/4 BLK

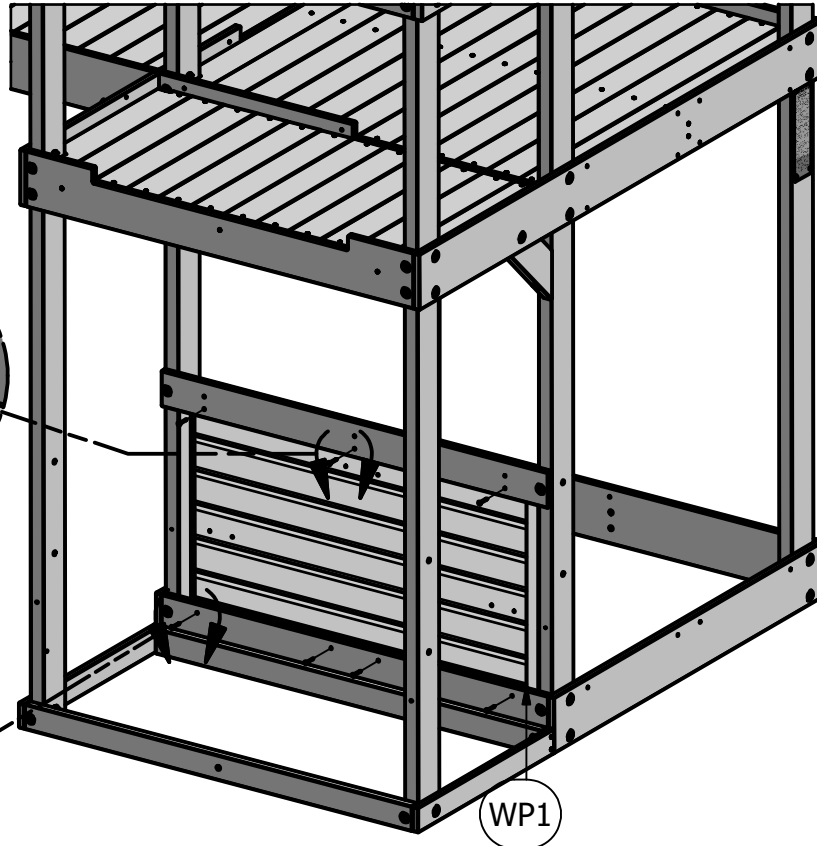

WP1


NOTE PILOT HOLES

SCREW PFH 8x1-1/4 BLK
(4 PLCS)

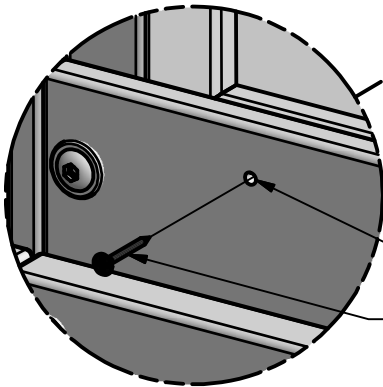


WP1


PANEL PLACEMENT

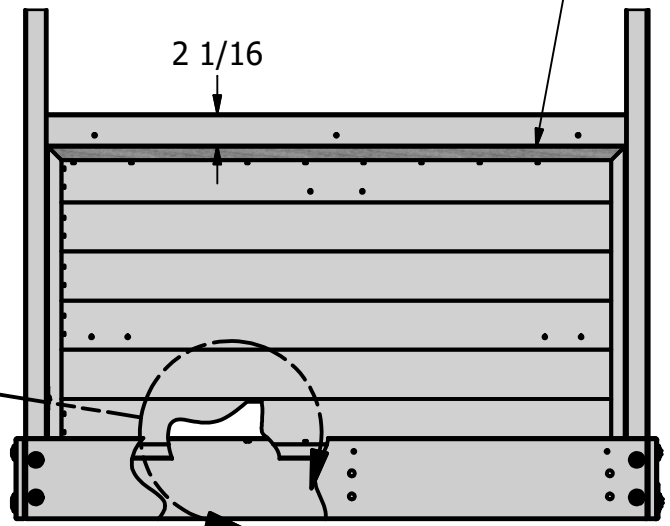

2 1/16


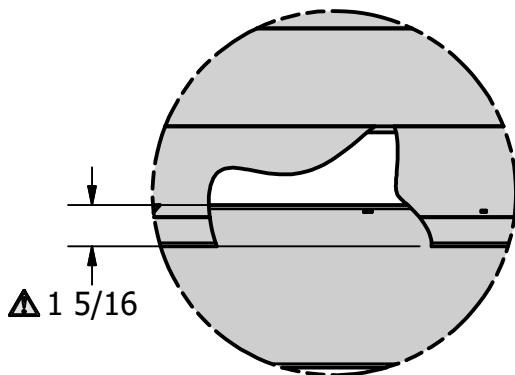


1 5/16

 

- (1) **T4 - SUPPORT BOARD - W4L07613**
1"x1 3/8"x37 3/4" (24x34x958)



STEP 21

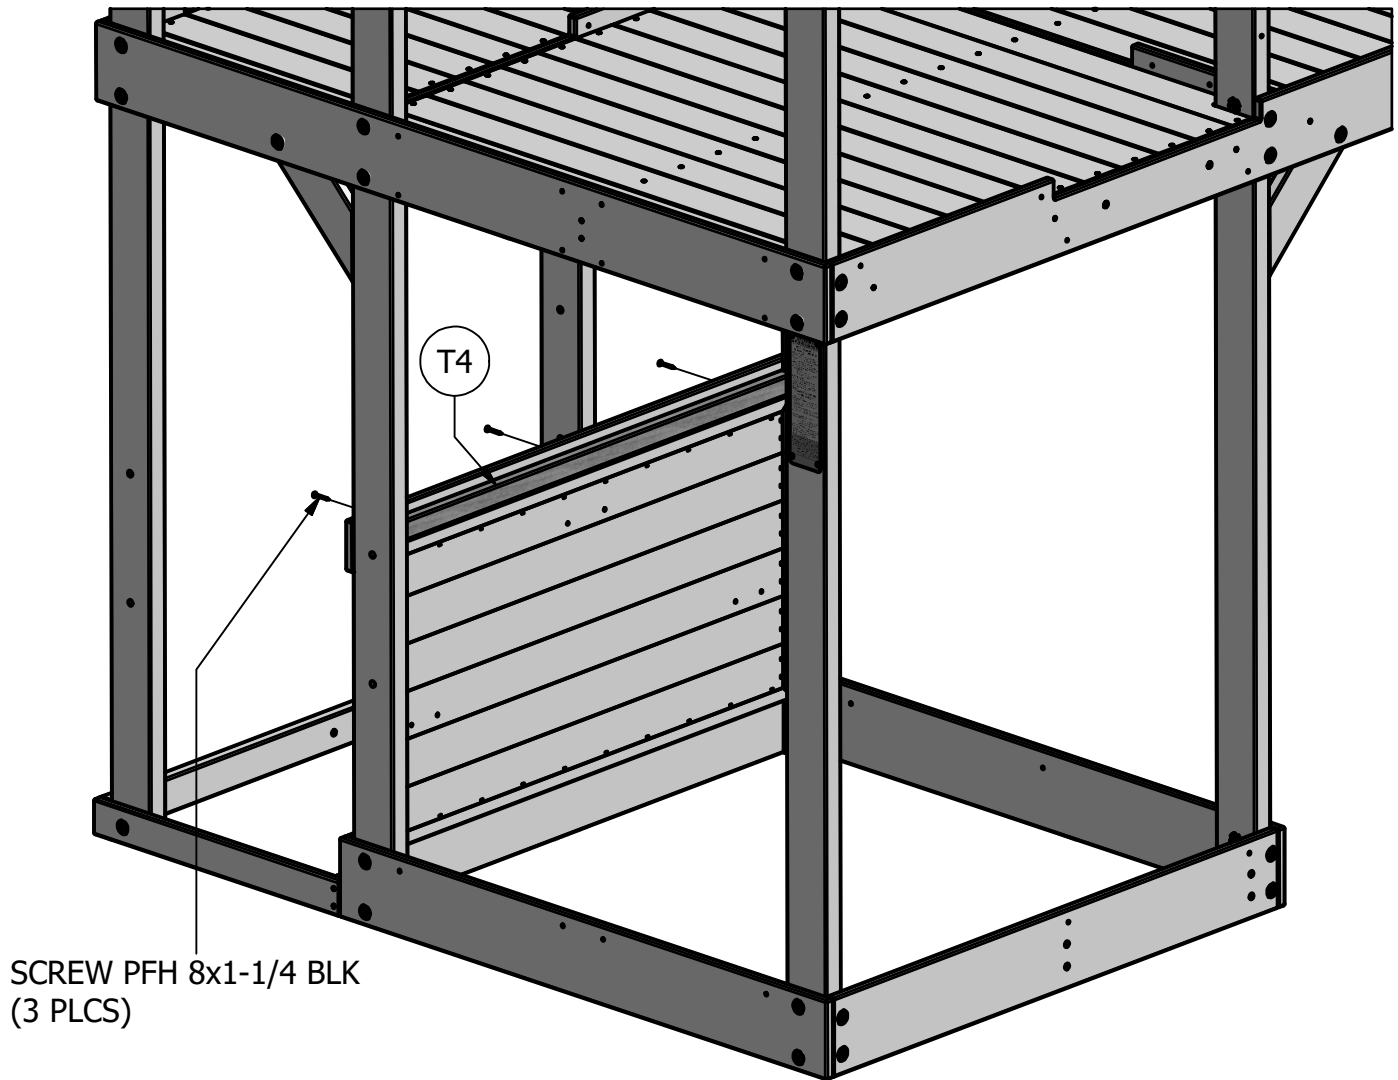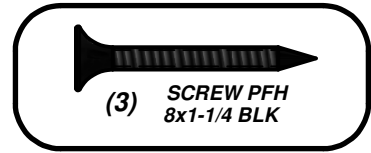





- (2) **J6 - SUPPORT BLOCK - W4L11153**
1"x2 3/8"x6 1/4" (24x60x160)

STEP 22

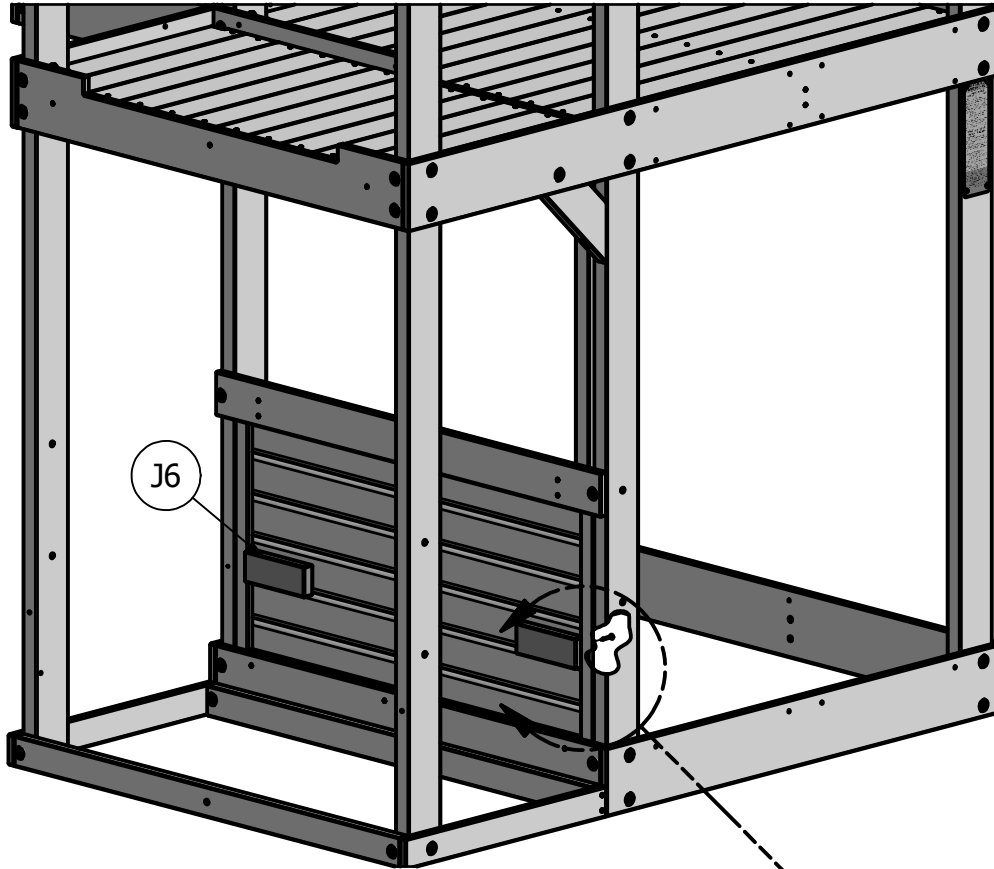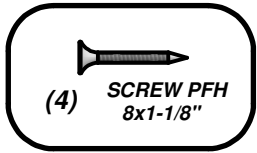

SCREW PFH 8x1-1/8"
(4 PLCS)

REAR VIEW

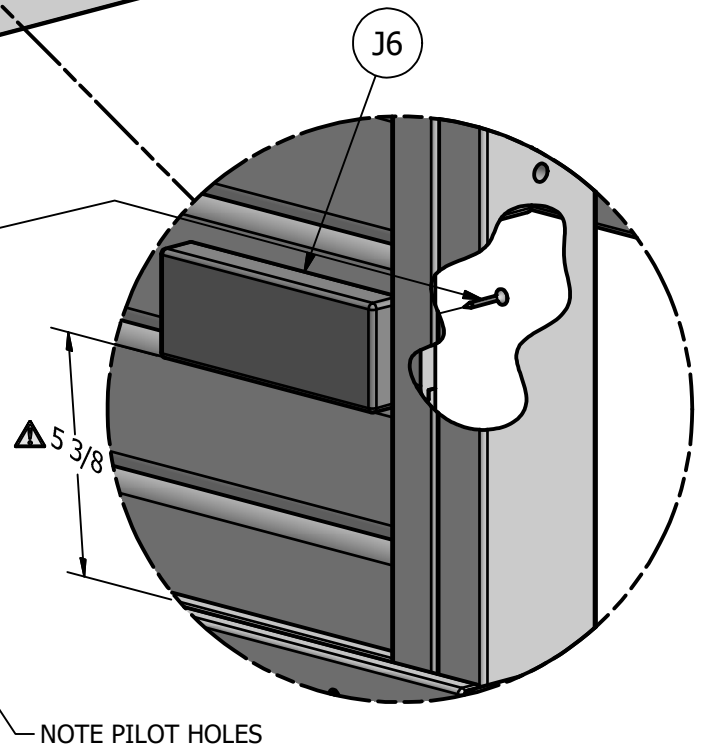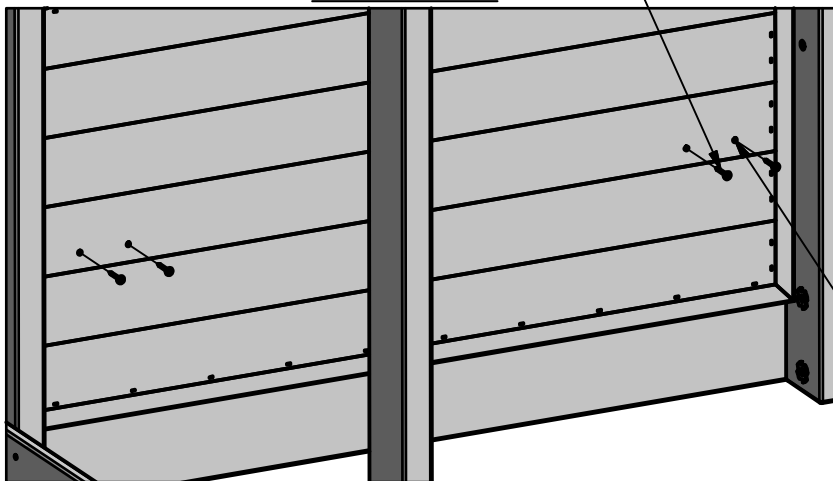





- (1) **J7 - SUPPORT BLOCK - W4L11158**
1"x2 3/8"x3 3/8" (24x60x86)



- (1) **H1 - TABLE SUPPORT - W4L11147**
1"x3 3/8"x22 3/8" (24x86x567)

STEP 23

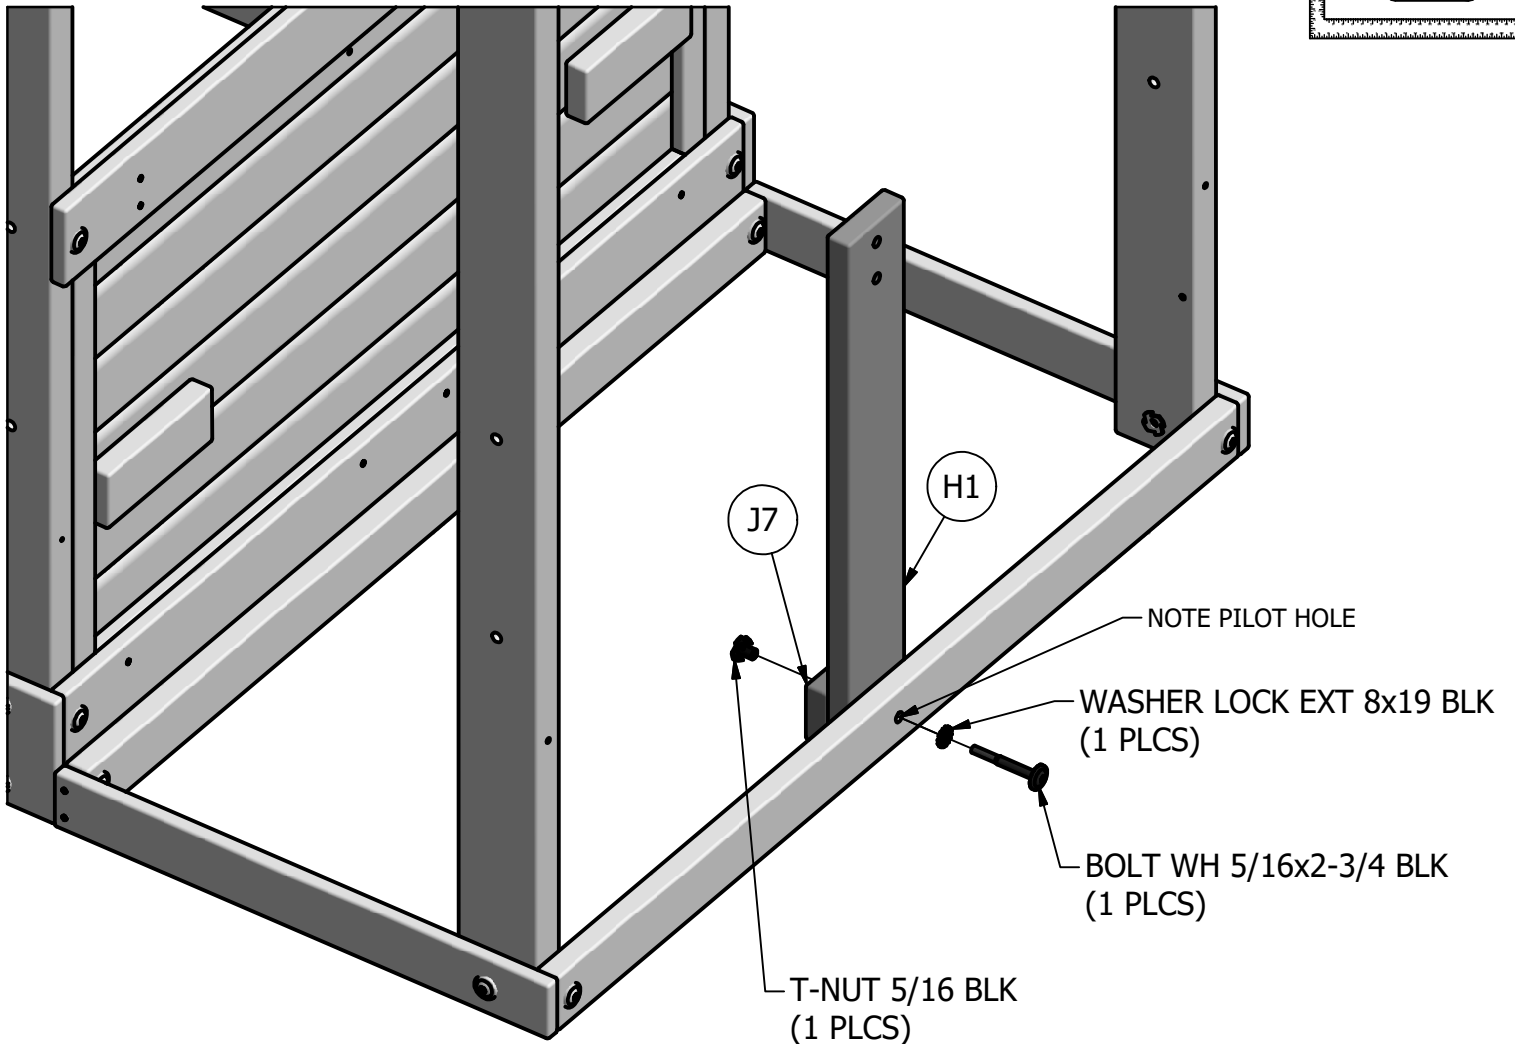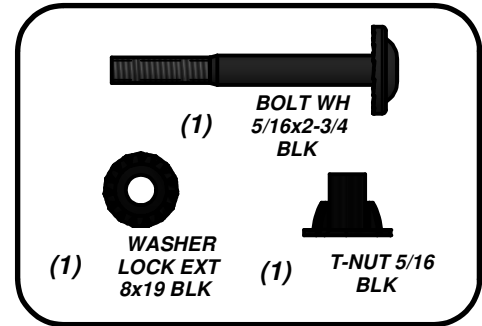



(1) **M5 - FLOOR BOARD - W4L07598**
5/8"x3 3/8"x19 1/4" (16x86x488)




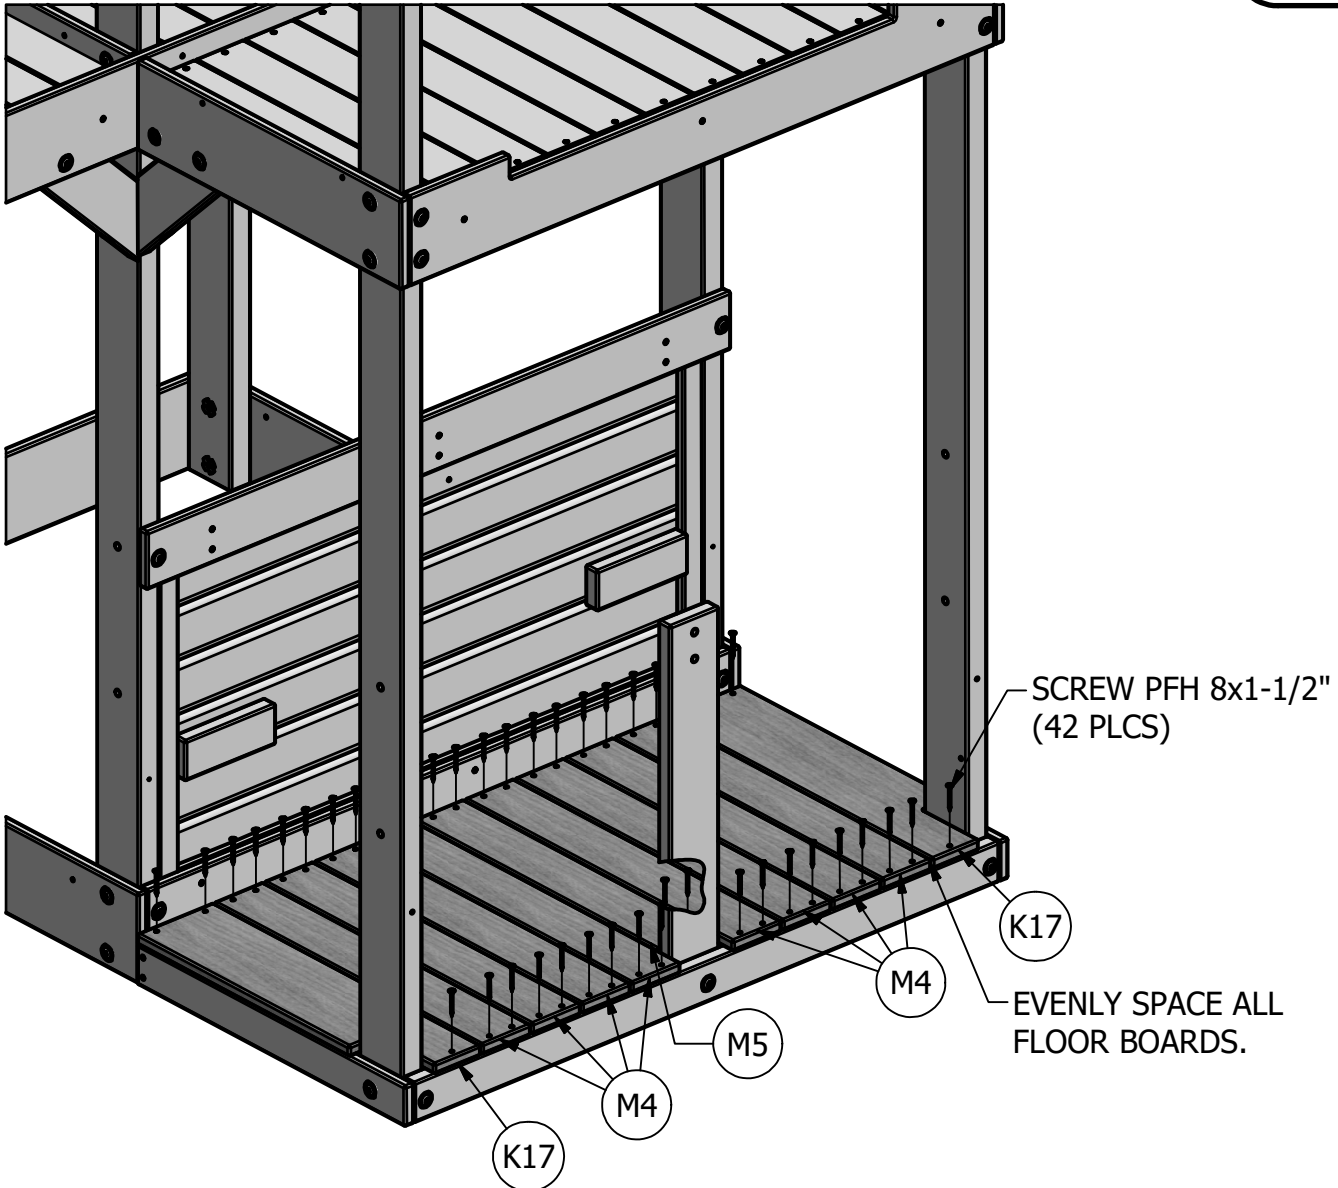
(8) **M4 - FLOOR BOARD - W4L07597**
5/8"x3 3/8"x21 1/8" (16x86x537)



(2) **K17 - FLOOR BOARD - W4L07596**
5/8"x5 1/4"x21 1/8" (16x134x537)

STEP 24


(42) **SCREW PFH**
8x1-1/2"





(2) **J3 - BENCH SUPPORT - W4L11150**
1"x2 3/8"x9" (24x60x230)





(2) **J4 - ANGLE BRACE - W4L11151**
1"x2 3/8"x10" (24x60x254)



(2) **J5 - SUPPORT BLOCK - W4L11152**
1"x2 3/8"x2 7/8" (24x60x72)

STEP 25

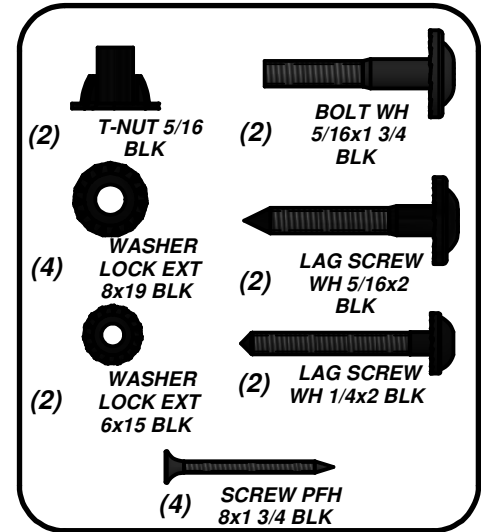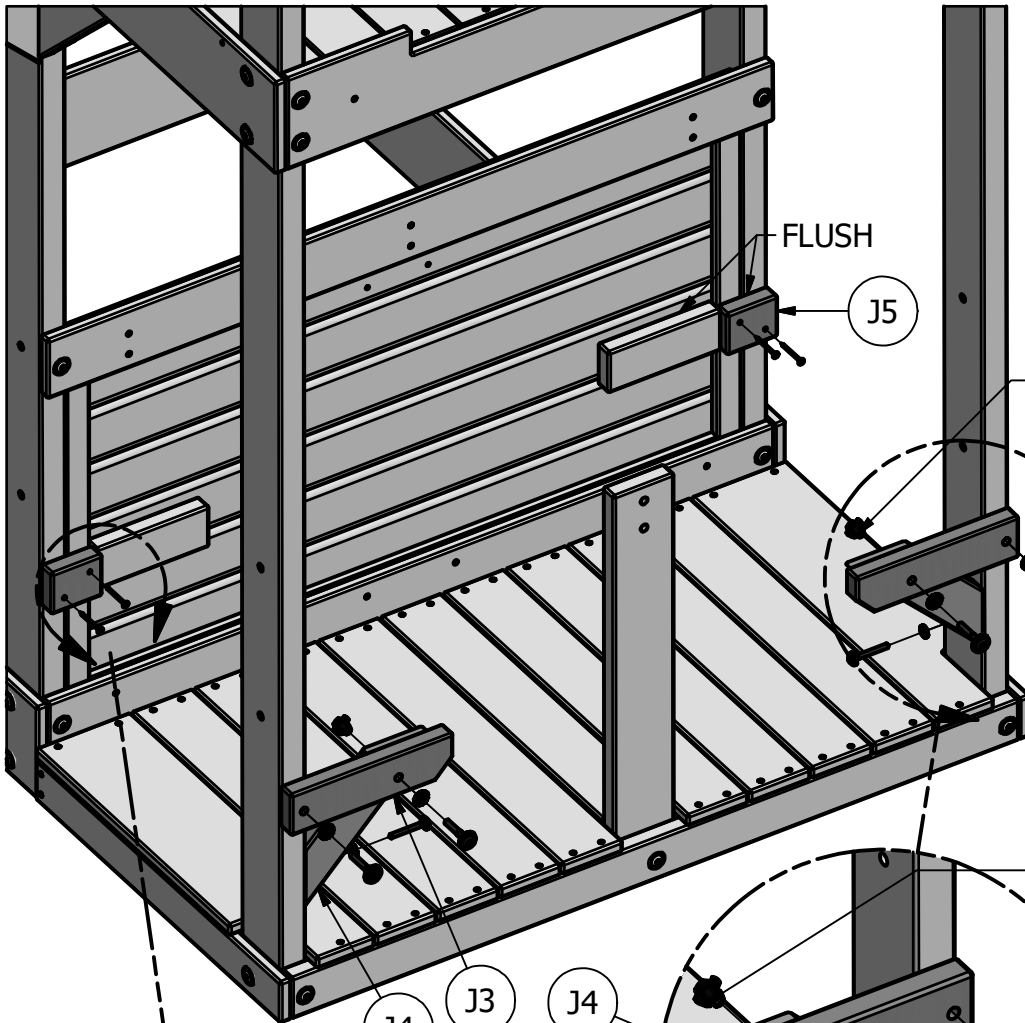

T-NUT 5/16 BLK
(2 PLCS)

T-NUT 5/16 BLK
(2 PLCS)

WASHER LOCK EXT 8x19 BLK
(4 PLCS)

LAG SCREW WH 5/16x2 BLK
(2 PLCS)

 
RIGHT FRONT BALCONY UPRIGHT
(2 PLCS)

WASHER LOCK EXT 6x15 BLK
(2 PLCS)

LAG SCREW WH 1/4x2 BLK
(2 PLCS)

SCREW PFH 8x1 3/4 BLK
(4 PLCS)

NOTE PILOT HOLE



(2) **M2 - BENCH BOARD - W4L07591**
5/8"x3 3/8"x23" (16x86x583)


 


(2) **M3 - BENCH BOARD - W4L07593**
5/8"x3 3/8"x23" (16x86x583)




(2) **N3 - BENCH BOARD - W4L07592**
5/8"x2 3/8"x23" (16x60x583)

STEP 26

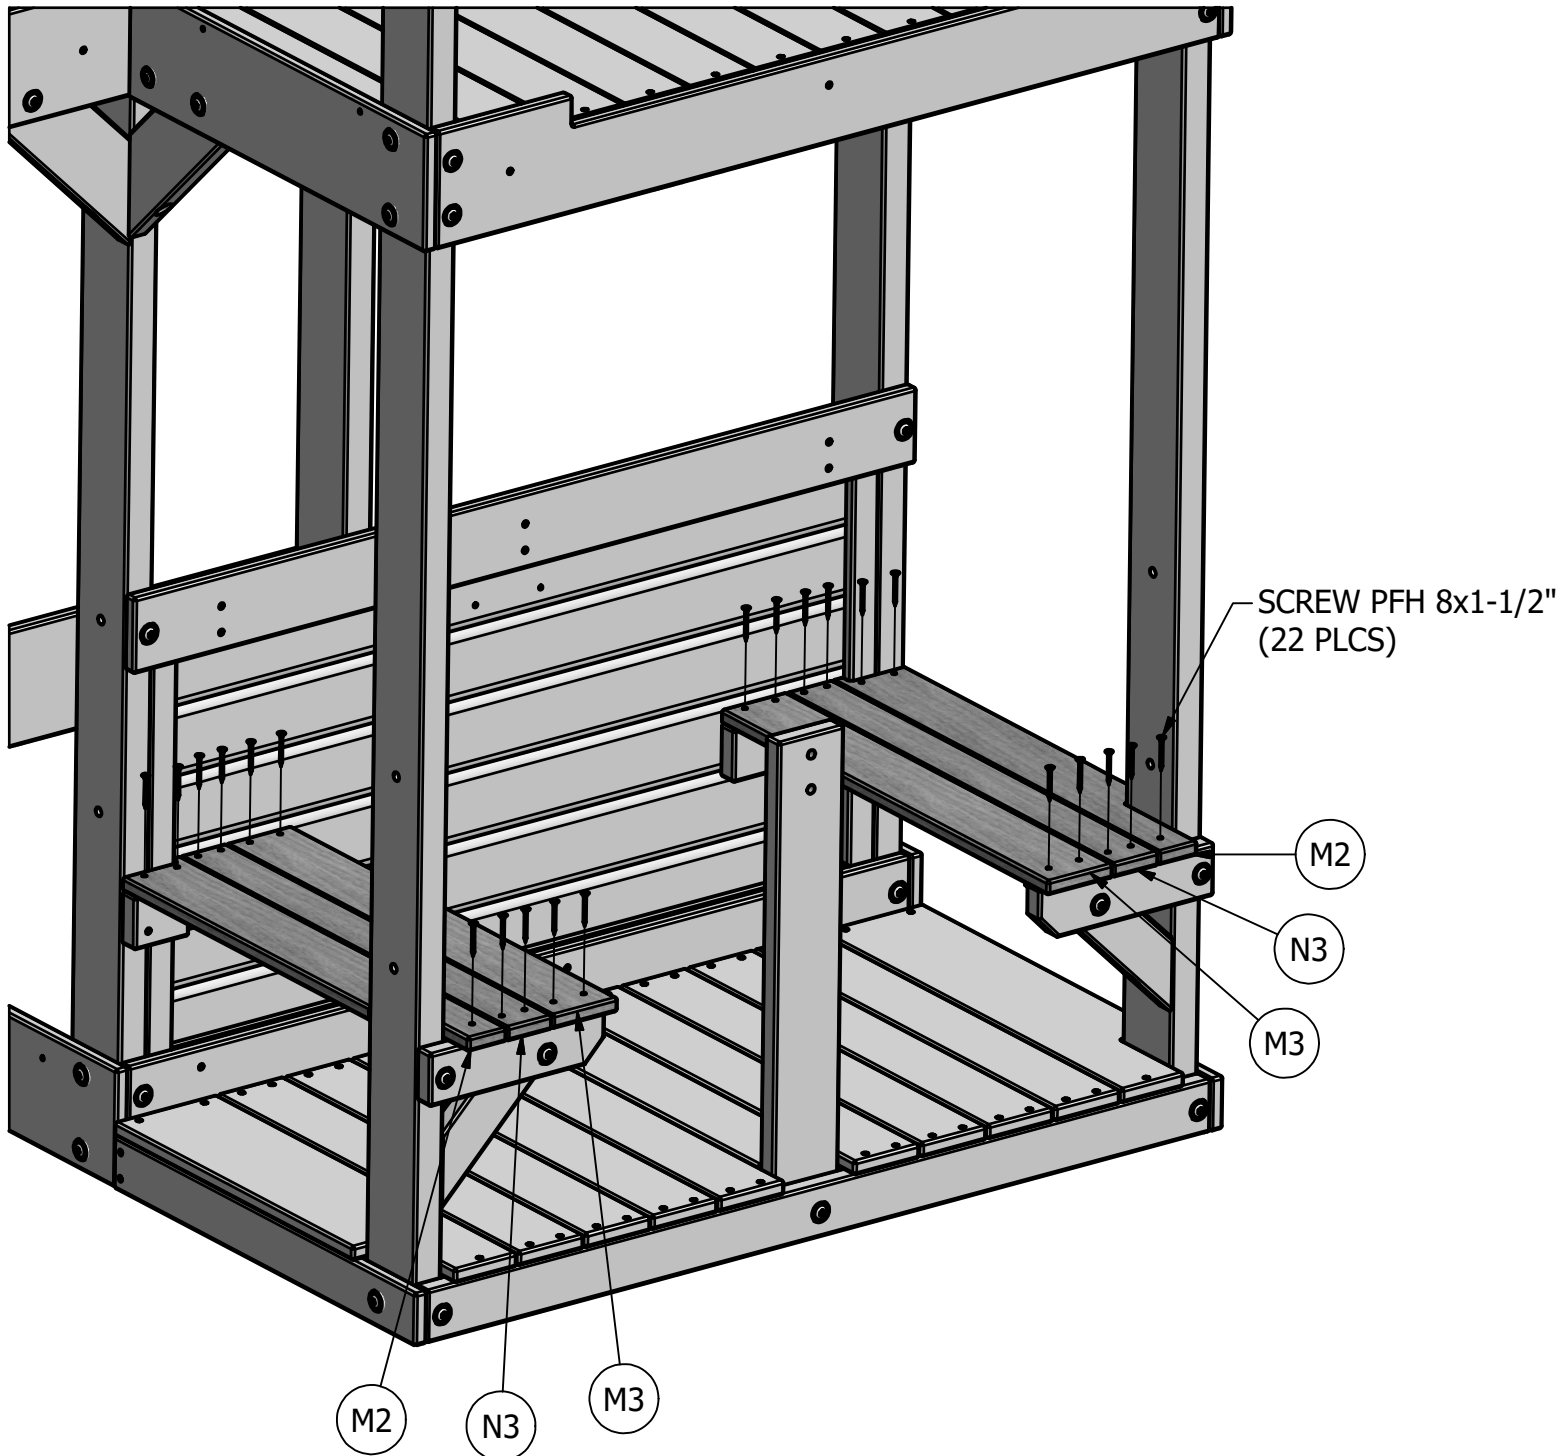



 
(2) **M3 - BENCH BOARD - W4L07593**
5/8"x3 3/8"x23" (16x86x583)



(1) **H2 - TABLE SUPPORT - W4L11148**
1"x3 3/8"x11 5/8" (24x86x295)





 (1) **H3 - TABLE SUPPORT - W4L11149**
1"x3 3/8"x11 5/8" (24x86x295)





(1) **K16 - TABLE BOARD - W4L07594**
5/8"x5 1/4"x23" (16x134x583)

STEP 27

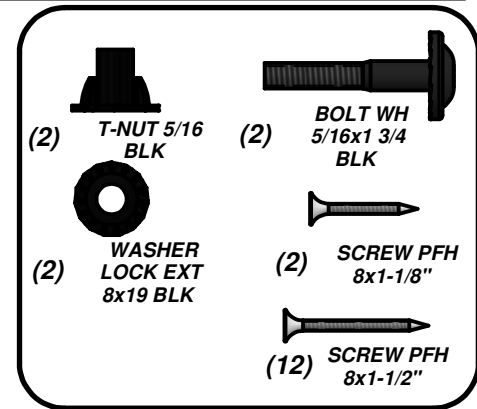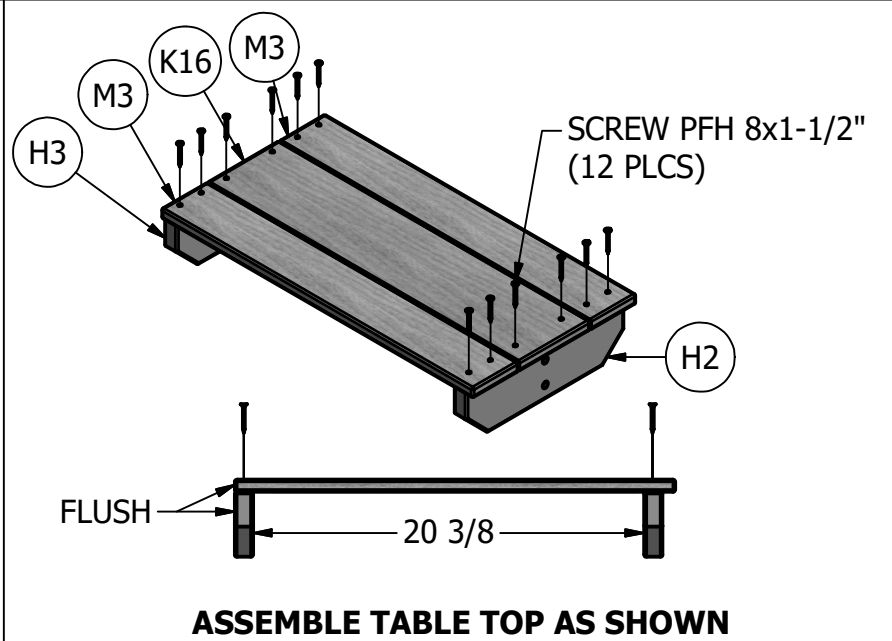




•INSTALL T-NUTS INTO PARTS BEFORE ASSEMBLY OF PARTS

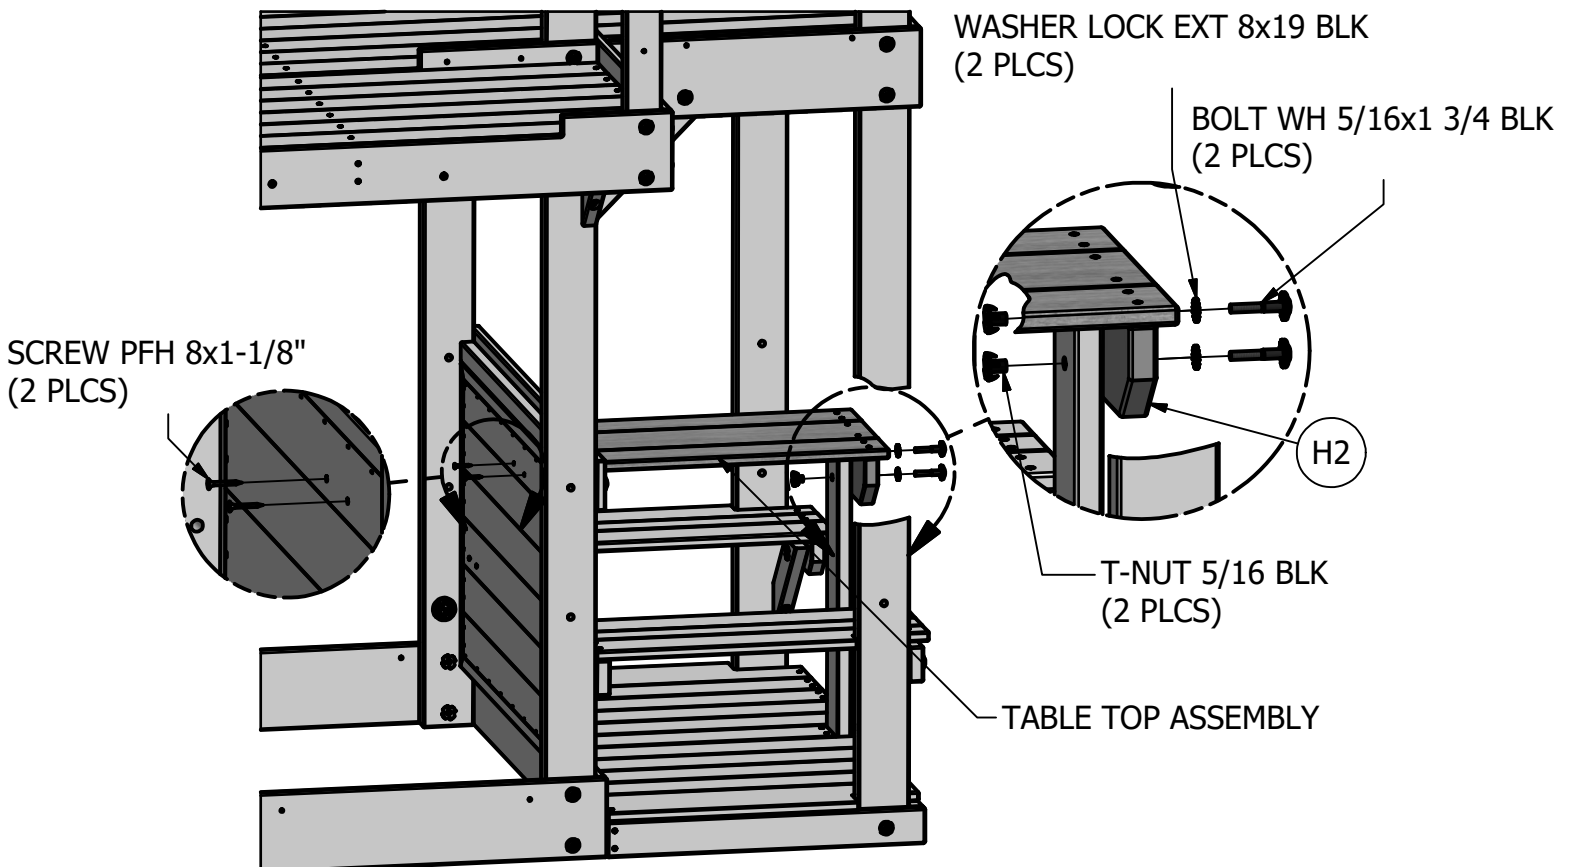


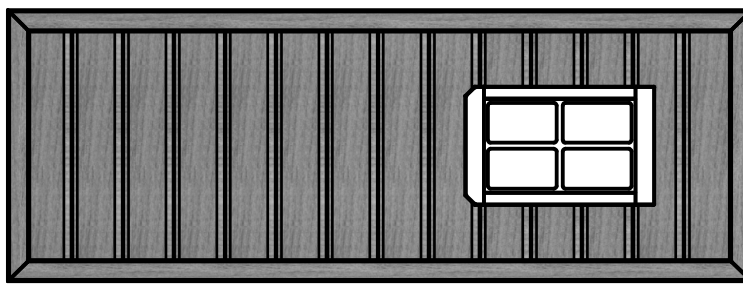



(2) WP2 - RIGHT LOWER WALL PANEL - W2A02083
1"x16 7/8"x46 1/2" (24x430x1181)

STEP 28

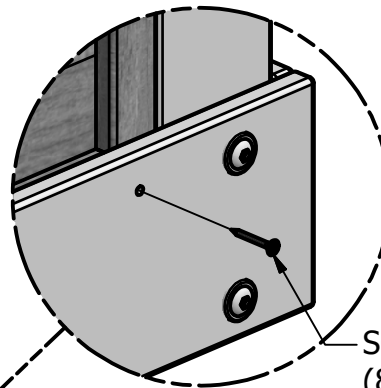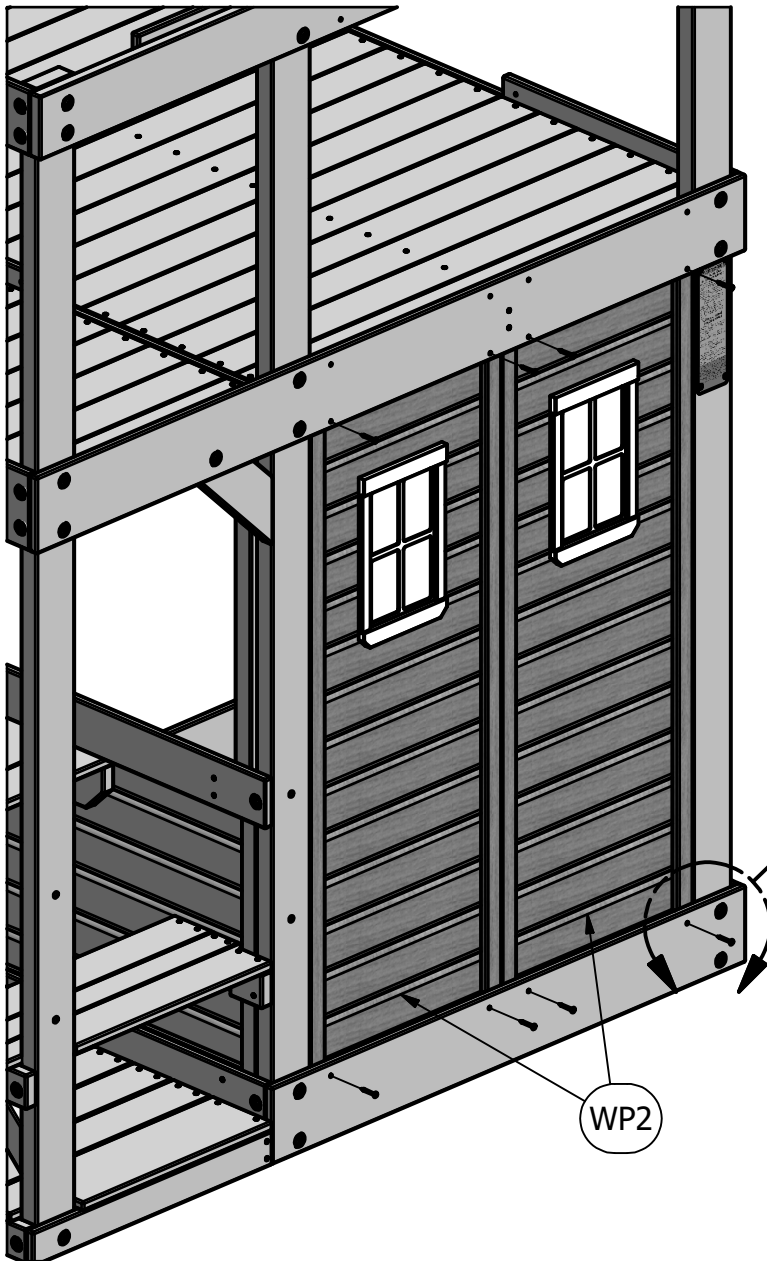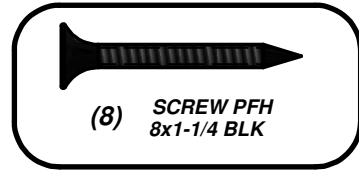

SCREW PFH 8x1-1/4 BLK
(8 PLCS)

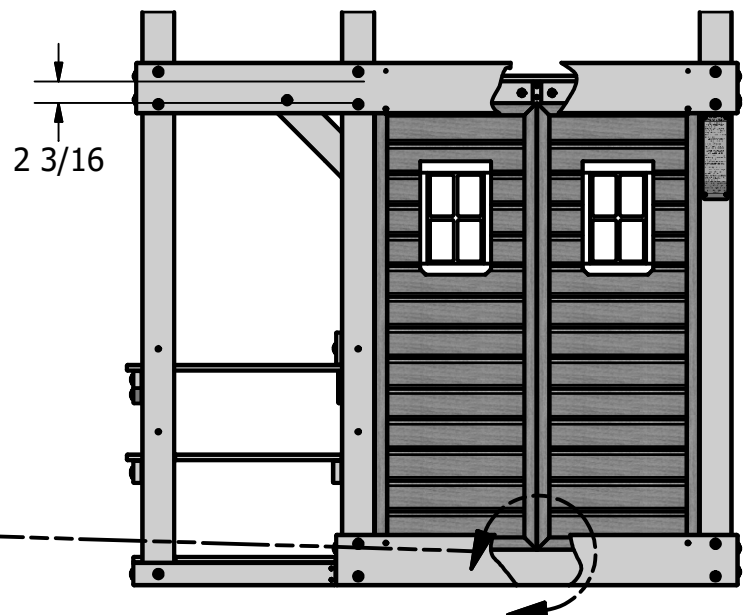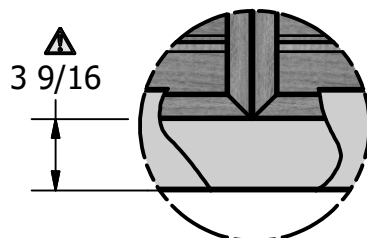

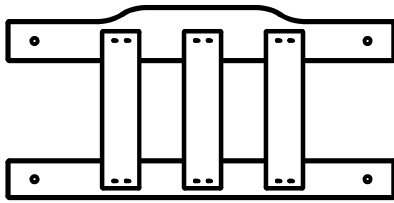

- (1) **WP10 - BENCH BACK ASSEMBLY - W2A02081**
1 1/8"x11 7/8"x17 5/8" (27x303x615)





- (1) **F3 - SUPPORT BLOCK - W4L11159**
1 3/8"x2 3/8"x9 1/4" (36x60x234)

STEP 29


NOTE PILOT HOLES

REAR VIEW

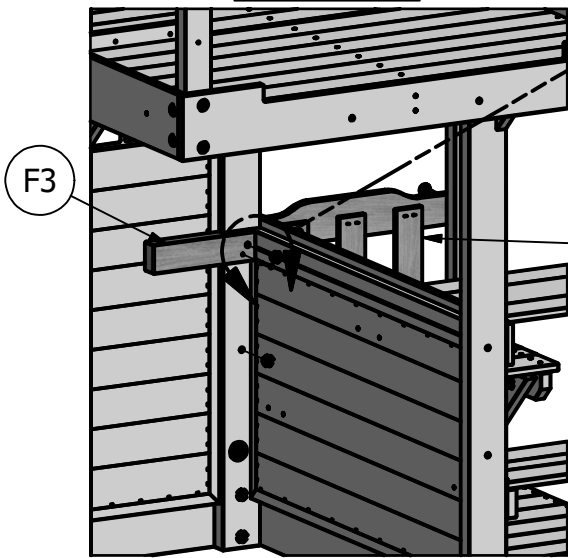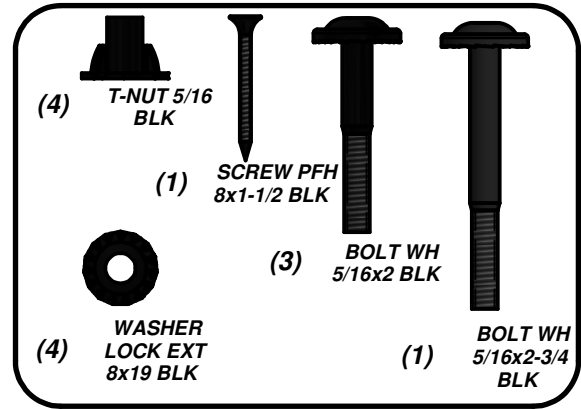



NOTE PILOT HOLES

BOLT WH 5/16x2 BLK
(3 PLCS)

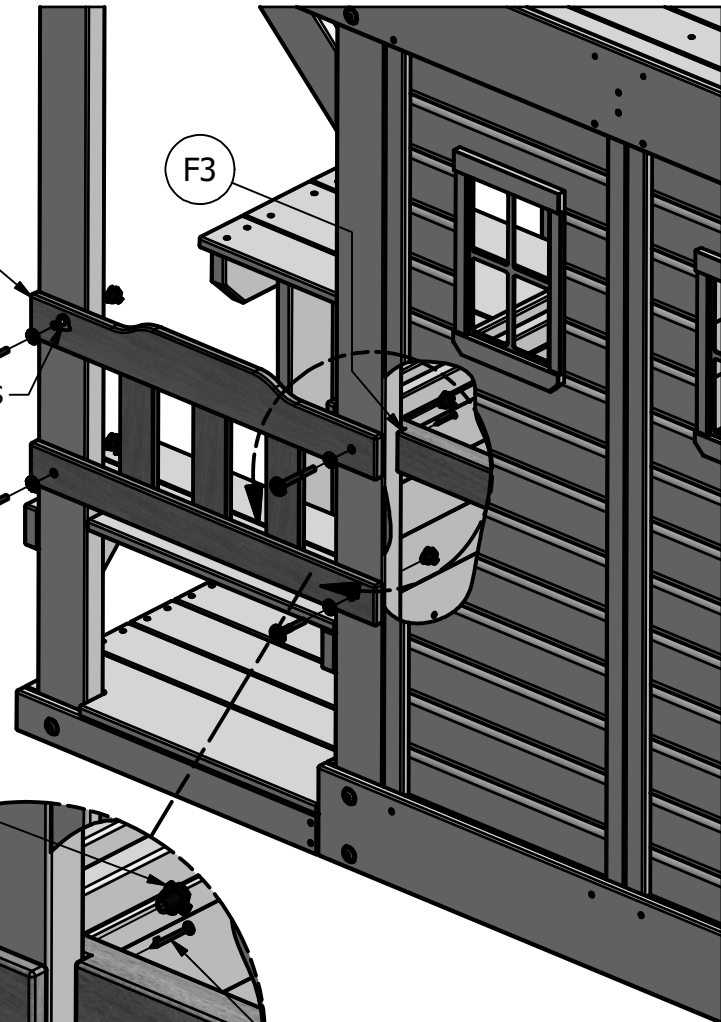




•INSTALL T-NUTS PRIOR TO ASSEMBLY

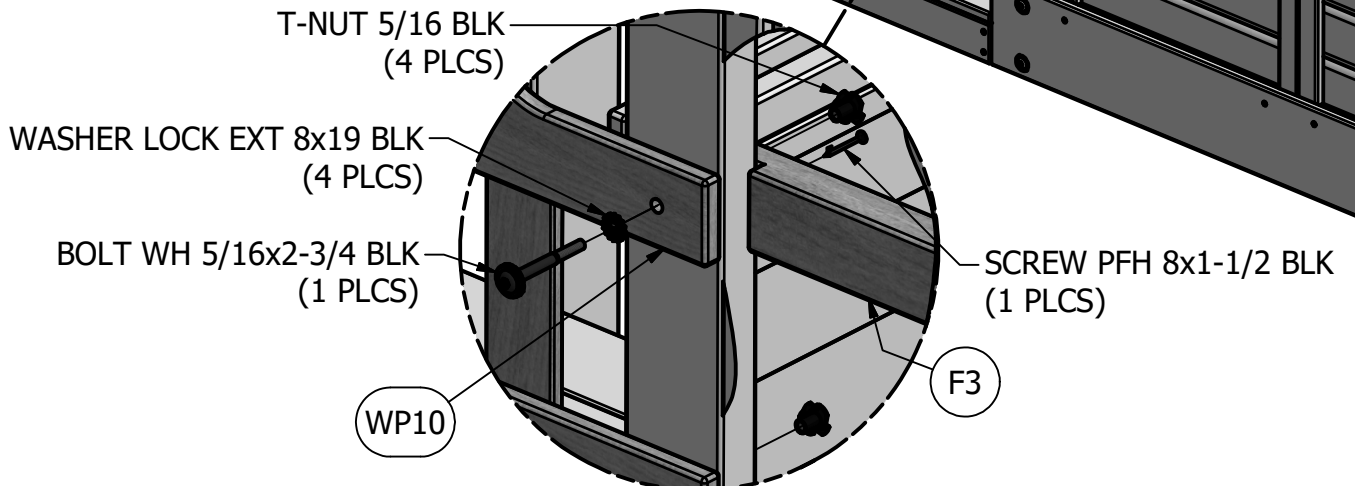


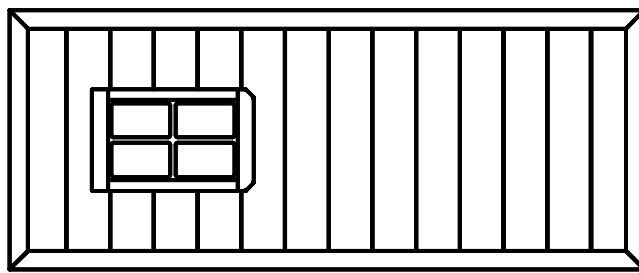


(1) WP9 - LOWER WALL PANEL - W2A02090
1"x16 7/8"x46 1/2" (24x476x1181)

STEP 30

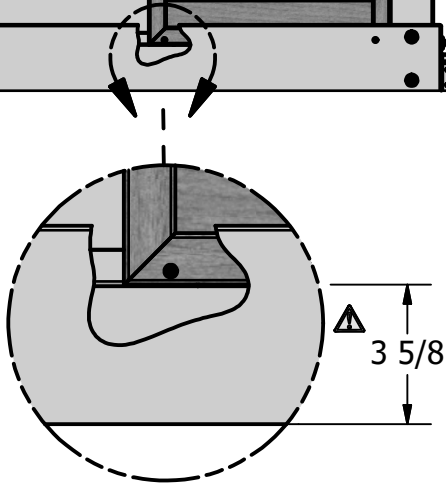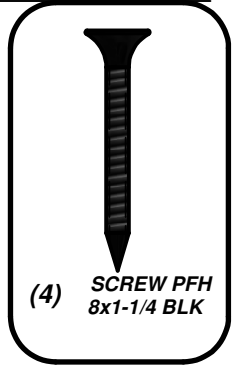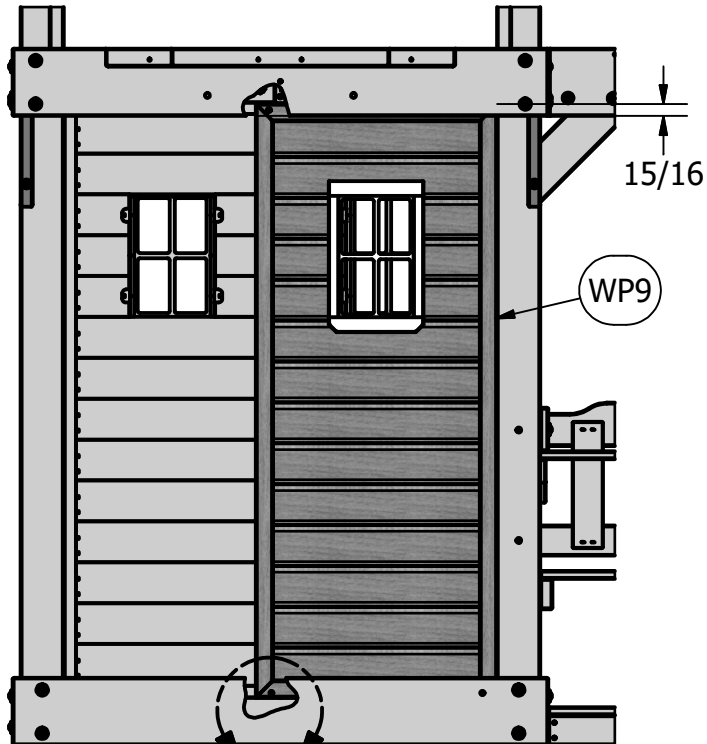


SCREW PFH 8x1-1/4 BLK
(4 PLCS)

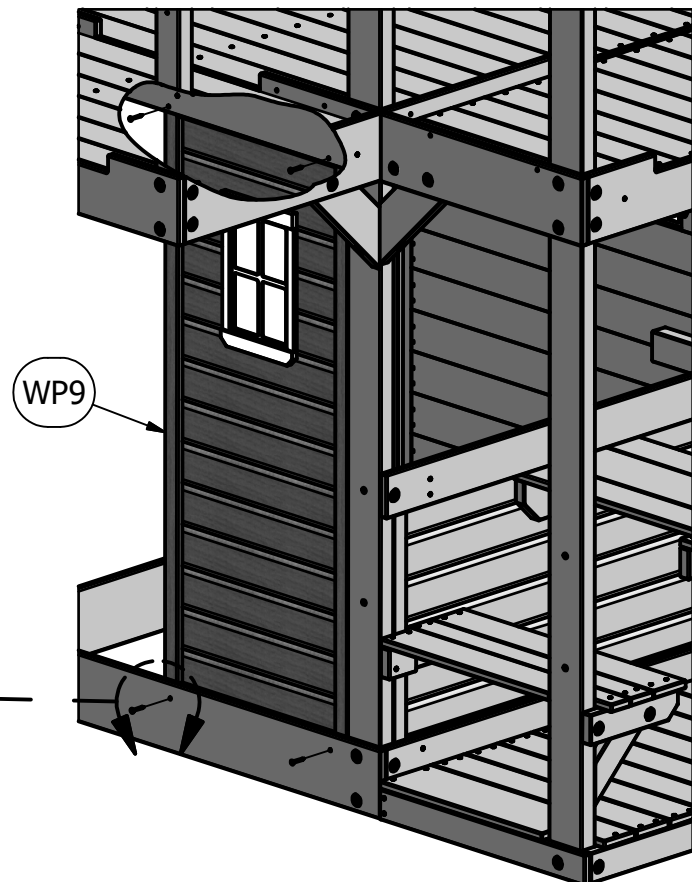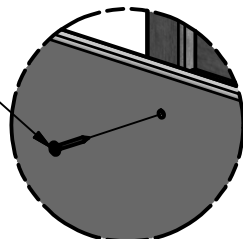






- (1) **F4 - SUPPORT BLOCK - W4L11160**
1 3/8"x2 3/8"x9 1/4" (36x60x234)

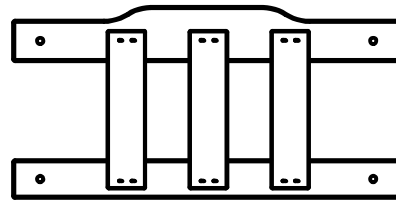


- (1) **WP10 - BENCH BACK ASSEMBLY - W2A02081**
1 1/8"x11 7/8"x17 5/8" (27x303x615)

STEP 31

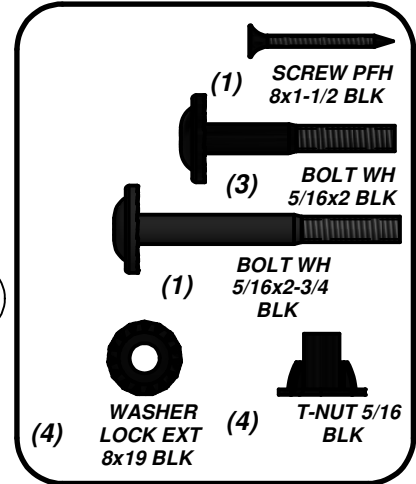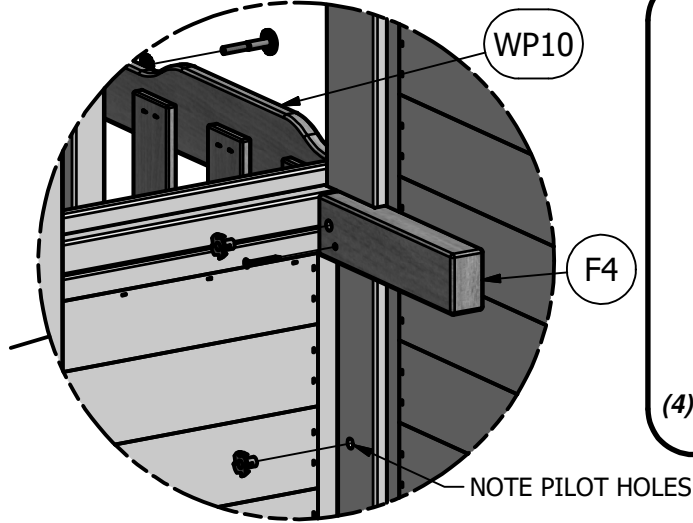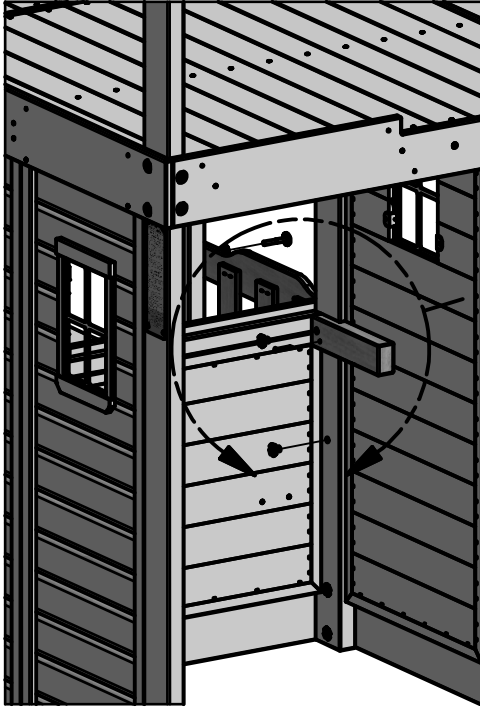

•INSTALL T-NUTS PRIOR TO ASSEMBLY

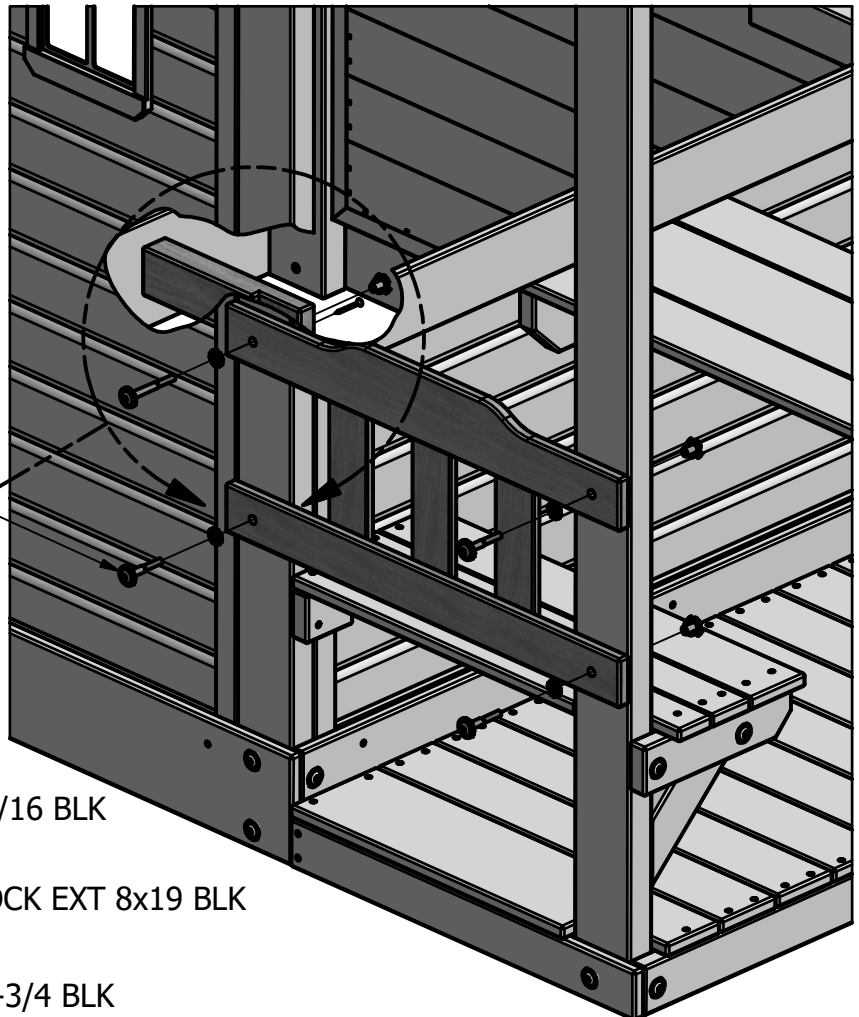

BOLT WH 5/16x2 BLK
(3 PLCS)

SCREW PFH 8x1-1/2 BLK
(1 PLCS)

F4

WP10

T-NUT 5/16 BLK
(4 PLCS)

WASHER LOCK EXT 8x19 BLK
(4 PLCS)

BOLT WH 5/16x2-3/4 BLK
(1 PLCS)





(1) **M6 - COUNTER TOP - W4L07605**
5/8"x3 3/8"x37 5/8" (16x86x957)




(2) **M7 - COUNTER TOP - W4L07606**
5/8"x3 3/8"x38 5/8" (16x86x981)

STEP 32


(14) **SCREW PFH**
8x1-1/2"


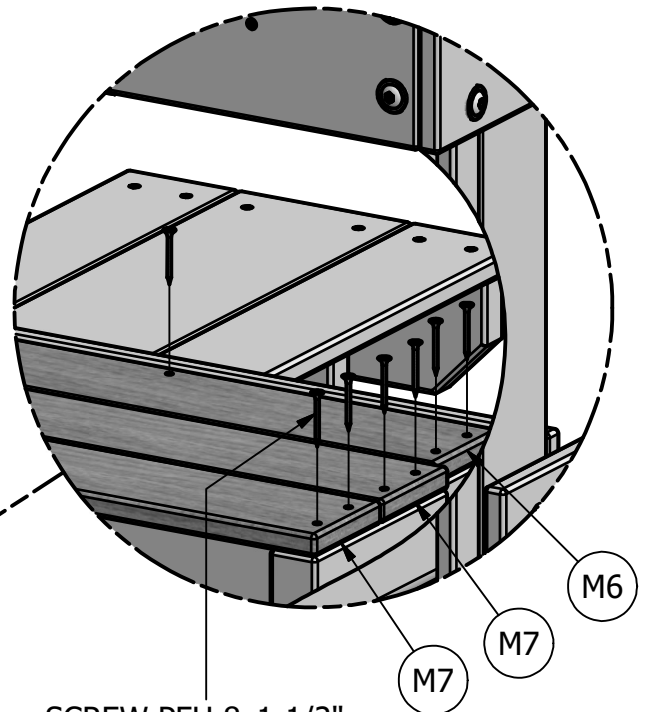
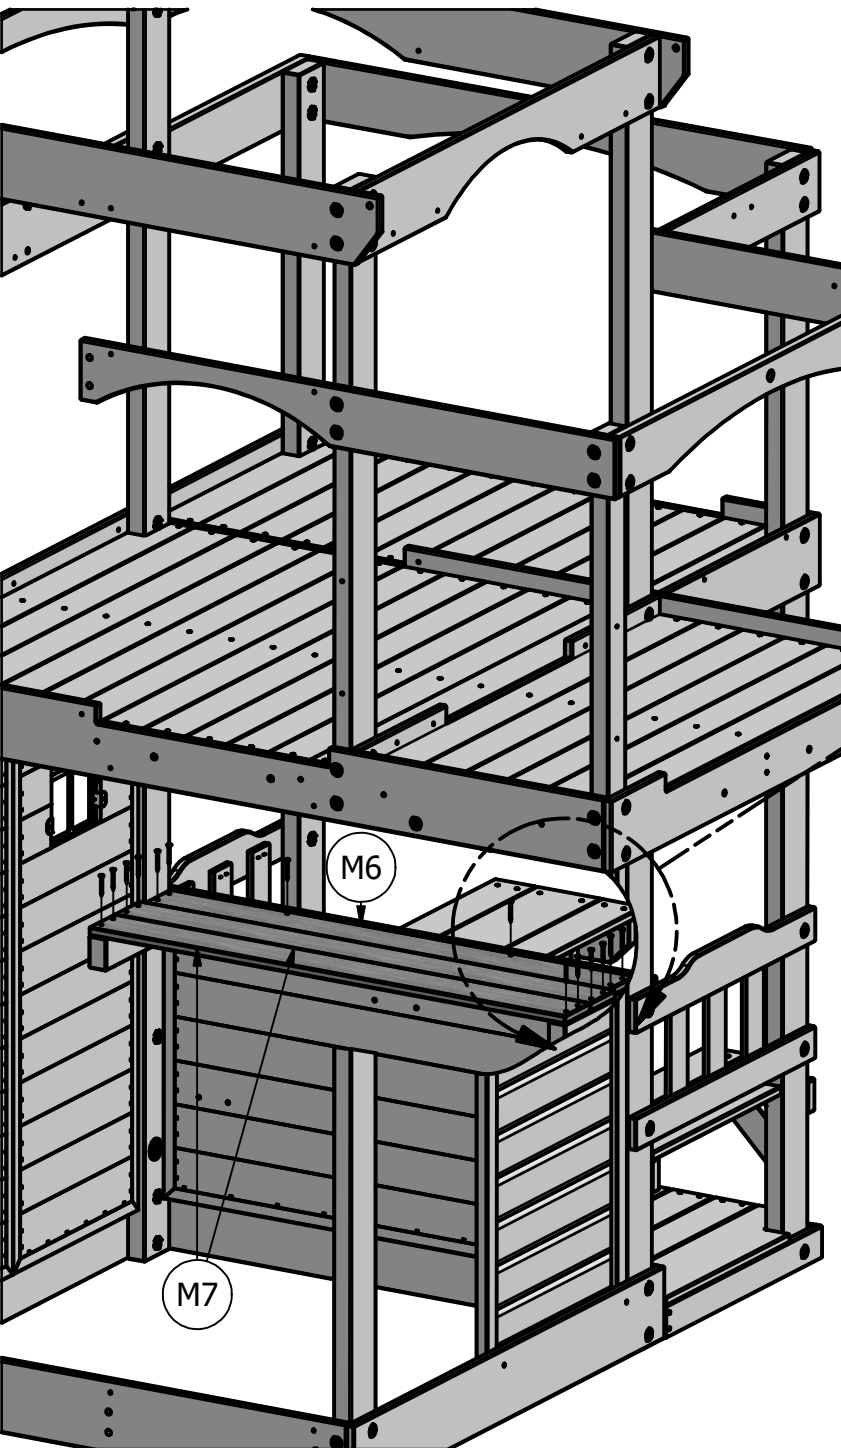


SCREW PFH 8x1-1/2"
(14 PLCS)


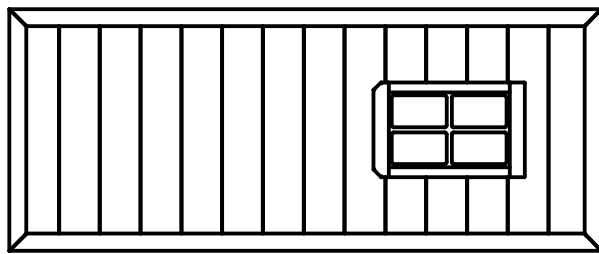


(1) WP9 - LOWER WALL PANEL - W2A02090
1"x18 7/8"x46 1/4" (24x479x1176)


STEP 33

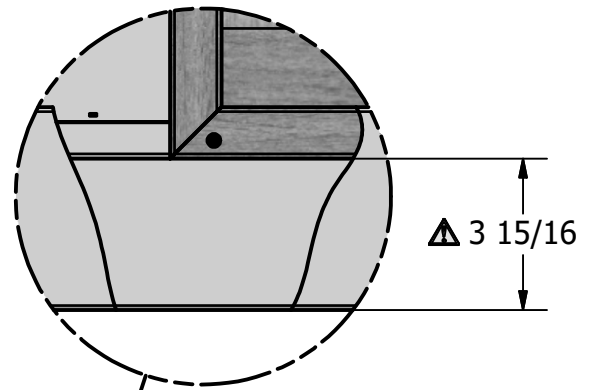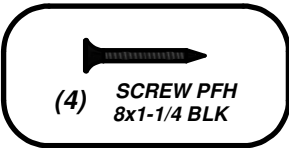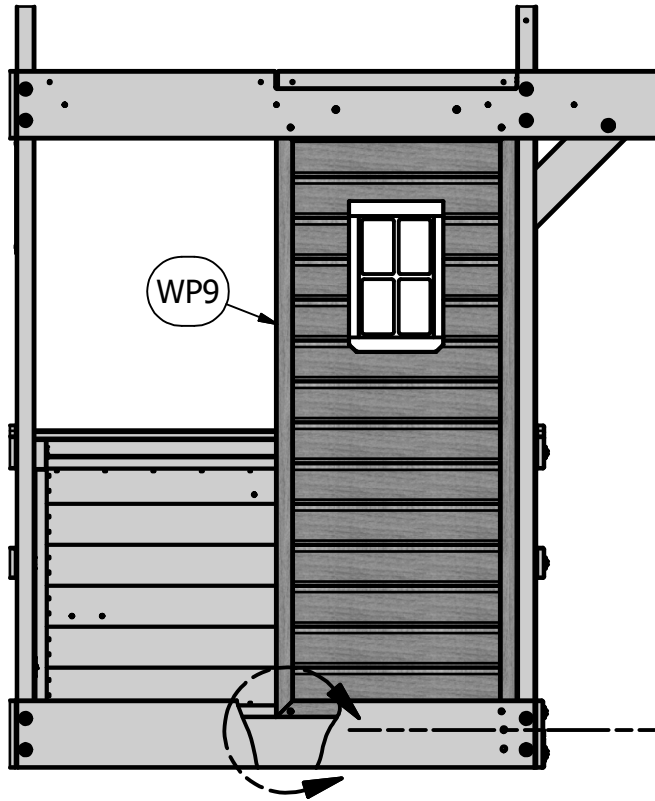


3 15/16

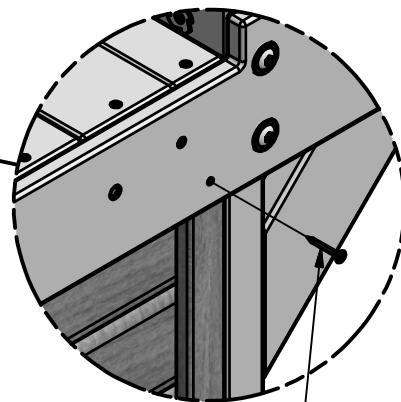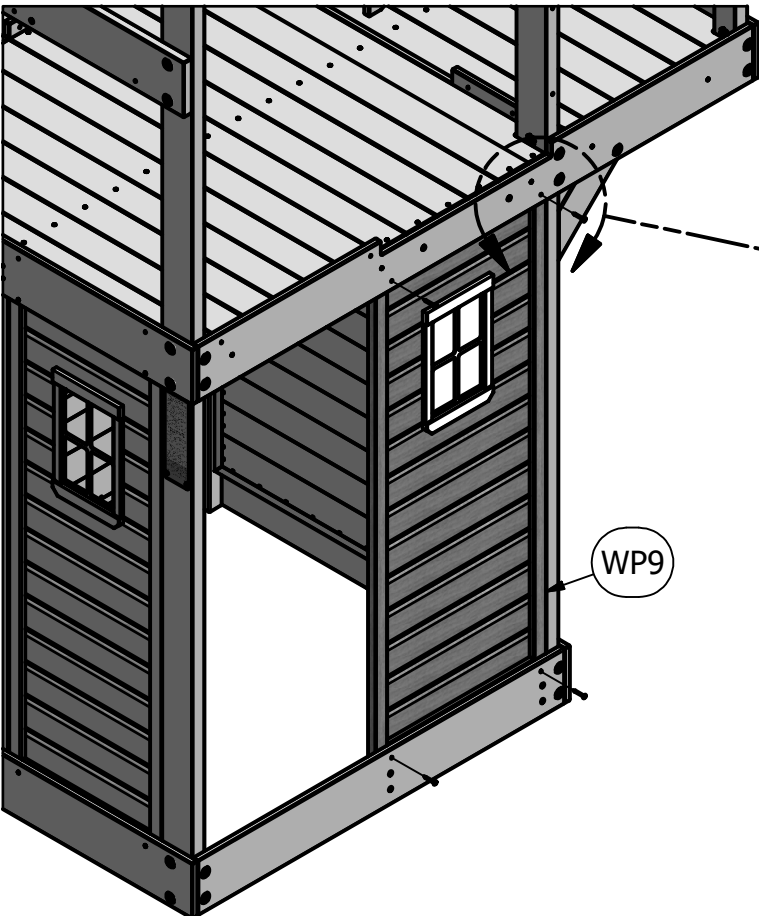

SCREW PFH 8x1-1/4 BLK
(4 PLCS)



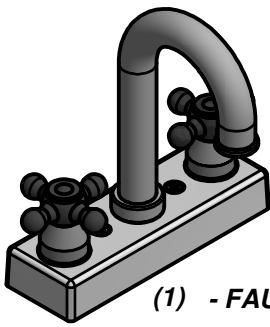



(1) - FAUCET KIT - A6P00024

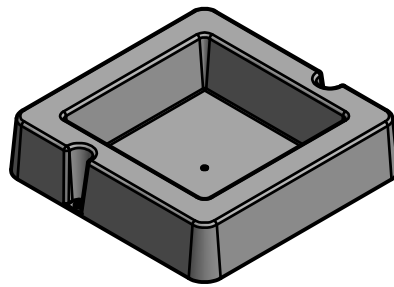

(1) - SURFACE MOUNT BASIN - A6P00032

STEP 34

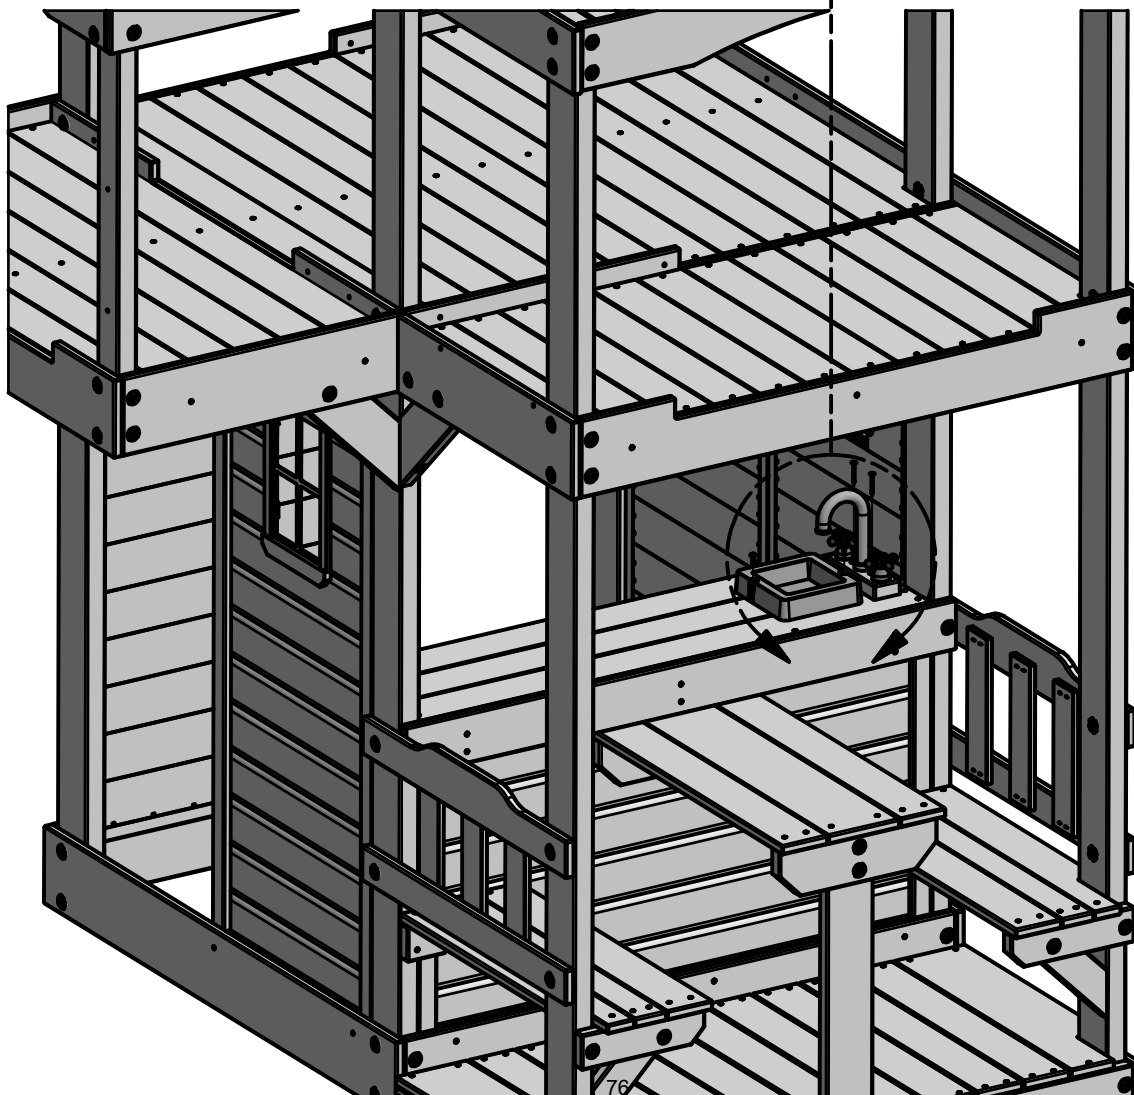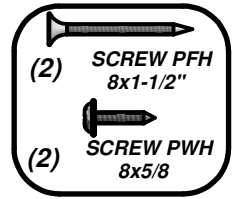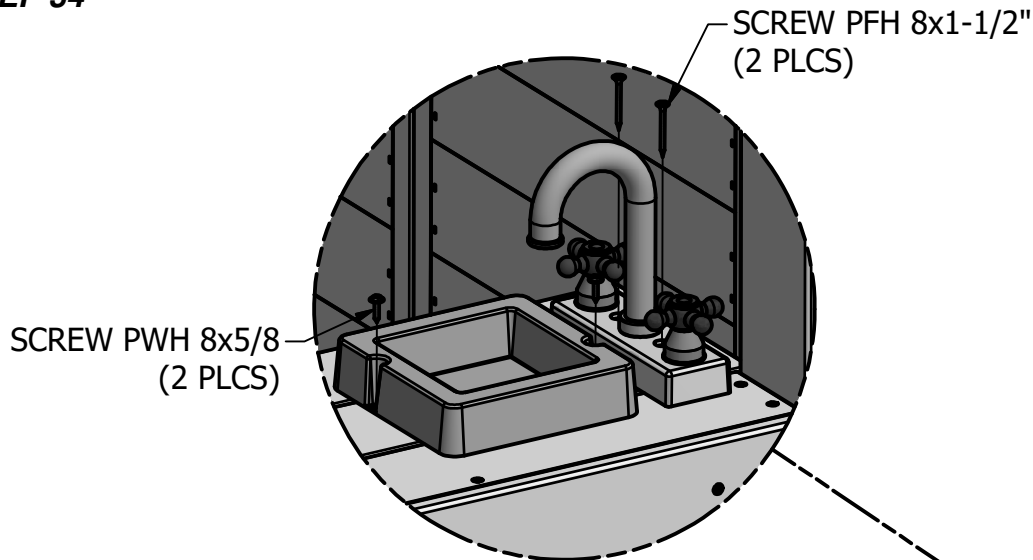


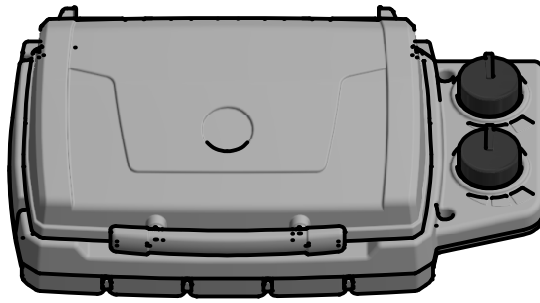


(1) GRILL - A6P00282

STEP 35


HANDLE ASSEMBLY

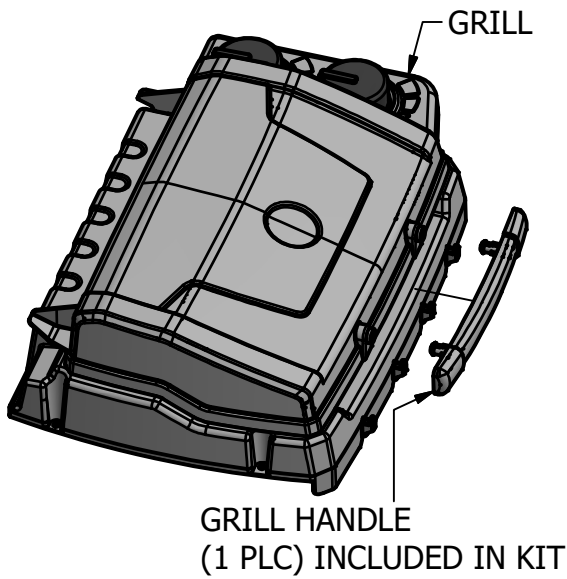


GRILL LOCATION

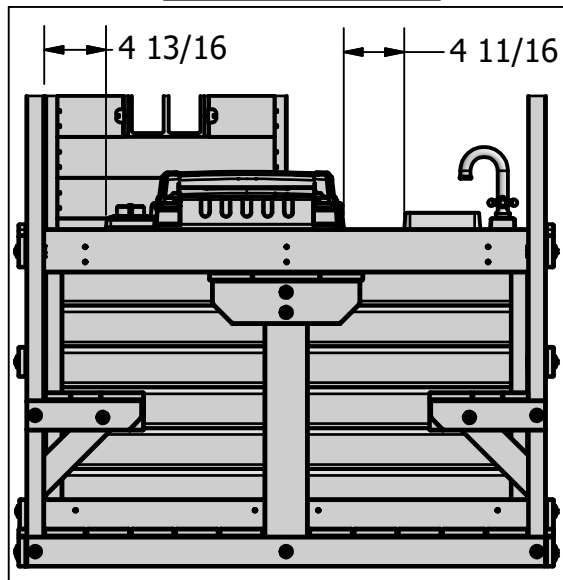


(4) SCREW PWH
8x5/8

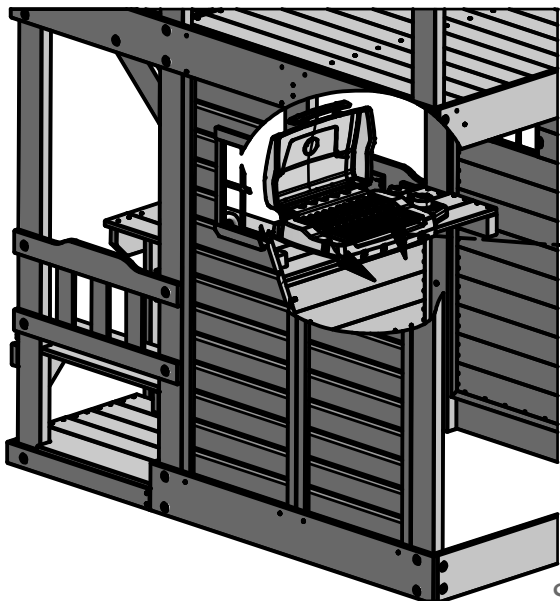

SCREW PWH 8x5/8
(4 PLCS)

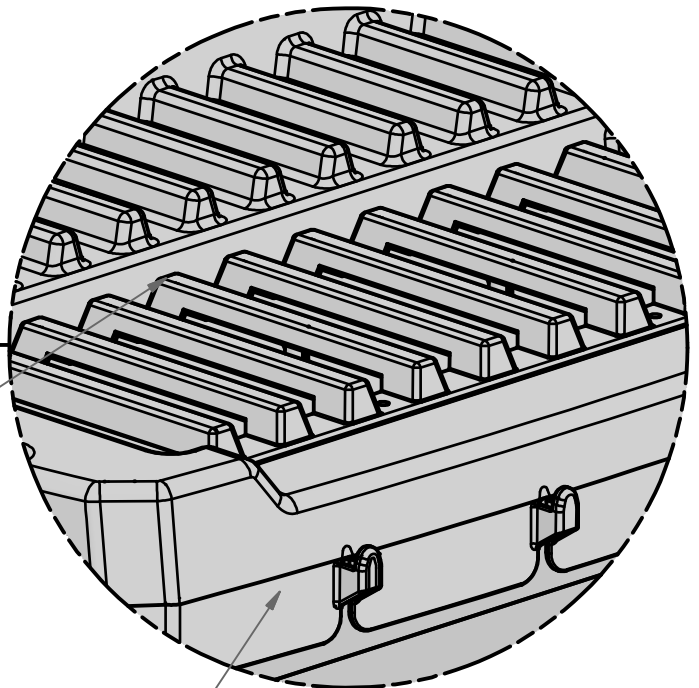

NOTE: GRILL LIP SHOULD BE TOUCHING COUNTER TOP EDGE.

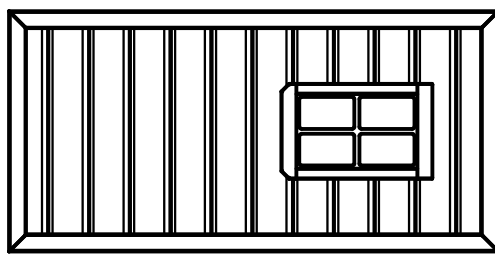

- (1) WP7 - TOP FRONT WALL PANEL - W2A02088
1"x16 7/8"x38 1/4" (24x476x971)



STEP 36




(4) SCREW PFH
8x1-1/4 BLK


SCREW PFH 8x1-1/4 BLK
(4 PLCS)

WP7

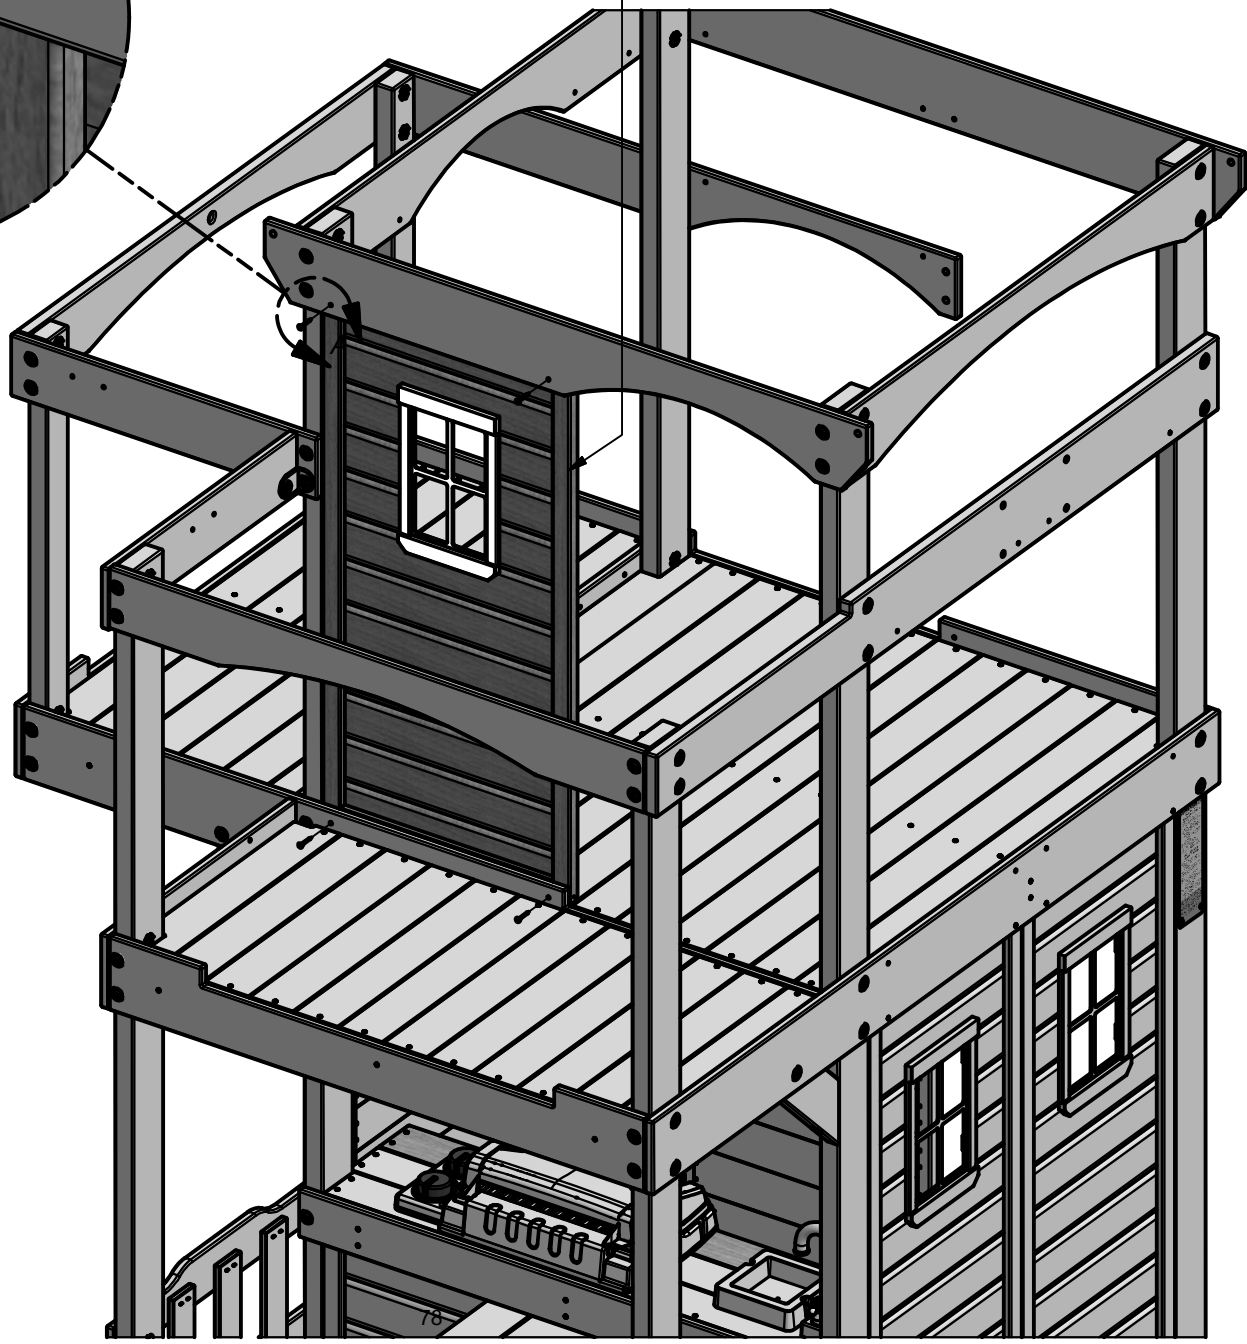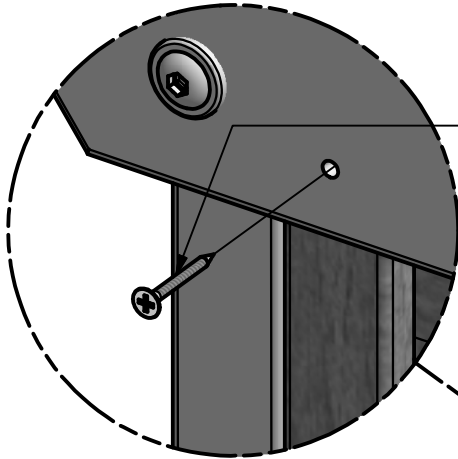

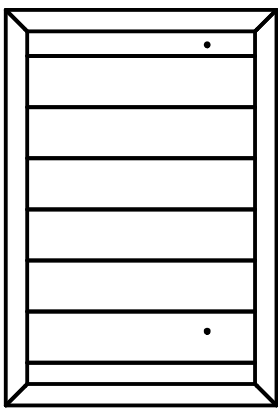


(1) WP4 - TOP RIGHT FRONT WALL PANEL - W2A02498
1"x16 7/8"x24 5/8" (24x430x627)

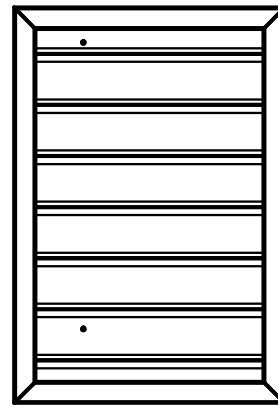


(1) WP3 - TOP RIGHT FRONT WALL PANEL - W2A02497
1"x16 7/8"x24 5/8" (24x430x627)

STEP 37

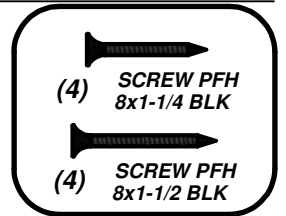


SCREW PFH 8x1-1/2 BLK
(4 PLCS)

NOTE HOLES

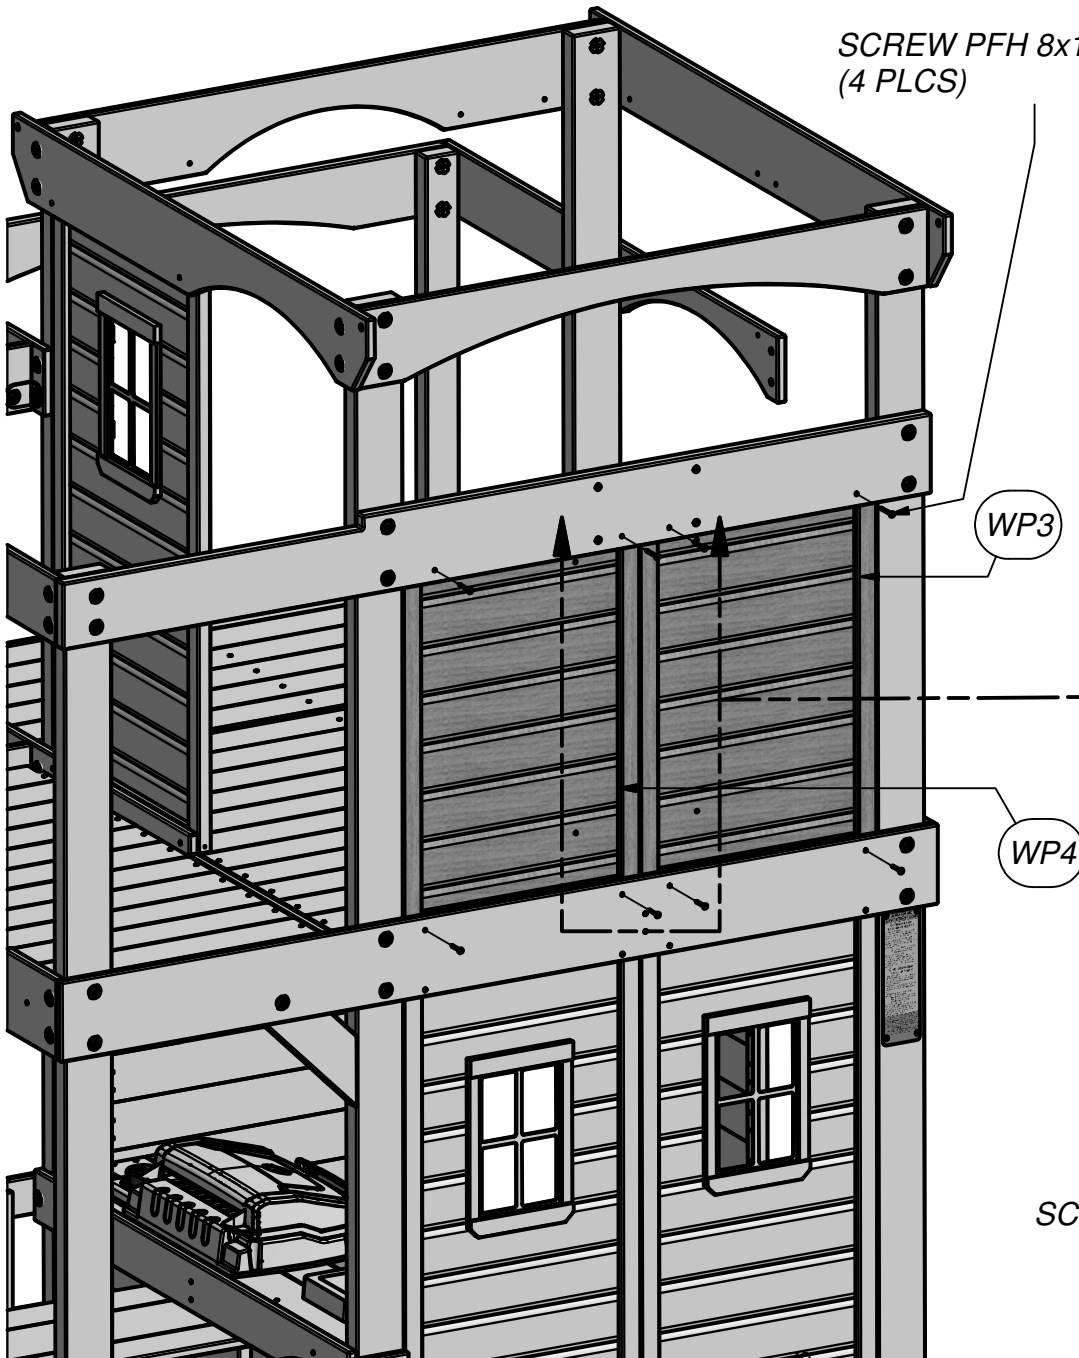


SCREW PFH 8x1-1/4 BLK
(4 PLCS)

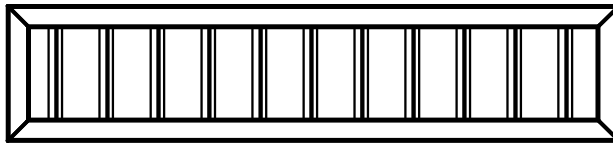


(2) WP8 - TOP LEFT WALL PANEL - W2A02089
1"x11 3/4"x38 1/4" (24x214x971)


STEP 38


(8) SCREW PFH
8x1-1/4 BLK

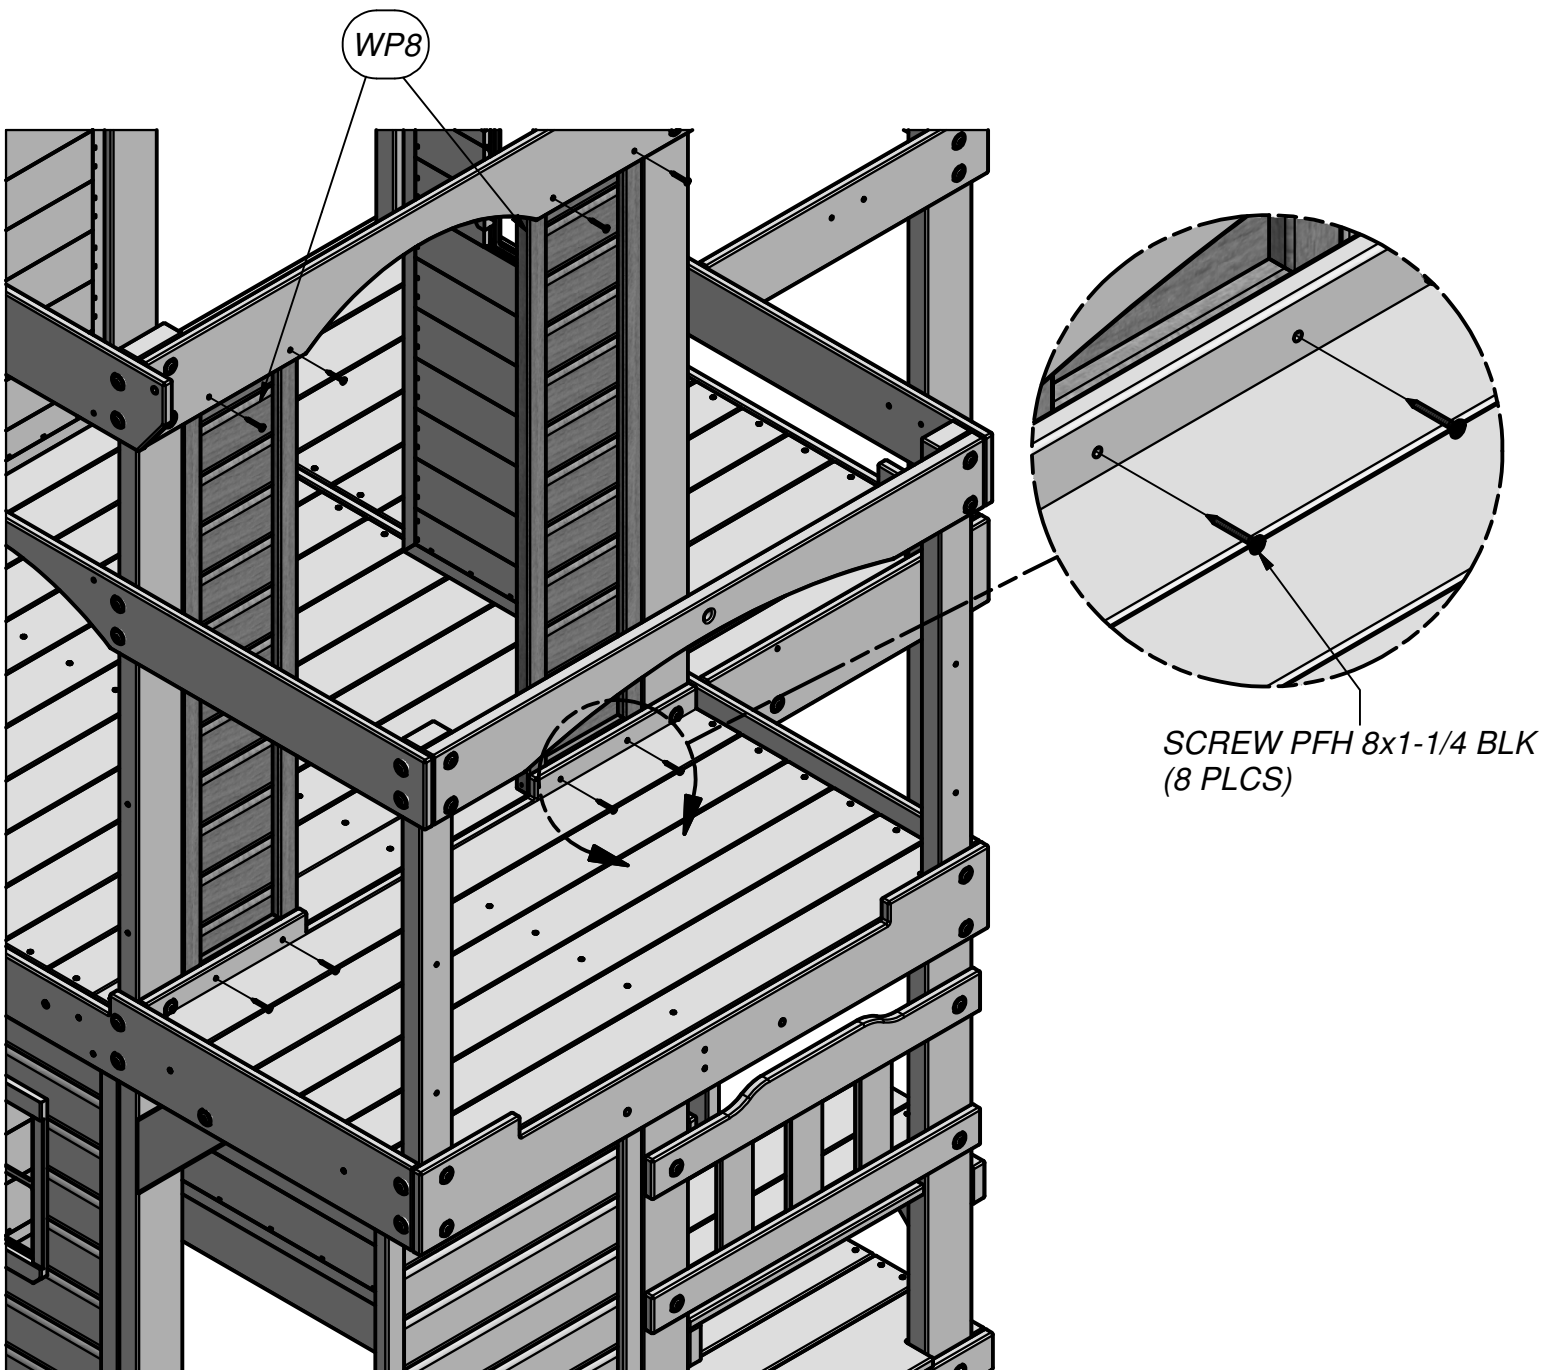

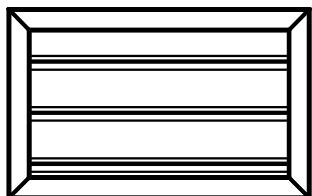


(1) WP6 - TOP REAR WALL PANEL - W2A02087
1"x18 7/8"x11 3/4" (24x479x300)

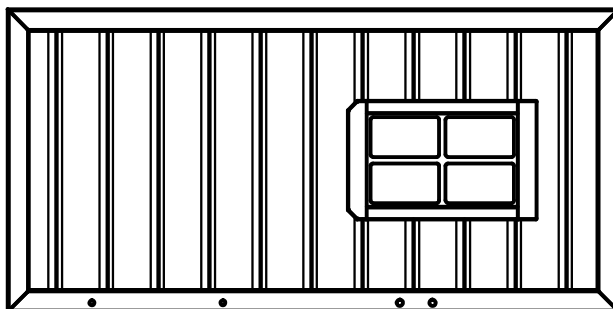

(1) WP5 - TOP LEFT REAR WALL PANEL - W2A02086
1"x16 7/8"x46 1/2" (24x430x971)

STEP 39

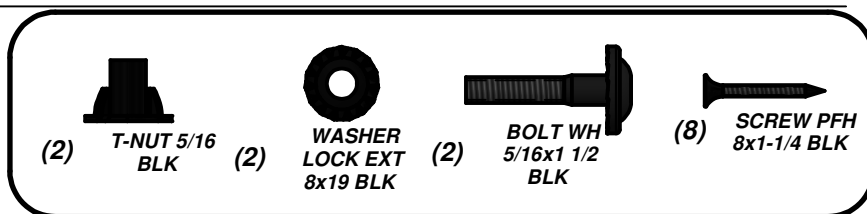

WASHER LOCK EXT 8x19 BLK
(2 PLCS)

T-NUT 5/16 BLK
(2 PLCS)

BOLT WH 5/16x1 1/2 BLK
(2 PLCS)

SCREW PFH 8x1-1/4 BLK
(8 PLCS)

WP6

WP5

NOTE HOLES






(8) **N2 - PICKET - W4L07612**
5/8"x2 3/8"x24 3/4" (16x60x628)

STEP 40



(32) **SCREW PFH**
8x1-1/8"

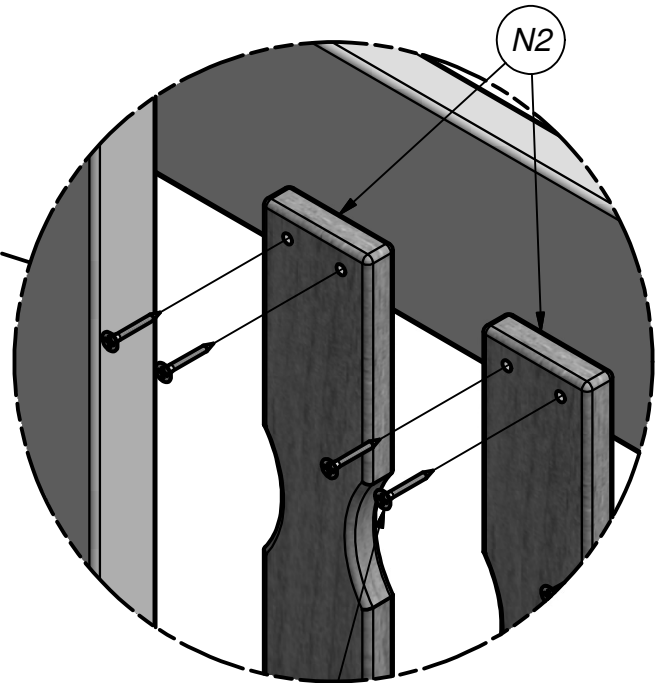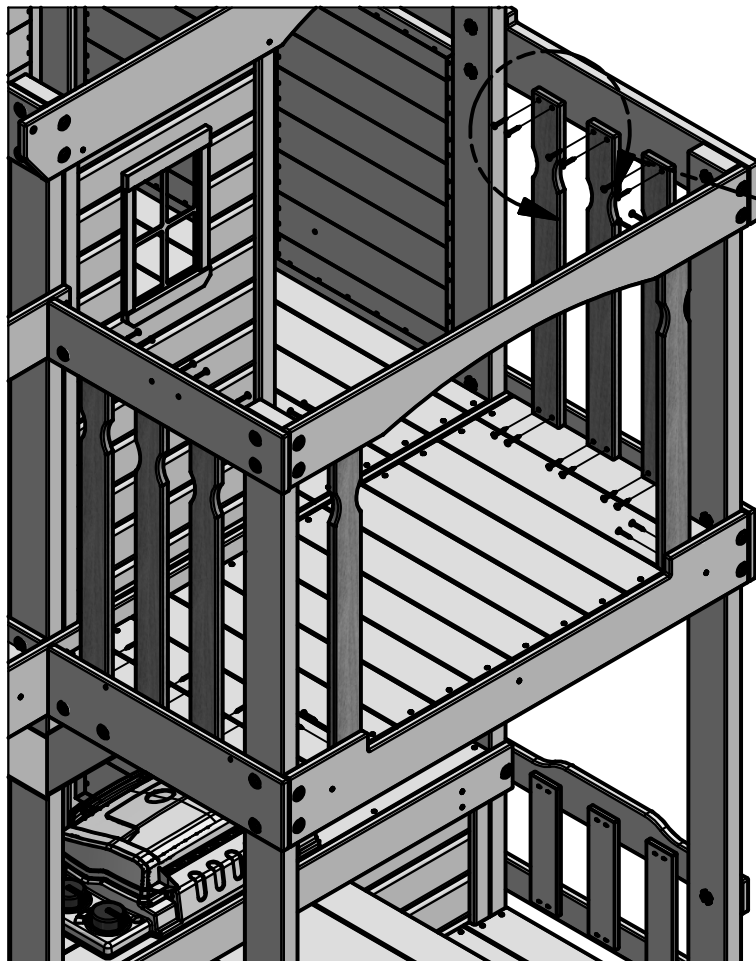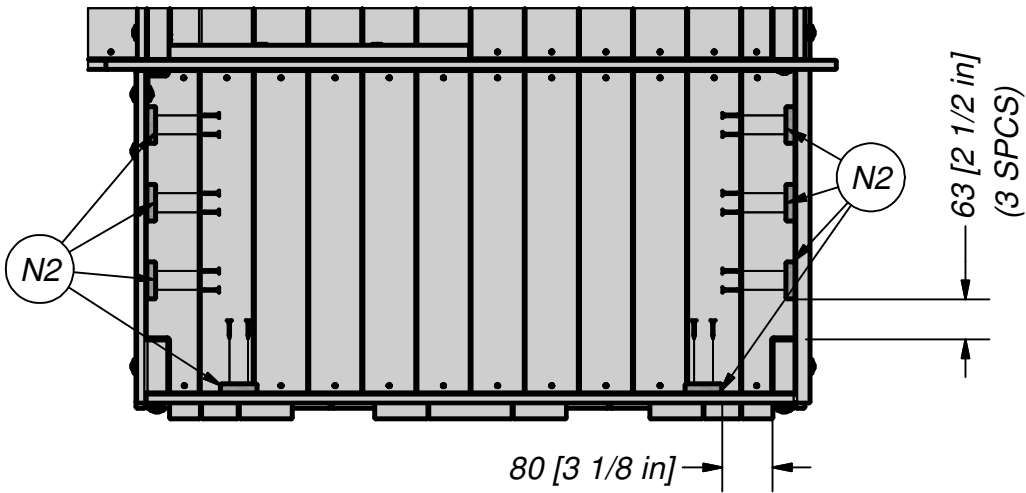

SCREW PFH 8x1-1/8"
(32 PLCS)





(10) **N2 - PICKET - W4L07612**
5/8"x2 3/8"x24 3/4" (16x60x628)


STEP 41





(40) **SCREW PFH**
8x1-1/8"


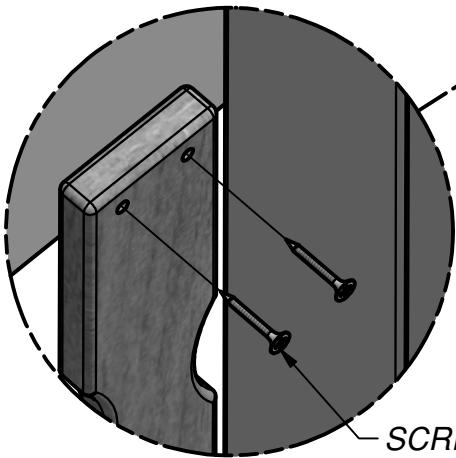
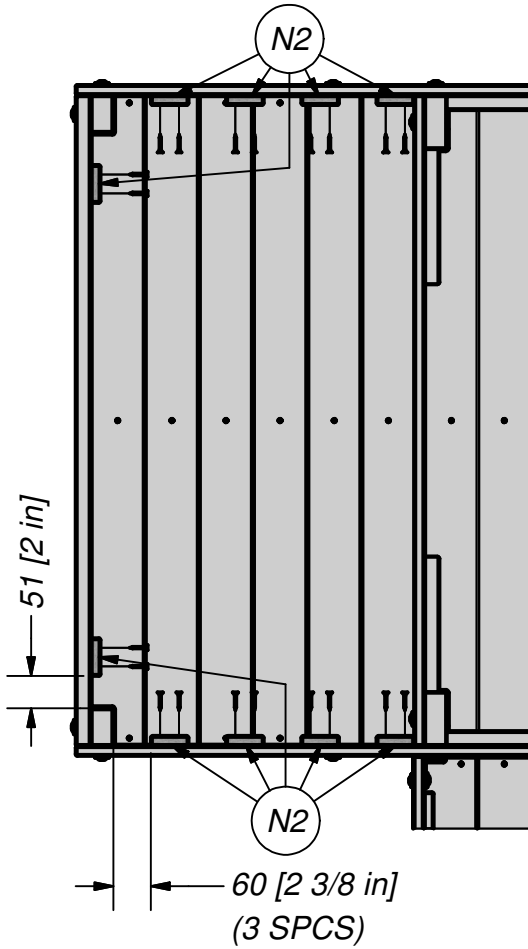


SCREW PFH 8x1-1/8"
(40 PLCS)

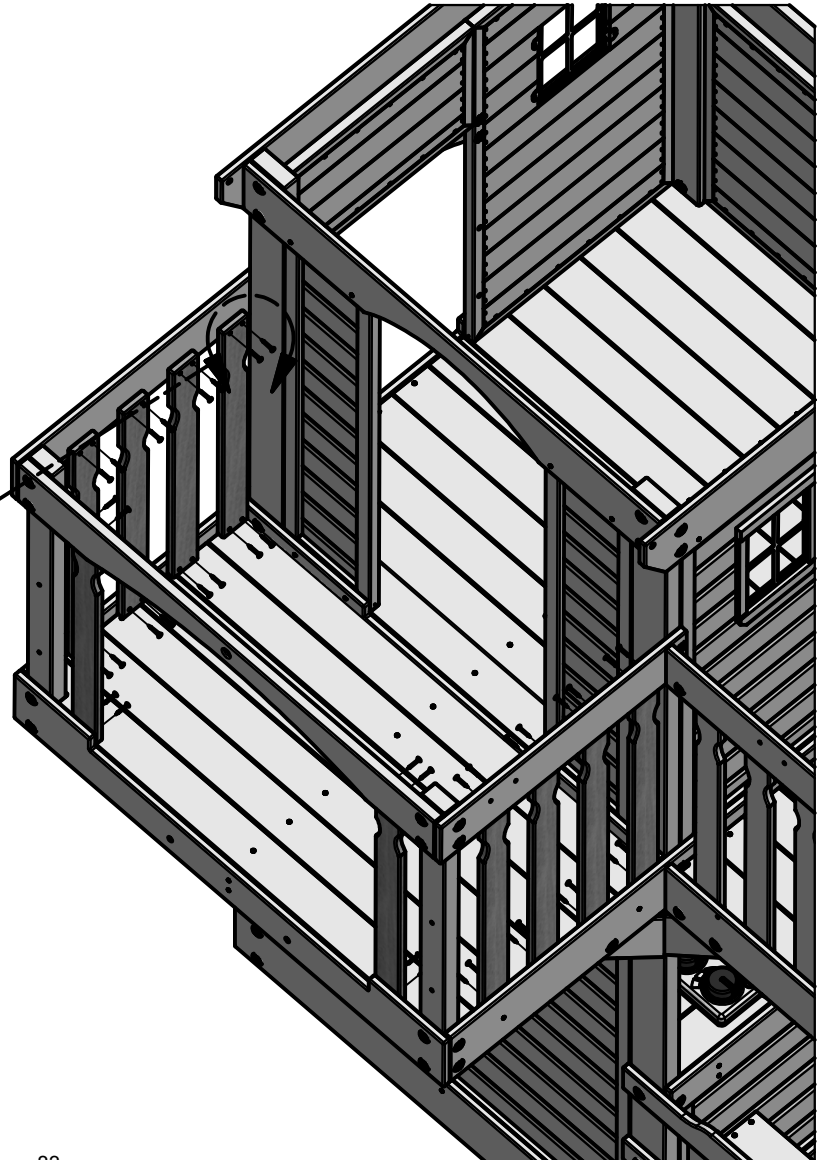

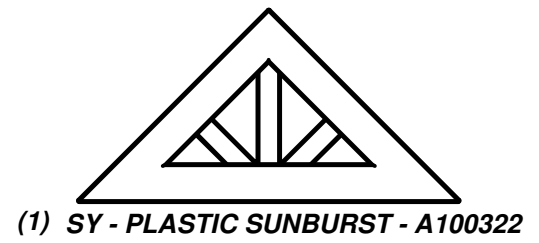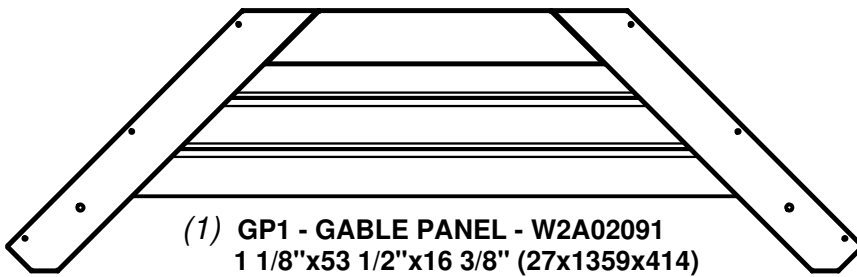



STEP 42

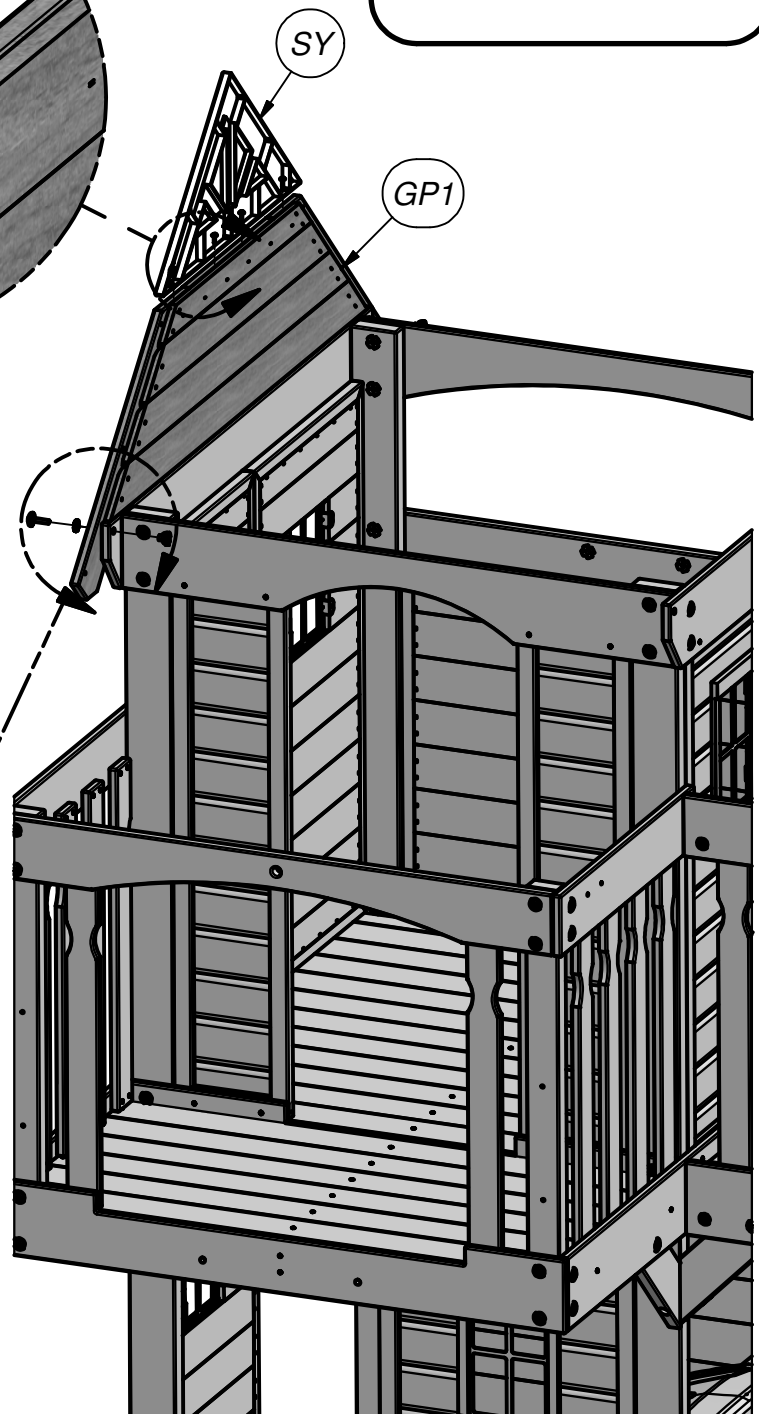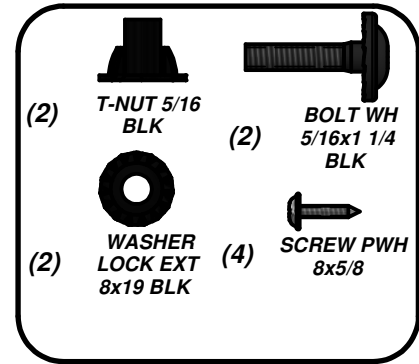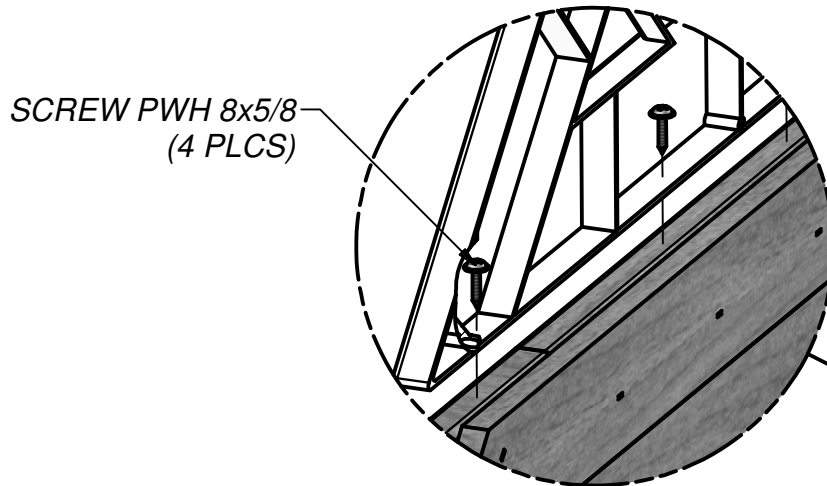


BOLT WH 5/16x1 1/4 BLK
(2 PLCS)

WASHER LOCK EXT 8x19 BLK
(2 PLCS)




T-NUT 5/16 BLK
(2 PLCS)

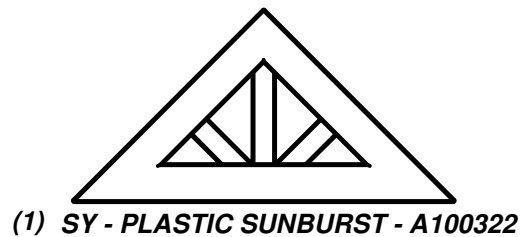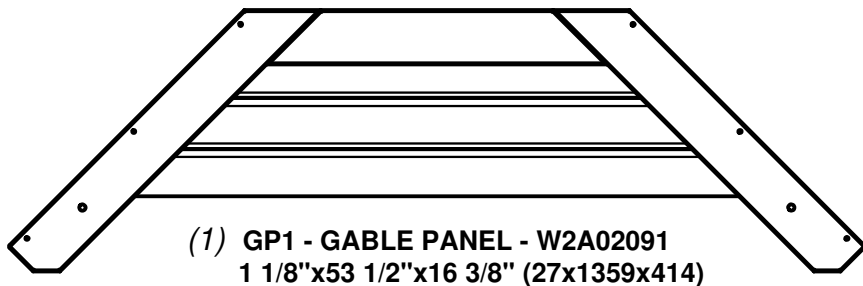


STEP 43

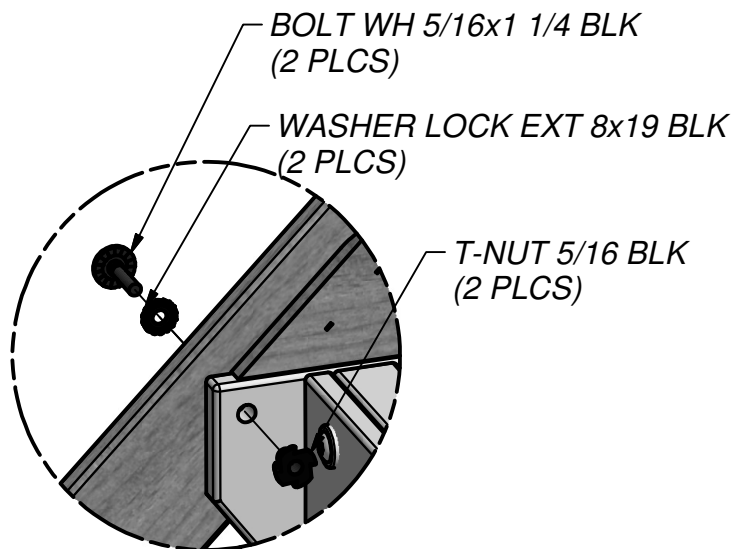



SCREW PWH 8x5/8
(4 PLCS)

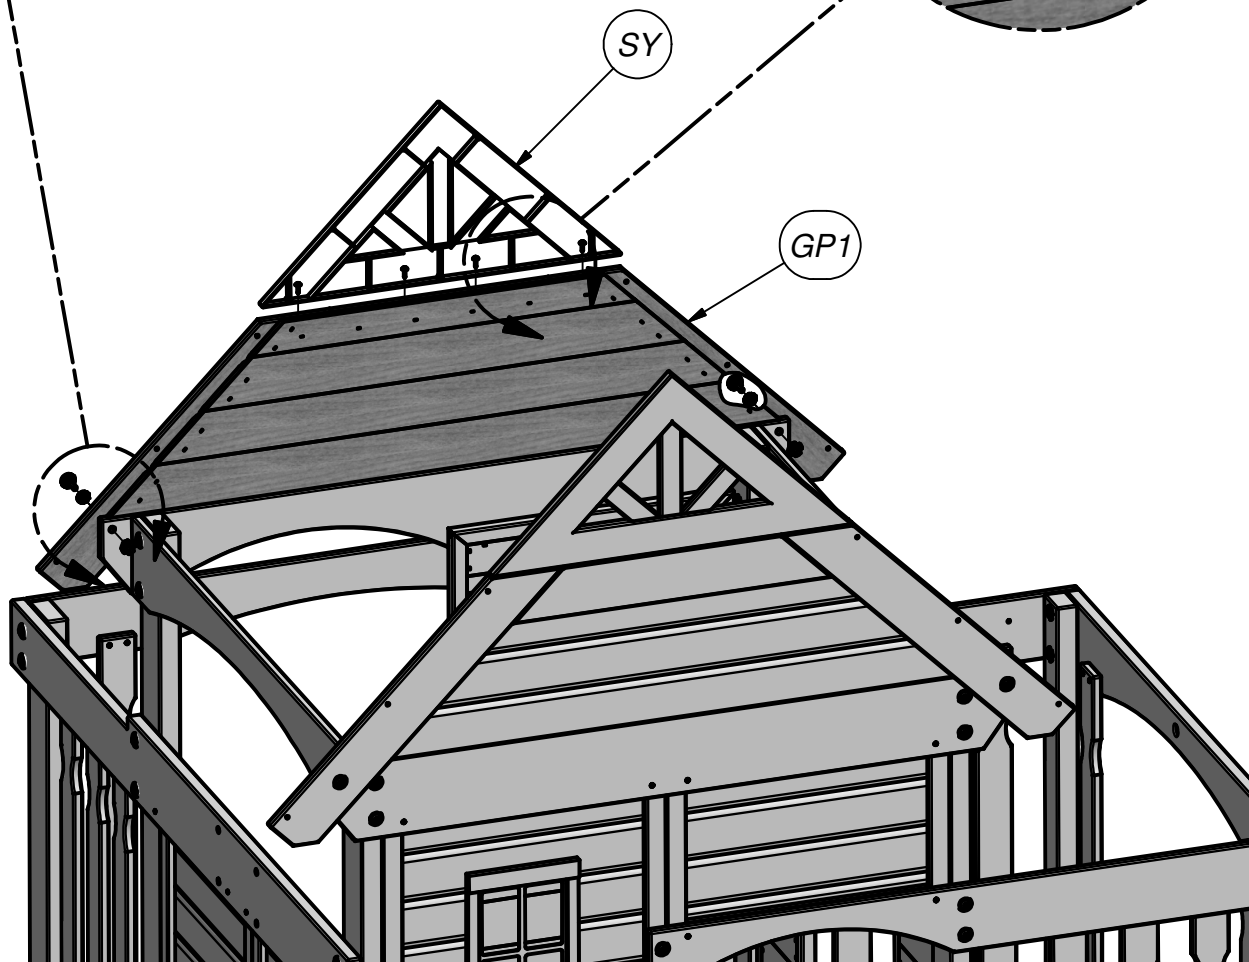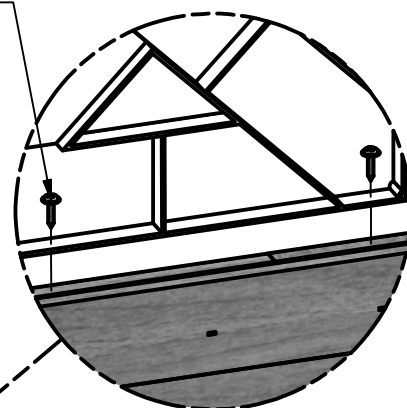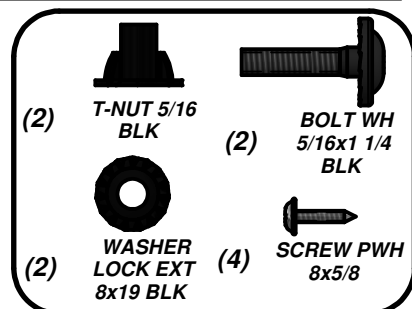


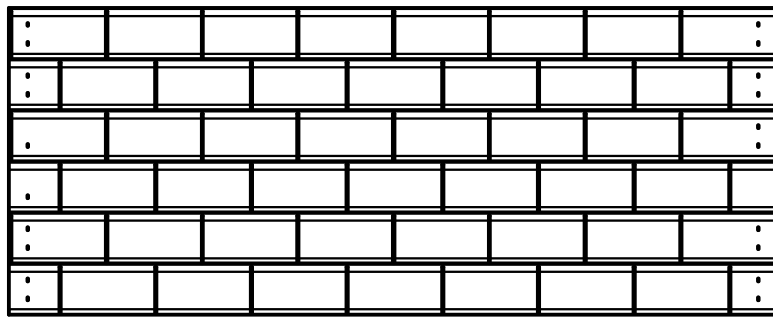

(2) RP2 - TOP ROOF PANEL - W2A02495
1 3/8"x48"x19 1/8" (35x1220x486)


STEP 44

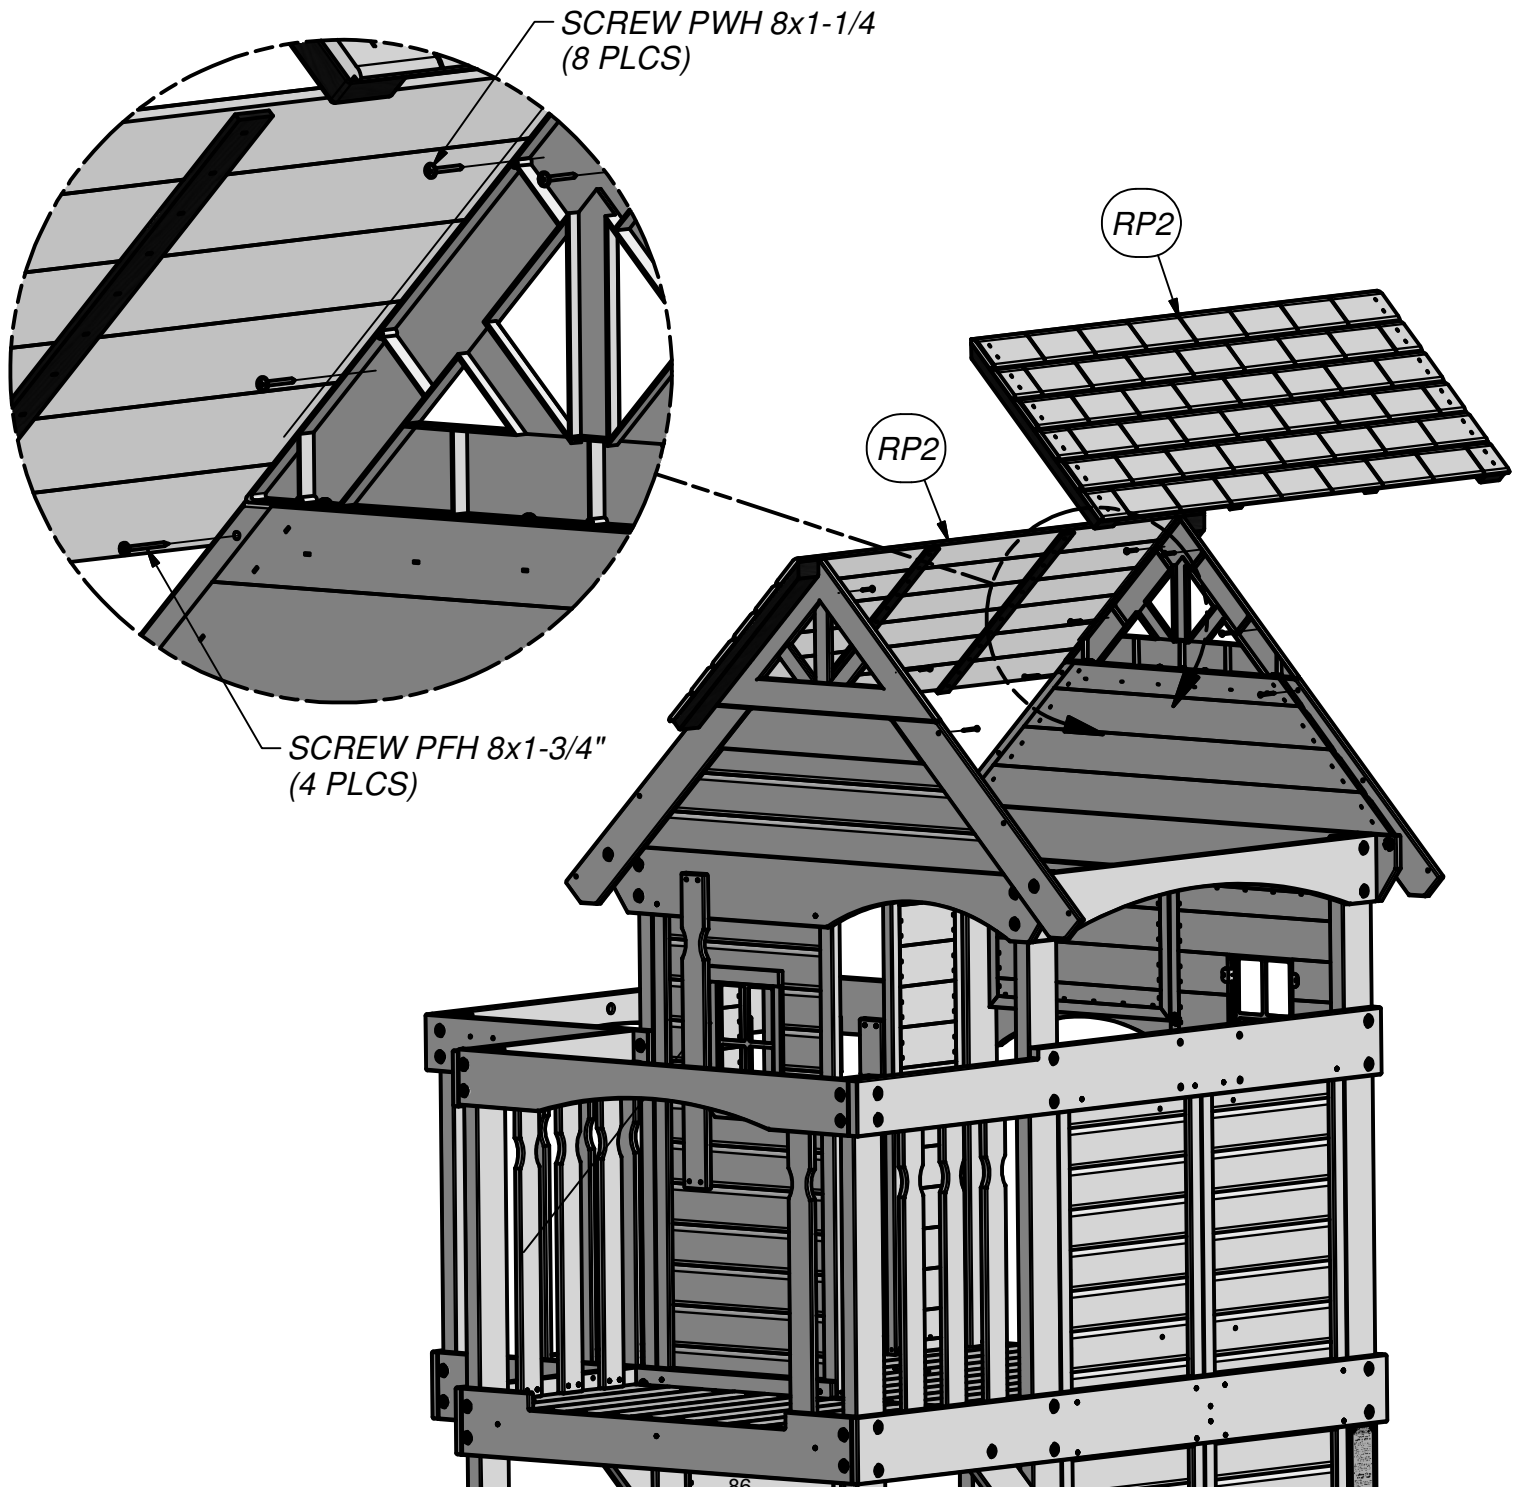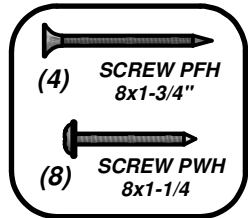

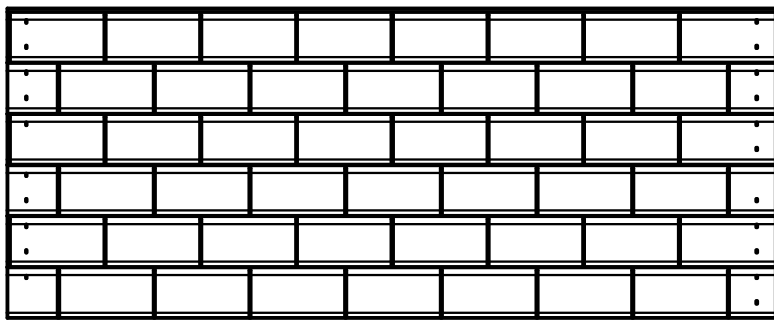



(2) RP1 - BOTTOM ROOF PANEL - W2A02494
1 3/8"x48"x19 3/8" (35x1220x491)


STEP 45

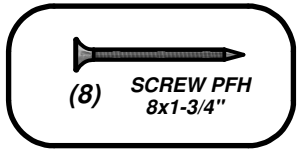


SCREW PFH 8x1-3/4"
(8 PLCS)

 NOTE HOLES

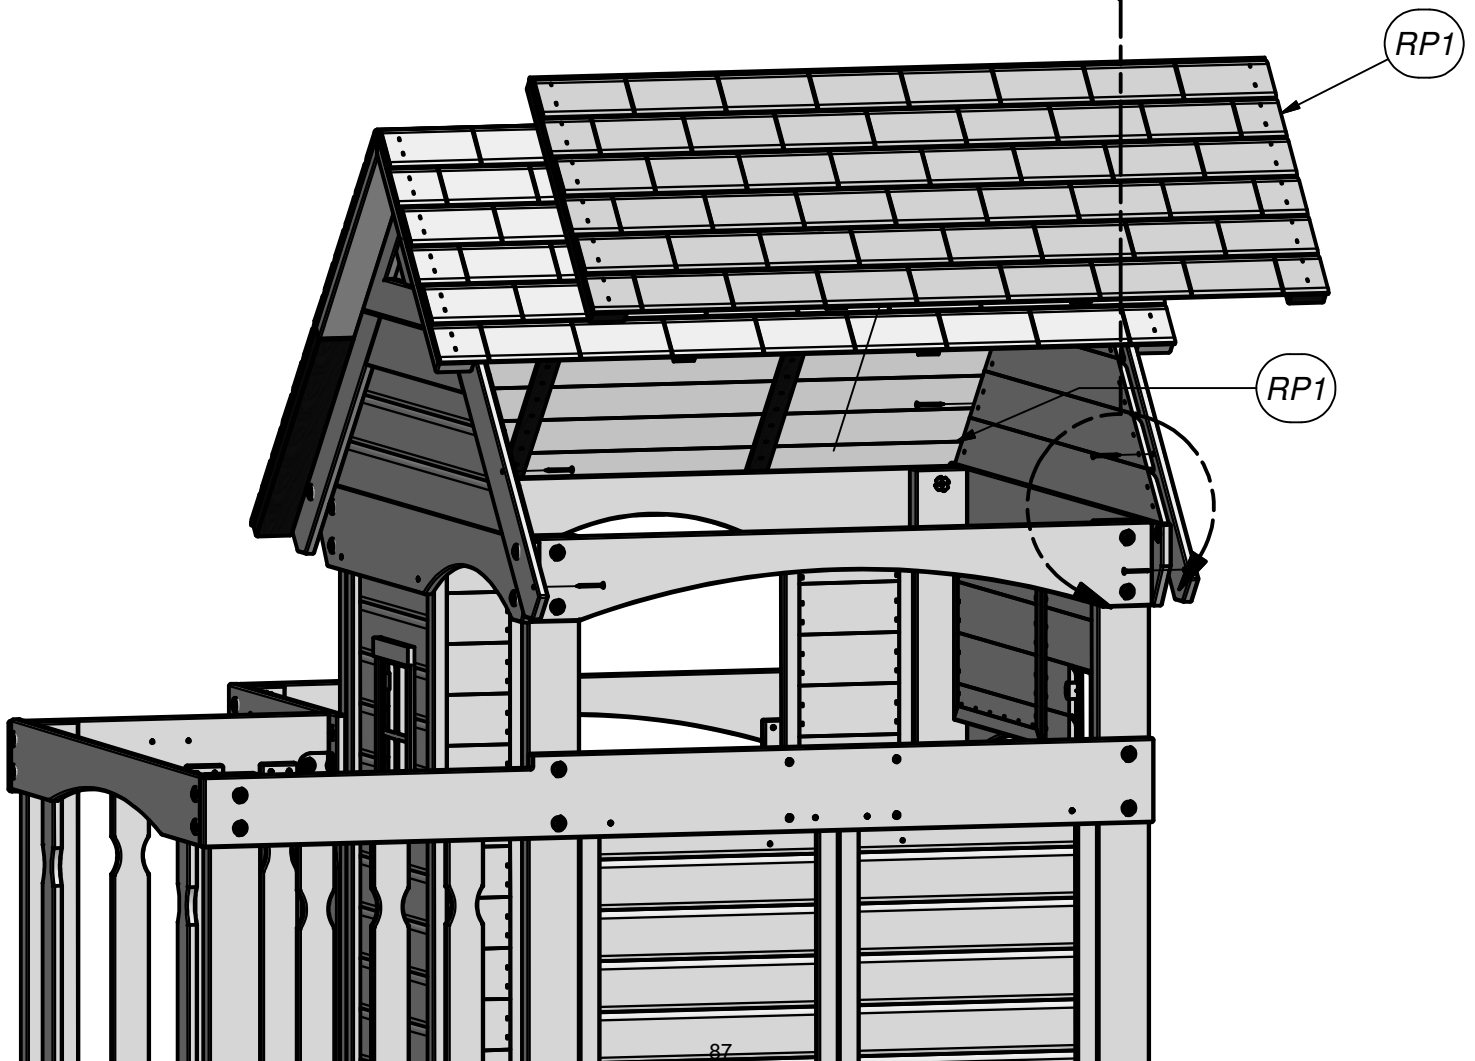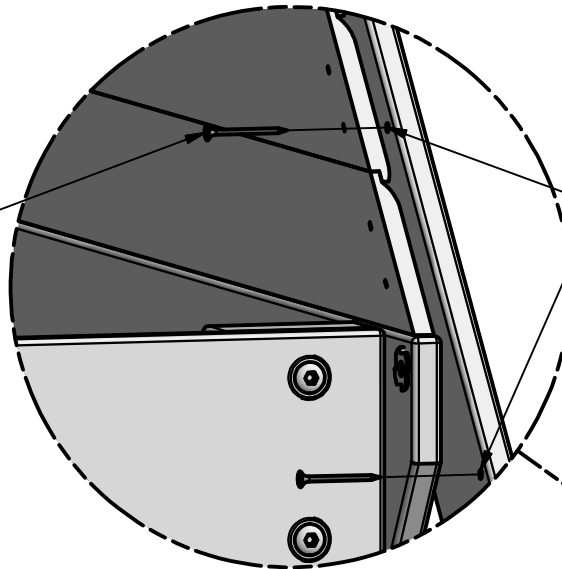



- (1) **E10 - MOUNTING BLOCK - W4L11155**
1 3/8"x3"x4 3/4" (36x76x120)

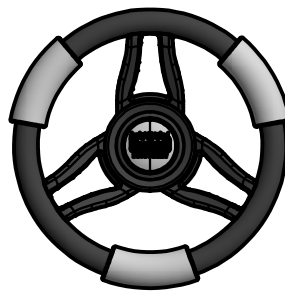

- (1) **LP - STEERING WHEEL - A100105**

STEP 46

SCREW PFH 8x1-1/4 BLK
(2 PLCS)


E10

STEERING WHEEL


WASHER FLAT 8x27

LAG SCREW WH 5/16x1 1/2


PLASTIC CAP
(INCLUDED IN KIT)

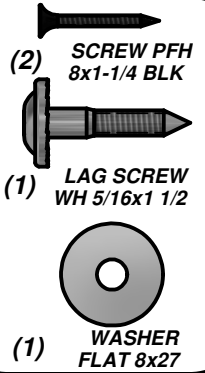


NOTE HOLE LOCATION
FOR PROPER ORIENTATION.

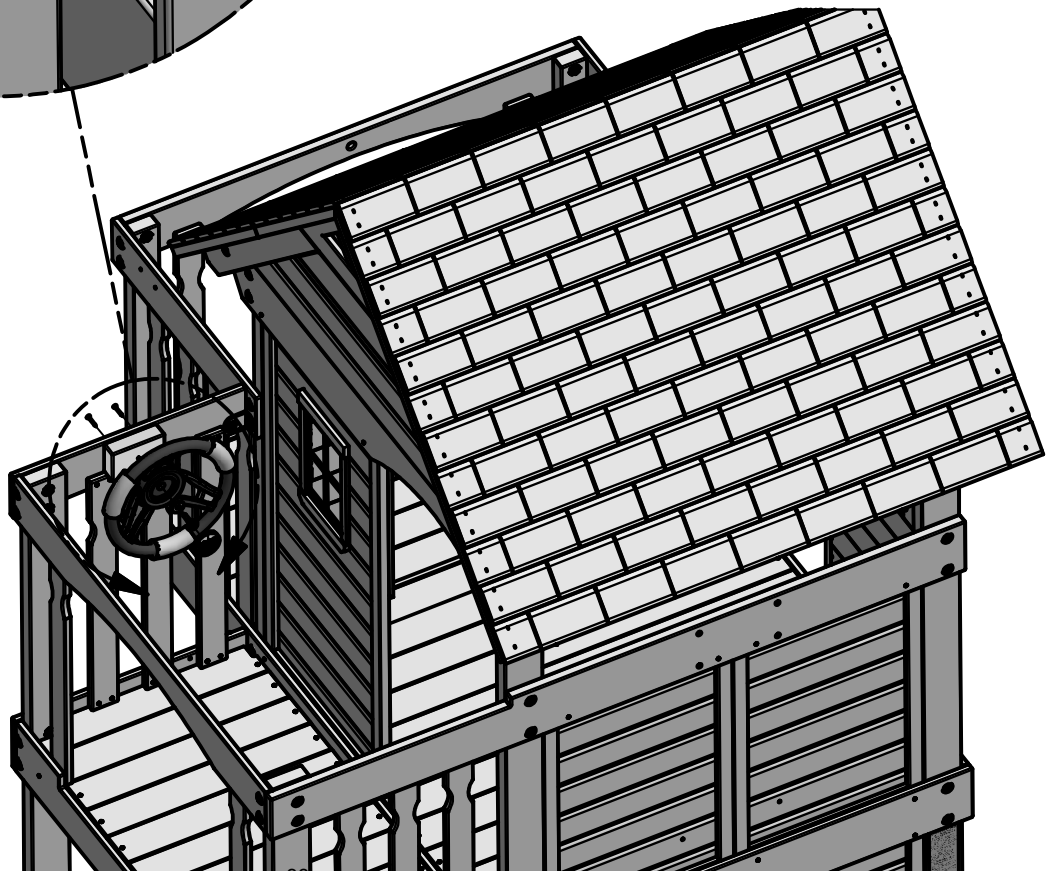

THIS HOLE FACES THE
RAIL IN THIS STEP.

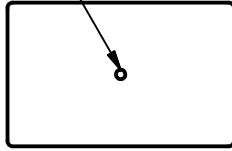

- (1) E10 - MOUNTING BLOCK - W4L11155
1 3/8"x3"x4 3/4" (36x76x120)

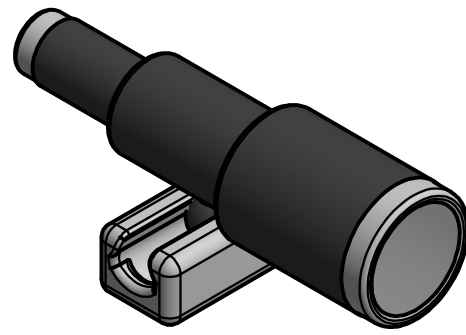


- (1) LN - TELESCOPE - A6P00096


STEP 47

- (2) SCREW PFH
8x1-1/4"
- (2) SCREW PFH
8x1-1/4 BLK

SCREW PFH 8x1-1/4"
(2 PLCS)




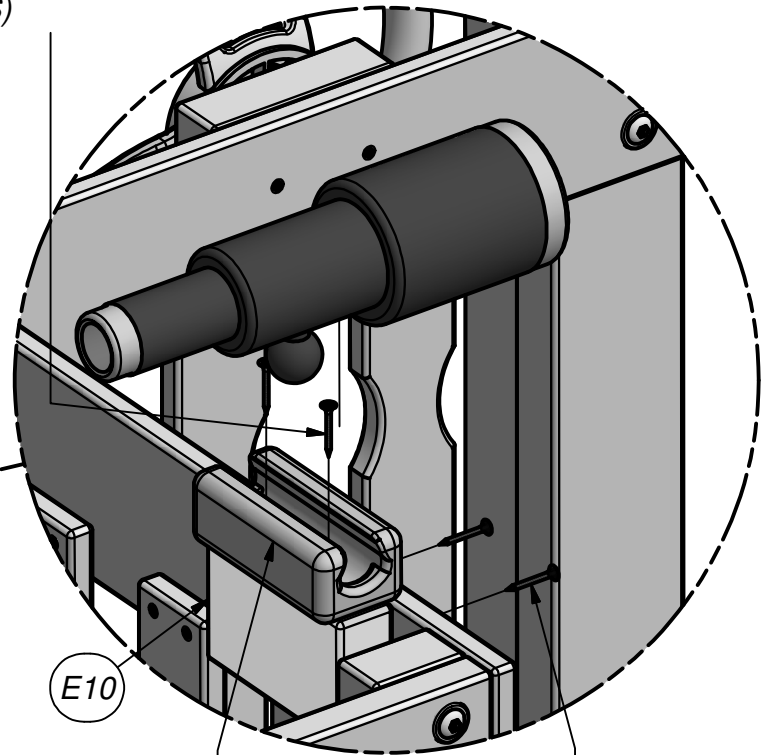


SCREW PFH 8x1-1/4 BLK
(2 PLCS)

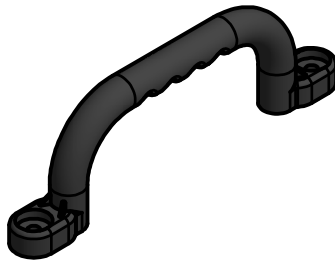

(4) - HAND GRIP GREEN PLASTIC - A100028


STEP 48

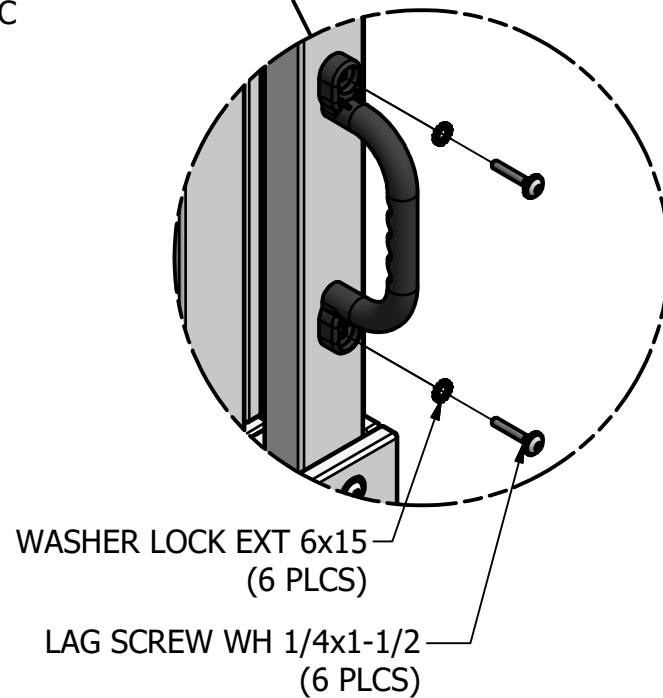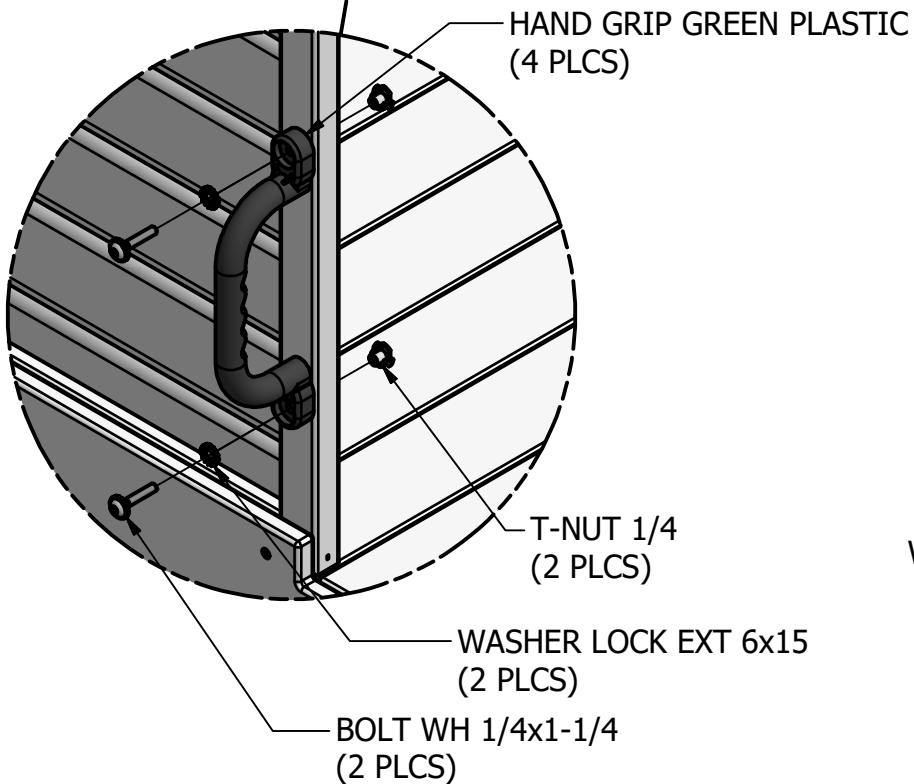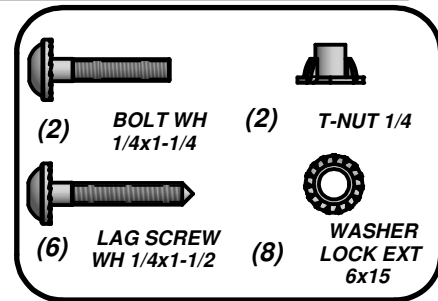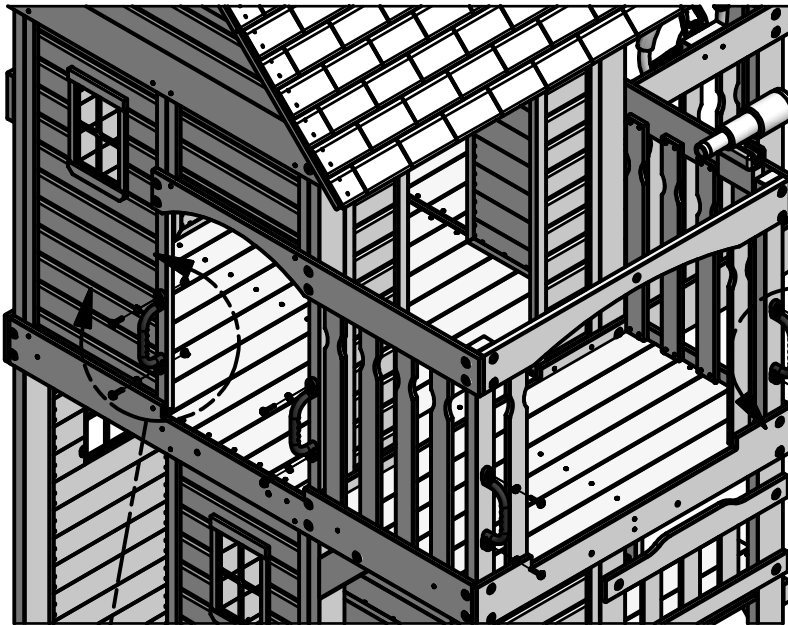



(1) - CHALKBOARD - A4M00906




STEP 49

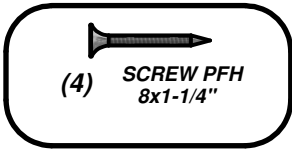


SCREW PFH 8x1-1/4"
(4 PLCS)

CHALKBOARD



NOTE HOLES IN CHALKBOARD

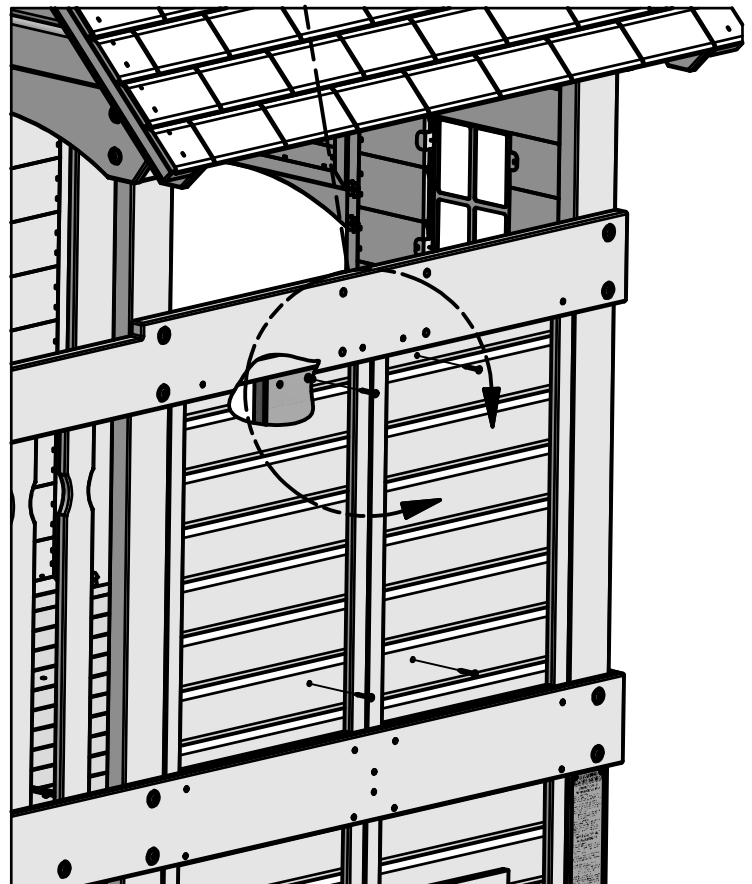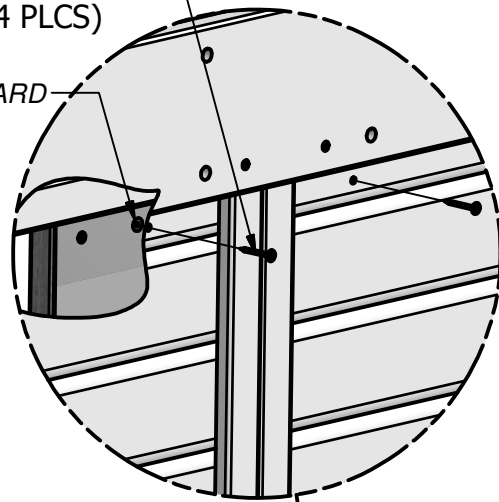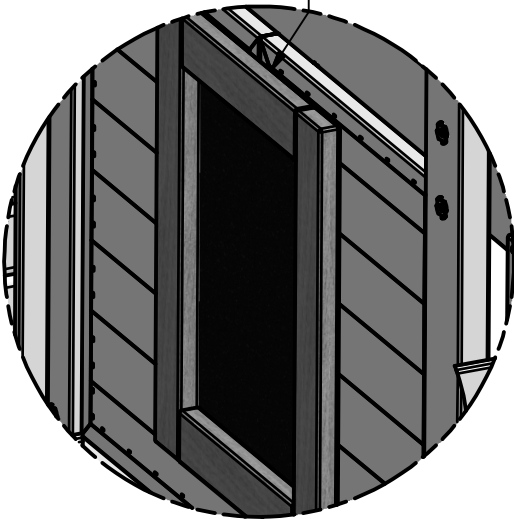

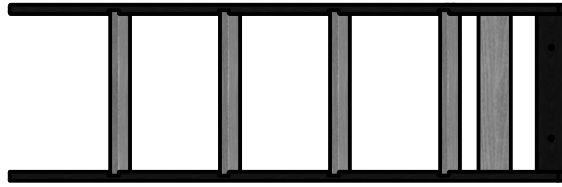



(1) LADDER ASSEMBLY

STEP 50

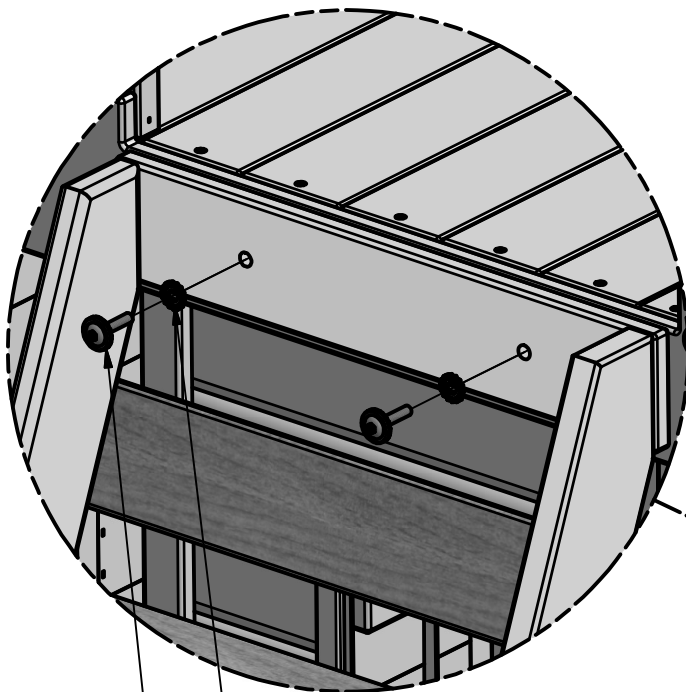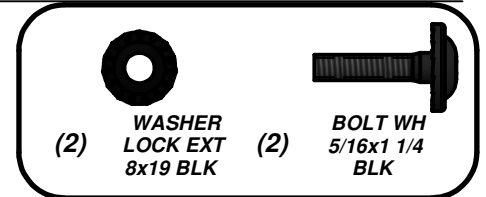


- WASHER LOCK EXT 8x19 BLK
(2 PLCS)
- BOLT WH 5/16x1 1/4 BLK
(2 PLCS)

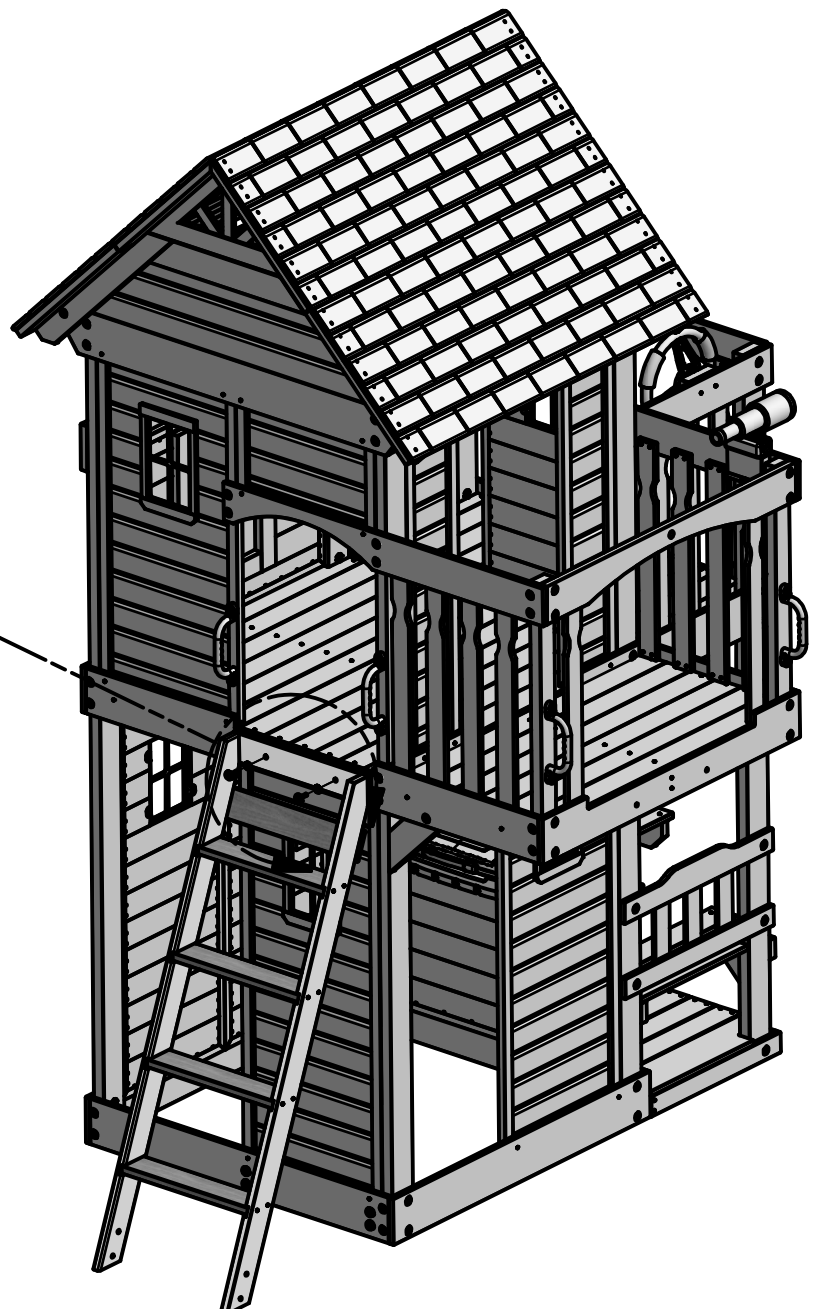

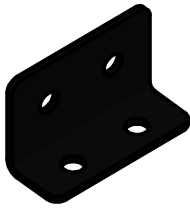

(2) - L BRACKET 51x32x82x3.175 - A4M00855

 NUT BARREL WH 5/16x5/8 BLK
(4 PLCS)




(2) L5 - GROUND BOARD - W4L11652
5/8"x4 3/8"x24 1/8" (16x112x612)

STEP 51

WASHER LOCK EXT 12x19 BLK
(4 PLCS)

NUT BARREL WH 5/16x5/8 BLK
(4 PLCS)

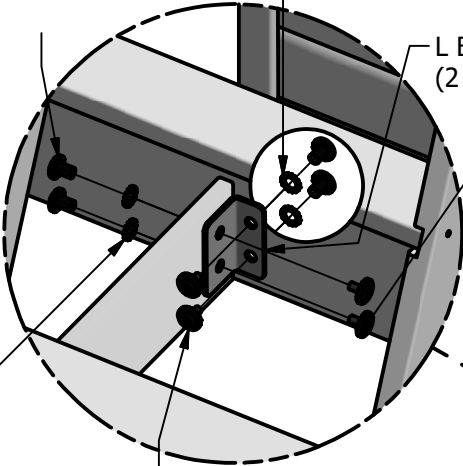

L BRACKET 51x32x82x3.175
(2 PLCS)


BOLT WH 5/16x1/2 BLK
(4 PLCS)

BOLT WH 5/16x1/2 BLK
(4 PLCS)

WASHER LOCK EXT 12x19 BLK
(4 PLCS)

WASHER LOCK EXT 8x19 BLK
(4 PLCS)



BOLT WH 5/16x1 BLK
(4 PLCS)

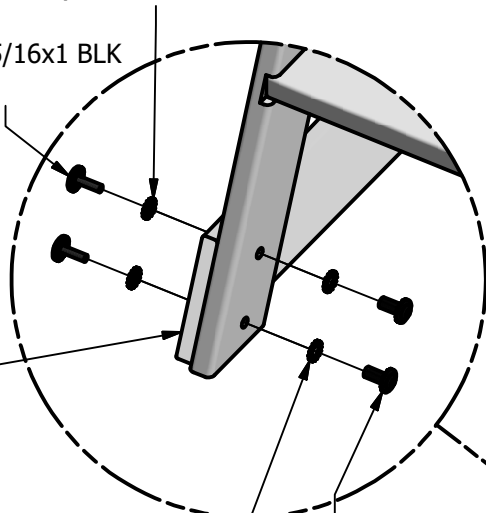


L5

WASHER LOCK EXT 12x19 BLK
(4 PLCS)



NUT BARREL WH 5/16x7/8 BLK
(4 PLCS)

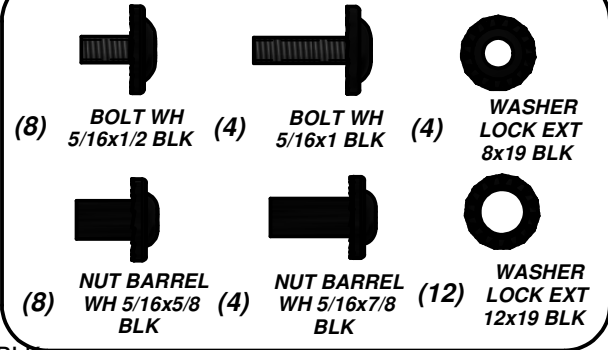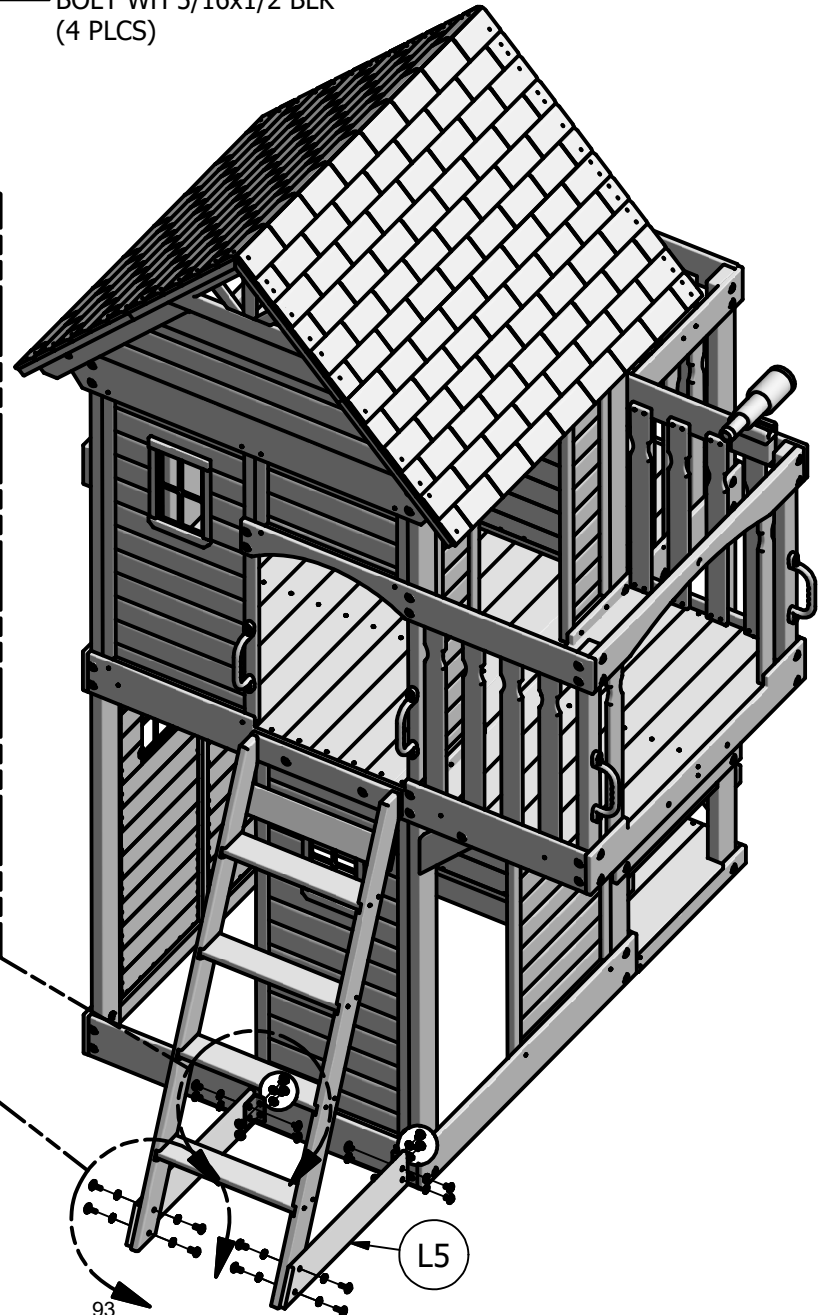

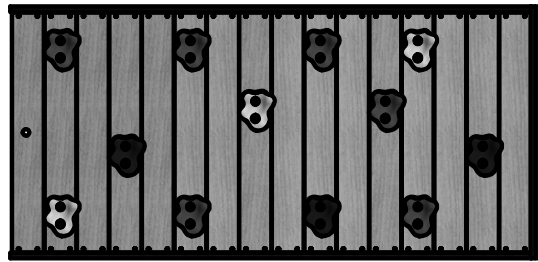


(1) ROCKWALL ASSEMBLY

STEP 52

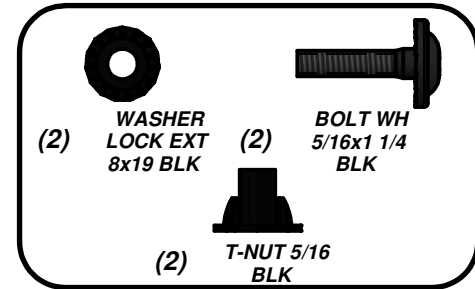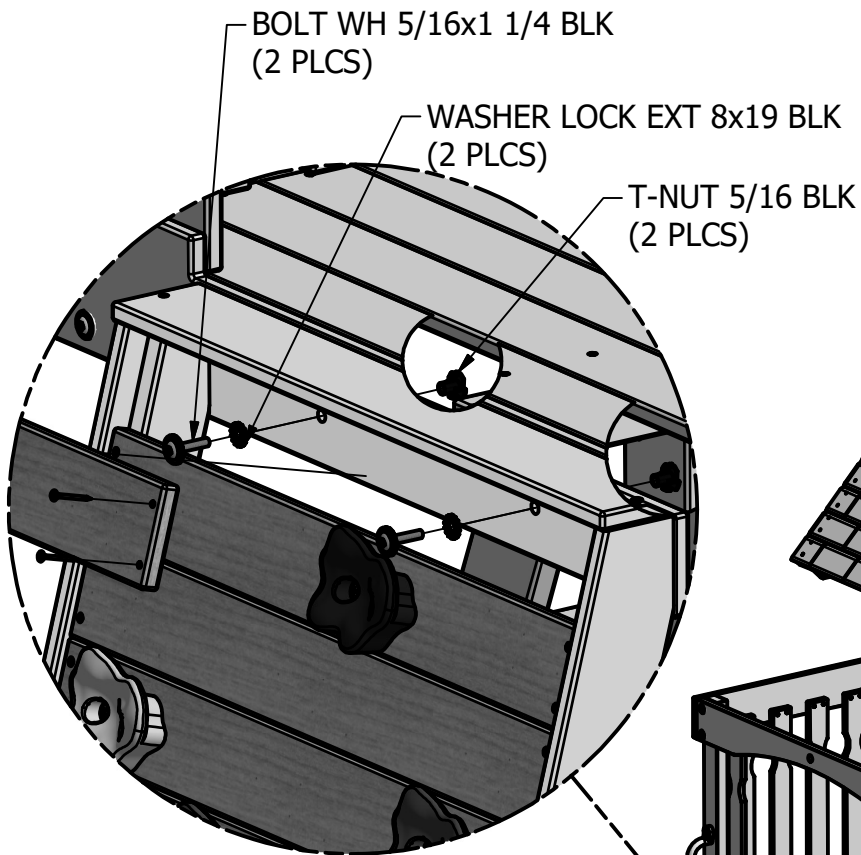


ROCKWALL ASSEMBLY

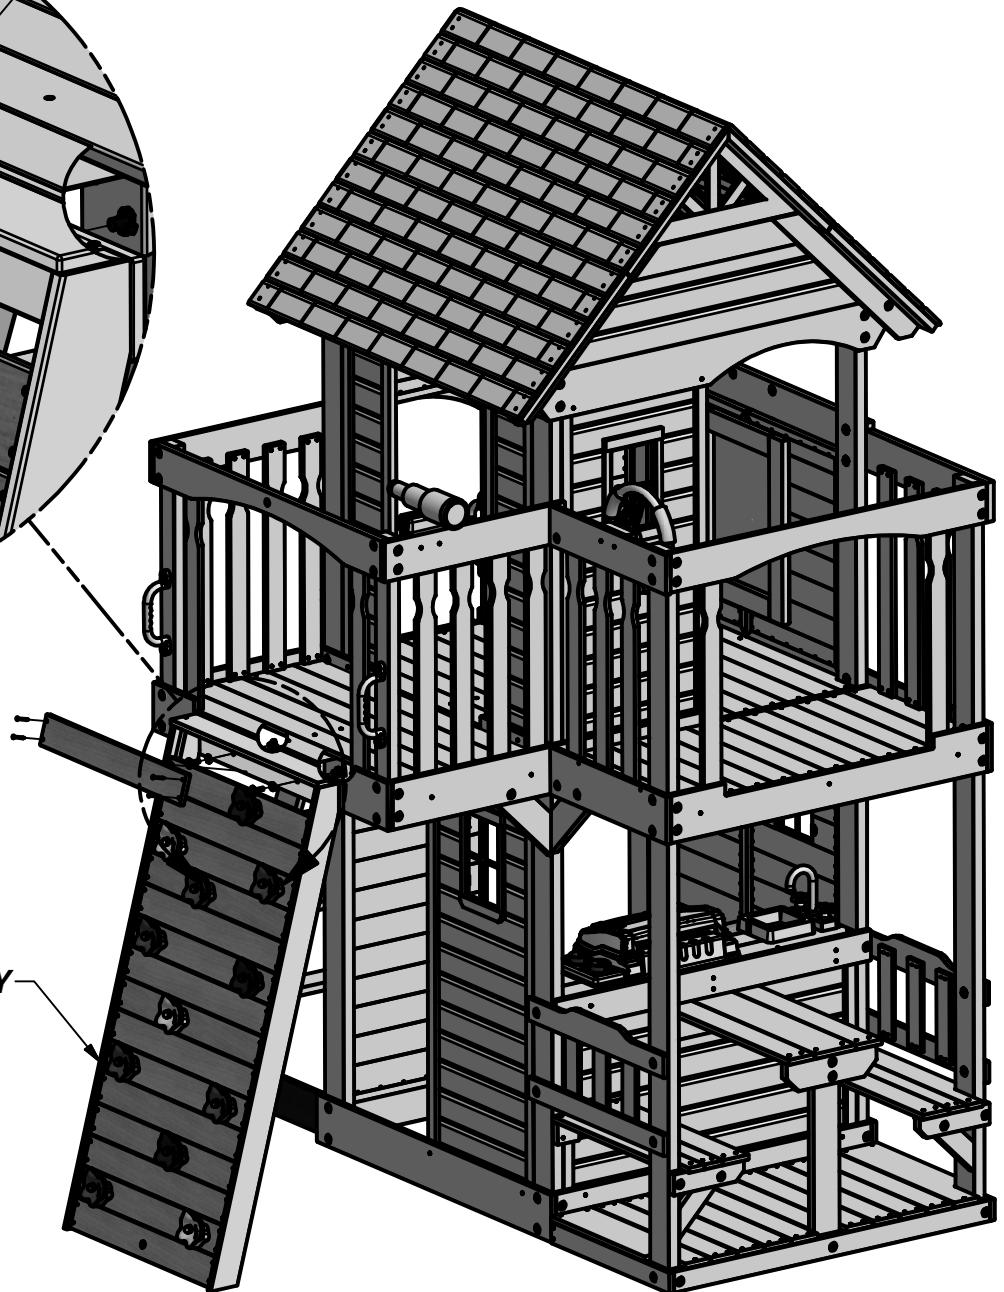



(1) - CLIMBING ROPE - A6P00260

STEP 53

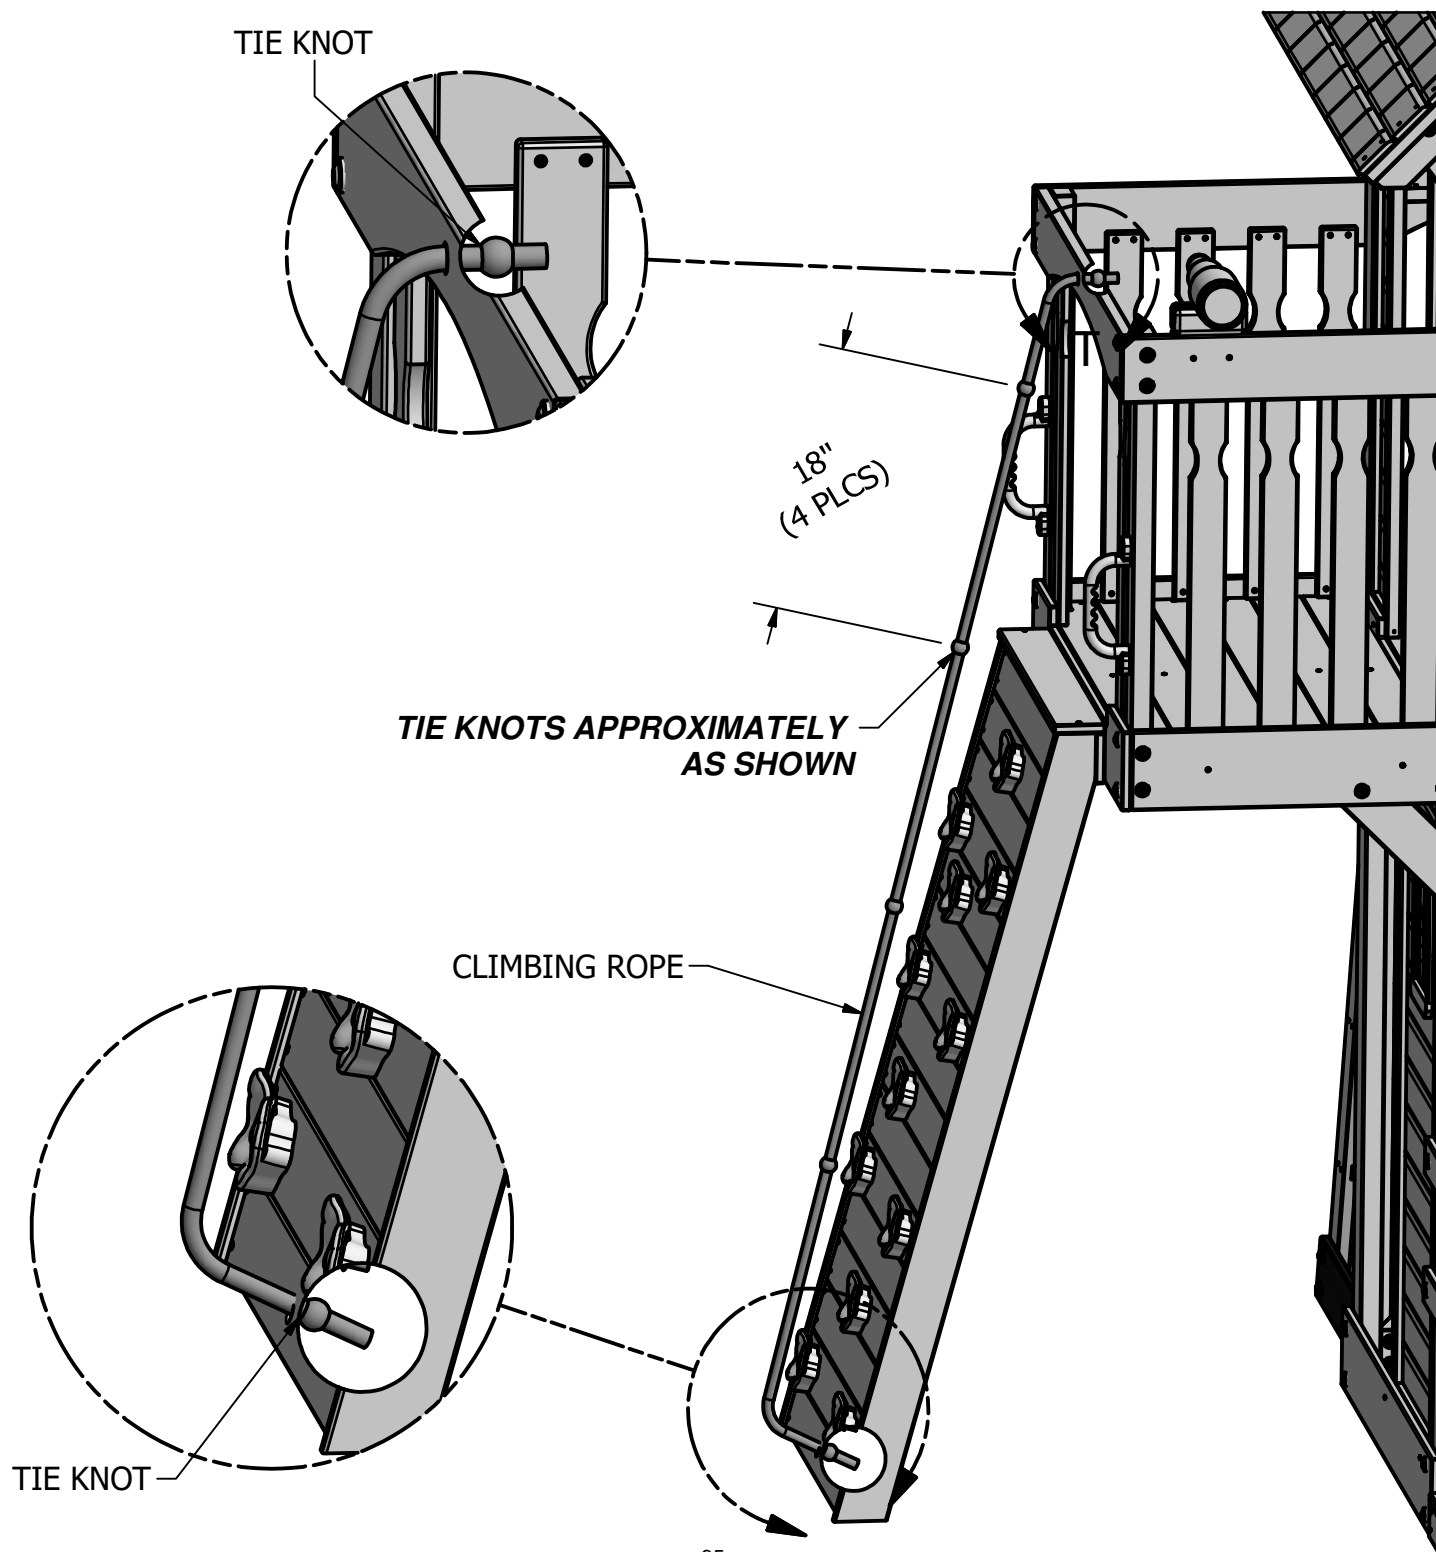






(1) **QU - SLIDE VF 10 FT - A100287**






(1) **O70 - SLIDE MOUNTING BOARD - W4L09040**
5/8"x1 3/8"x20 3/8" (16x34x517)

STEP 54

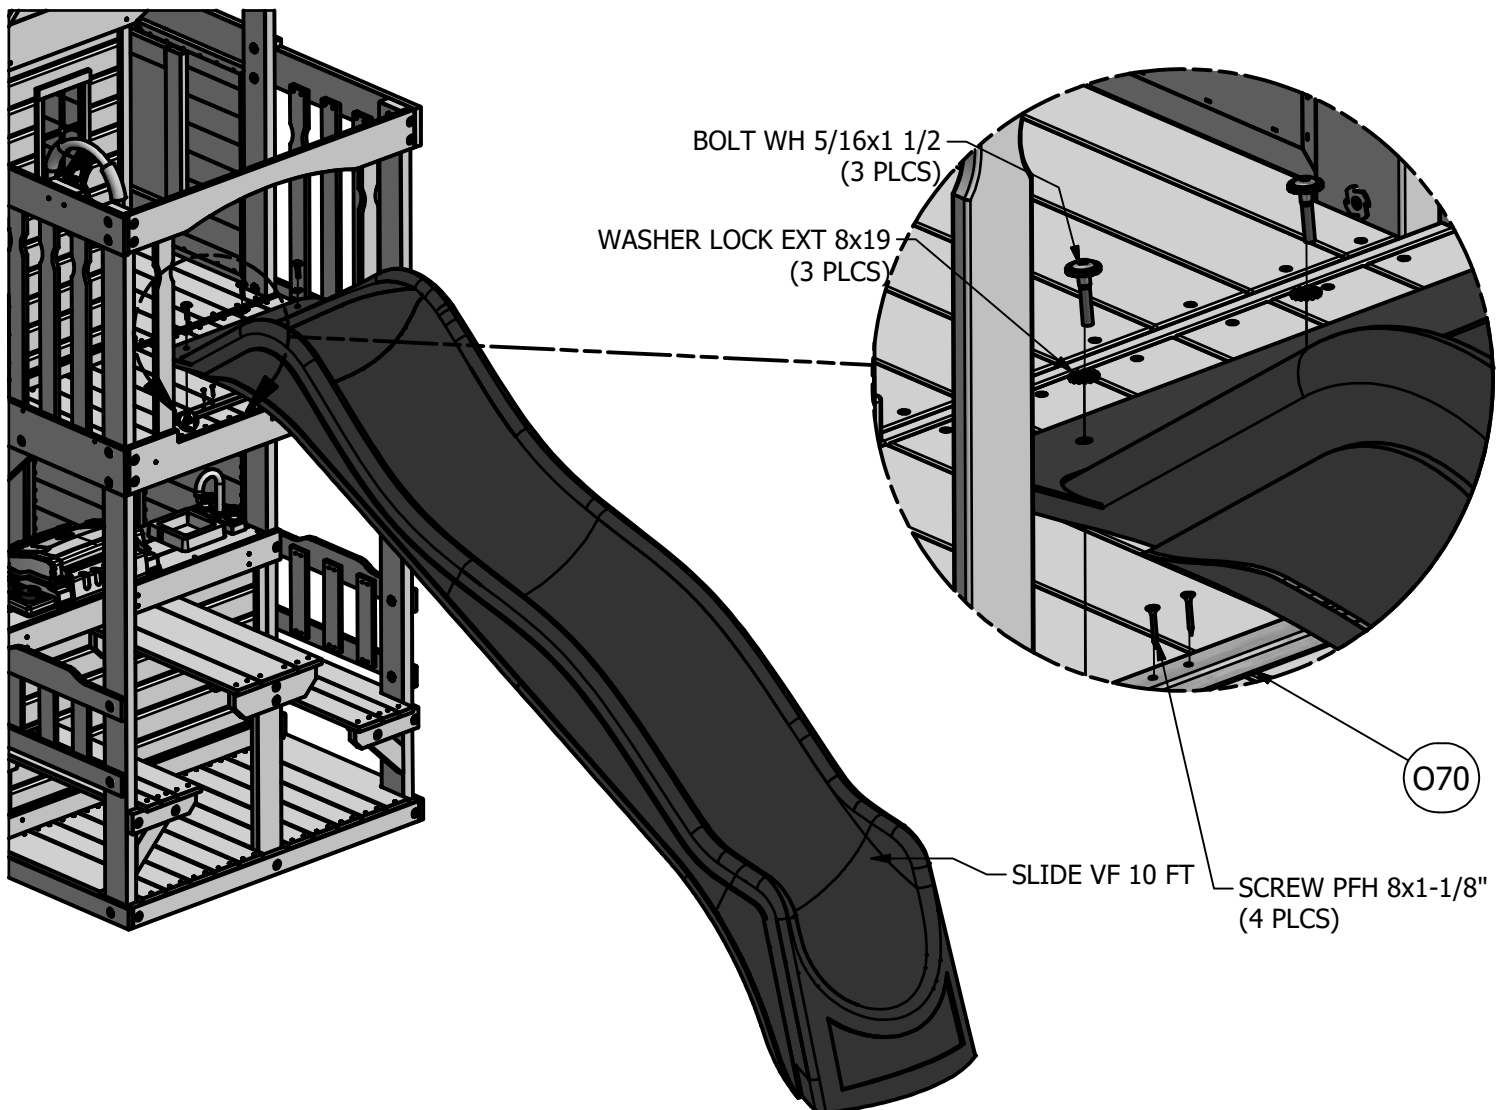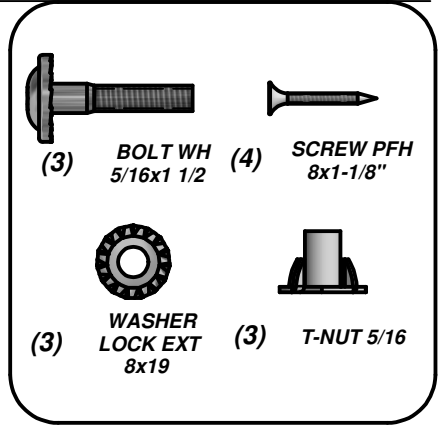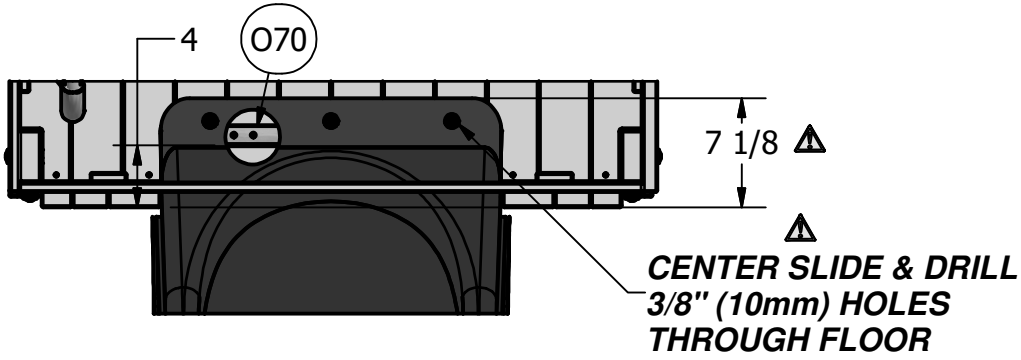

(1) SWING BEAM ASSEMBLY


STEP 55

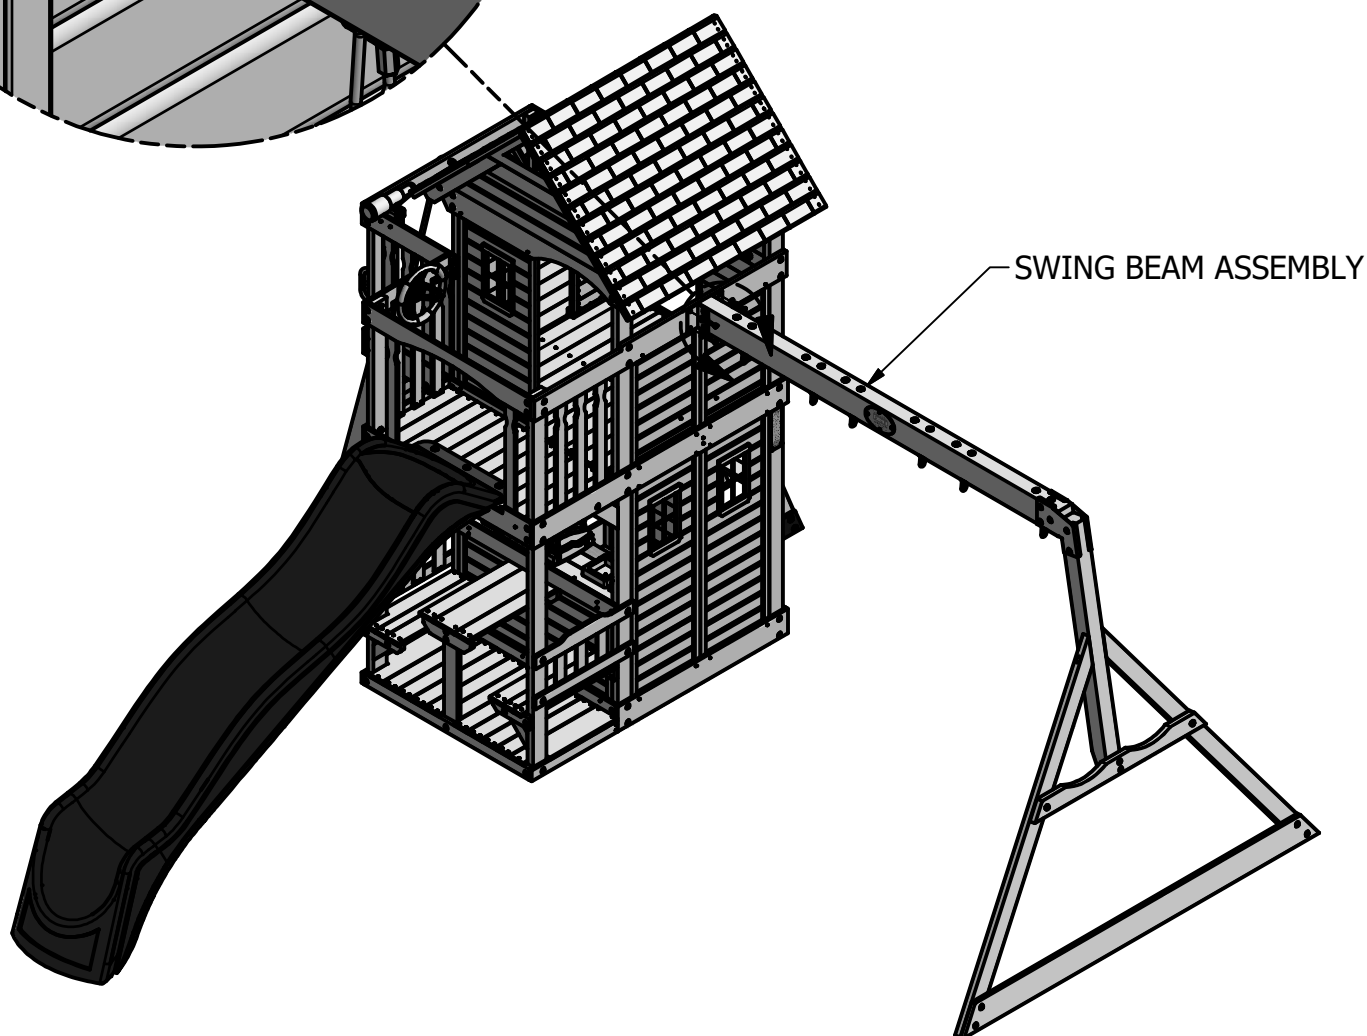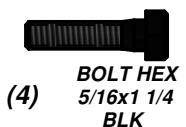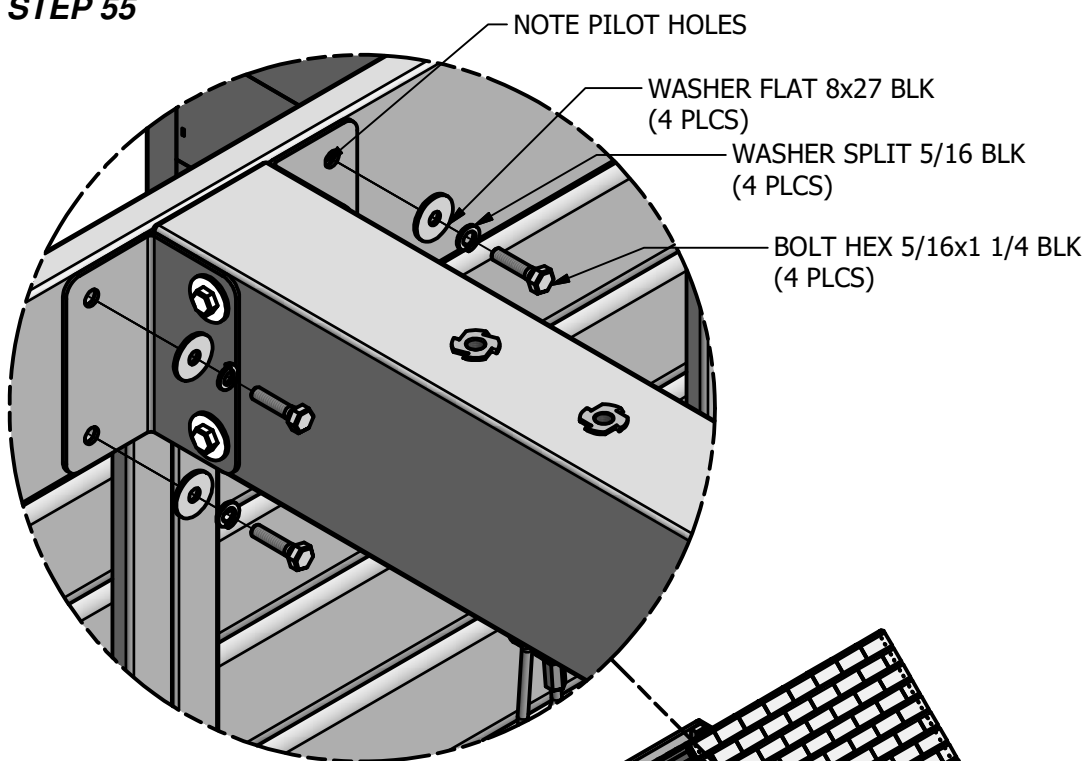



(1) - BYD ID TAG (LARGE) AGES 3-10 - A100164


STEP 56

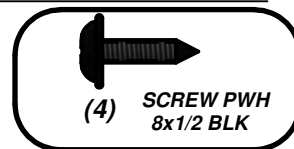

ALIGN ID TAG IN THE CENTER OF SWING BEAM

BYD ID TAG (LARGE) AGES 3-10

SCREW PWH 8x1/2 BLK
(4 PLCS)

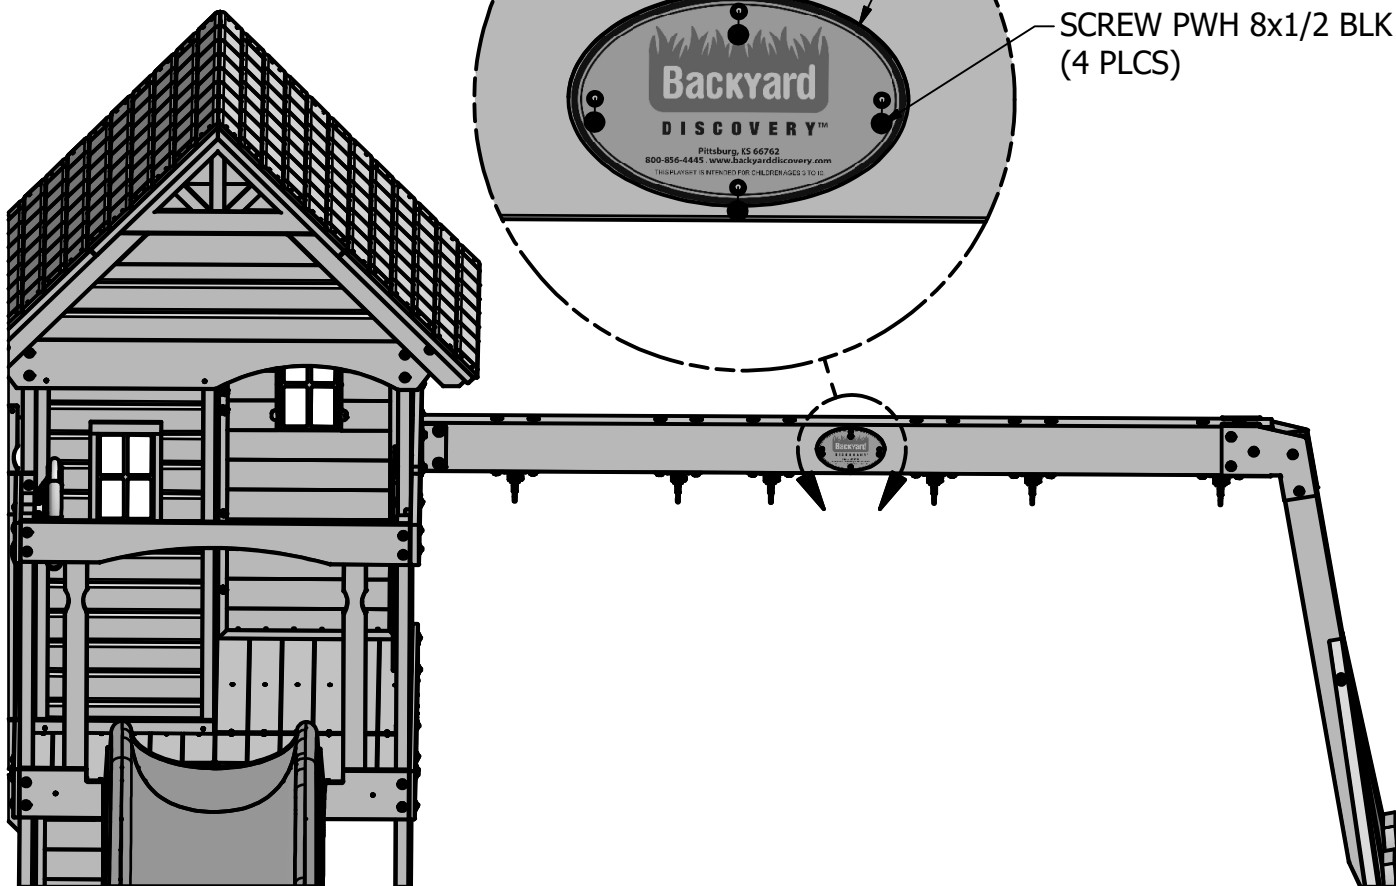




(4) - CHAIN GREEN 51.25" - A100068



(2) - SWING SEAT GREEN 22" - A6P00054




 (1) - 21" WEB SWING SEAT - A6P00285



(4) - QUICK LINK - A100069

STEP 57

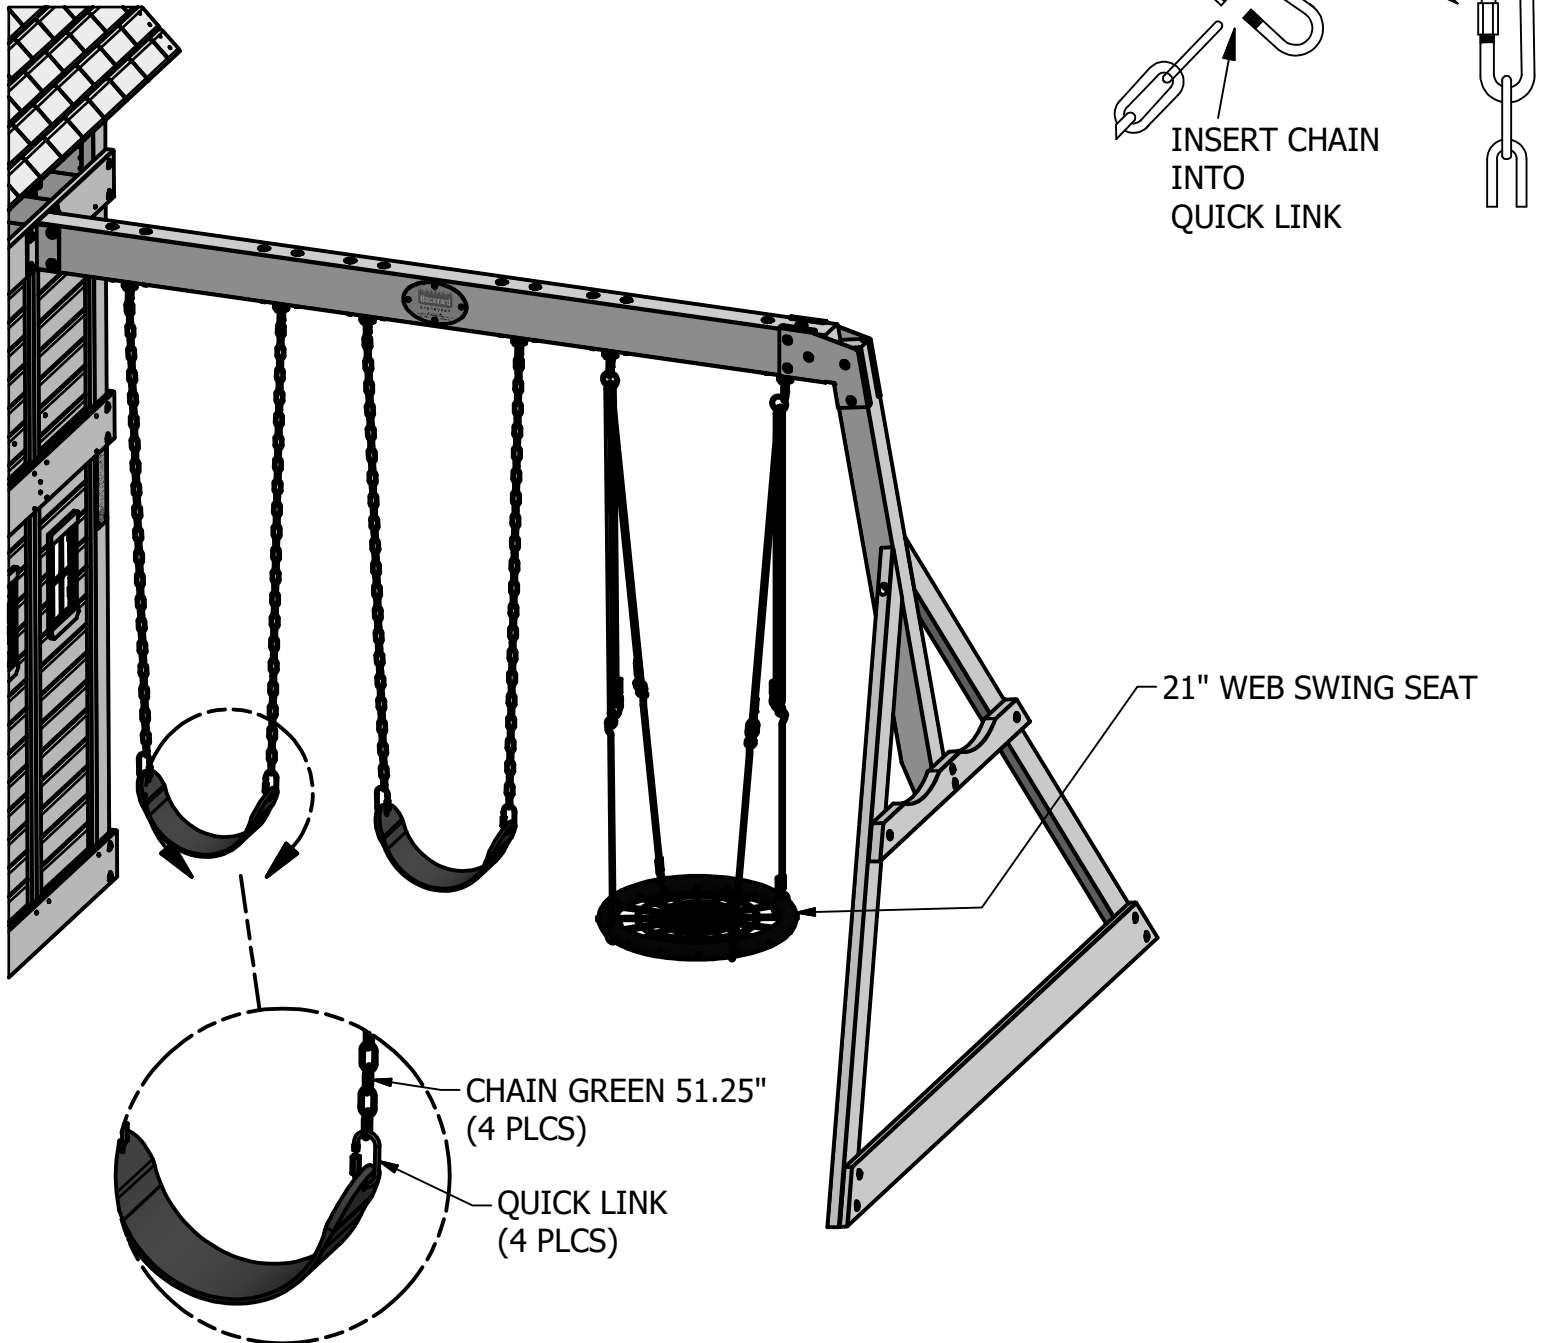



STEP 58

Anchoring Instructions

**TAP IN GROUND STAKES AT AN APPROXIMATE 45° ANGLE AT THE LOCATIONS SHOWN.
USING GROUND STAKES AS A GUIDE, DRILL 7/16" DIA HOLES.**

NOTE:

FAILURE TO USE GROUND STAKES CAN VOID WARRANTY & CAUSE INJURY!

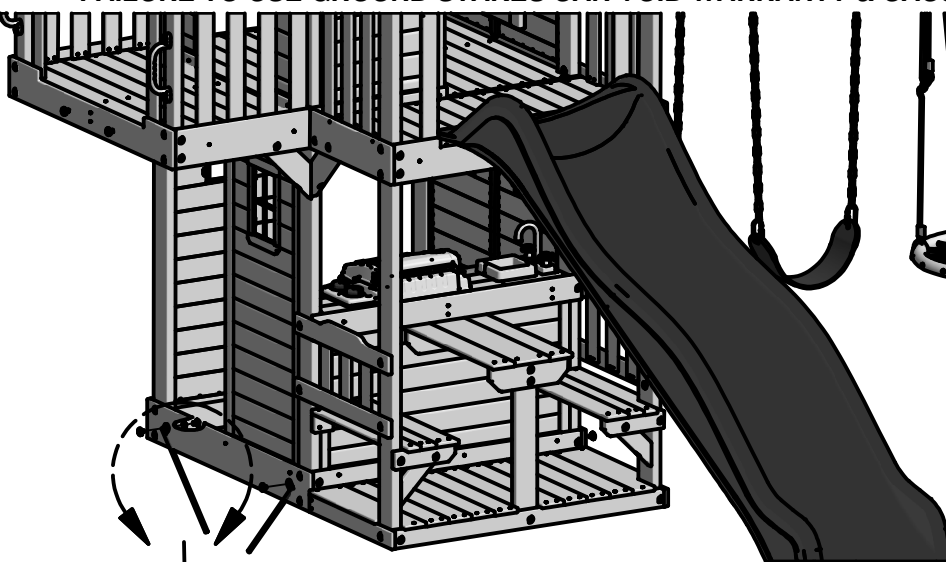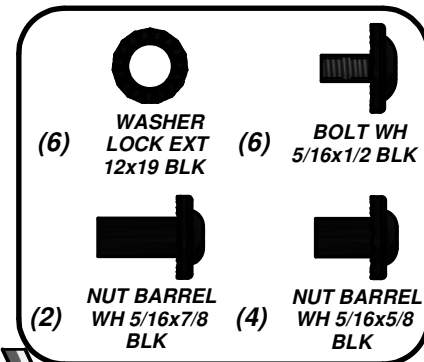

FORT GROUND STAKES

- BOLT WH 5/16x1/2 BLK (4 PLCS)
- WASHER LOCK EXT 12x19 BLK (4 PLCS)
- NUT BARREL WH 5/16x5/8 BLK (4 PLCS)
- GROUND STAKE REBAR (4 PLCS)

SWING BEAM GROUND STAKES

- BOLT WH 5/16x1/2 BLK (2 PLCS)
- WASHER LOCK EXT 12x19 BLK (2 PLCS)
- NUT BARREL WH 5/16x7/8 BLK (2 PLCS)
- GROUND STAKE REBAR (2 PLCS)

FINAL STEP

DOUBLE CHECK EVERY BOLT, SCREW AND NUT FOR TIGHTNESS. MAKE SURE EVERY BOARD IS SECURE AND MAKE SURE THE PLAY SET IS LEVEL.

ENJOY YOUR NEW PLAY SET!