 










INSTALLATION

Product Manual


Version: 510060 US-00-26A-HB

        Installation Instructions

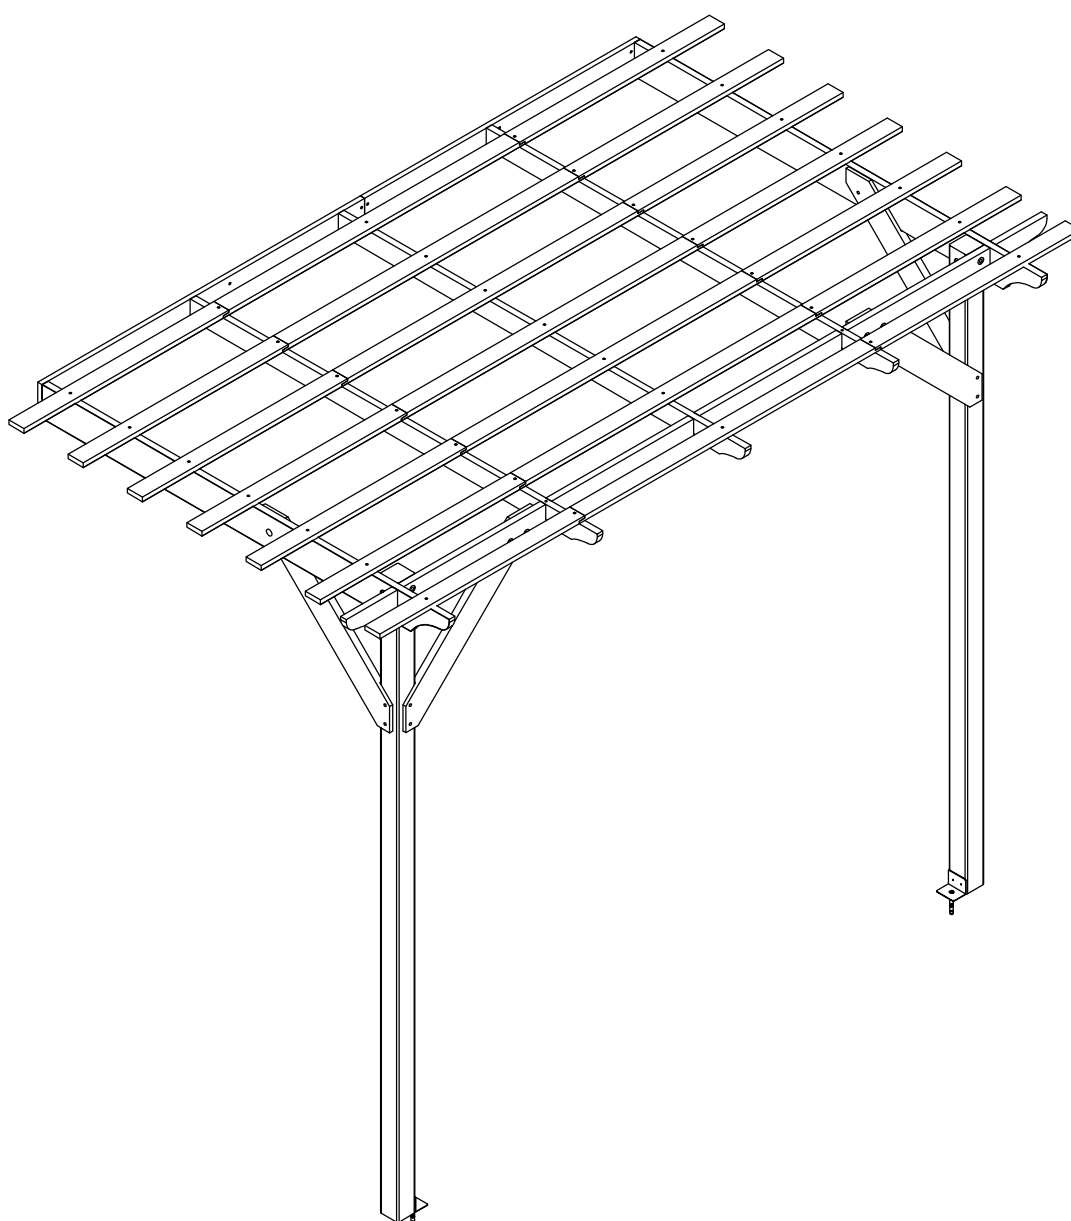


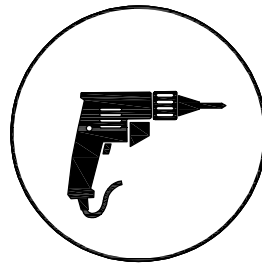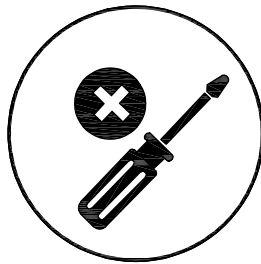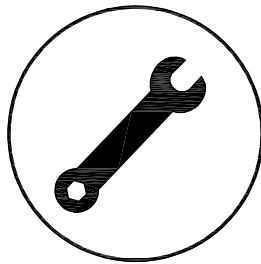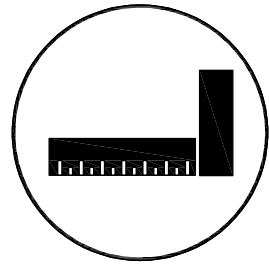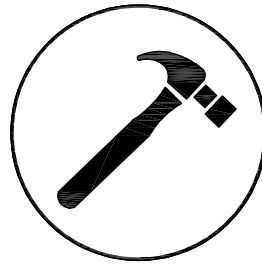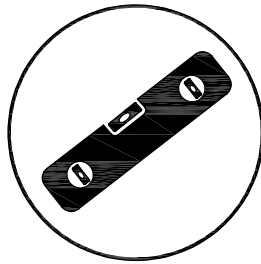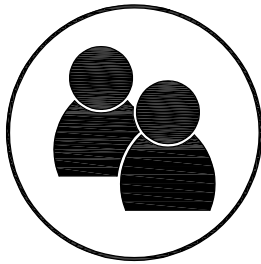

 Icons and their uses you will see throughout this manual

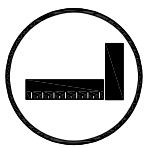

 You will need to make sure that your assembly is square before tightening your bolts.

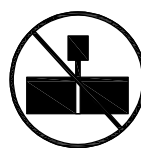


This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.




This icon will show you what drill attachments are needed. For this example you will need a Phillips head attachment .

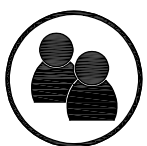 


Some steps in the assembly process will require an extra set of hands. Make sure you have a helper available.



 This size of the open-end wrench on these icons should correspond to the size of the nut.




Wood Components (Not to Scale)

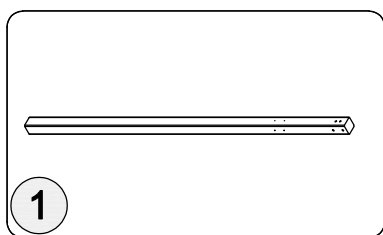 


1

 Front left pillar
Qty: 1

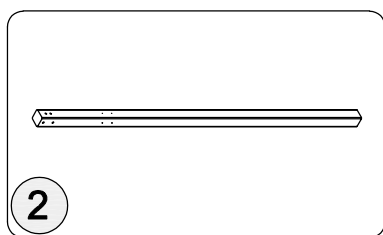


2

 Front right pillar
Qty: 1

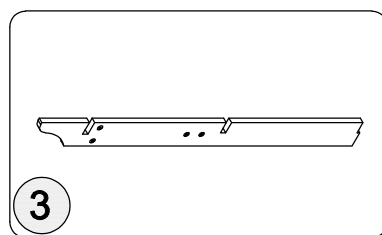


3

 Front left beam
Qty: 1

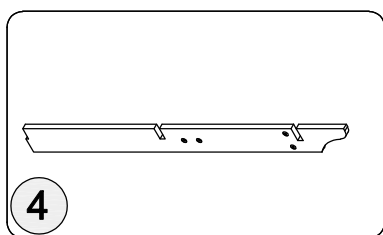


4

 Front right beam
Qty: 1

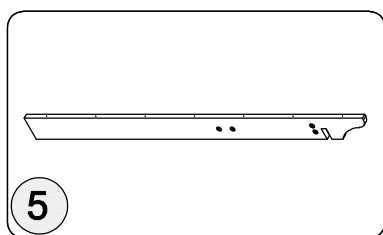


5

 Left crossbeam
Qty: 1

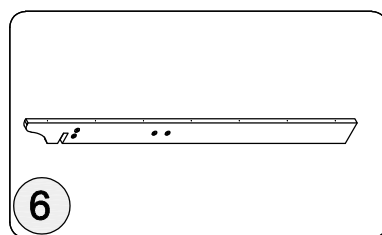


6

 Right crossbeam
Qty: 1

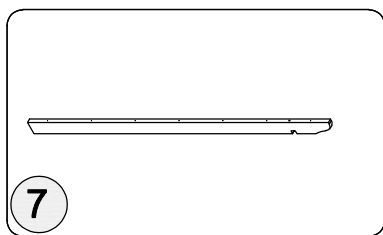


7

 Middle crossbeam
Qty: 2

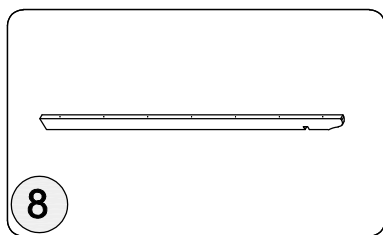


8

 Central crossbeam
Qty: 1

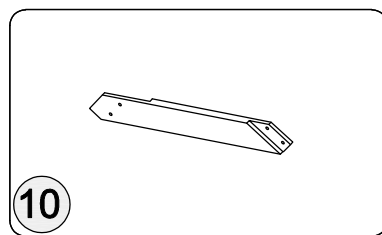


10

 Column right support bar
Qty: 2

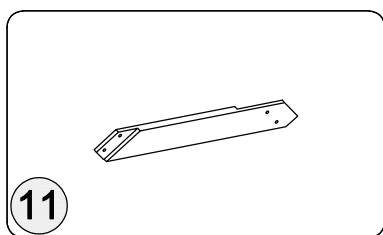


11

 Left pillar support
Qty: 2

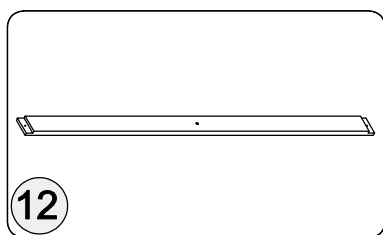


12

 Top middle cover strip
Qty: 7

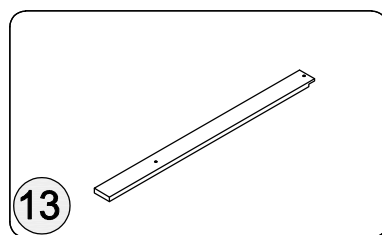


13

 Top edge cover strip
Qty: 14

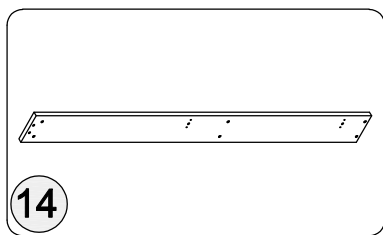


14

 Rear left bar
Qty: 1

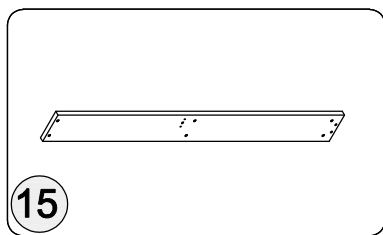













15


 
Rear right bar
Qty: 1

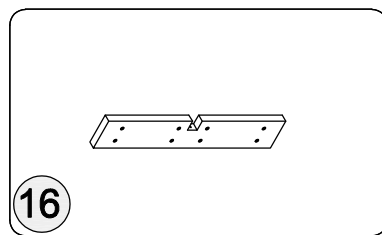


16

            support strip
Qty: 1

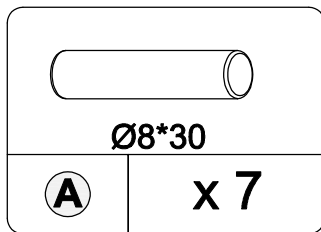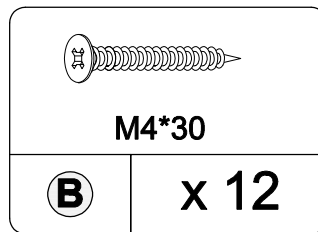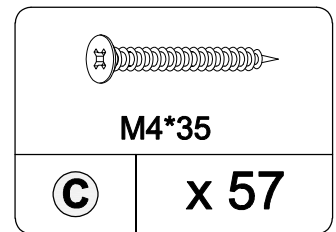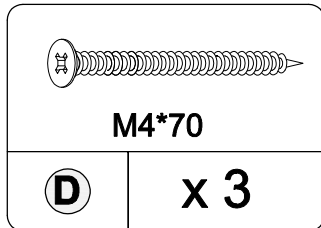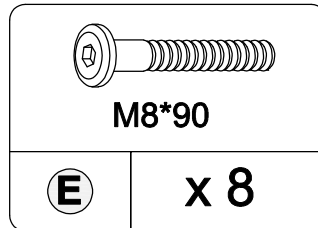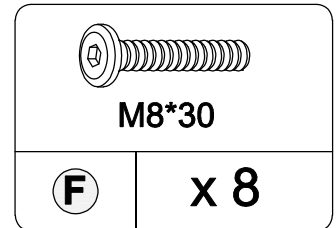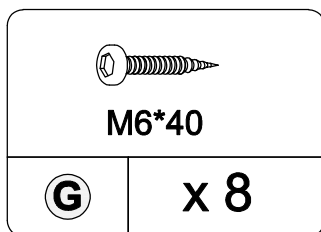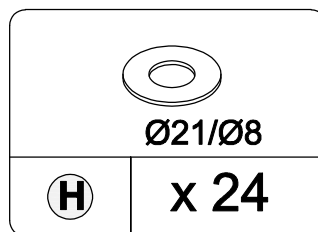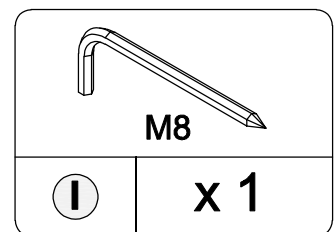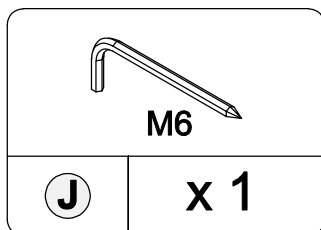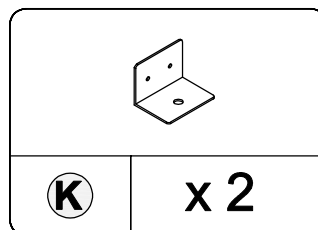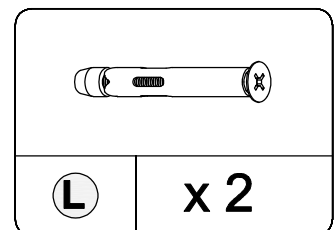
Hardware Components

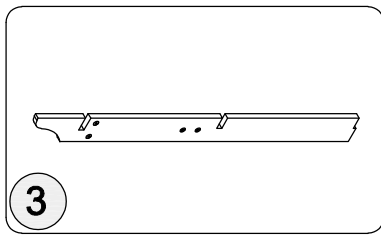  Wooden tenons

 black Screw

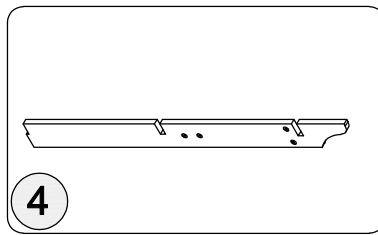black Screw

 black Screw

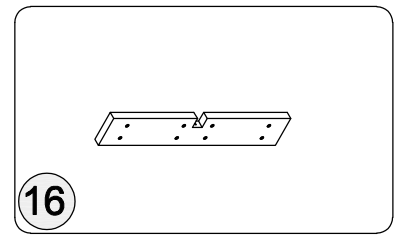screws

screws

Screw

Flat washer

Hex key

Hex key

connect iron sheet

Earth screw



Front left beam
Qty: 1



Front right beam
Qty: 1



support strip
Qty: 1

 
1. Use hardware B to pass through component 16 and install it towards the lead hole

 
 


M4*30

B


x 8

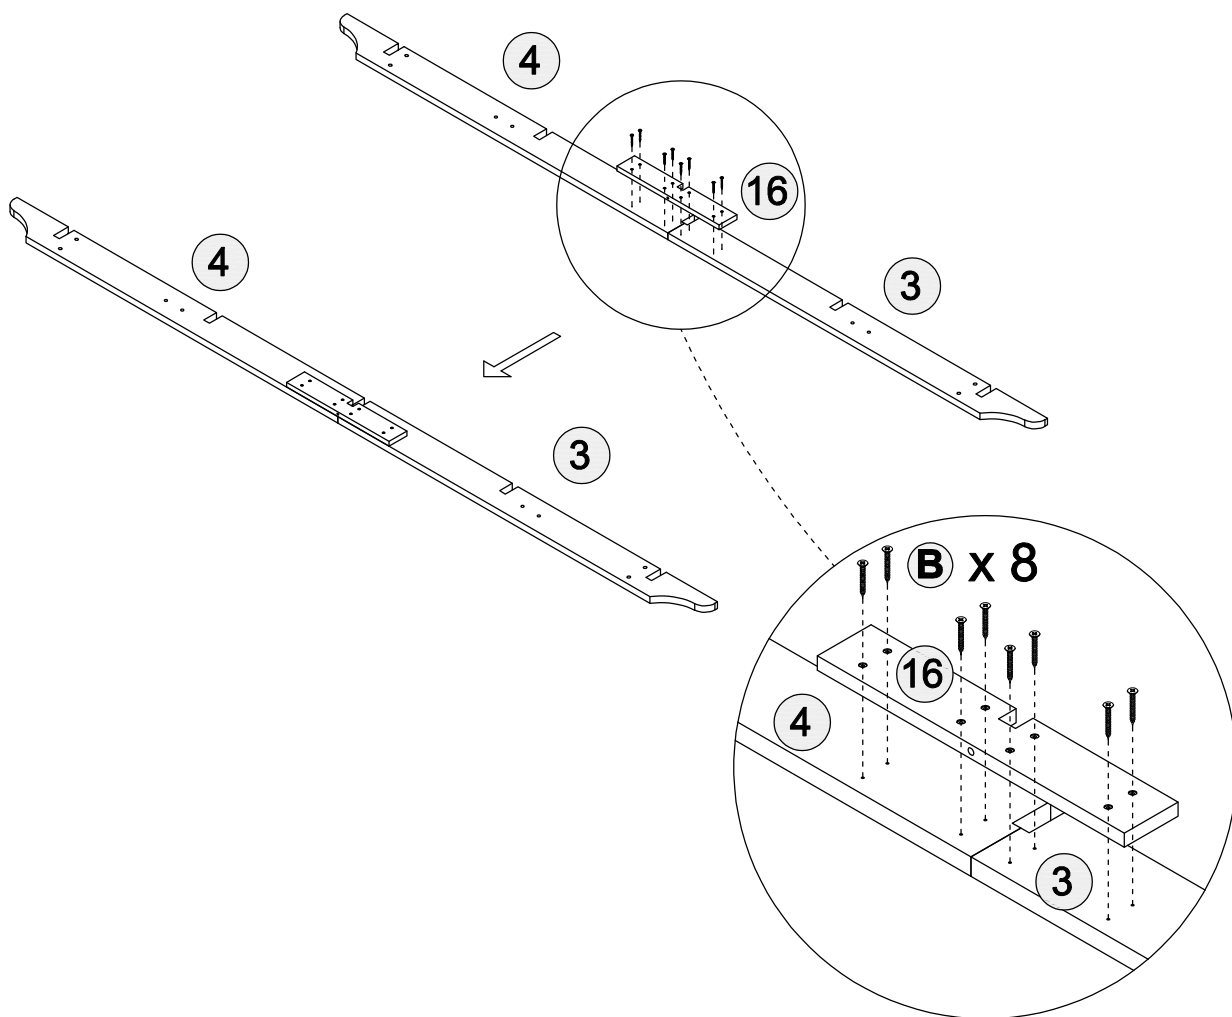

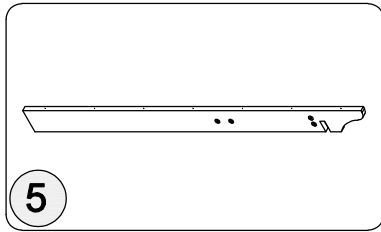


Left crossbeam

 Qty: 1

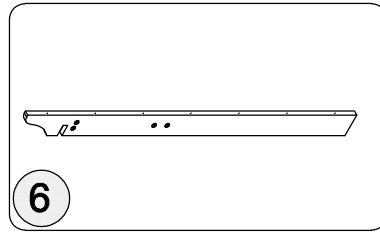


Right crossbeam

 Qty: 1

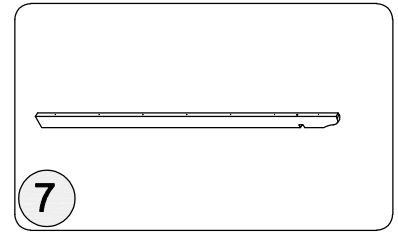

Middle crossbeam

 
Qty: 2


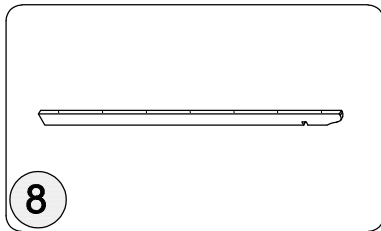


Central crossbeam


Qty: 1

   1. Place the components according to the diagram, and insert the notches into the notches



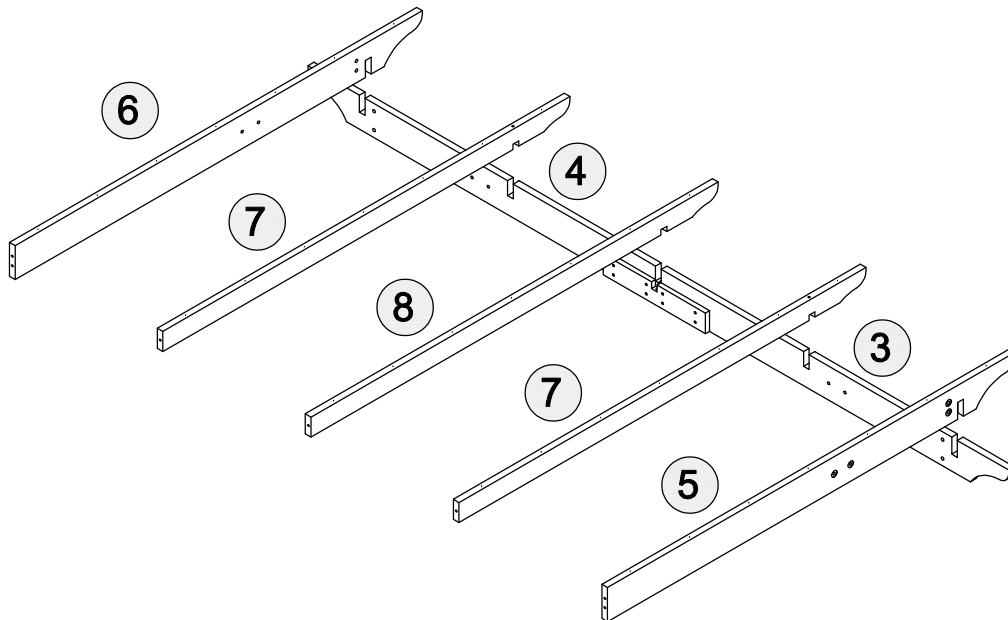


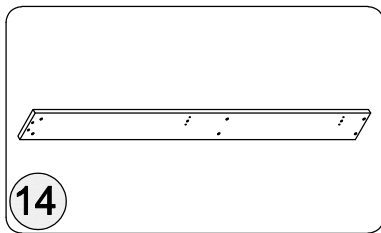


Rear left bar
Qty: 1

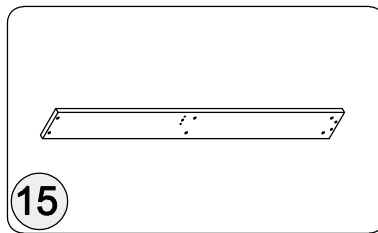 


Rear right bar
Qty: 1

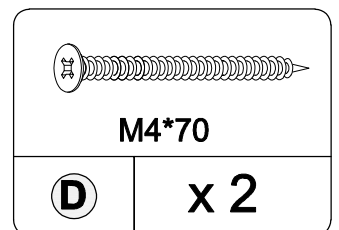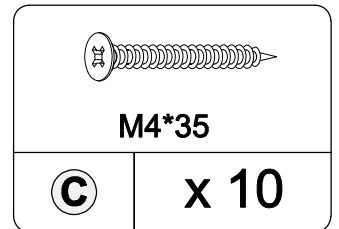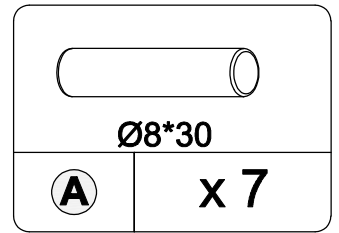   

  1. Connect with hardware A first, then install with hardware C
2. Component 7 Install hardware D according to the diagram

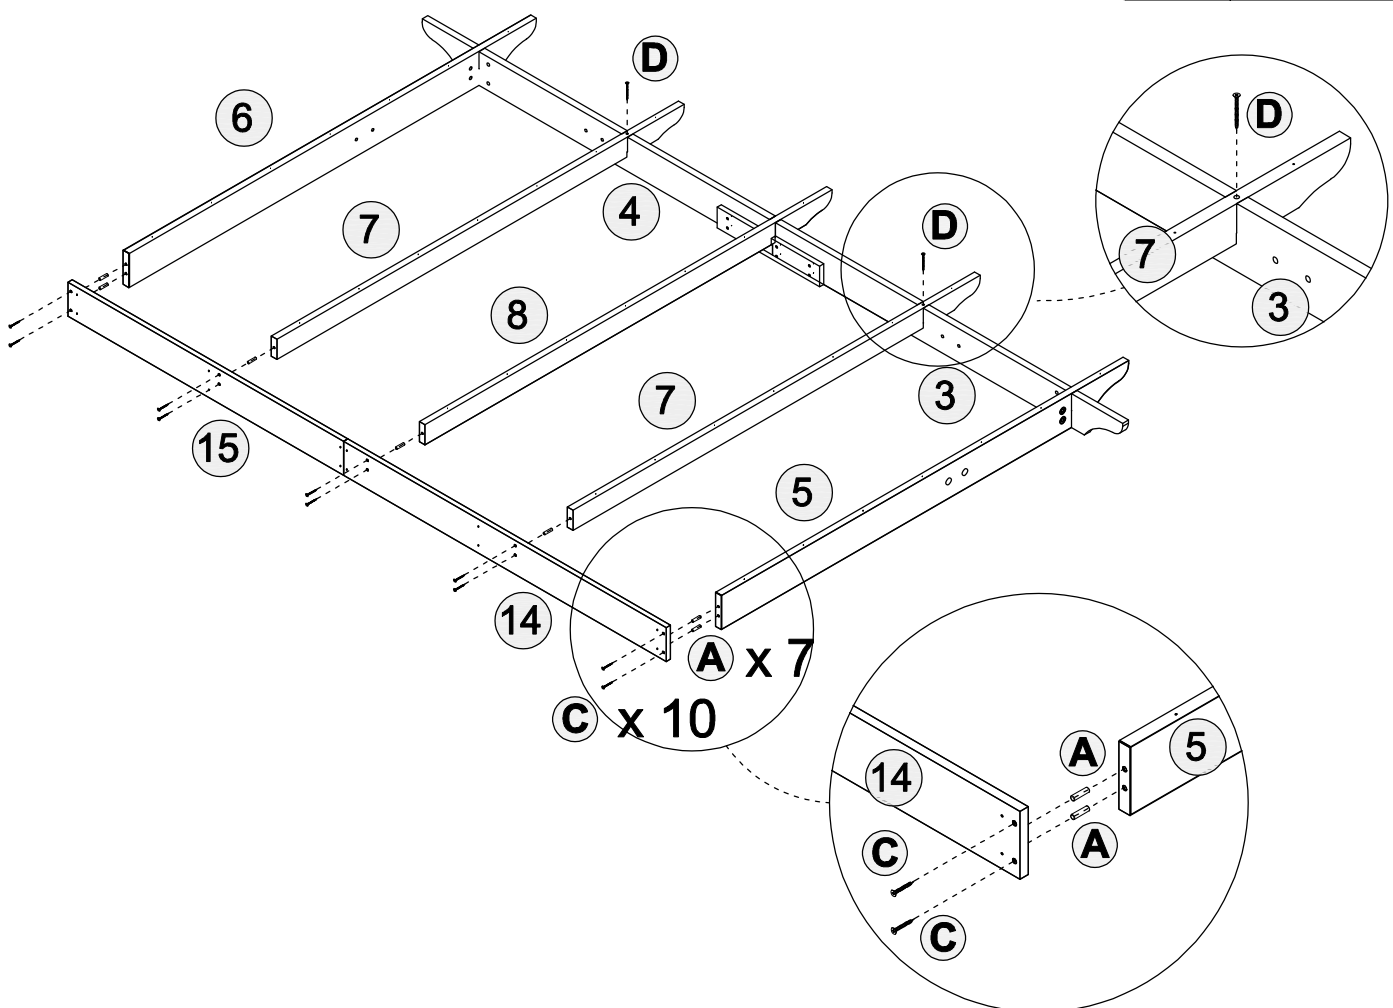

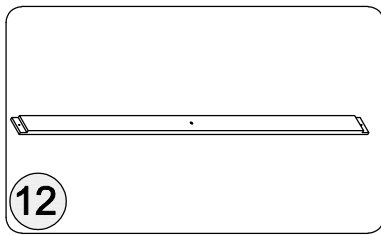

Top middle cover strip
Qty: 7

 


 
M4*35

C

x 7

1. Use hardware C to pass through component 12 and install it towards the lead hole

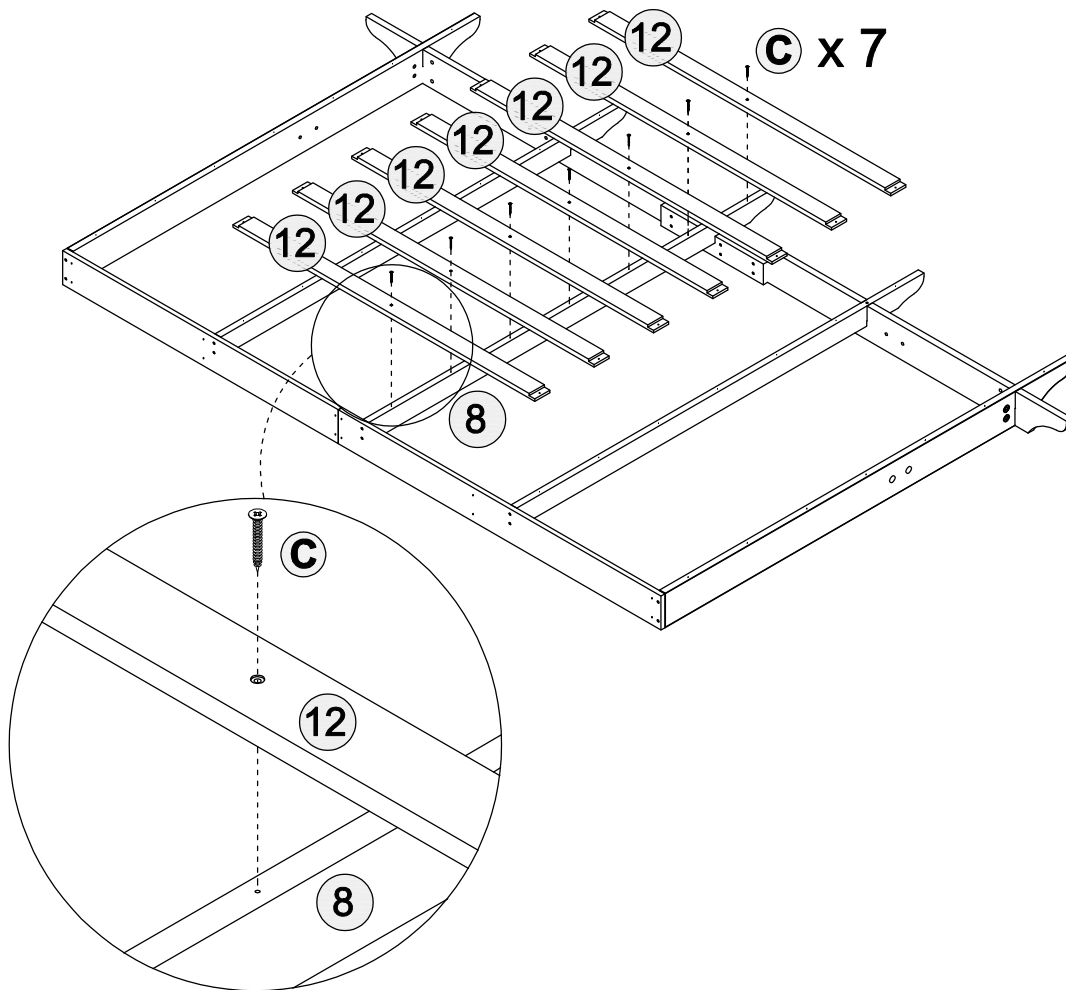

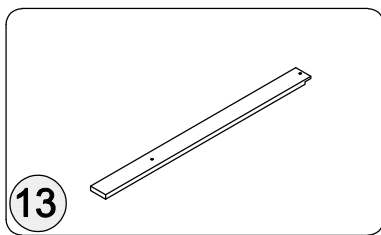

Top edge cover strip

Qty: 14

 


 
 
M4*35

C

x 28


1. One end of component 13 is pressing against one end of component 12
2. Use hardware C to pass through component 13 and install it towards the lead hole

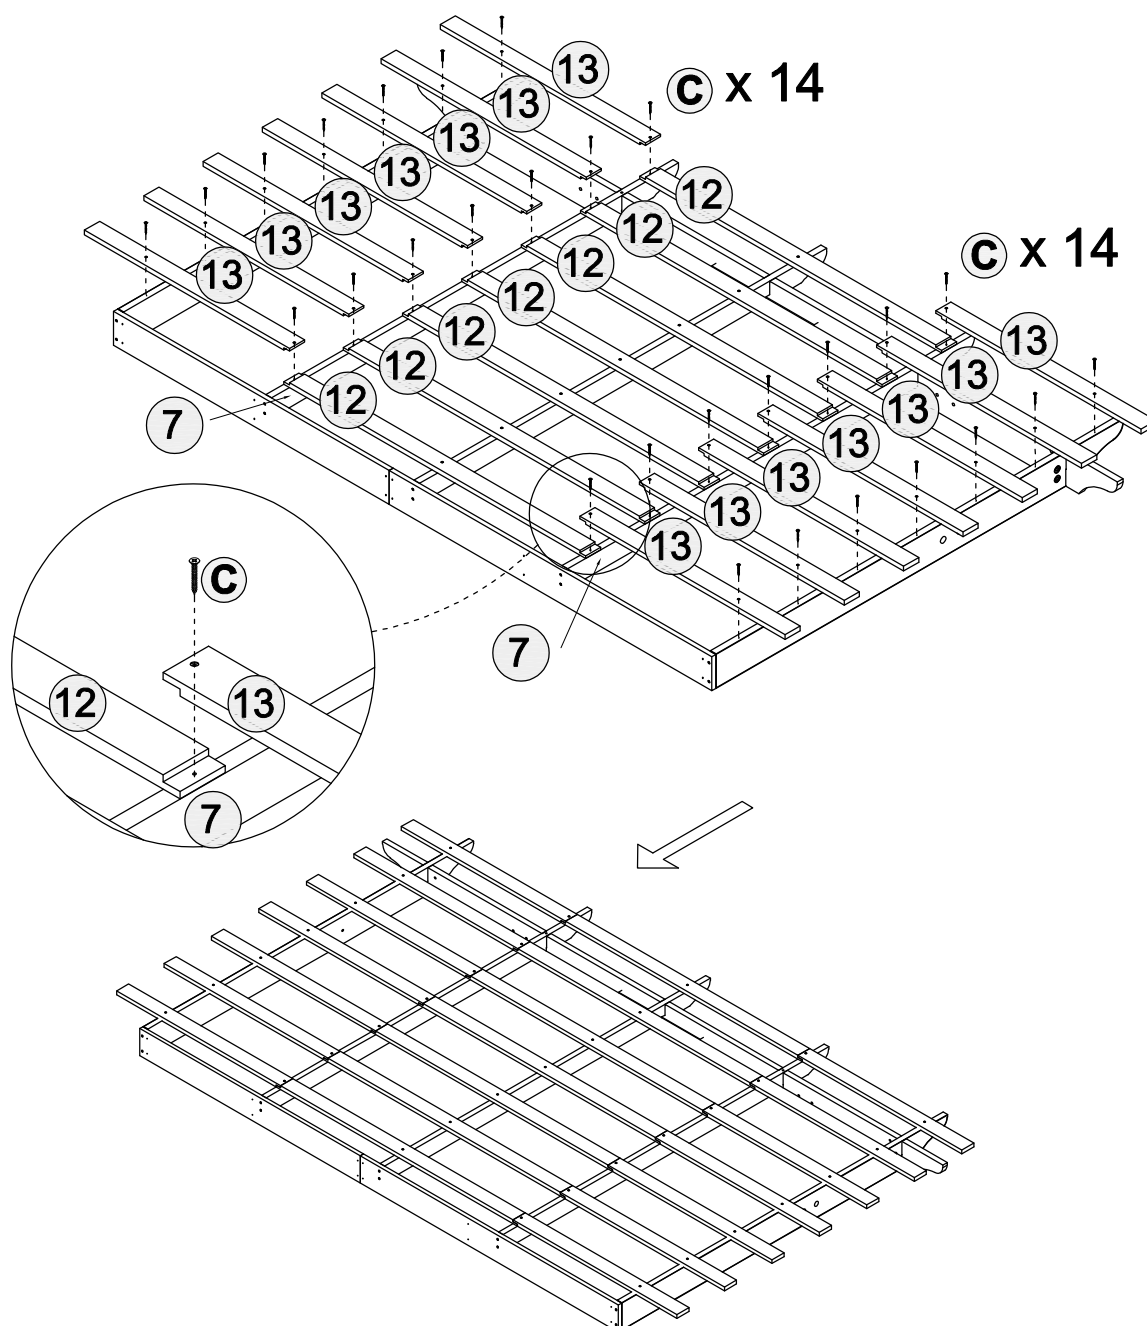

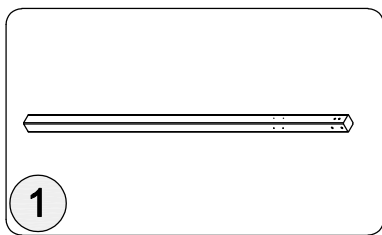


Front left pillar

 Qty: 1

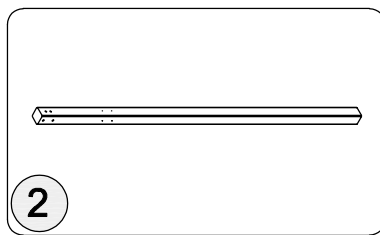

Front right pillar

 
Qty: 1

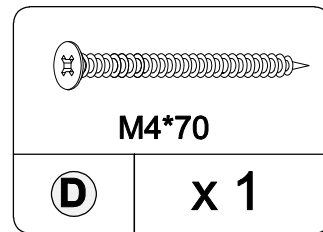

M4*70

D

 
x 1

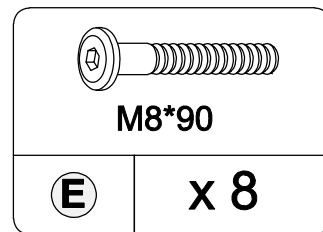

M8*90

E

 
x 8

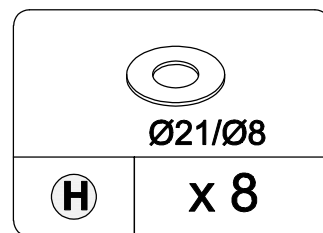

Ø21/Ø8

H

 x 8

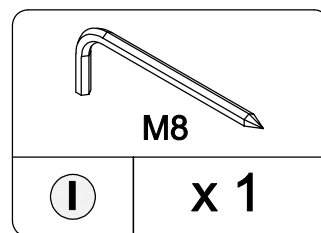


M8

I



x 1

 1. Distinguish the direction of the left and right pillars
2. Thread hardware E through hardware H, and then use tool hardware I to install component

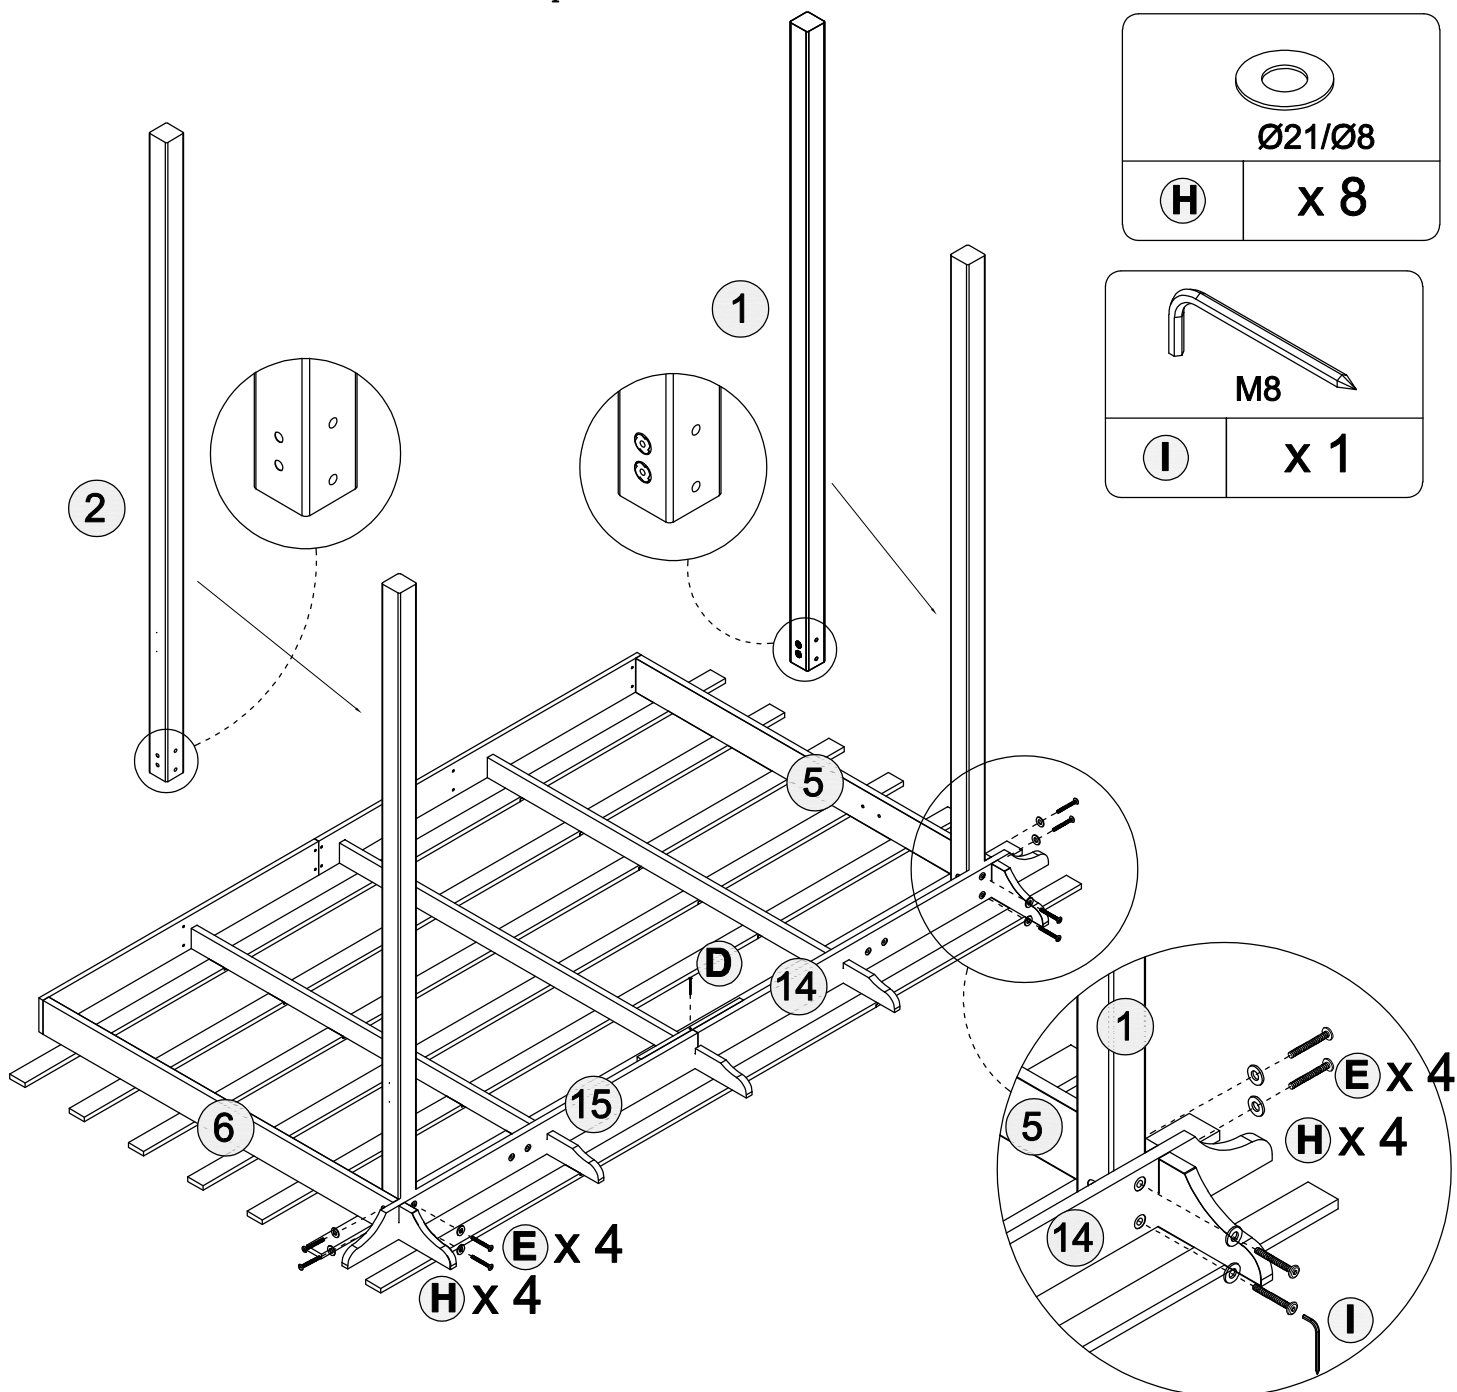




  Step 7





x 8

 

x 8

  1. Thread hardware F through hardware H, and then use tool hardware I to install component





M6*40

G

x 8



Ø21/Ø8

H

x 8

 


 
M6

J

x 1

1. Thread hardware G through hardware H, and then use tool hardware J to install component

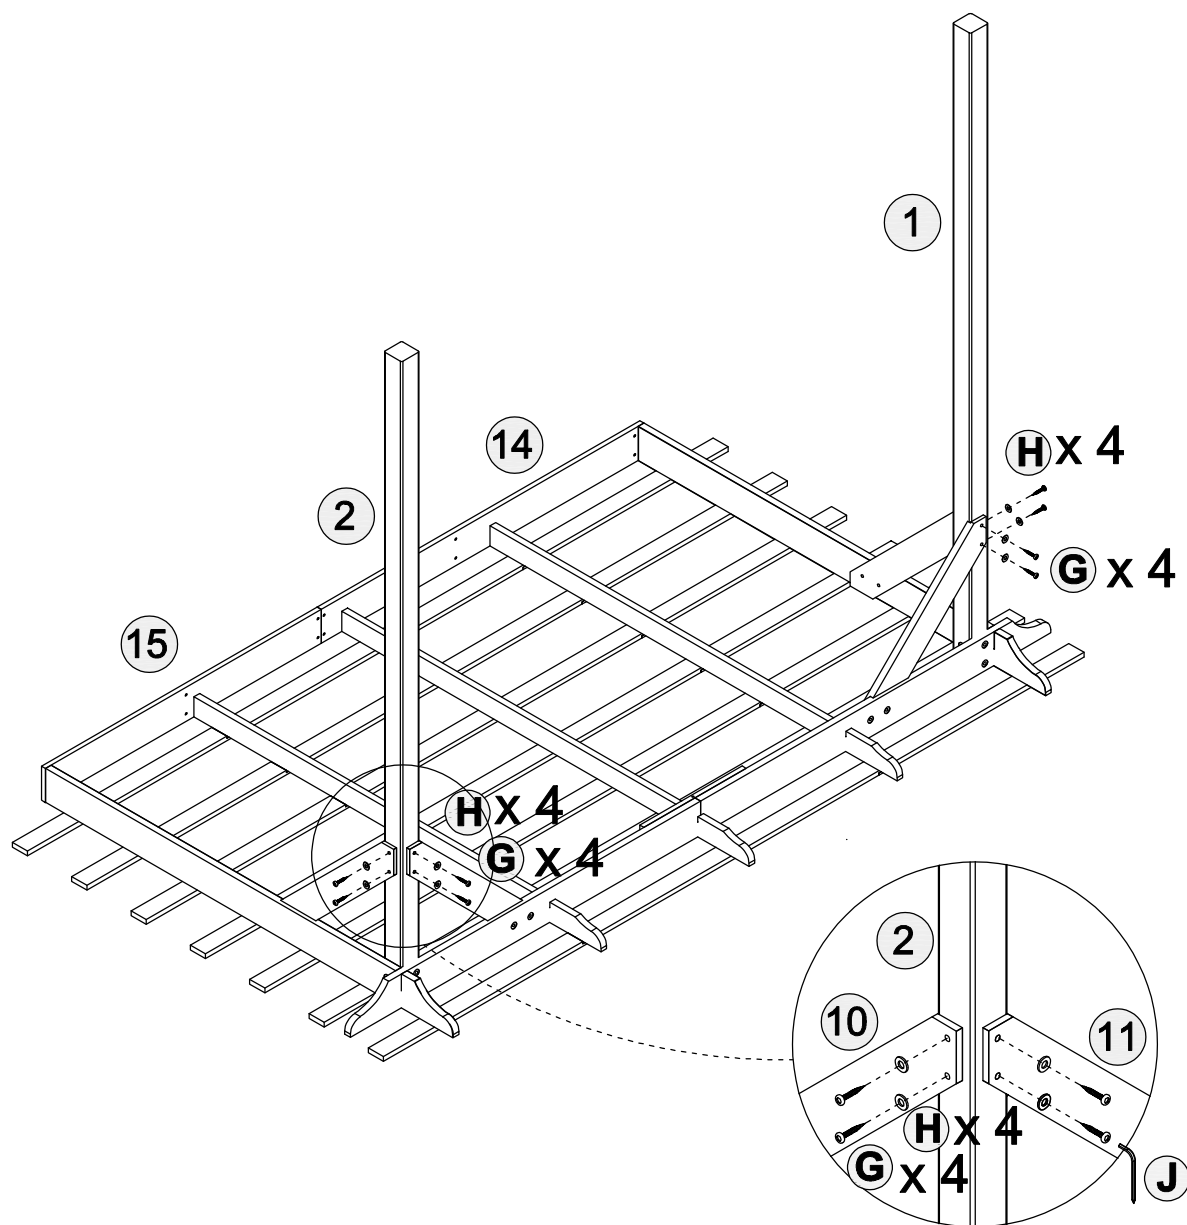




1. Doing this requires collaboration from two or more people
2. Use hardware C to pass through component 14, 15 and install it towards the lead hole







M4*35


C

     x 12

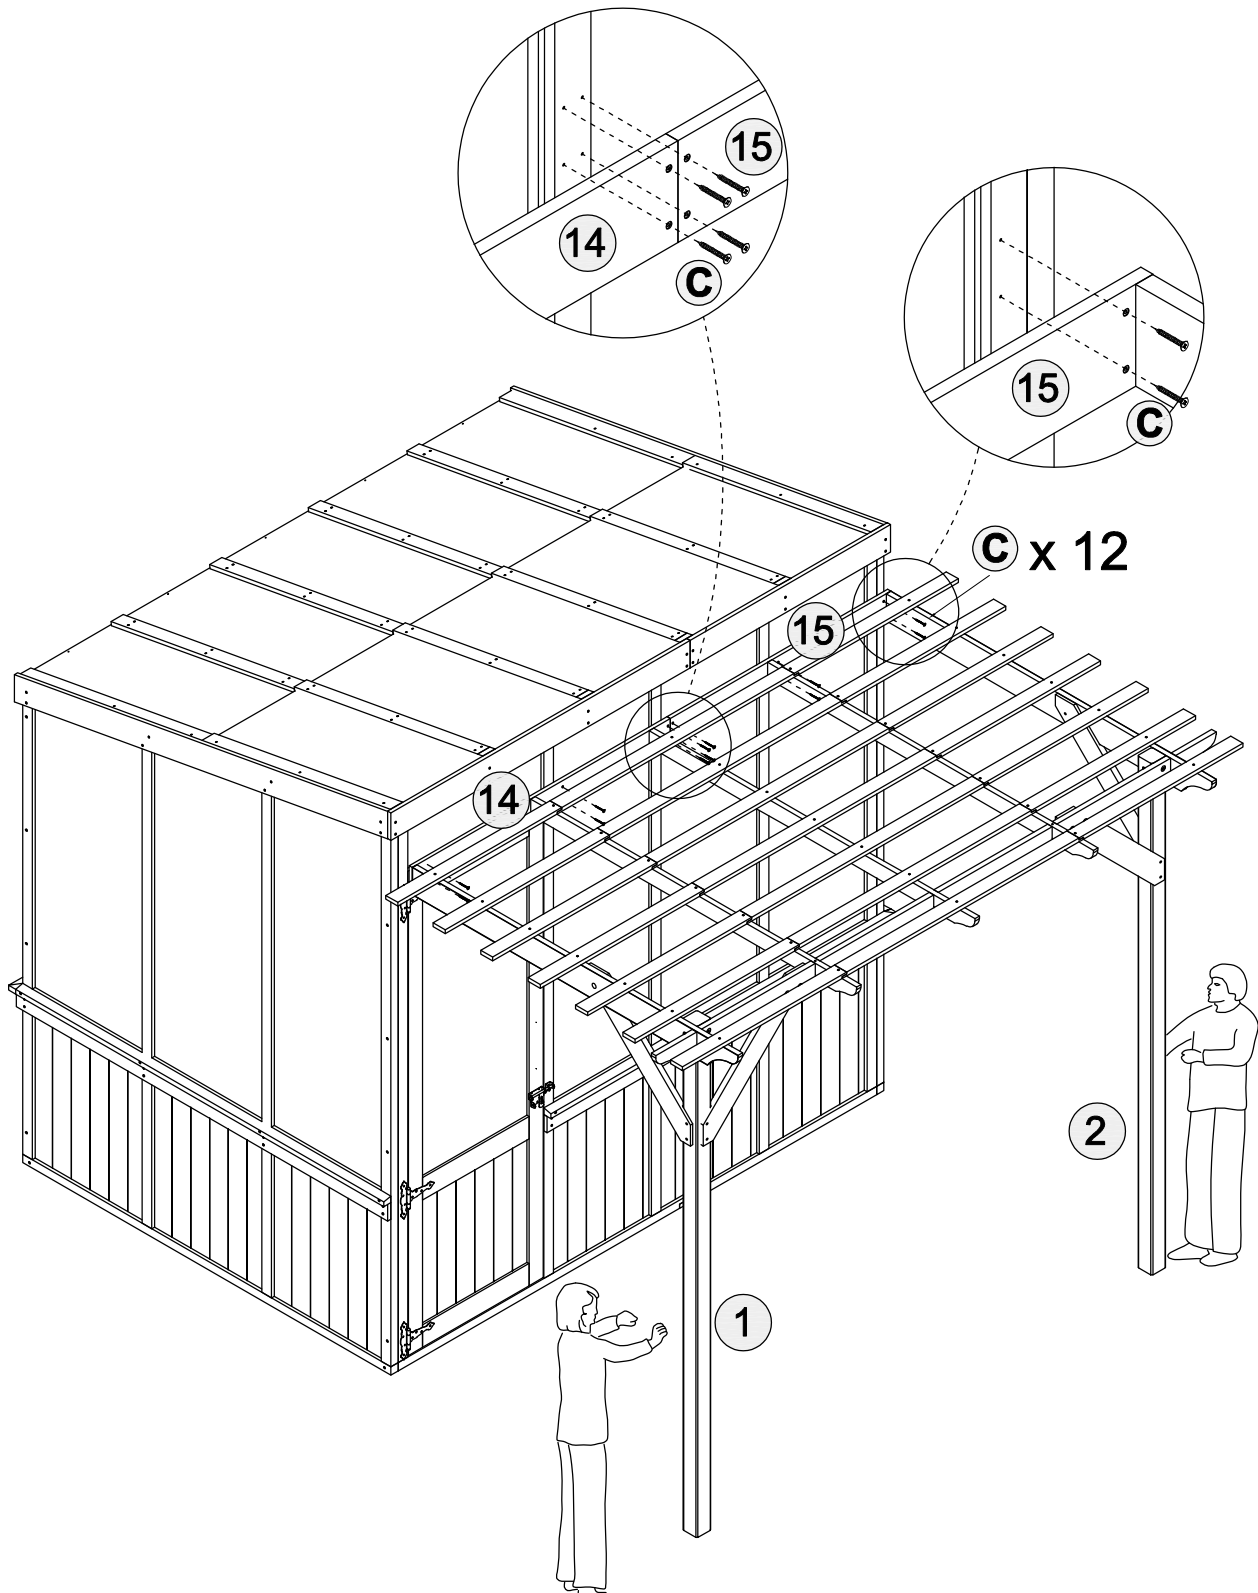

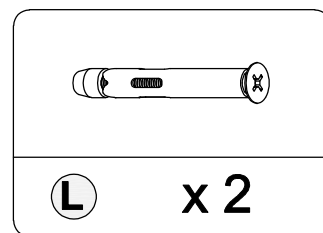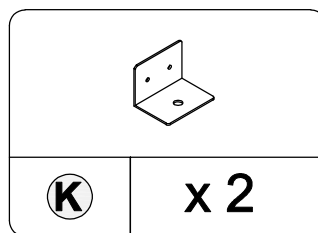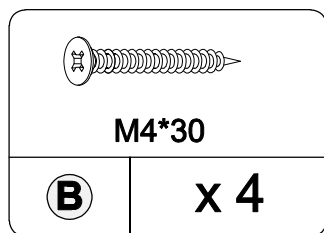

 1. Use hardware L to pass through Hardware K and Installed underground
2. Use hardware B to pass through Hardware K and install it towards the lead hole

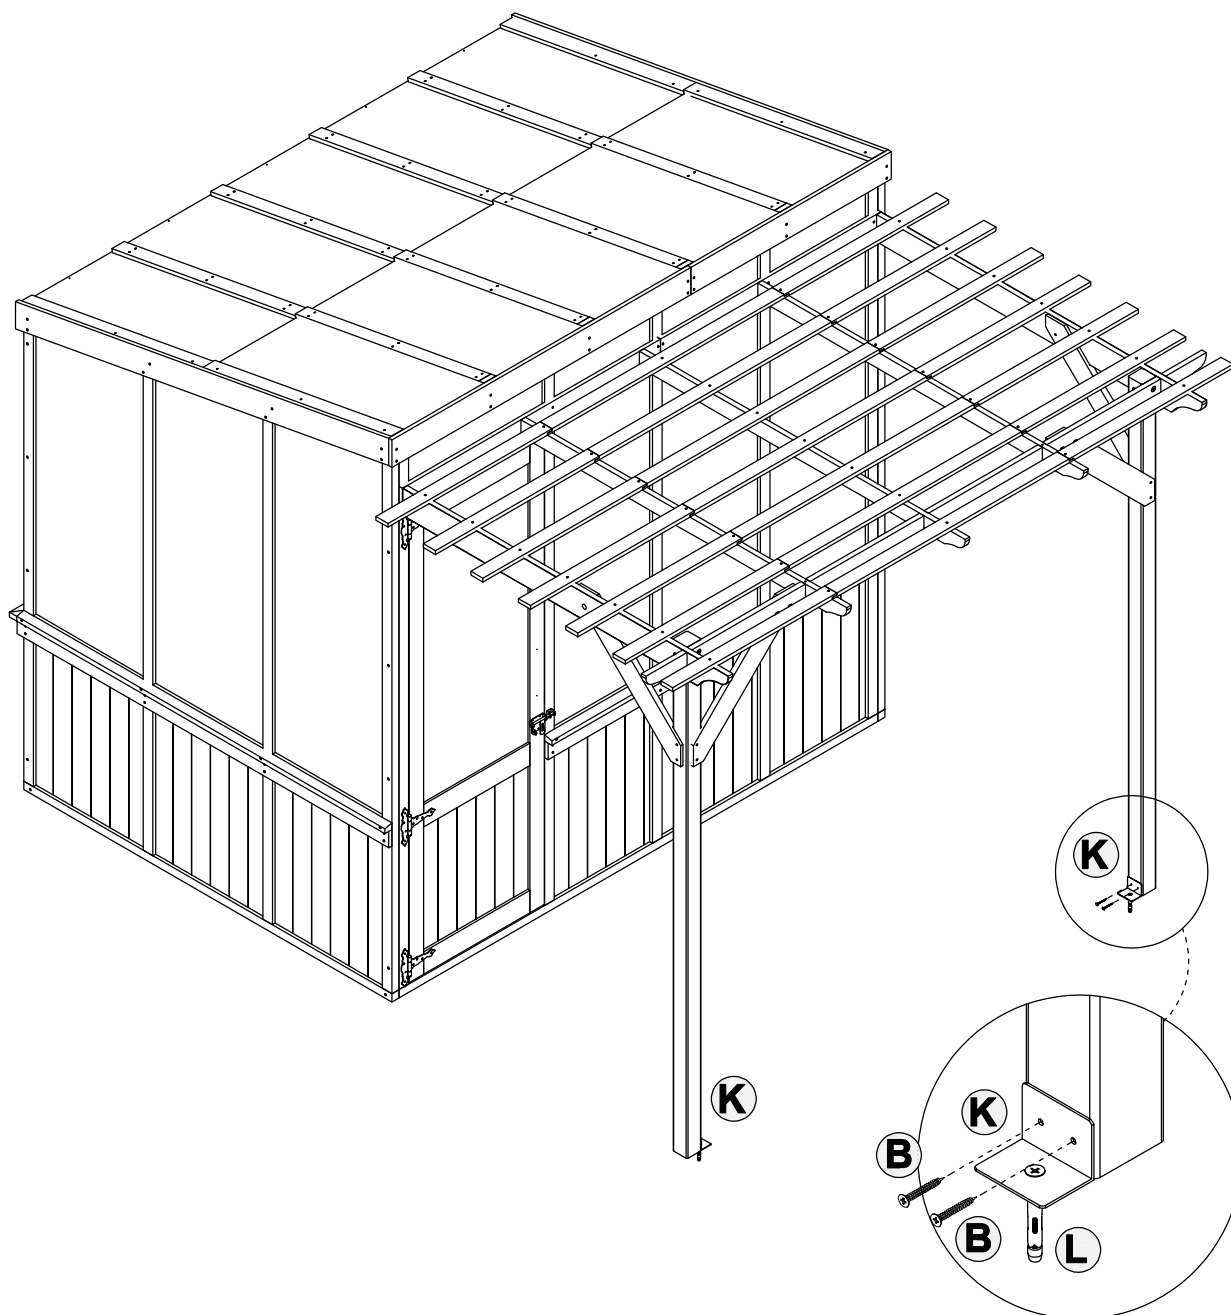

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068
208-820-0799