


DINING CHAIR

ASSEMBLY MANUAL

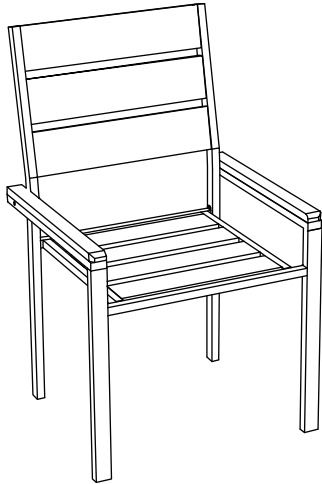

 


 



Assembly Instructions



- Prior to assembly, ensure that you lay out and identify all the parts listed in the parts list.
- Tighten all nuts and bolts securely. Hand-tighten all bolts before use. Avoid using power tools or applying excessive force during assembly and bolt tightening.
- If you encounter any difficulties during assembly or if any part is missing or damaged, please don't hesitate to contact our customer service team via email at

Care and warranty


- The weight capacity of this chair is 250 lbs.
- Clean the frame components with a mild soap solution, then rinse thoroughly. Avoid using bleach, acid, or any other solvents on either the fabric or frame components.
- For the best performance and safety of your chair, inspect and tighten all bolts and fasteners regularly

Part list


Part	Description	Qty
A	 Back	1
B	 Seat	1
C	 Right Leg	1
D	 Left Leg	1
E	 M6*20 Bolt	10
F	 M6*55 Bolt	2
G	 Washer	12

Part	Description	Qty
H	 End cap	12
J	 Allen key	1

1. Connect Back (Part A), Left Leg (Part C), and Right Leg (Part D) using Bolt (F), washer (G), and end cap (H) as shown in the diagram.

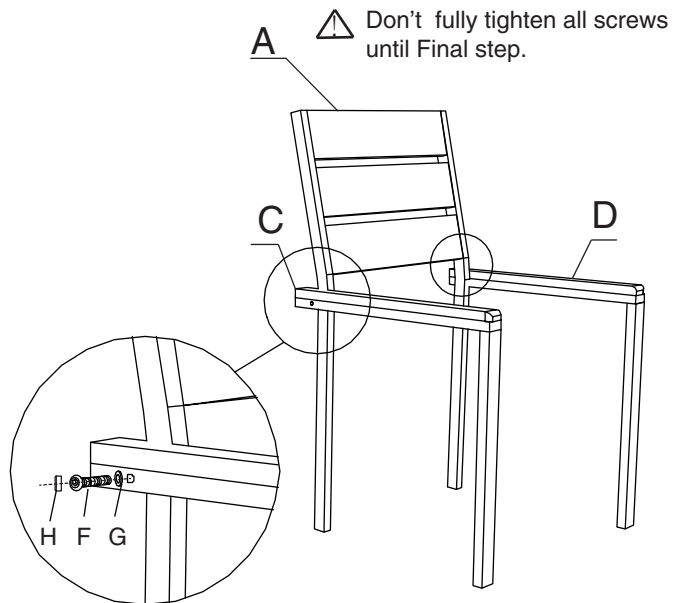


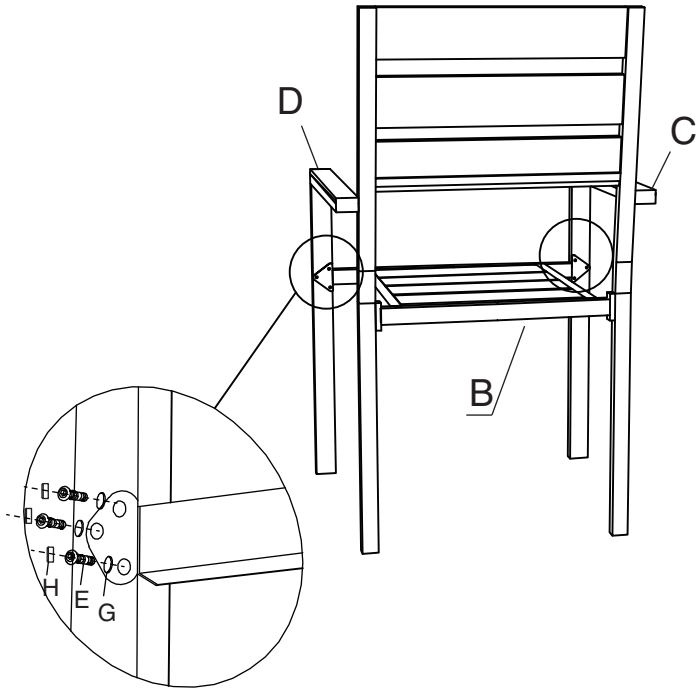
2. Connect Seat (Part B) with the rear legs of Back (Part A) using Bolt (E), Washer (G), and end cap (H) as shown in the diagram.

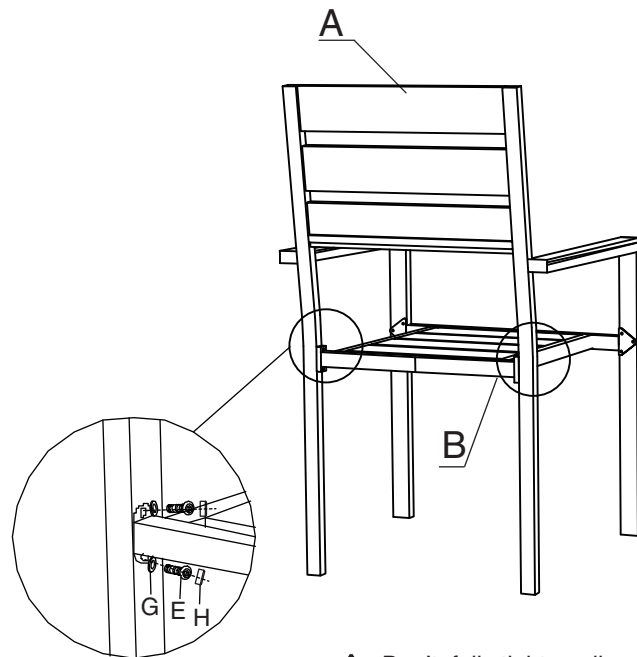

⚠ Don't fully tighten all screws until Final step.

3. Connect Seat (Part B) to the front Legs (Part C & Part D) using Bolt (E), Washer (G), and end cap (H) as shown in the diagram.

 Don't fully tighten all screws until Final step.



4. Make sure all bolts are fixed tightly before using on the level ground.

