


WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

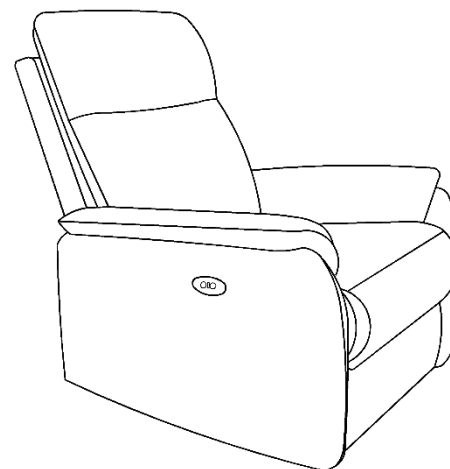

NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- To obtain the longest lifespan of your outdoor products, avoid exposure to rain or snow, and direct sunshine for long time. Whenever possible cover the product and/or place under patio or awnings.
- Not for commercial use, For residential use only.




Weight Limitation


250LBS

PARTS LIST


A*1

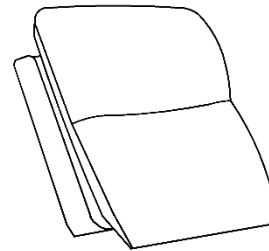

B*1

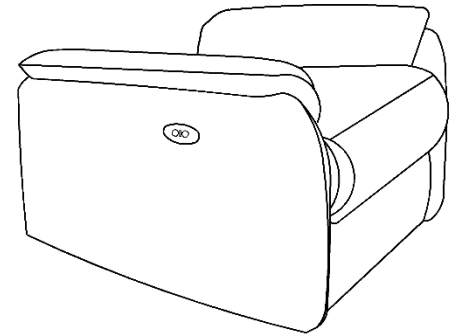


C*1

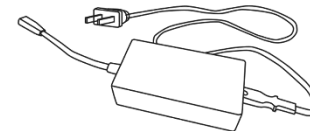


Estimated Duration Of Assembly

5-10 MINUTES


ASSEMBLY INSTRUCTIONS

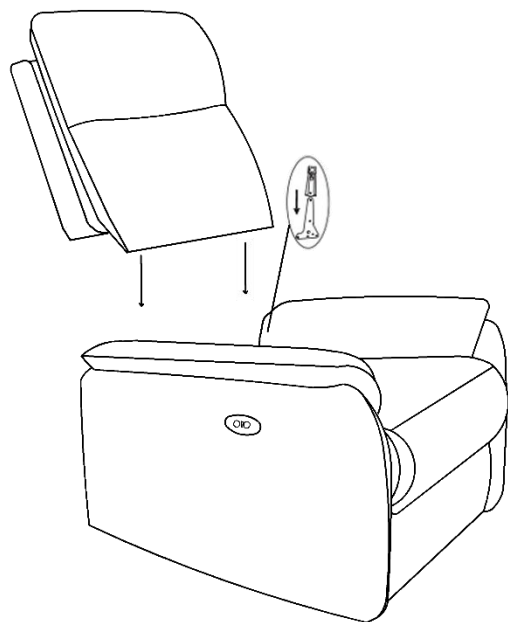


STEP 1:Carefully match male and female metal bracket then push the back A all the way down to secure it with chair base B.

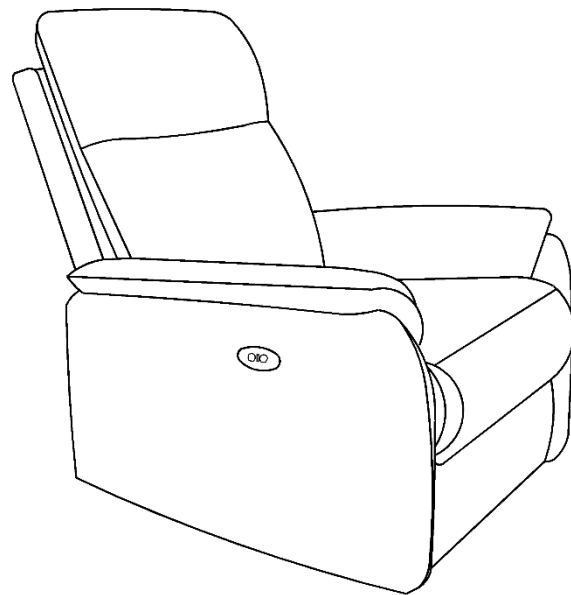


STEP 2:Assembly completed

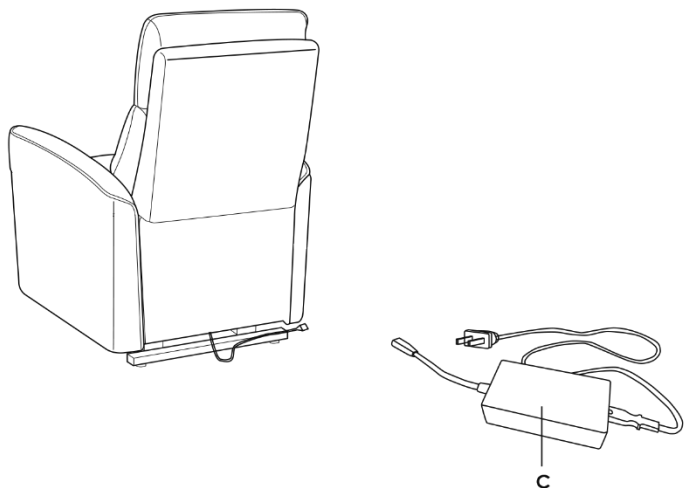

Wire from recliner body

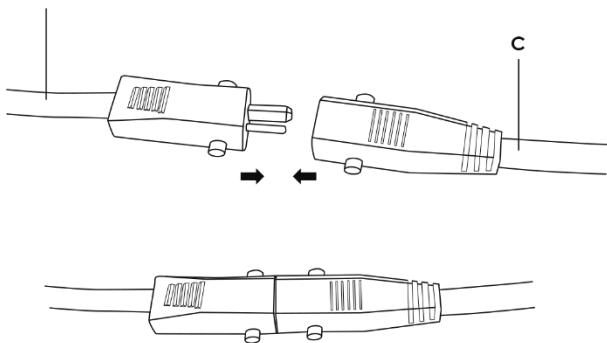


STEP 3: Locate wire from back of the recliner. Connect the male and female socket(C)

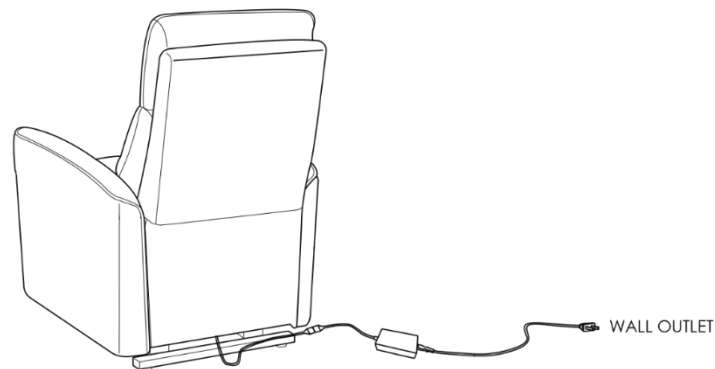


STEP 4: Plug in the power cord to electrical power outlet.

Note: Do not use an extension cord. Plug directly into wall outlet.

Upright position

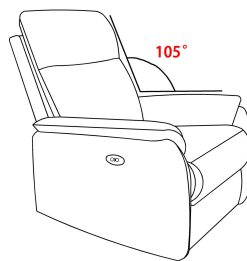

Full reclined position

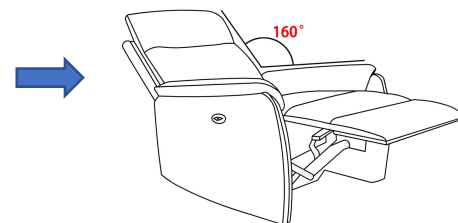

STEP 5: Click the switch to adjust different positions