

FLOATING DOG RAMP

Installation & Assembly



Thank you for purchasing the Floating Dog Ramp.

This manual has been refreshed for the black-and-teak dog ramp design. Please read all instructions before use and keep this sheet for future reference.

Recommended Pressure

10-15 PSI

Max Load

200 LBS

Use Area

Pool / Dock / Boat

Supervision

Adult Required

FLOATING DOG RAMP - QUICK GUIDE

PACKAGE CONTENT



Dog Ramp



Air Pump



Rope



Repair Kit



Carry Bag

SET-UP

1

Open the valve cap

Unfold the ramp on a flat surface. Turn the valve cap counterclockwise to open it.

2

Choose the nozzle

Select the pump nozzle that fits the air inlet securely before inflation.

3

Inflate the ramp

Connect the pump and inflate until the ramp becomes firm and stable.

4

Close and check

When pressure reaches 10-15 PSI, remove the pump, close the valve cap, and check for air leaks.



Inflate to firm shape: 10-15 PSI

STORAGE

1

Open valve to release air

Press the valve core down to start deflation.

2

Use pump to deflate faster

Connect the pump in deflation mode to remove the remaining air.

3

Dry before packing

Let the ramp air-dry completely before folding and storing in the bag.



Clean, dry, fold, store

REPAIR

1

Clean the damaged area and dry it completely.

2

Measure the damaged location and cut a patch larger than the opening.

3

Apply suitable PVC repair adhesive evenly to the patch.

4

Press firmly and allow it to cure fully before reinflating.



Patch only after the surface is clean and dry

Safety: For pet use only. Use under adult supervision. Remove from water when not in use.