ASSEMBLY INSTRUCTIONS DRAWER DRESSER

2.5Hour

ASSEMBLY REQUIREMENTS 2-Person **Assembly**

Assembly Time (Approximate)

Tool Required (Not Provided)



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3days.

We appreciate your business!

ASSEMBLY PREPARATION:

- 1. Remove all packaging materials ,staples and packing straps from the carton.
- 2. Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
- 3. Place all wooden parts on clean, flat and soft surface (e.g. .carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION:

- 1. Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

TIPS FOR ASSEMBLY:


- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Identify all the parts, hardware and quantities required for each step.
- 4. During assembly, do not over-tighten any fittings as this may cause damage.
- 5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6. Always place the product on a flat, level surface.
- 7. Do not sit or stand on the partially assembled product ;only use the product for which it is intended.


CARE AND MAINTENANCE:

- · Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- · Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- · Never allow any kind of liquids to remain on your furniture. Absorption can cause wood to warp or delaminate.
- \cdot Do not place hot items (e.g hot drinks)directly onto the wood surface.
- · Do not drag and pull your furniture.

This product is for indoor and household use only -not for commercial or industrial use.

01 MADE IN MALAYSIA

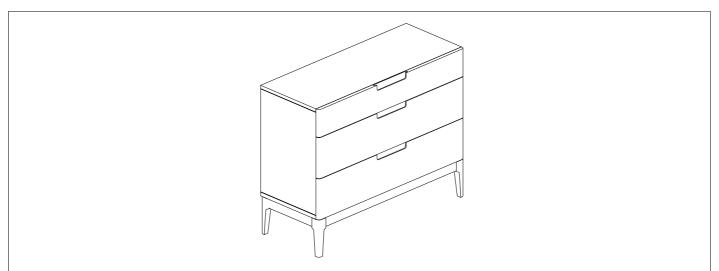

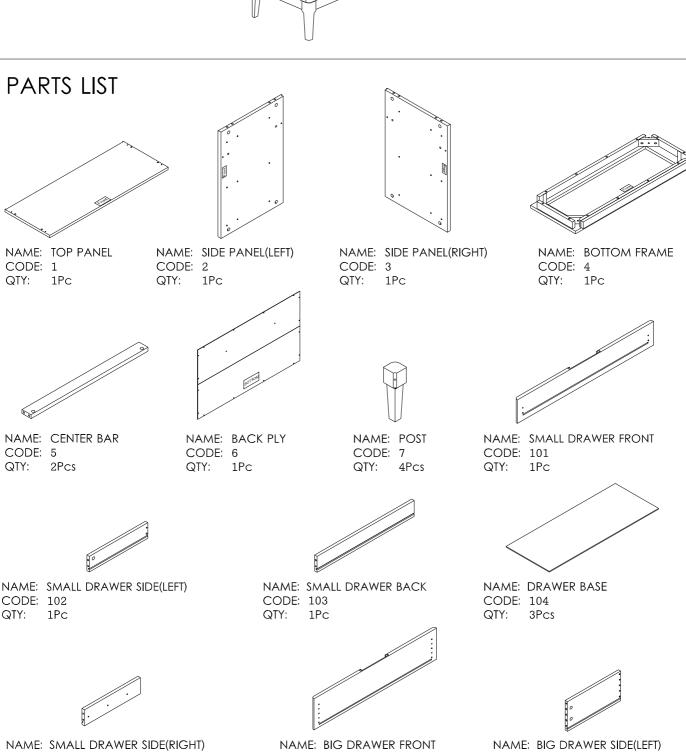

CODE: 106

1Pc

QTY:

CODE: 105

 
1Pc

QTY:

CODE: 107

2Pcs

QTY:




NAME: BIG DRAWER BACK

CODE: 108 QTY: 2Pcs



NAME: BIG DRAWER SIDE(RIGHT)

 CODE: 109 QTY: 2Pcs



NAME: BIG DRAWER FRONT

CODE: 110 QTY: 1Pc

HARDWARE



NAME: CHIPBOARD SCREW M3X16mm

CODE: A QTY: 36Pcs



NAME: EXTENSION RUNNER 350mm

CODE: B QTY: 3Sets



NAME: WOOD DOWEL M8X35mm

CODE: C QTY: 12Pcs





NAME: CAM LOCK & CAM BOLT

CODE: D QTY: 32Sets



NAME: WOOD DOWEL M6X30mm

CODE: E QTY: 28Pcs



NAME: CAM LOCK COVER

CODE: F QTY: 32Pcs



NAME: PANHEAD CHIPBOARD SCREW M4X16mm(BLACK)

CODE: G QTY: 18Pcs



NAME: FLAT WASHER M6

CODE: H QTY: 4Pcs



NAME: SPRING WASHER M6

CODE: I QTY: 4Pcs



NAME: JCBC M6x60mm

CODE: J QTY: 4Pcs



NAME: ALLEN KEY M4

CODE: K QTY: 1Pc



NAME: CHIPBOARD SCREW M4X25mm

CODE: W QTY: 4Pcs



NAME: FLAT WASHER M4

CODE: X QTY: 2Pcs



NAME:

CODE: SCREW PLUG QTY: Y

2Pcs




NAME: SAFETY BELT (150mm)

CODE: Z QTY: 2Pcs




A) Insert and secure Cam Bolt(D) to Top Panel(1)

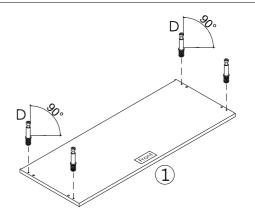

STEP 2

- A) Attach Wood Dowel(C) to Left,Right Side Panel(2,3)
- B) Attach Cam Lock(D) to Left,Right Side Panel(2,3)
- C) Attach Cam Bolt(D) to Left,Right Side Panel(2,3)

NOTE: Make sure arrows on each Cam Lock points towards nearest edge with holes

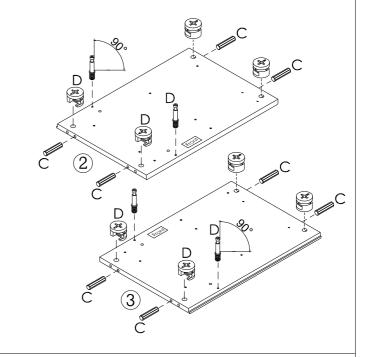


STEP 3

A) Attach Extension Runner(B) to Left,Right Side Panel(2,3) using Chipboard Screw(A) to secure


NOTE: Chipboard Screw(A) should be assembled from the front of the runner in the order of A¹, A² then A³

NOTE: Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole

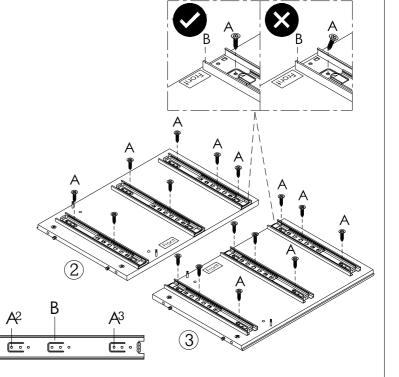


- A) Insert Wood Dowel(C) to Center Bar(5)
- B) Attach Cam Lock(D) to Center Bar(5)

NOTE: Make sure arrows on each Cam Lock points towards nearest edge with holes

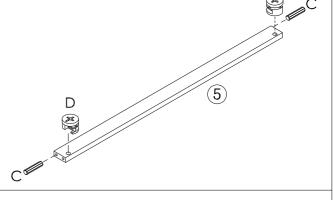


STEP 5

A) Attach Post(7) to Bottom Frame(4) and secure with JCBC Screw(J), Spring Washer(I) & Flat Washer(H) tighten with Allen Key(K) clockwise

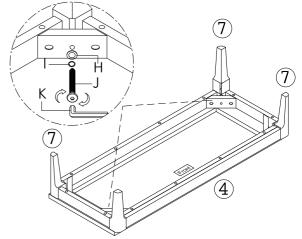


STEP 6

A) Insert and secure Cam Bolt(D) to Bottom Frame(4)

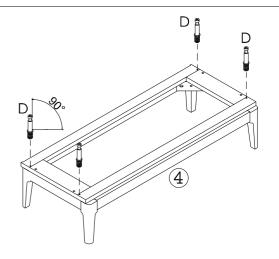


STEP 7

- A) Attach Center Bar(5) to Left,Right Side Panel(2,3) and secure with Cam Lock(D)
- B) Cover Cam Lock with Cam Lock Cover(F)

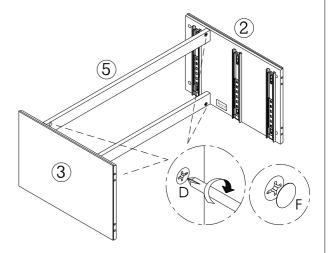


- A) Attach Left,Right Side Panel(2,3) to Bottom Frame(4) and secure with Cam Lock(D)
- B) Cover Cam Lock with Cam Lock Cover(F)

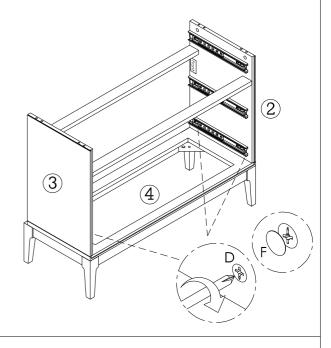


STEP 9

- A) Attach Top Panel(1) to Left,Right Side Panel(2,3) secure with Cam Lock(D)
- B) Cover Cam Lock with Cam Lock Cover(F)

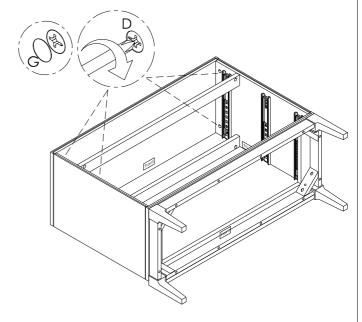


STEP 10


A) Attach Back Plywood(6) to assembled unit using Panhead Chipboard Screw(Black)(G) to secure

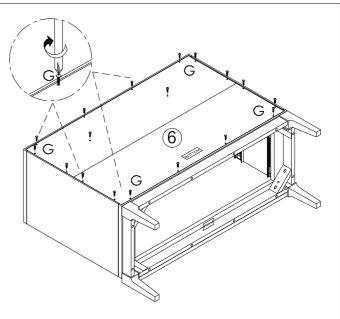


*Following step is OPTIONAL. Follow these steps if you wish to secure unit to a wall for added safety

  Attach Safety Belt(Z) to Back Plywood and secure using Flat Washer(X) Chipboard Screw(W) to secure

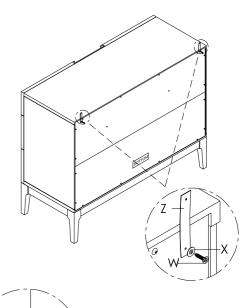




iii) Move assembled unit to wall and Screw in Safety Belt(Z) using Chipboard Screw(W)

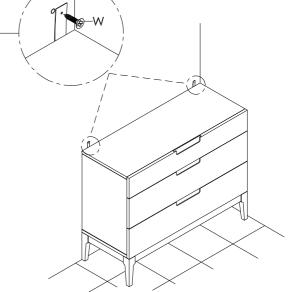


EXTENSION RUNNER ASSEMBLE STEPS:

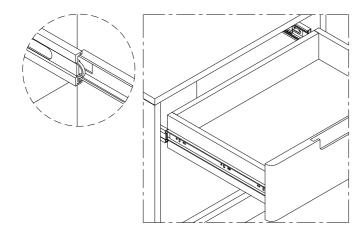


NOTE: Align and pull/push the triggers on both sides of drawer box into the metal track on interior side of side panel


EXTENSION RUNNER SEPARATE STEPS:

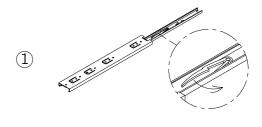




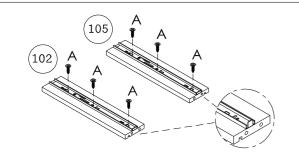

 
A) Attach Extension Runner(B) to Left,Right Small Drawer Side(102,105) using Chipboard Screw(A) to secure




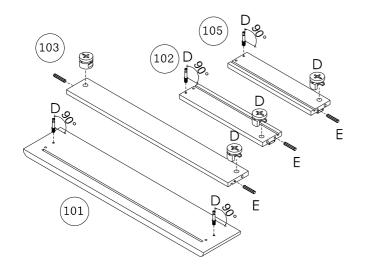

- A) Flip Over Left,Right Small Drawer Side(102,105)
- 3) Insert Wood Dowel(E) to Left,Right Small Drawer Side(102,105) & Small Drawer Back(103)
- C) Attach Cam Lock(D) to Left,Right Small Drawer Side(102,105) & Small Drawer Back(103)
- D) Attach Cam Bolt(D) to Left,Right Small Drawer Side(102,105) & Small Drawer Front(101)

NOTE: Make sure arrows on each Cam Lock point towards nearest edge with holes

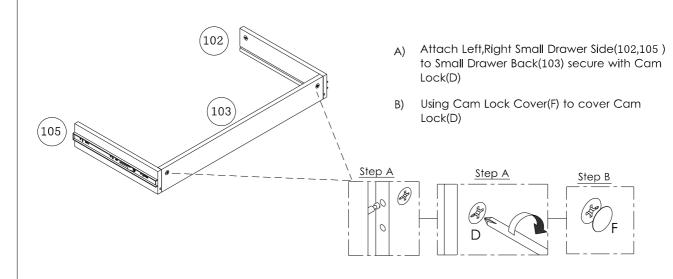

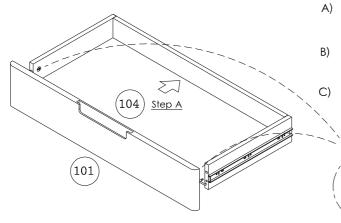

- Slot in Drawer Base(104) in corresponding grooves
- Attach Small Drawer Front(101) to Drawer Box secure with Cam Lock(D)
 - Using Cam Lock Cover(F) to cover Cam Lock(D)

