 


36" ELECTRIC FIREPLACE

HOMEOWNERS OPERATING MANUAL

MODEL: ■ RYJ-36

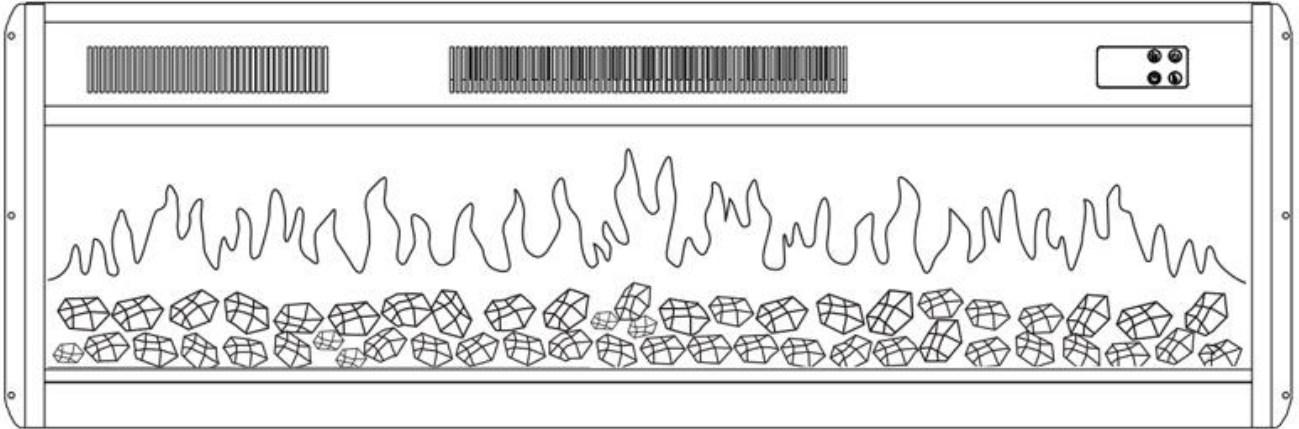

 
**Please read all instructions carefully and
Retain for future reference**

Getting Started

- Remove the appliance from the box.
- Remove any packaging from the product.
- Place the packaging inside the box and either store or dispose of safely.

Contents of Carton

- Heater
- Remote control
- 1 Instruction Manual, 1 bag of crystal.

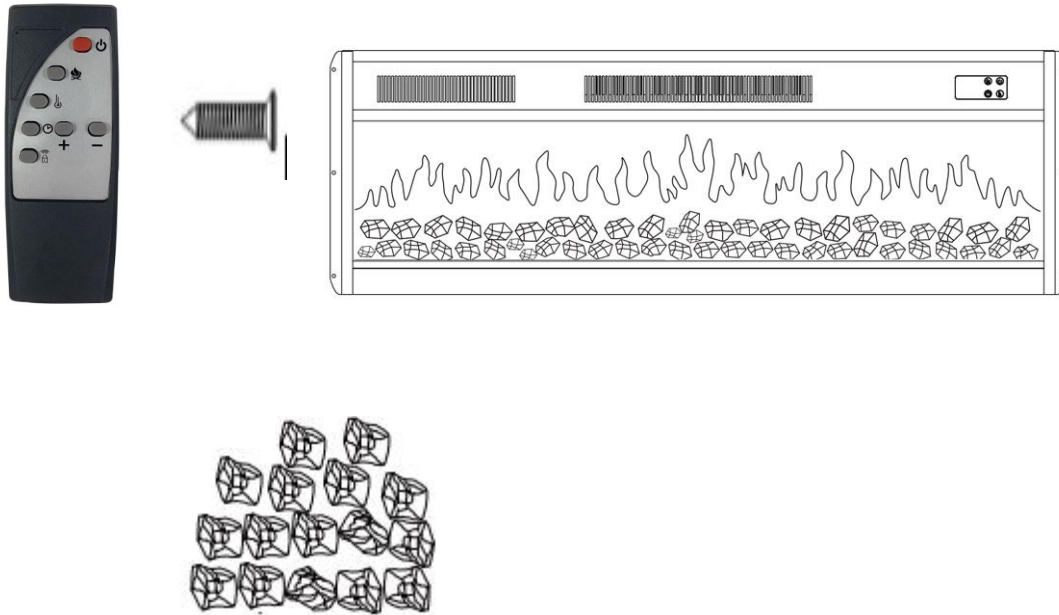

Helpful Advice before Fitting

- Please retain all packaging until you have checked and counted all the parts and the contents of the hardware pack against the parts list.
- The hardware pack contains small items which should be kept away from young children
- We suggest that you open the hardware pack and place all the contents into a container, therefore reducing the risk of losing any small pieces.

Installation (see Fig1 ~ Fig 3)

- Do not connect the appliance until properly fixed to the TV cabinet and the instructions are fully read.
- The minimum distances must be observed in the diagrams.
- For installation of the appliance, care must be taken not to damage concealed cables.
- Please be careful while drilling the holes.

TV cabinet Insert Instructions

- Please unscrew the front frame and take out the glass, See Fig.1

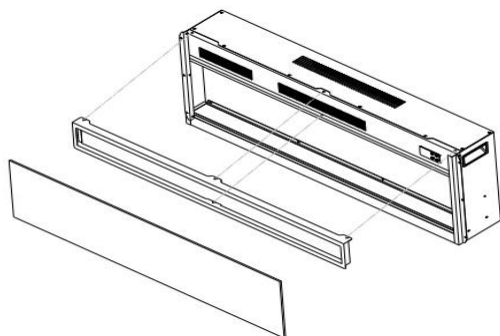 


Fig.1

- Please put the crystal in the bottom of the fireplace; See Fig.2

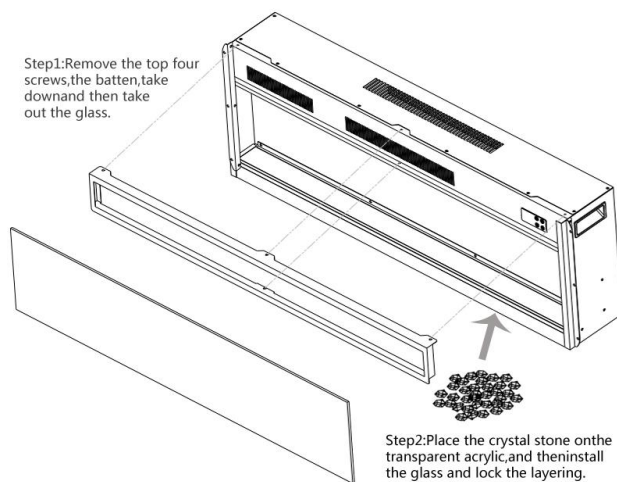 


Fig.2

- After installing the crystal stone, install the glass, and then install the front frame, lock the screw.(Fig.3)

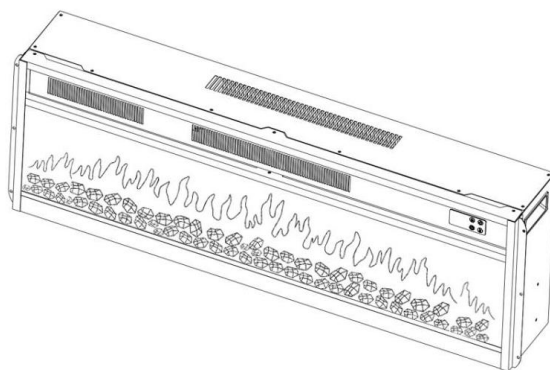 



Fig.3





Instructions for Use

 - The appliance can be operated either by the switches located on the top right hand side of the fire or by supplied remote control.

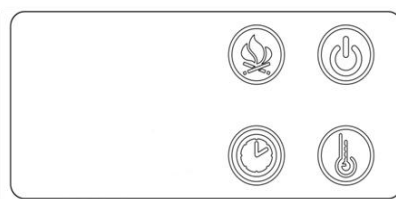TO ACCESS CONTROL PANEL


Fireplace Keypad Function Instructions:



	<p>Power switch key: Press to turn the fireplace on or off.</p>
	<p>Flame key:</p> <ol style="list-style-type: none"> 1. For a monochrome flame fireplace, a short press of the flame key adjusts the mode (P/R/H - P for constant flame, R for breathing flame, H for fixed flame). 2. For a multi-color flame fireplace, a short press of the flame key adjusts the flame color. <p>Long press the flame key for 8 seconds to activate the "Lock function", displaying "--" on the digital screen. In this mode, the fireplace can only be turned on/off normally, and other functions cannot be operated. To deactivate the "Lock function," long press the flame key for another 8 seconds, and all functions will return to normal operation.</p>
	<p>Heating key:</p> <ol style="list-style-type: none"> 1. Long press the heating key for 5 seconds to activate the heating function. The indicator light next to the heating key turns red, and the default setting for heating is "F0" status. <p>A: When heating is in "F0" status, the temperature is not affected by the ambient temperature. The heater will continue to operate without automatically stopping.</p> <p>B: Short press the temperature key to set the temperature. The temperature range is 16-18-21-24-27-29-32-35-37 (9 levels of temperature settings). When the ambient temperature is greater than or equal to the set temperature, the heater stops working.</p>
	<p>Timer key:</p> <p>Long press the timer key for 5 seconds to activate the timer function. The digital display shows 0H. Short press the timer key to set the timer within the range of 1H-9H. The indicator light next to it turns red, indicating that the timing function is in progress.</p>
	<p>Digital display: Displays the corresponding function.</p>

- The standby switch located at the center right hand side of the fire must be first switch on

 Infrared Remote control

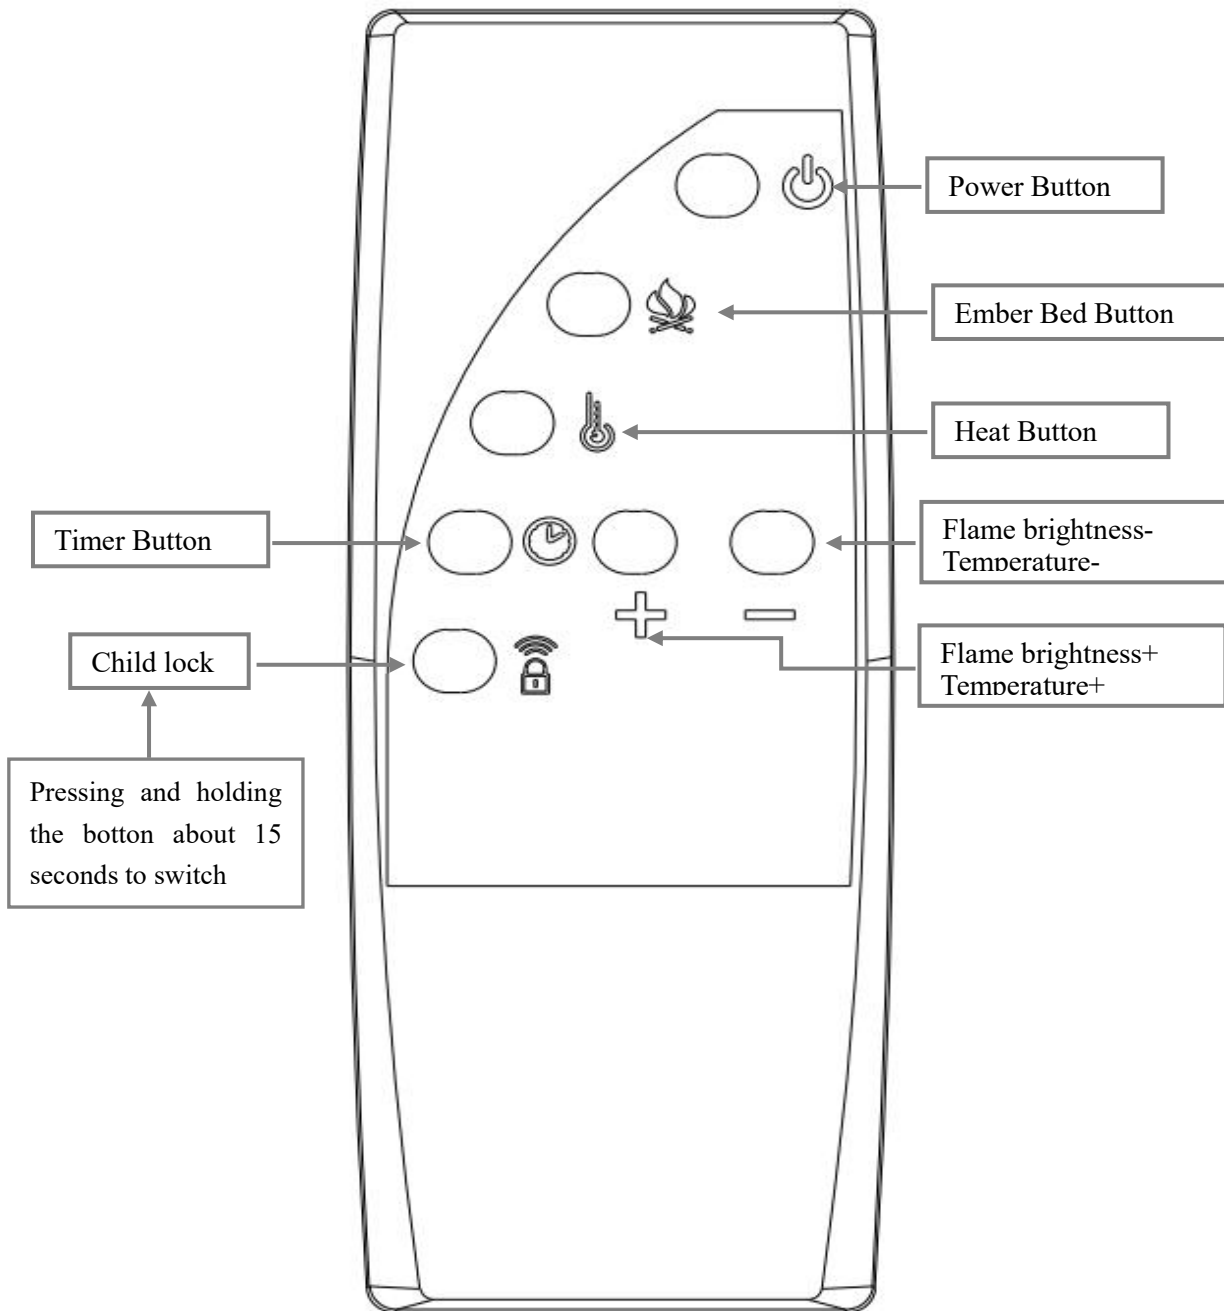







Technical Specification

Product name: Electric fireplace

Supply: 120V AC 60Hz

Rated power: 1500W

BUTTON	FUNCTION
 POWER	<p>ON: Enables control panel functions and remote control. Turn on flame effect.</p> <p>OFF: Disables control panel functions and remote control. Turn off flame effect.</p>
 FLAME	<p>Flame Button:</p> <p>1. For a monochrome flame fireplace, a short press of the flame key adjusts the mode (P/R/H - P for constant flame, R for breathing flame, H for fixed flame).</p> <p>1. 2. For a multi-color flame fireplace, a short press of the flame key adjusts the flame color.</p>
 HEATER	<p>Heating button:</p> <p>1. Long press the heating key for 5 seconds to activate the heating function. The indicator light next to the heating key turns red, and the default setting for heating is "F0" status.</p> <p>A: When heating is in "F0" status, the temperature is not affected by the ambient temperature. The heater will continue to operate without automatically stopping.</p> <p>B: Short press the temperature key to activate it, then press the "+" or "-" to set the temperature. The temperature range is 16-18-21-24-27-29-32-35-37 (9 levels of Temperature settings). When the ambient temperature is greater than or equal to the Set temperature, the heater stops working.</p> <p>C: The heating function will close after press the heating key again.</p>

 TIMER	<p>Timer button:</p> <p>Short press the timer key to activate the timer function. The digital display shows 0H. Use the remote control's "+" or "-" buttons to set the timer within the range of 1H-9H. The indicator light next to it turns red, indicating that the timing function is in progress.</p>
 KeyLock	<ol style="list-style-type: none"> 1. Long press the lock button for 8 seconds to activate the "Lock function". The digital display shows "--", and except for the normal on/off function, all other functions cannot be operated. Press the lock button for 8 seconds again to deactivate the "Lock function," and all functions can be used normally. 2. Short press the lock button to enable the sound of burning wood (Note: Only applicable to fireplaces with the sound of burning wood, this key has an effect).
 "+" "-" Keys	<p>"+" and "-" Keys:</p> <ol style="list-style-type: none"> 1. When setting the flame brightness (after pressing the flame button), use the "+" or "-" keys to adjust the flame brightness. 2. When setting the heating temperature (after pressing the heating button), use the "+" or "-" keys to adjust the heating temperature. 3. When setting the timer function (after pressing the timer button), use the "+" or "-" keys to adjust the timer.

DO NOT mix old and new batteries.

DO NOT use rechargeable silver oxide cell batteries with remote control unit.

DO NOT mix alkaline. Standard (Carbon-zinc). Or rechargeable (Nickel - Cadmium) batteries.

DO NOT dispose of batteries in fire. Improper disposal may cause batteries to leak or explode.

Important Safety Instructions

When using this electrical appliance, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to person, including the following :

- This heater must be used on an AC supply only and the voltage marked on the heater must correspond to the supply voltage.
- Do not switch the appliance on until it properly installed and described in this manual.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Keep out of reach of children and do not allow them to operate this appliance.
- From time to time, check the cord for damage .Never use the appliance if the cord or any part of the appliance shows signs of damage.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Repairs to electrical appliances should only be performed by a qualified electrician.
Improper repairs may place the user at serious risk.
- Do not run the cable under carpets, rugs etc.
- Do not allow the mains cable to hang over sharp edges or come into contact with hot surfaces.
- **WARNING:** In order to avoid overheating, do not cover or obstruct the heater in any way.
- Overheating will result if it is accidentally covered.
- Never immerse the product in water or any other liquids.

LED Bulb Replacement

Note: The flame effect on this electric fireplace insert is created by LED Bulbs.

The life of these LED bulbs will be 100,000 hours. The users are not recommended to Replace the LED Bulbs. For any reason should the bulbs stop working properly, contact a Qualified technician.

Cleaning:

- Turn heater OFF and unplug from electrical outlet before any cleaning or maintenance is performed. Wait at least 10 minutes to allow all components to cool properly.
- Use a vacuum or duster to keep heater and vent area clean from dust and dirt.
- The exterior of the fireplace should be cleaned with a damp cloth or duster.
Do not use abrasive cleaners or liquid sprays.

WARNINGS AND CAUTIONS

- WARNING** To avoid electrical shock not open the back panel of the insert unless the Power has been turned off. And the insert has been unplugged.
- WARNING** Any electrical repairs.to this electric fireplace. Should only be Performed by a qualified technician.
- WARNING** Any electrical wiring repairs should only be performed by a qualified Technician. And also must comply with local buildings codes.
- WARNING** Discontinue use of this electric fireplace if any of the follow has Occurred: Water damage. If insert has been or dented. If power cord has Become broken. If power cord becomes hot to touch, if unit smokes or Smells like smoke.

Note: When the heat functions is used for the first time. A slight odor may be Present. This is normal and should be occur again unless heater is not used For extended periods of time and dust is allowed to accumulate on heater Element.

Technical Specification

- Supply: 120V/60Hz
- Rated power:1500W

Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Safety Cut-Off

- This appliance is fitted with a safety cut-off which will operate if the fire overheats (e.g. due to blocked air vents) .For safety reasons, the fire will NOT automatically reset.
- To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the appliance.

Troubleshooting

Symptom	Solution
No operation/no fan,	Check fuse by replacement, Check for safety cut-off operation,
No fire effect light,	Check the LED light with technician.

Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

MADE IN CHINA