 
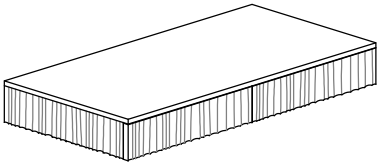 
 
 
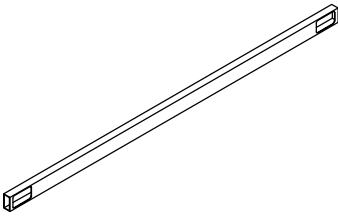 
 
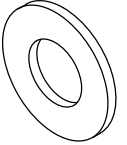 
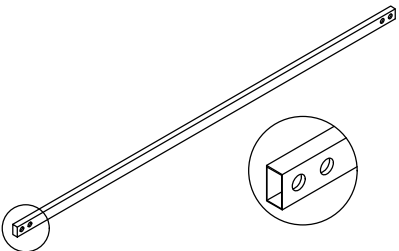 
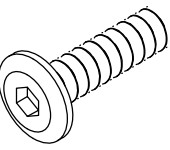 
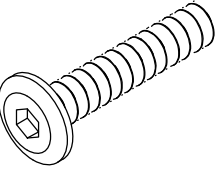 
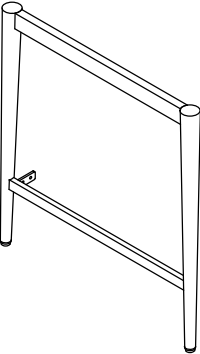 
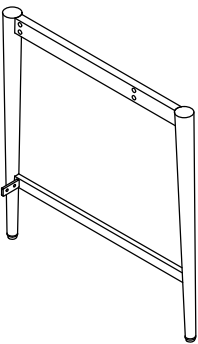 


Assembly Instructions


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.(Note: Loosely thread all screws bolts first. Once the item is assembled then completely tighten.)

PARTS LIST:				HARDWARE LIST:			
NO.	DESCRIPTION	PART PHOTO	QTY	NO.	DESCRIPTION	PART PHOTO	QTY
A	TOP BOARD		1	F	ALLEN KEY (Ø ⁴ / ₂₅ ")		1
				G	SCREW (M ⁶ / ₂₅ "* ² / ₅ ")		4
B	TOP CONNECTING		2	H	SPRING WASHER (M ⁶ / ₂₅ ")		8
				I	WASHER (Ø ¹³ / ₂₅ " - ⁶ / ₂₅ "* ³ / ₅₀ ")		12
C	BOTTOM CONNECTING		1	J	SCREW (M ⁶ / ₂₅ "*1")		8
				K	SCREW (M ⁶ / ₂₅ "* ^{2 1} / ₅ ")		14
D	LEFT SIDE FRAME		1				
E	RIGHT SIDE FRAME		1				

STEP 1

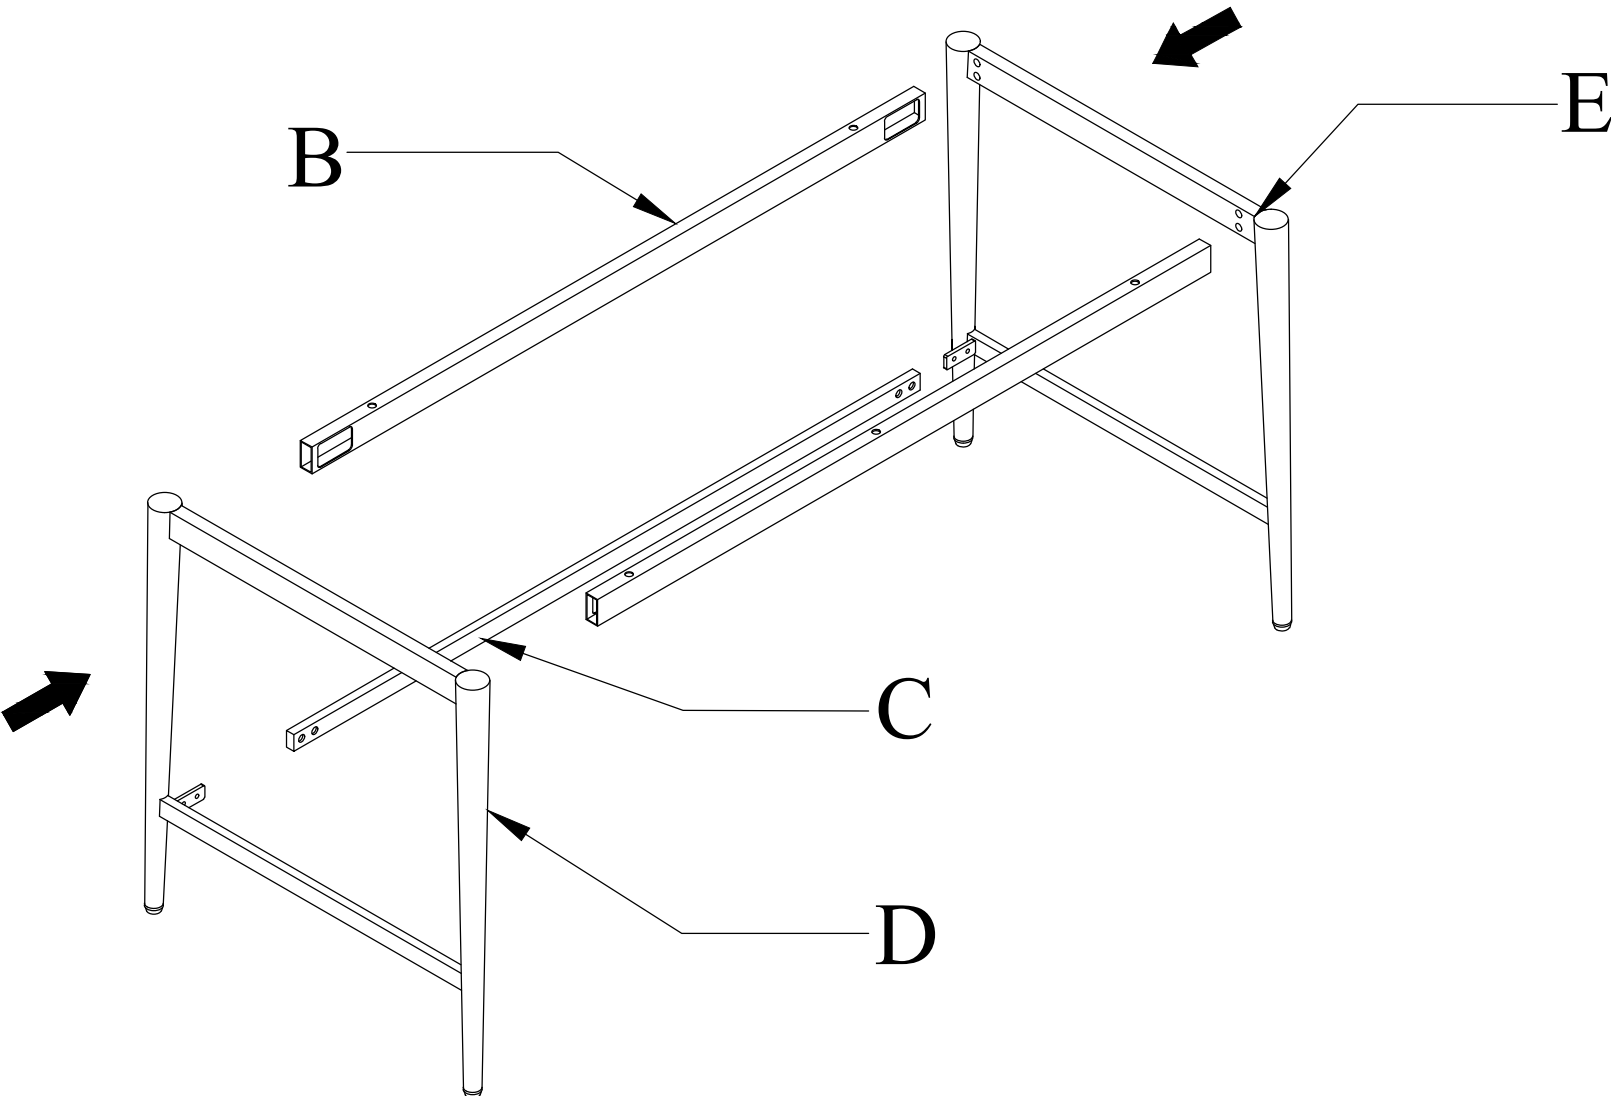

 STEP 2

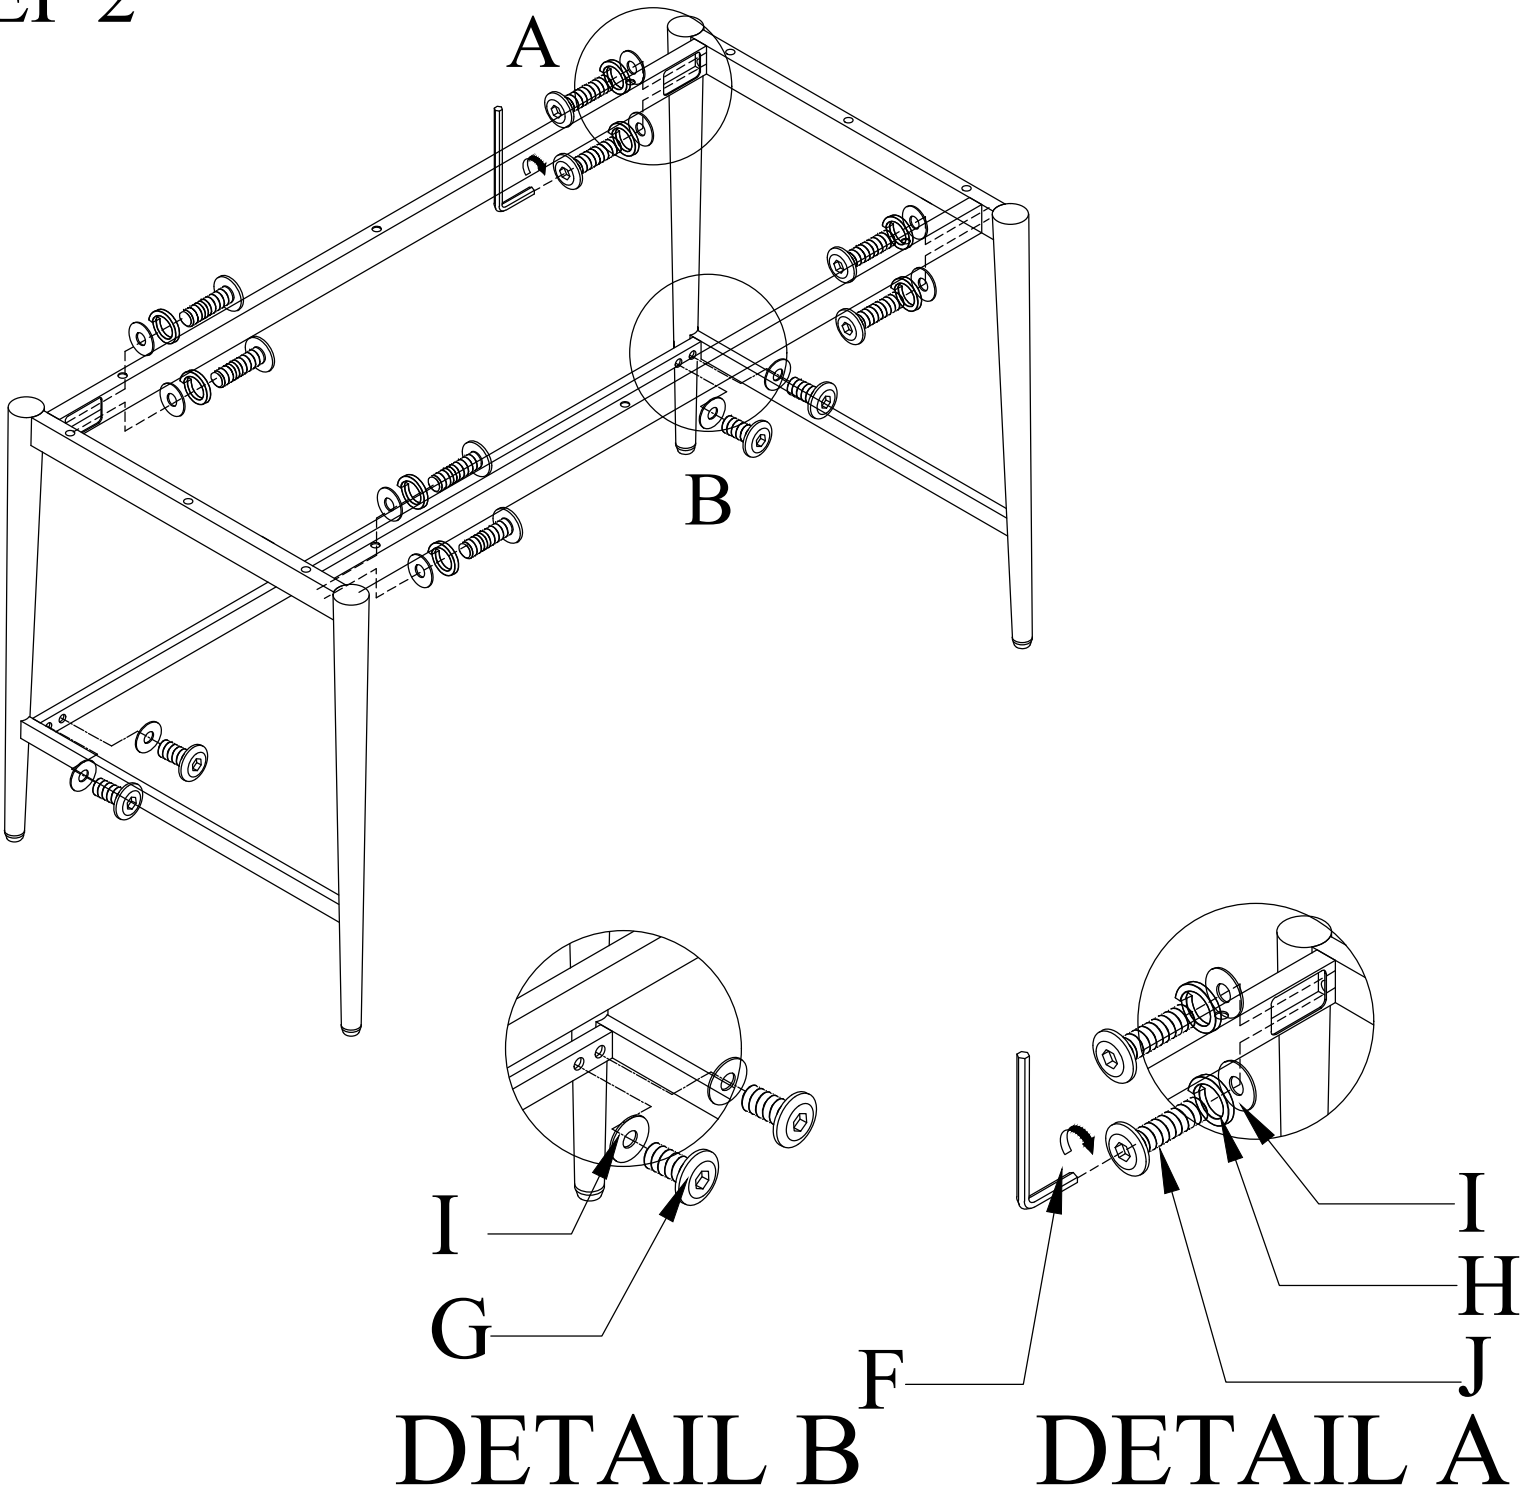

Assembly Instructions

STEP 3

FINISH

