
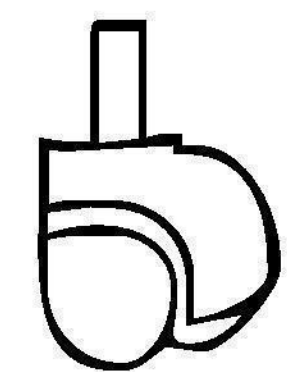
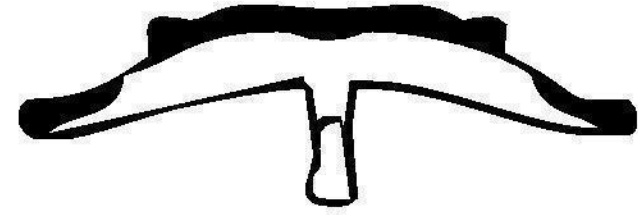
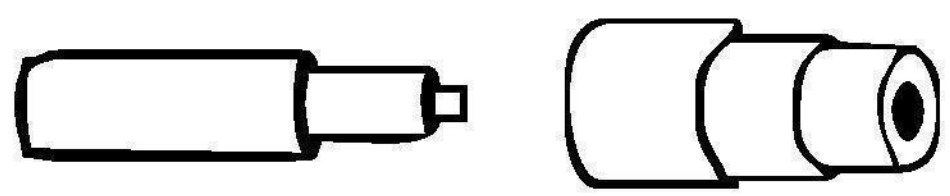
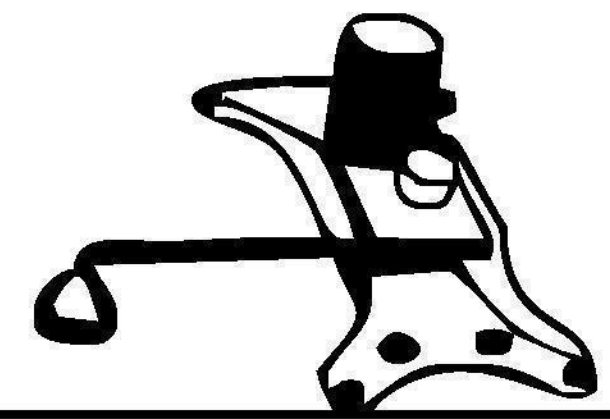
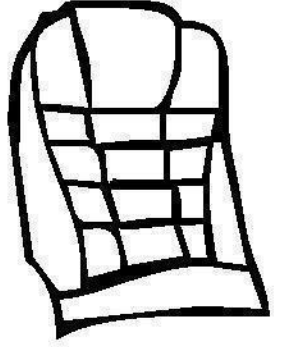
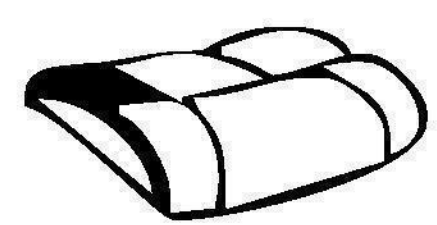
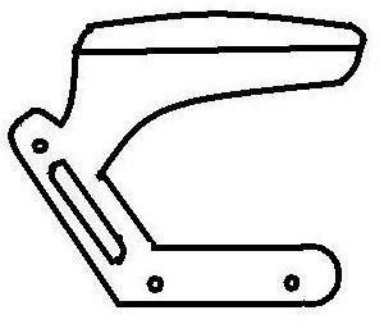
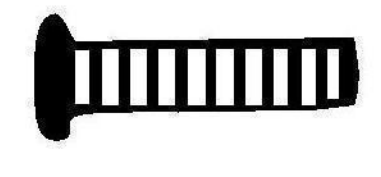
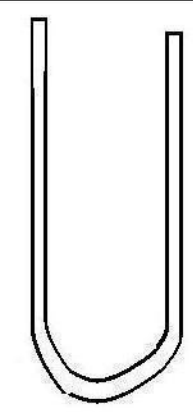
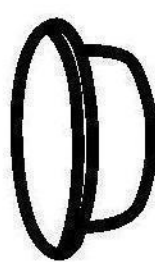
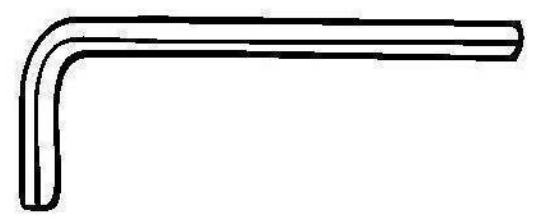
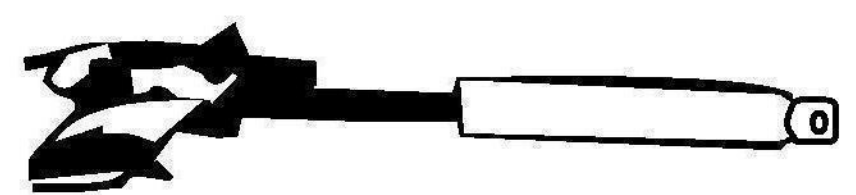
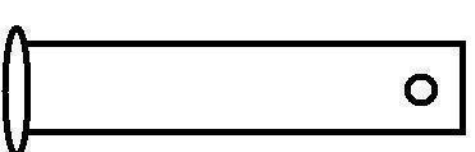
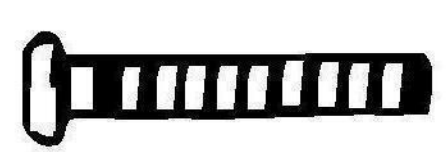
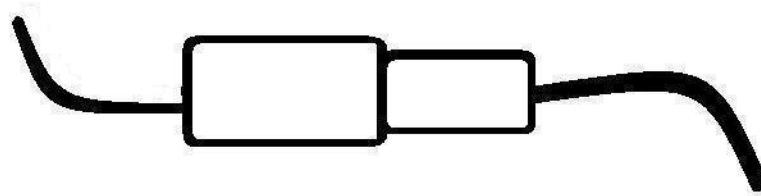
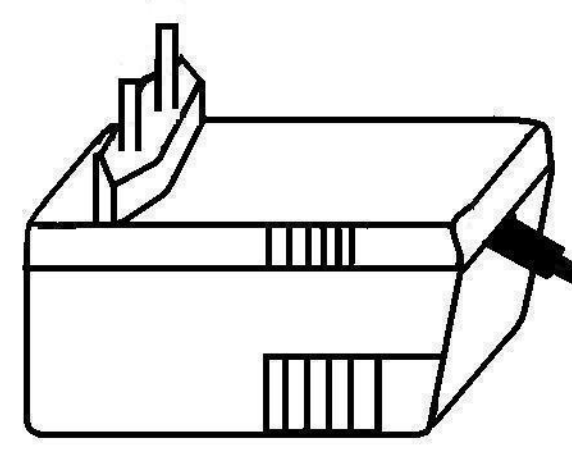
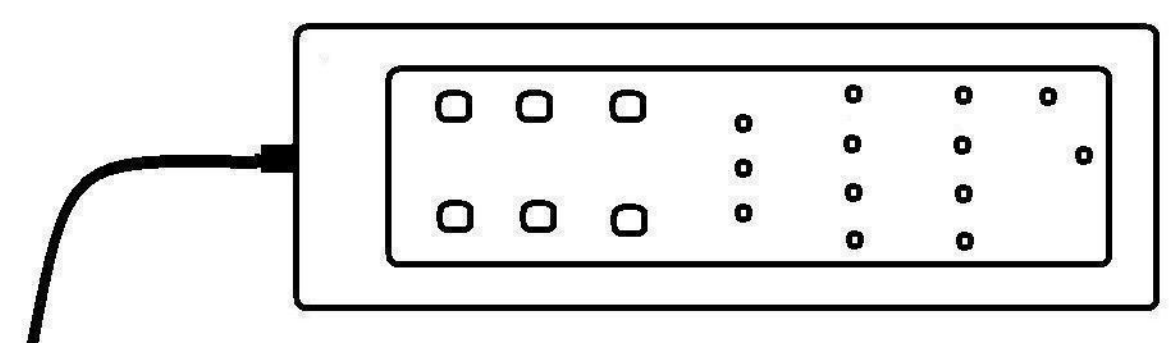
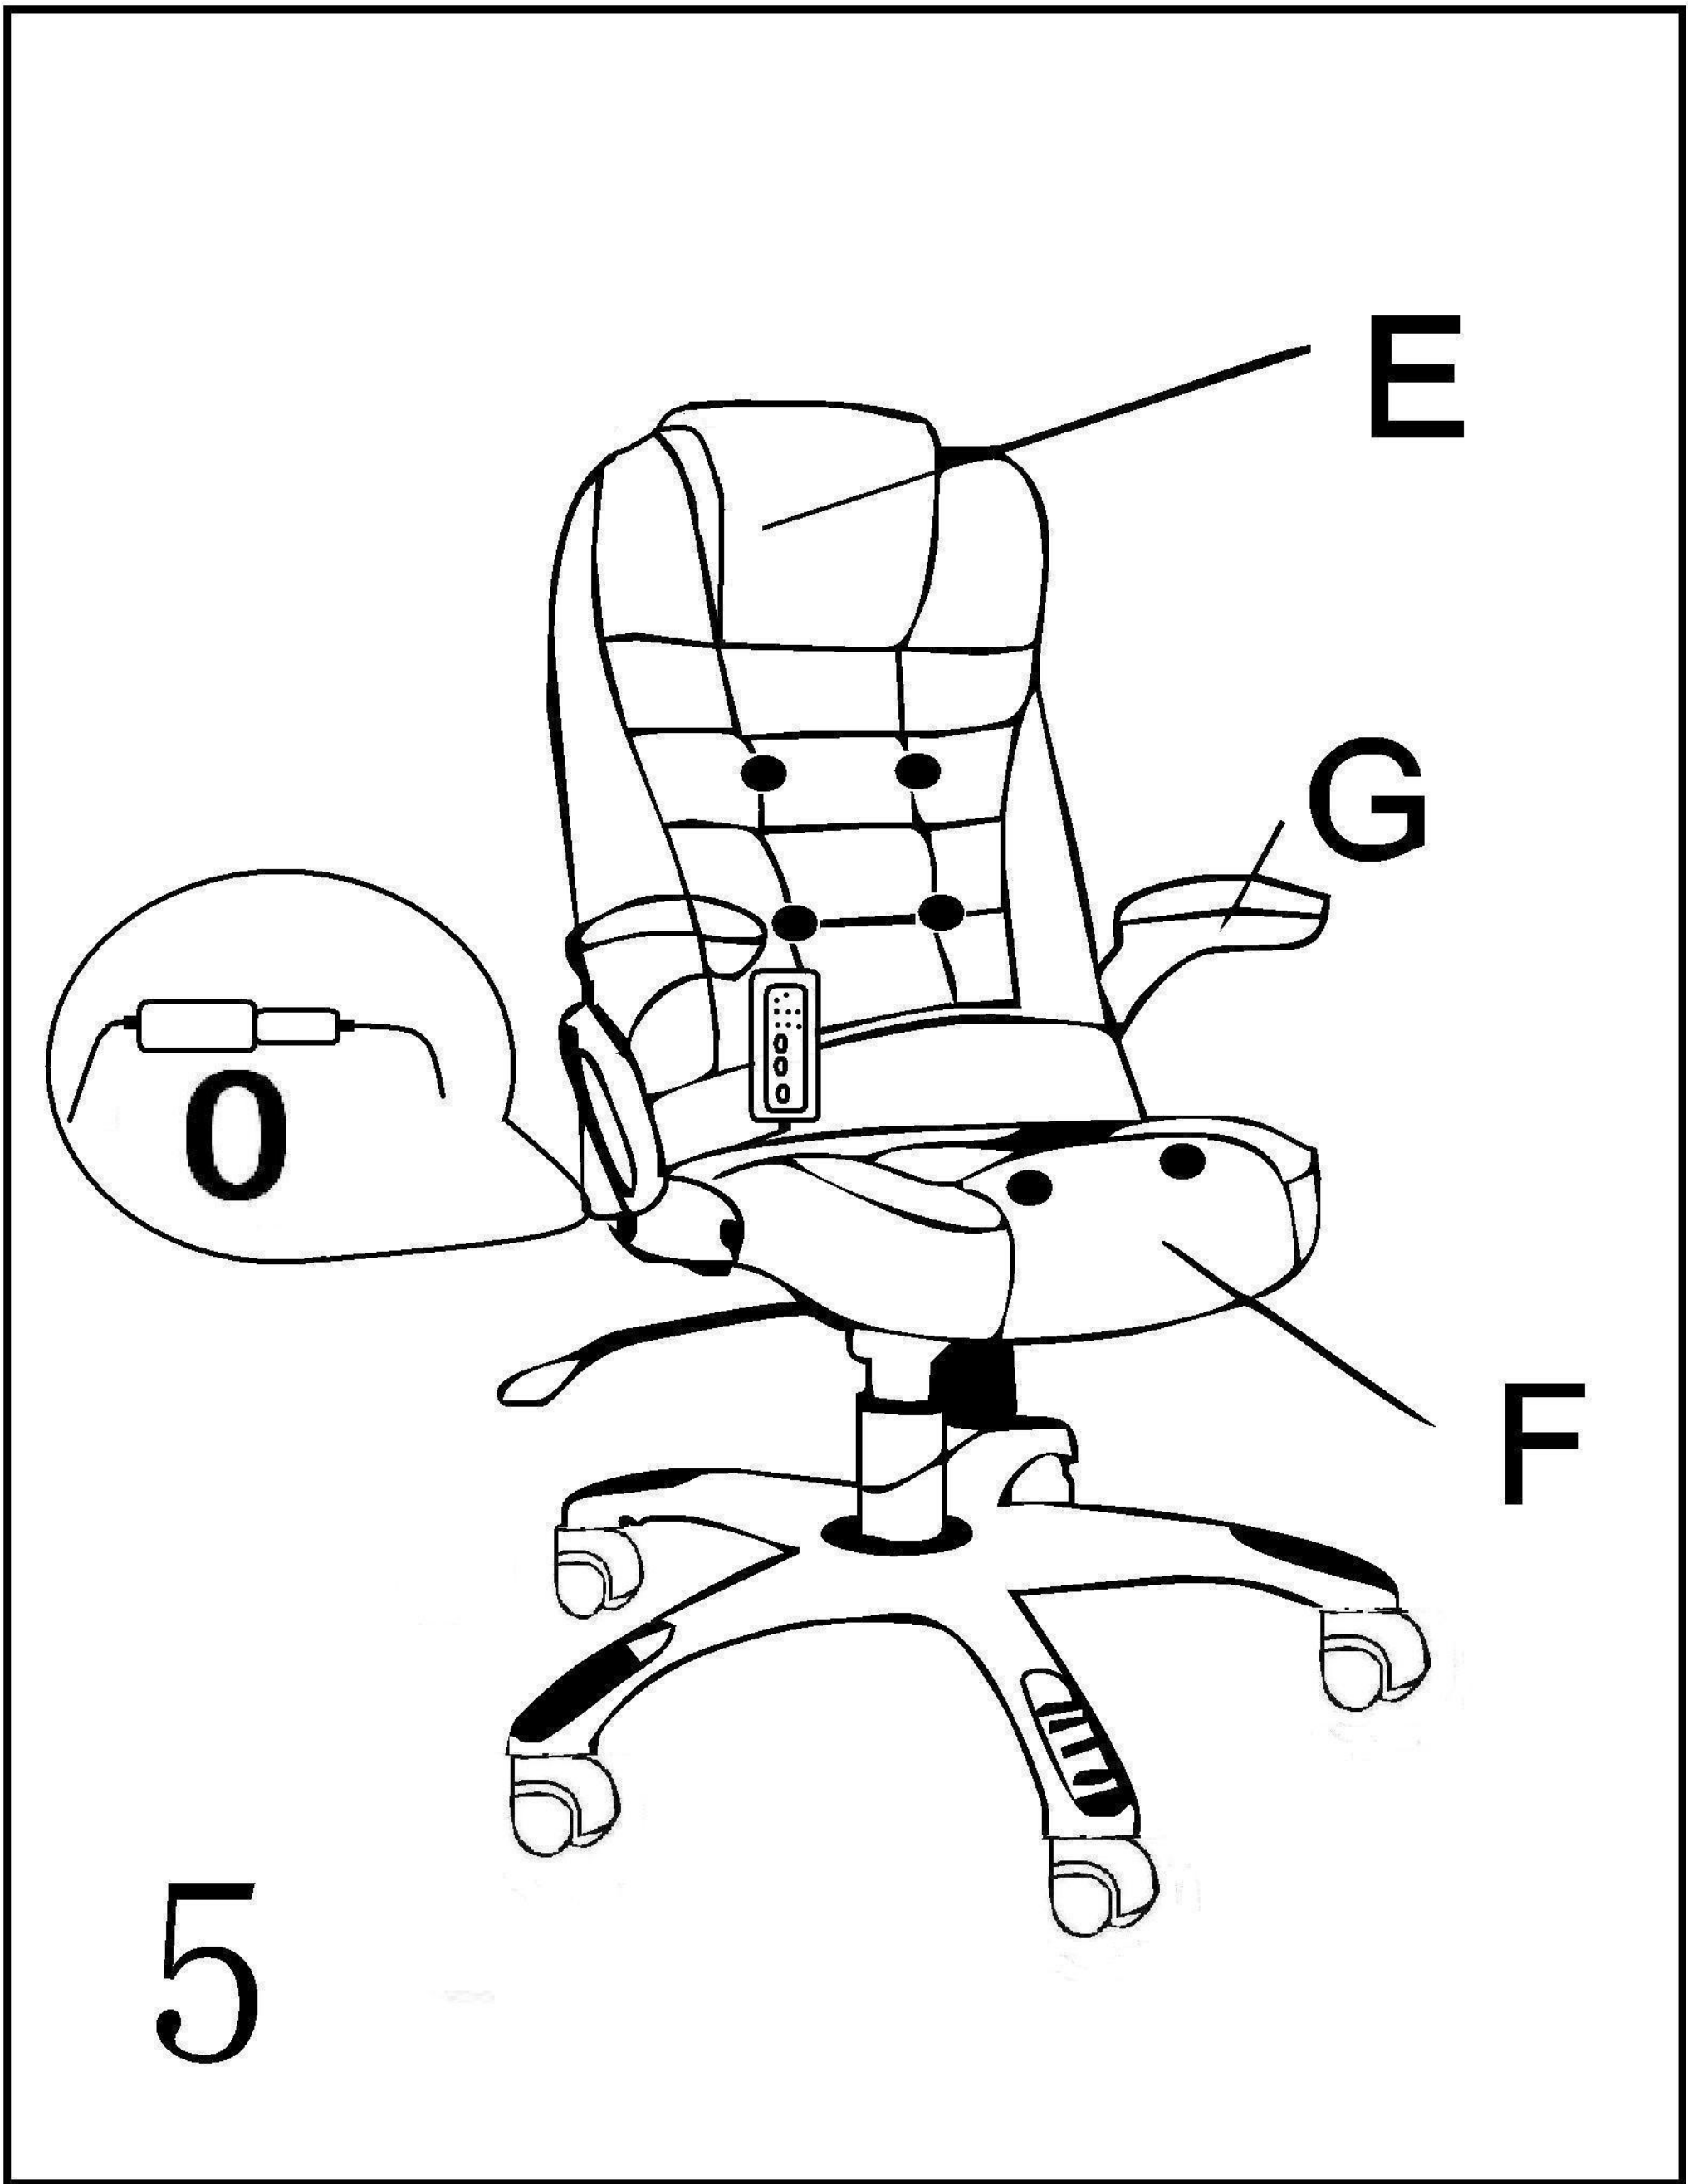
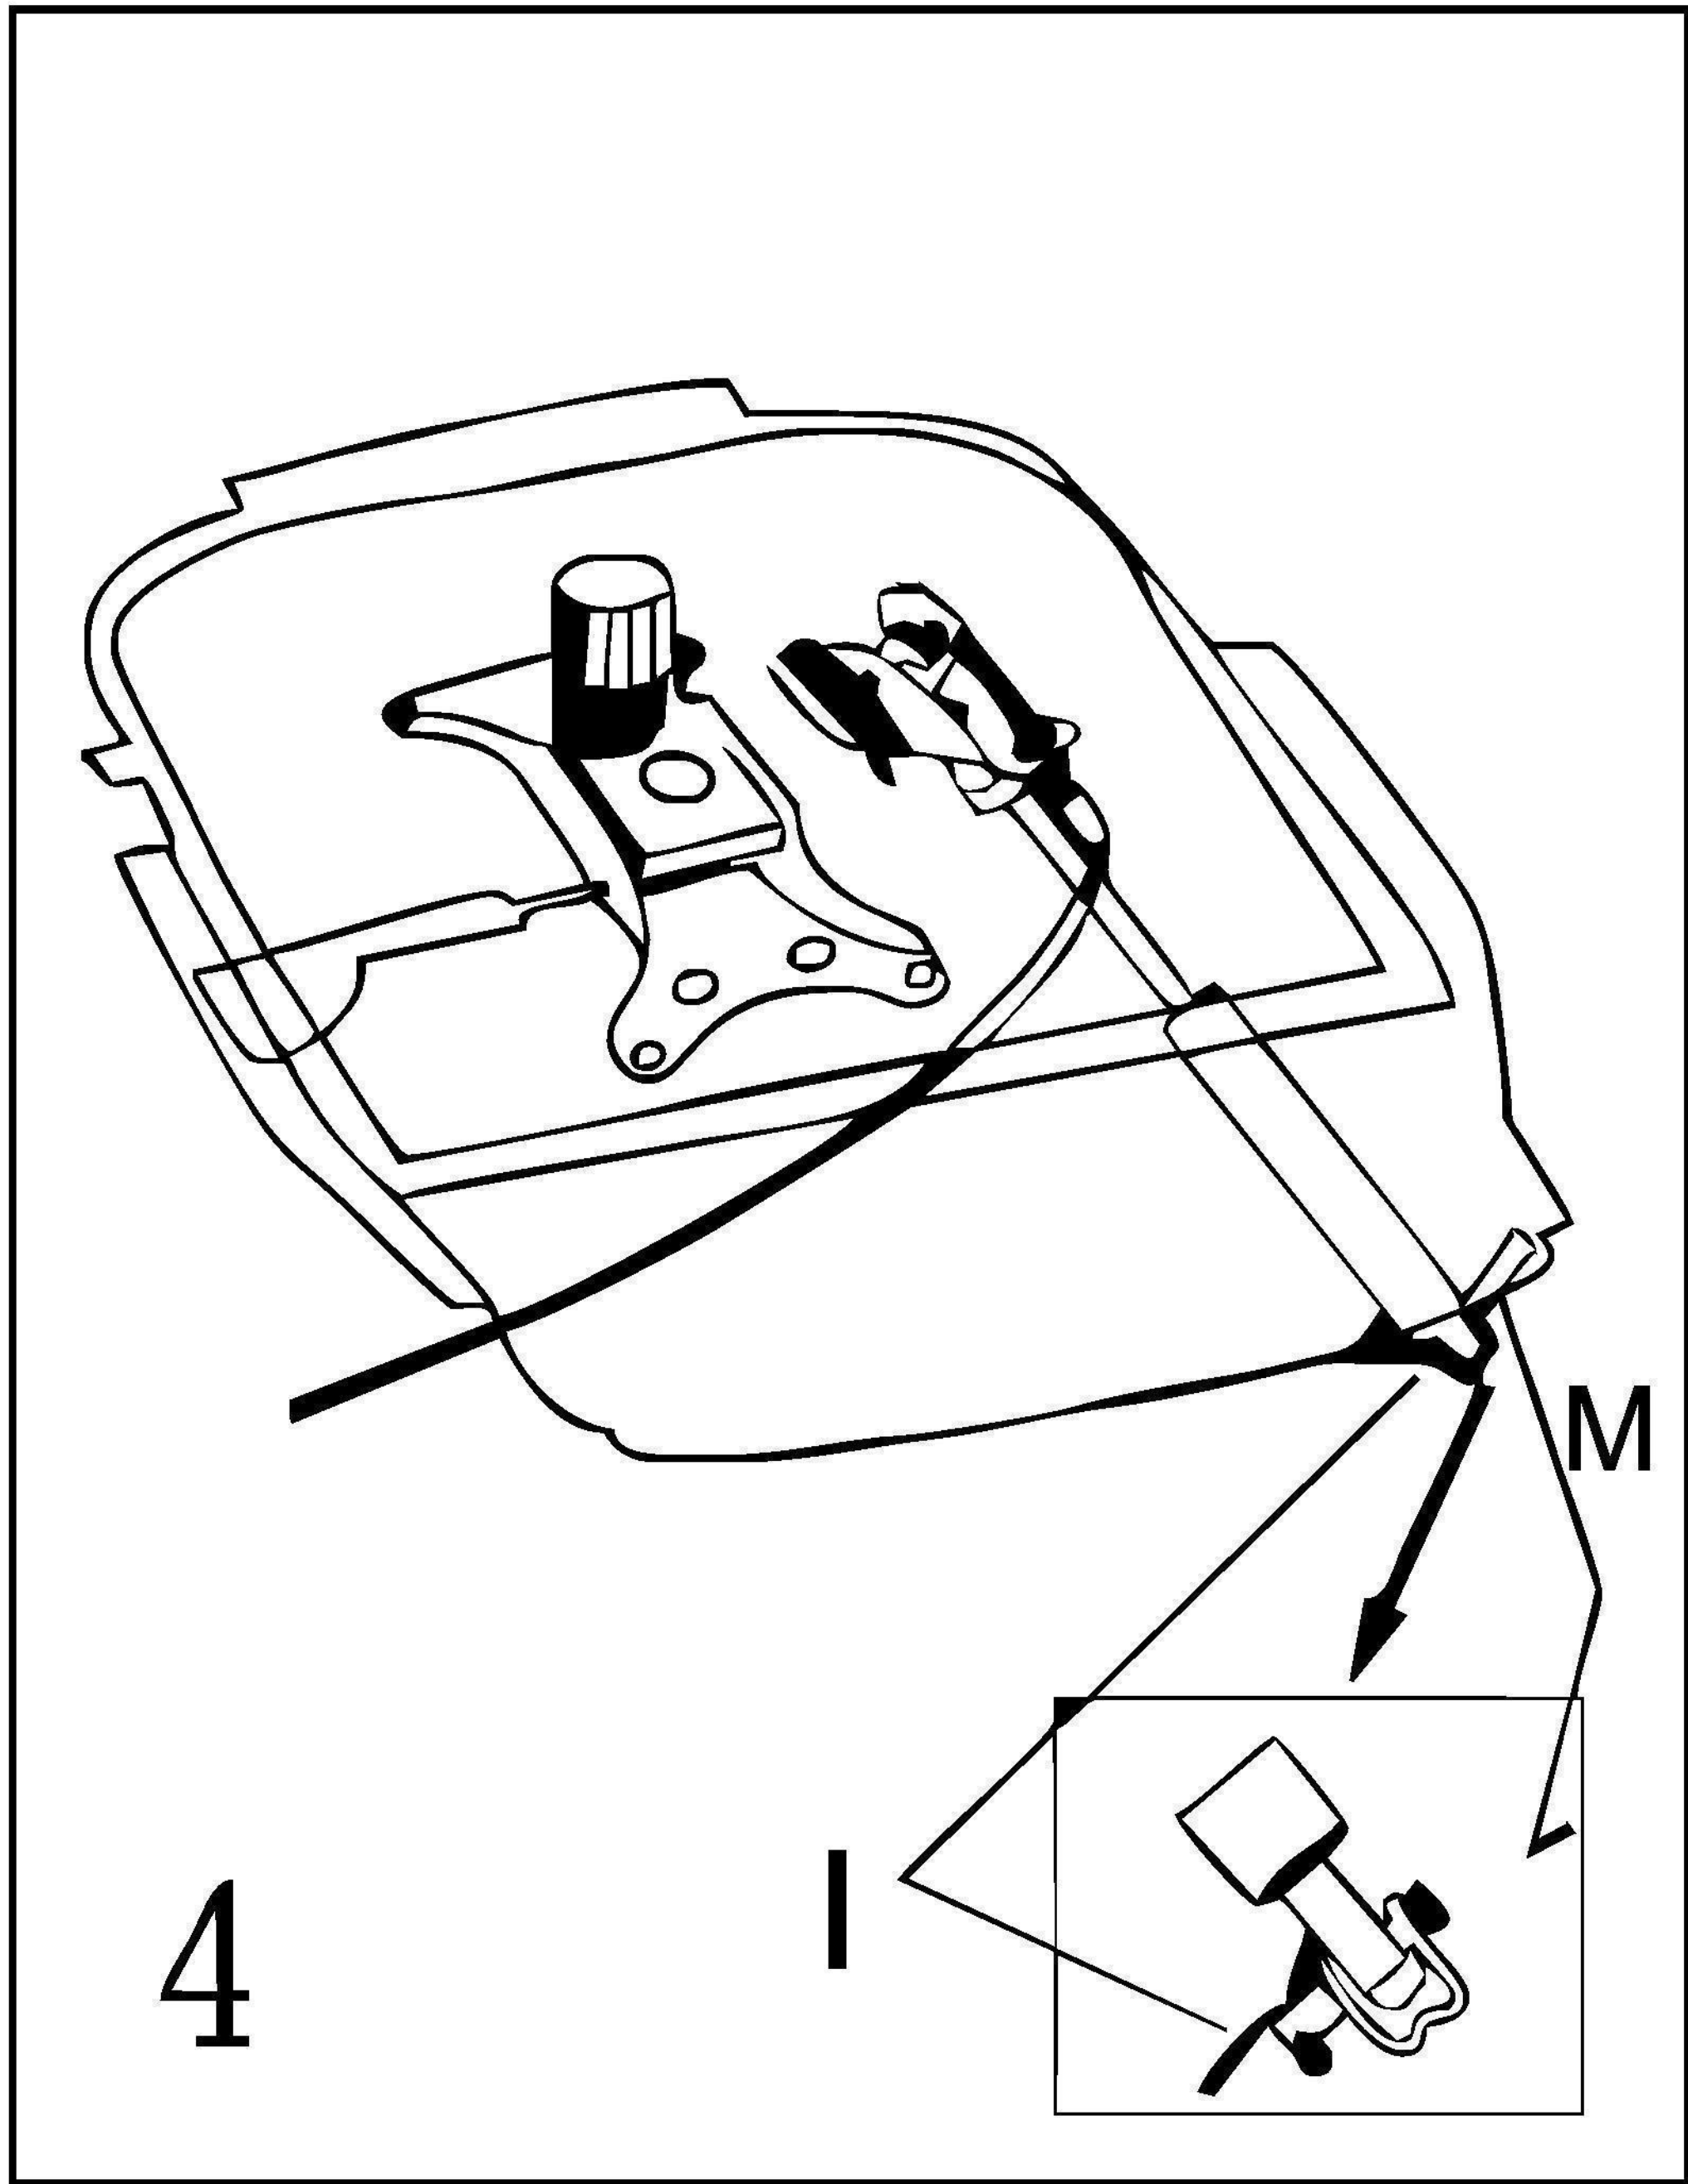
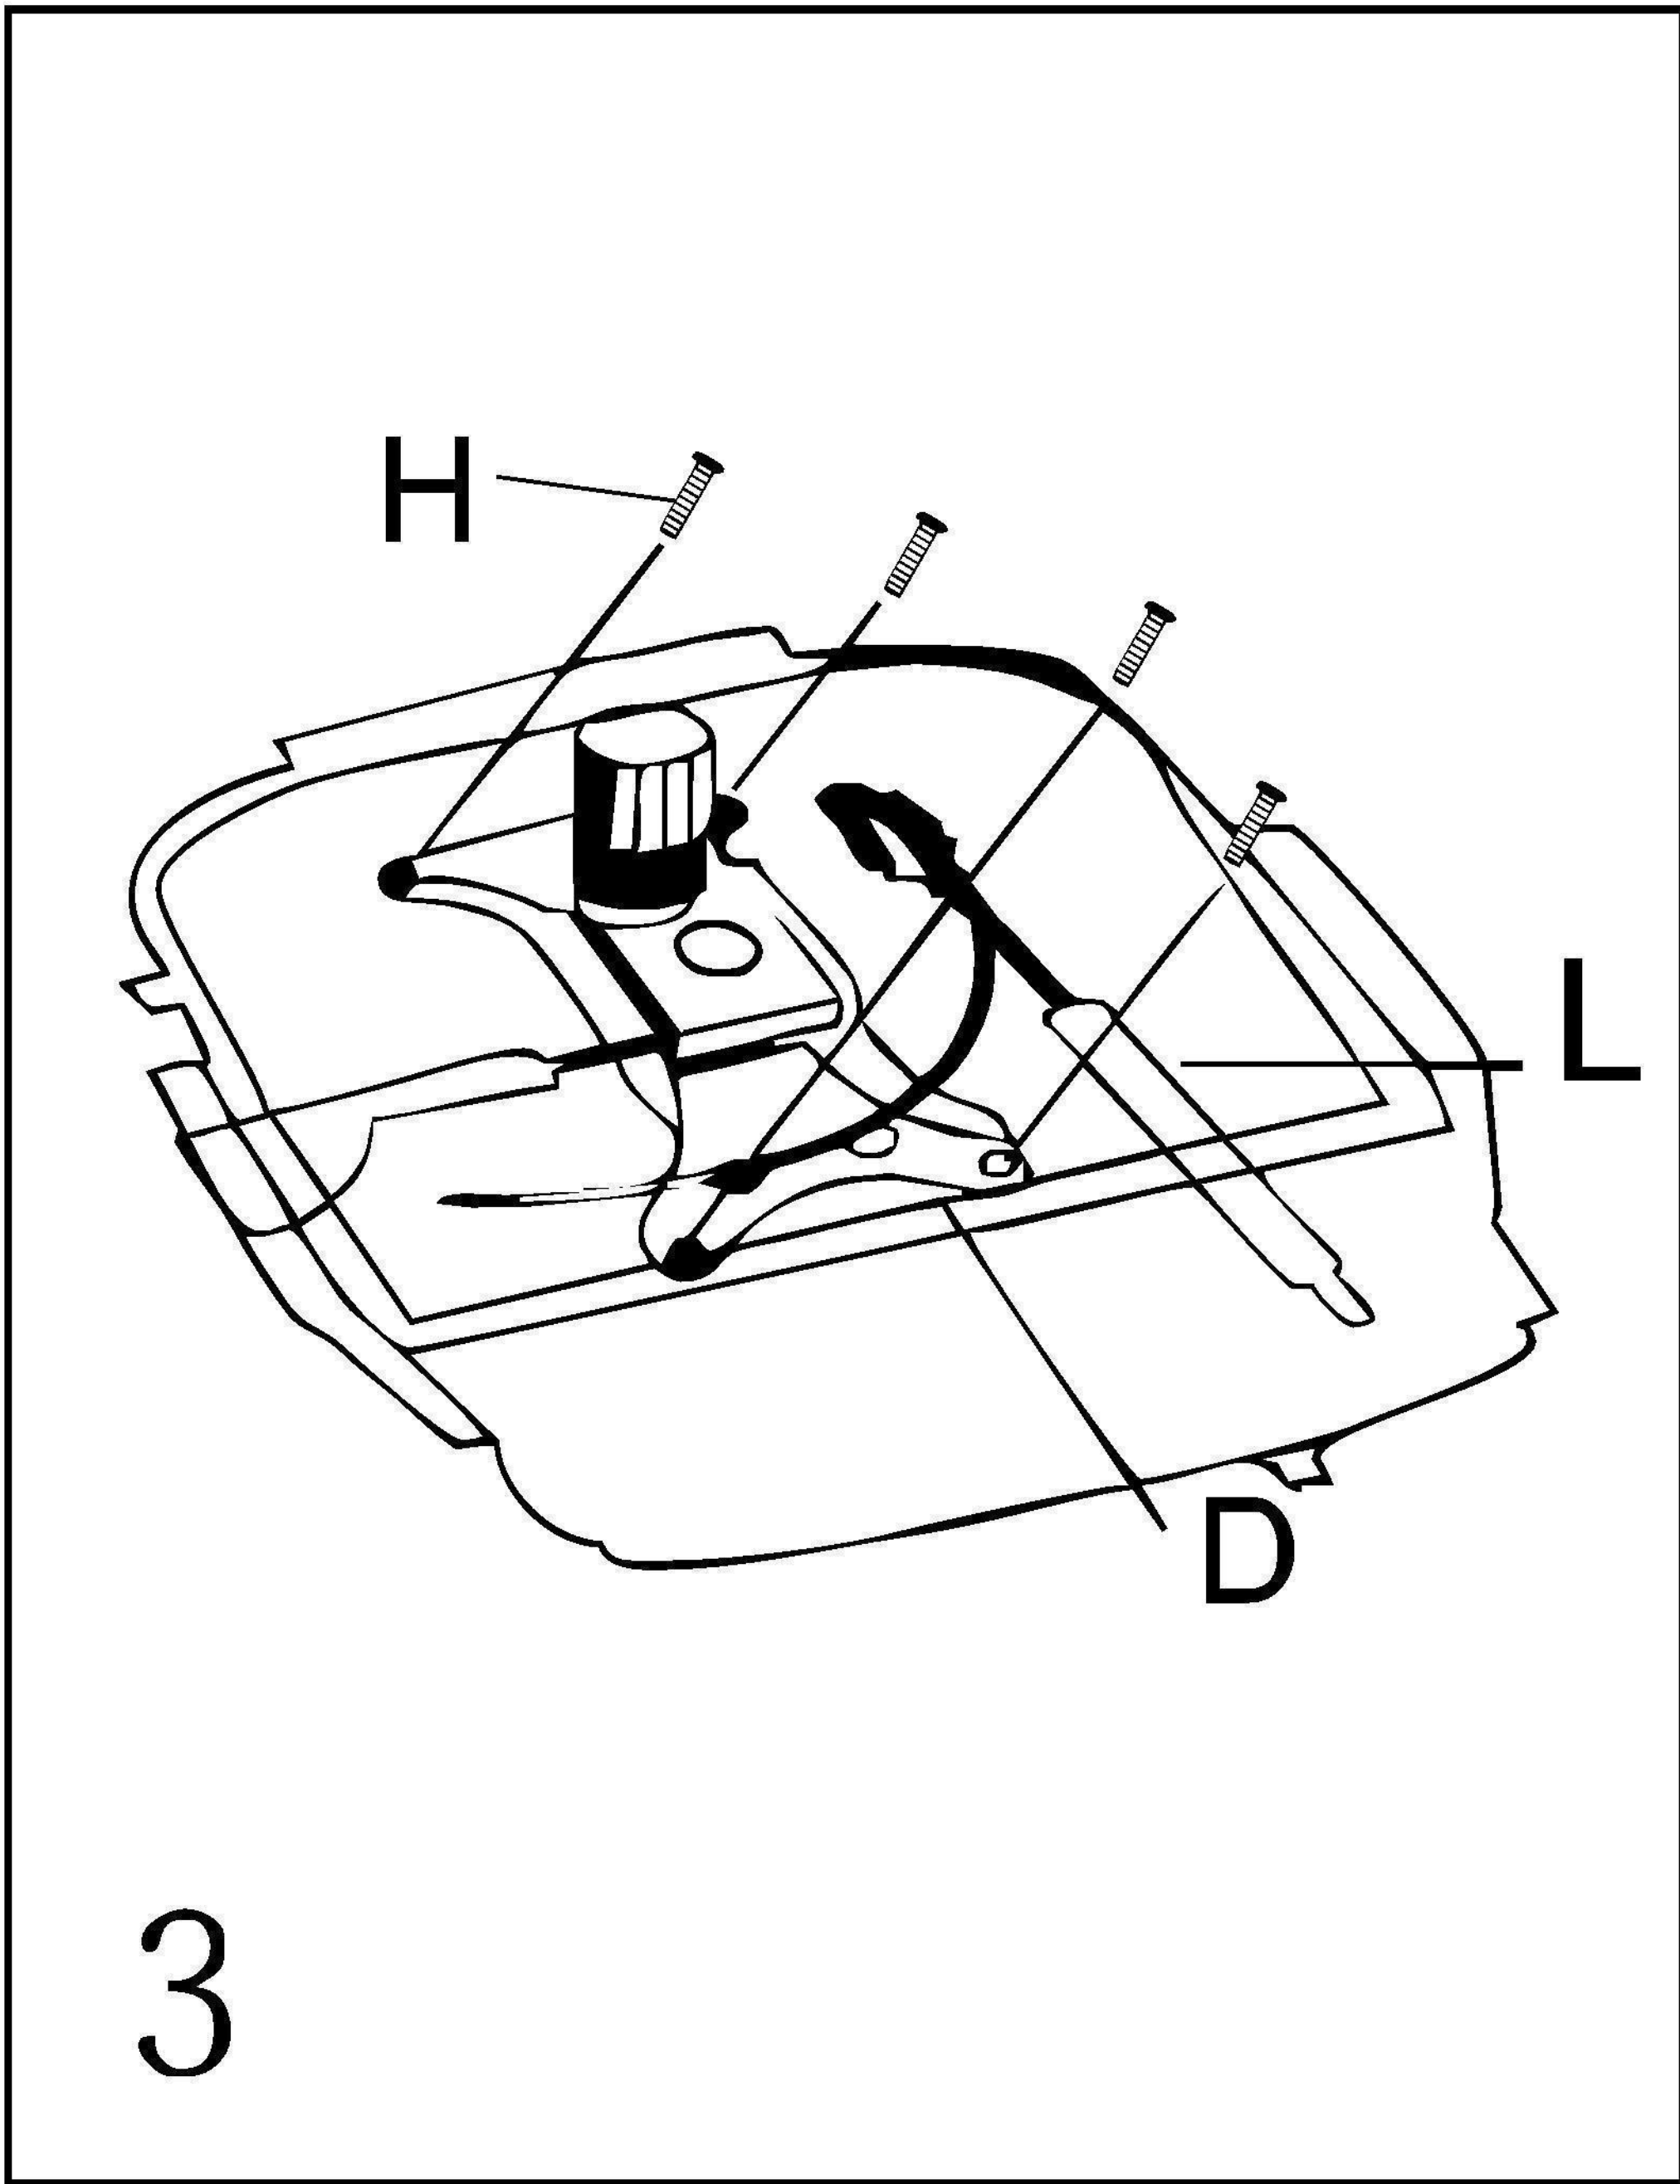
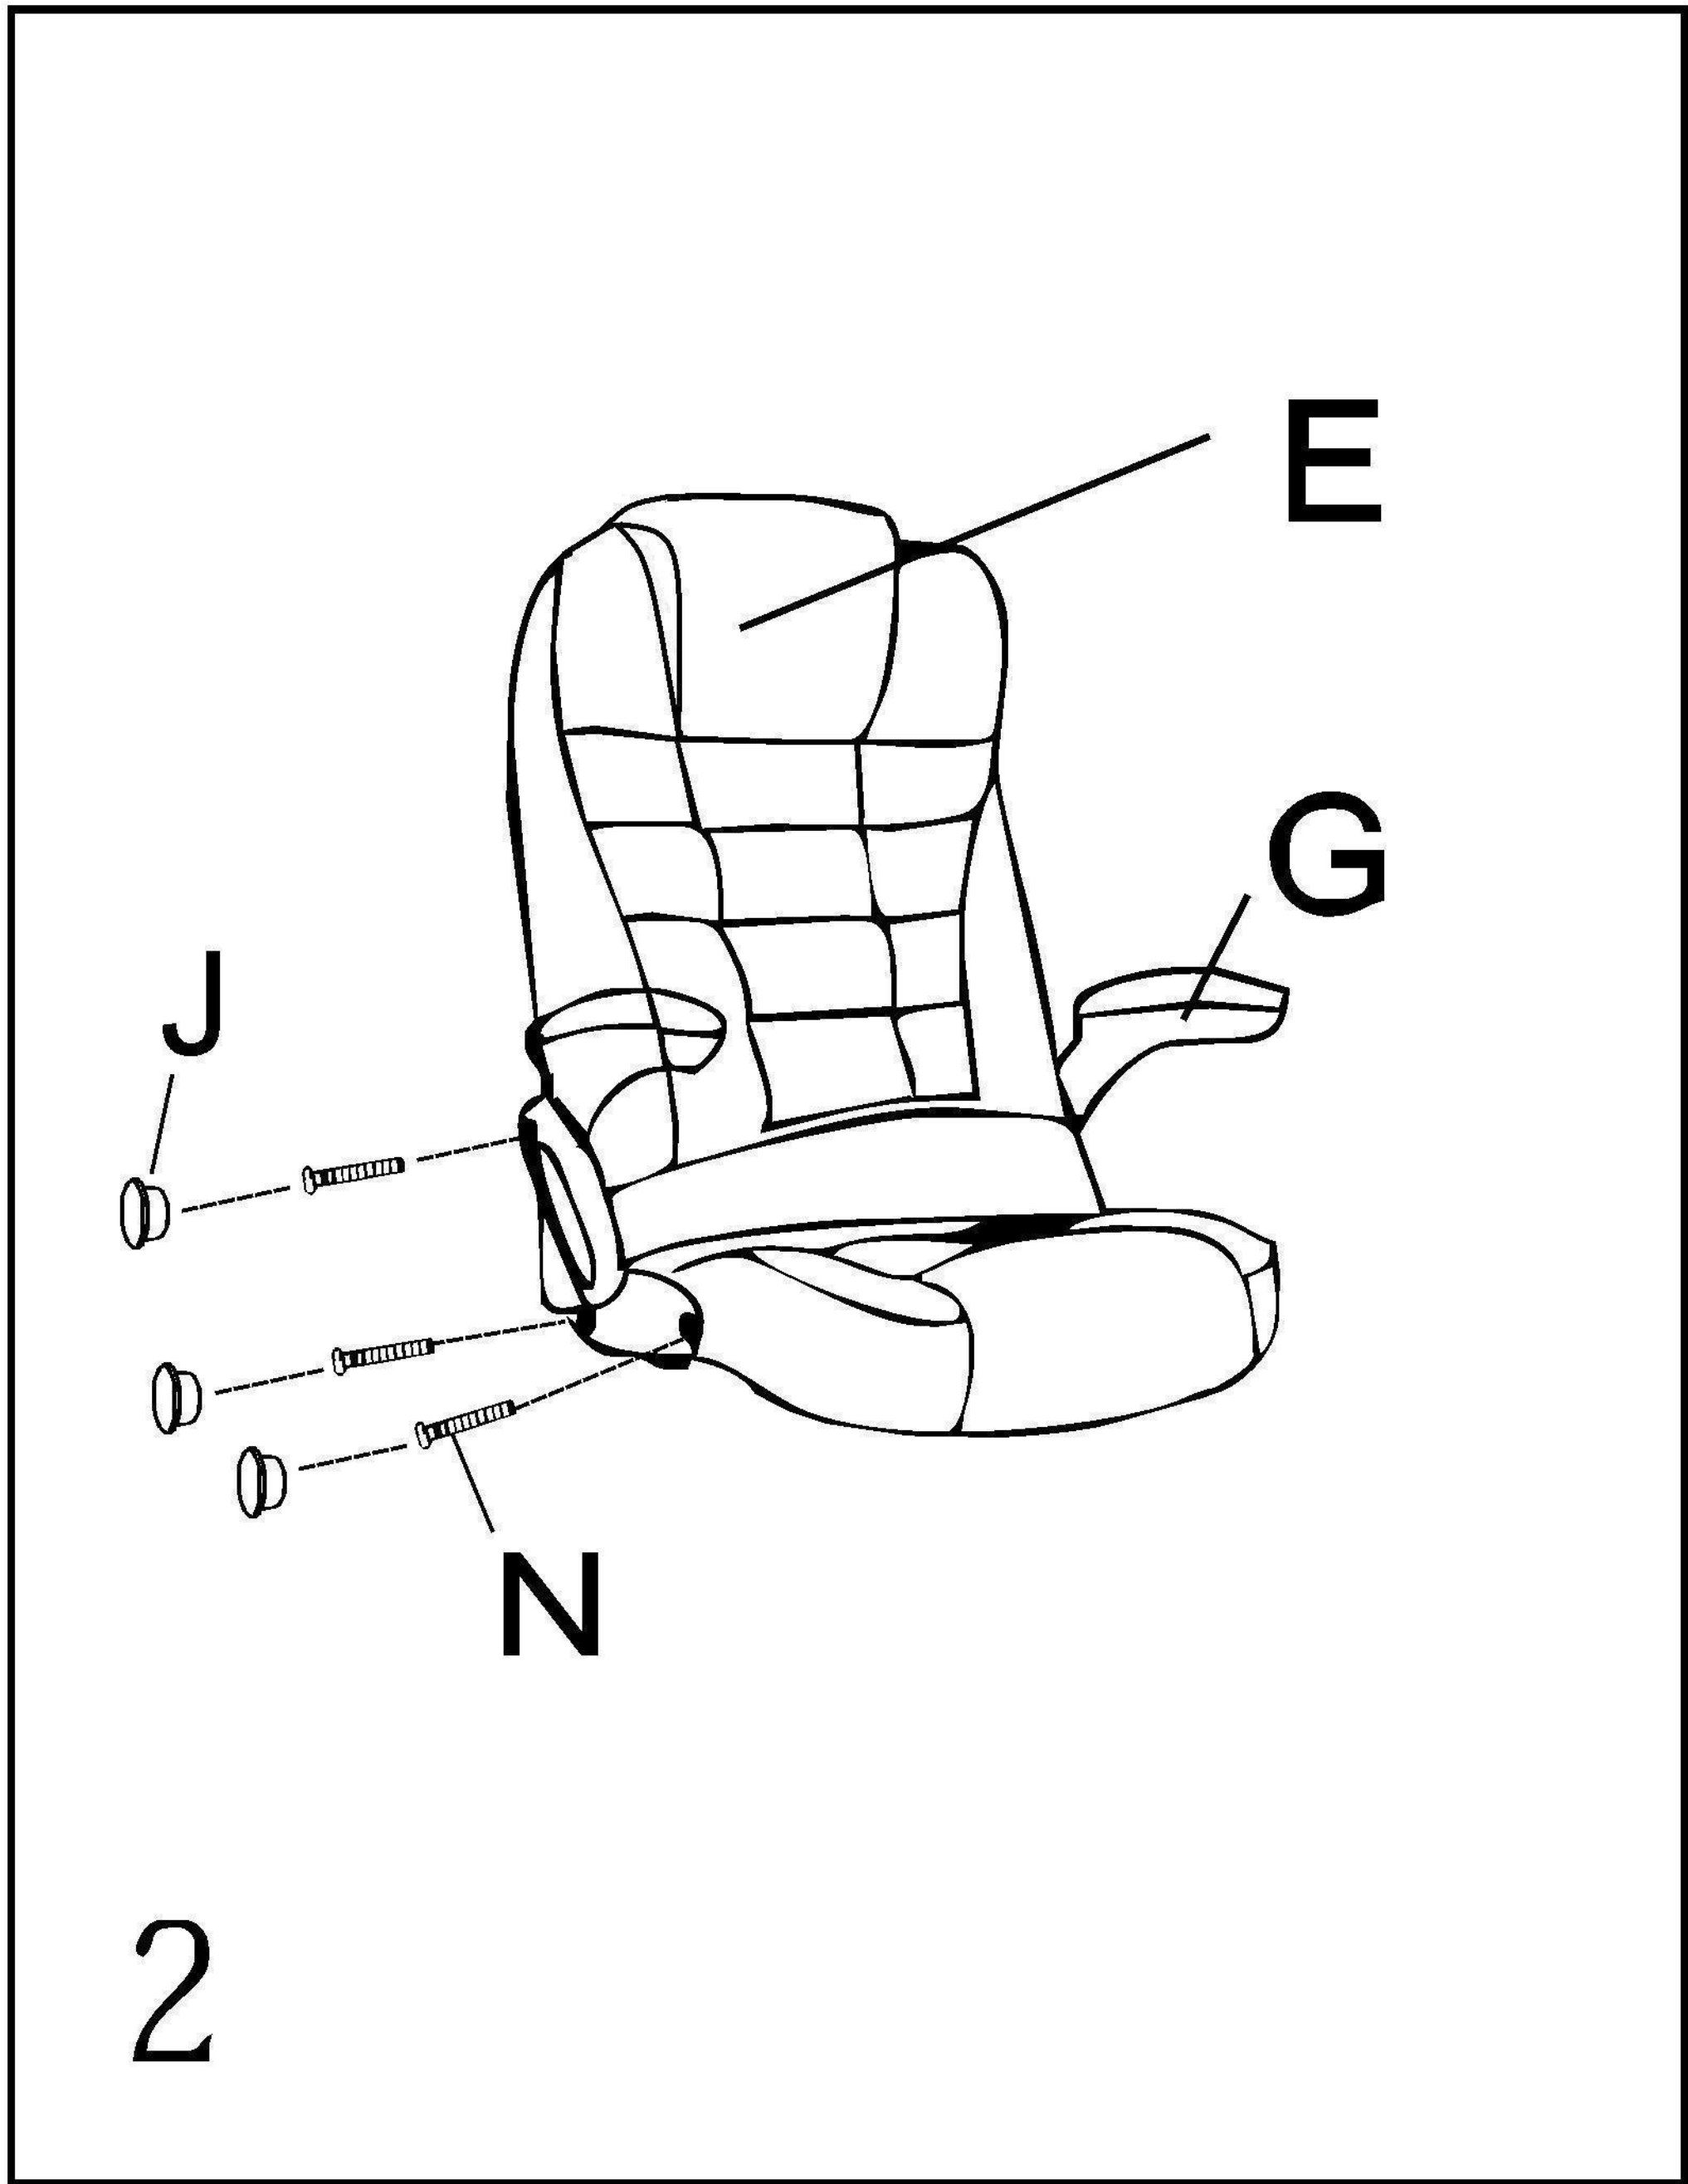



Assembly Instructions

A		5
B		1
C		1
D		1
E		1
F		1

G		2
H	 M6X20mm	4
I		1
J		6
K		1
L		1

M		1
N	 8X25mm	6
O		3
P		1
Q		1

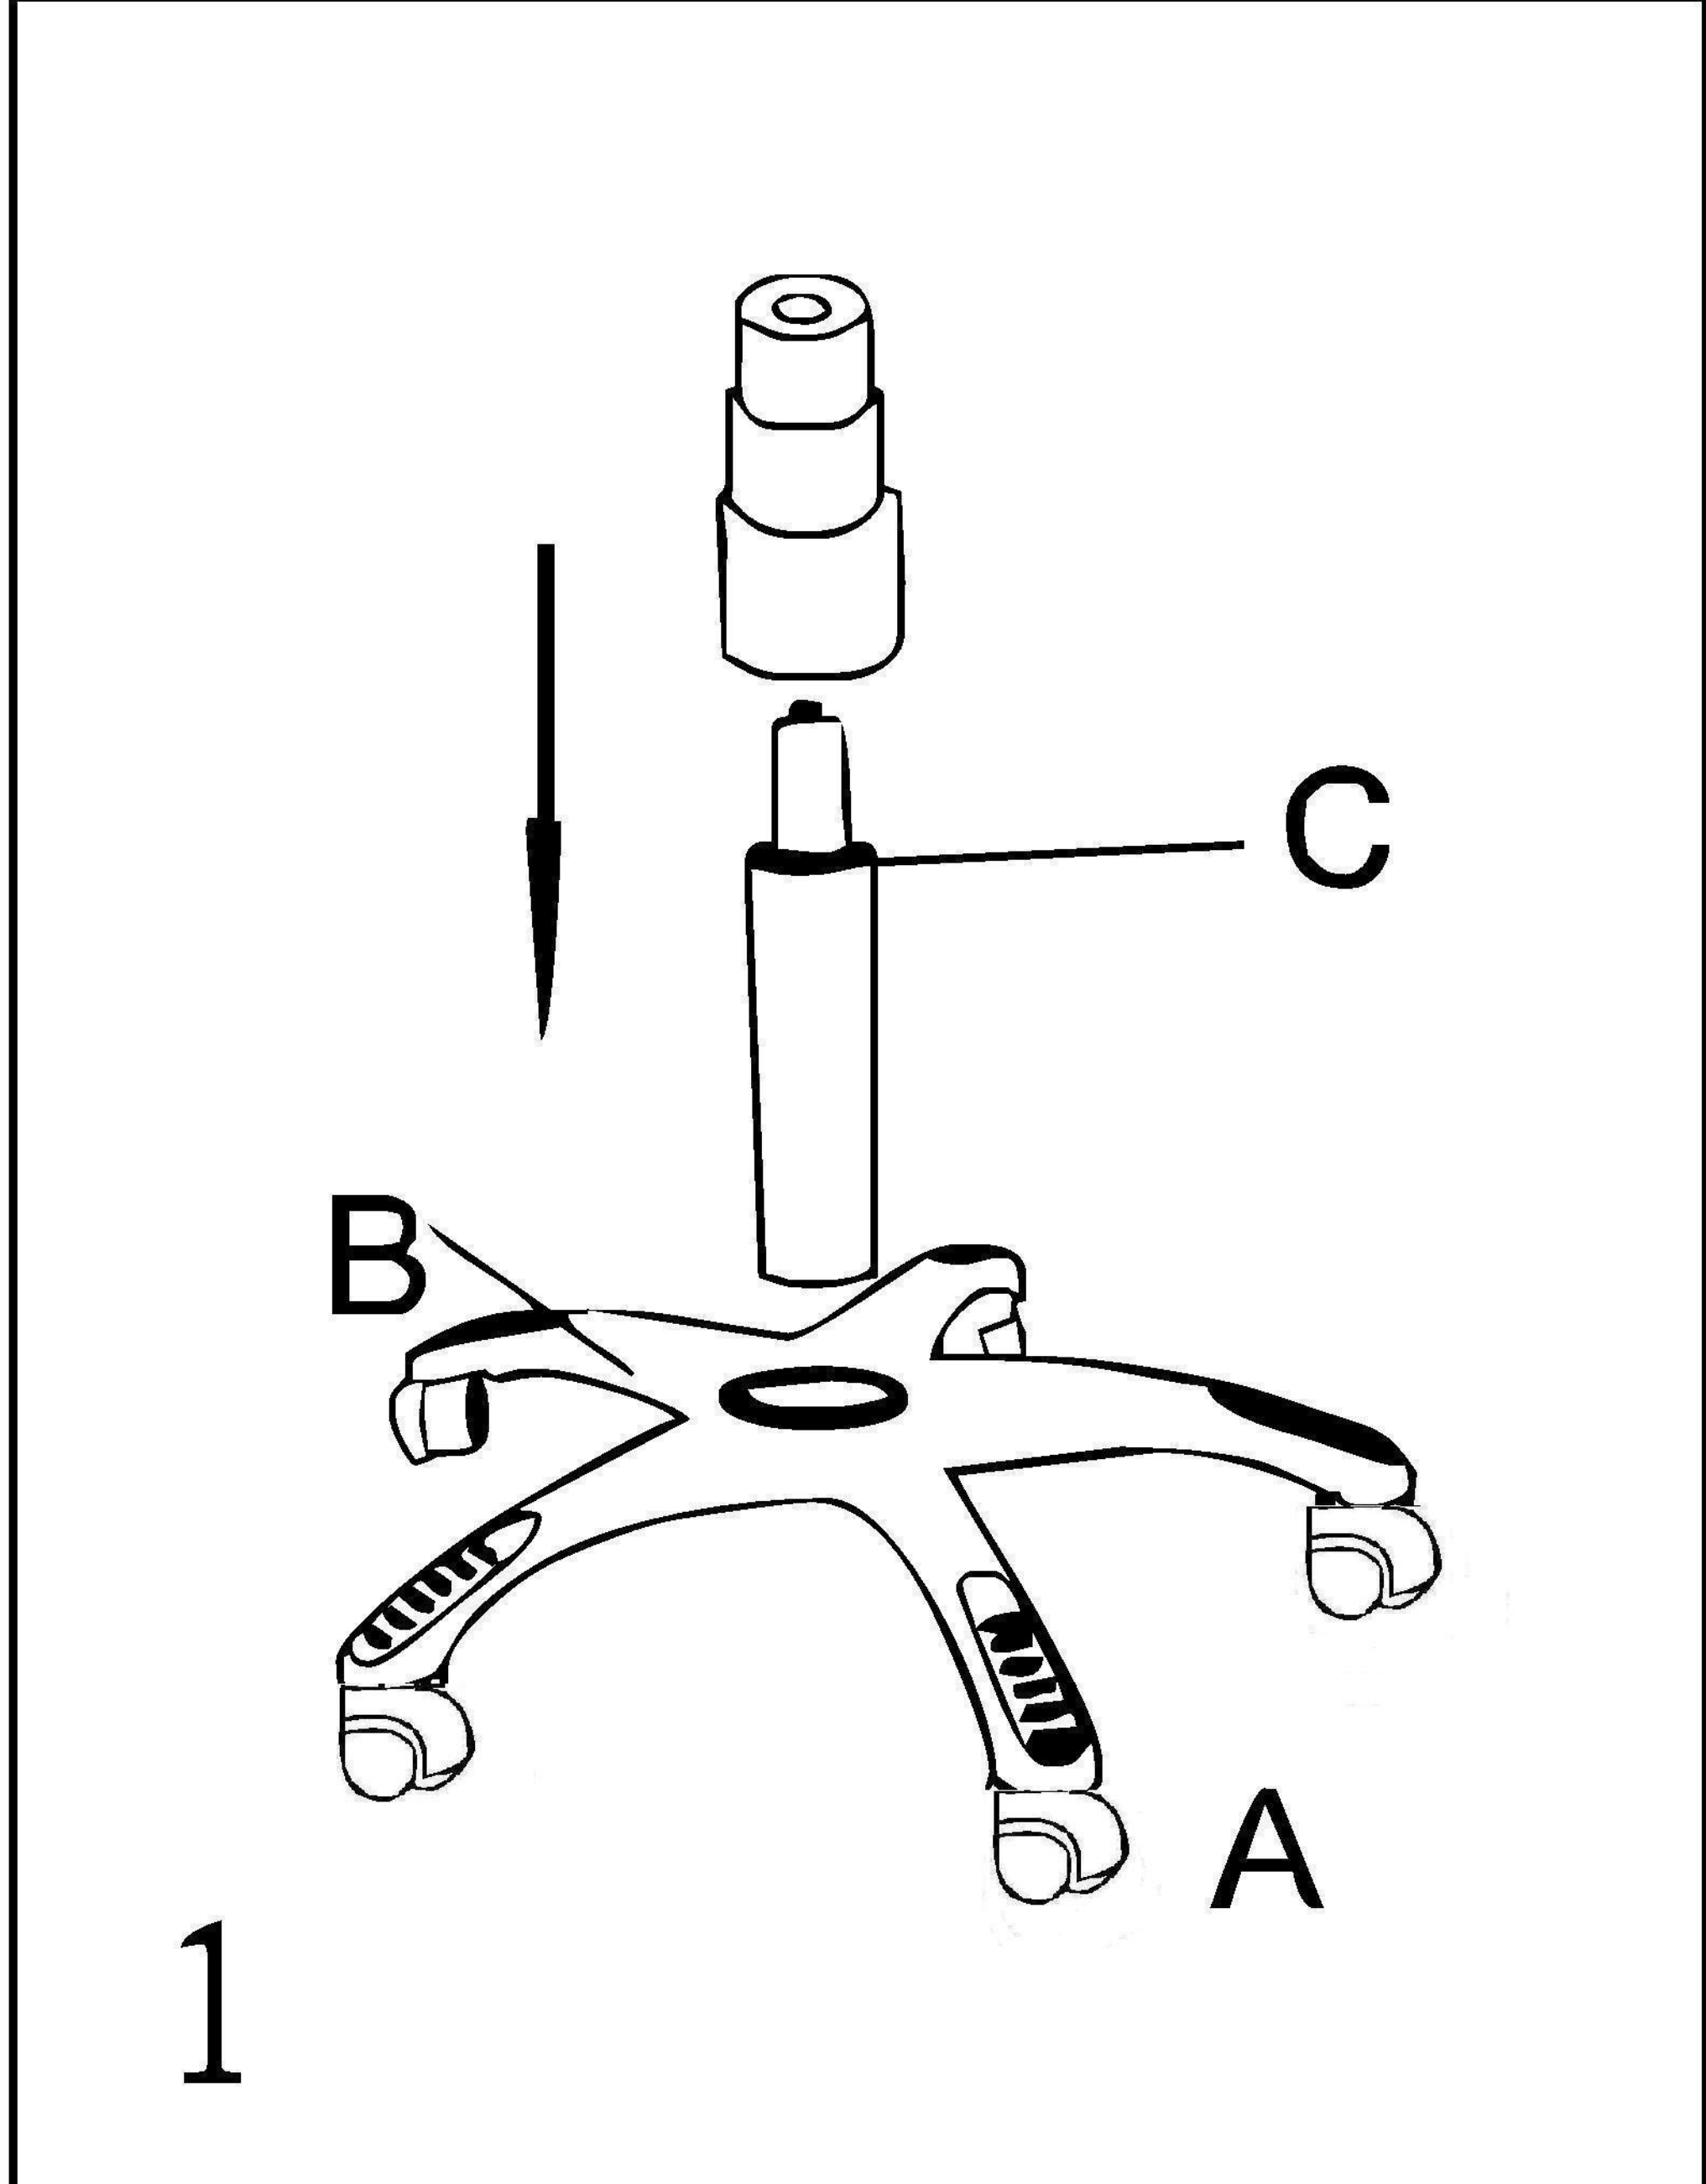

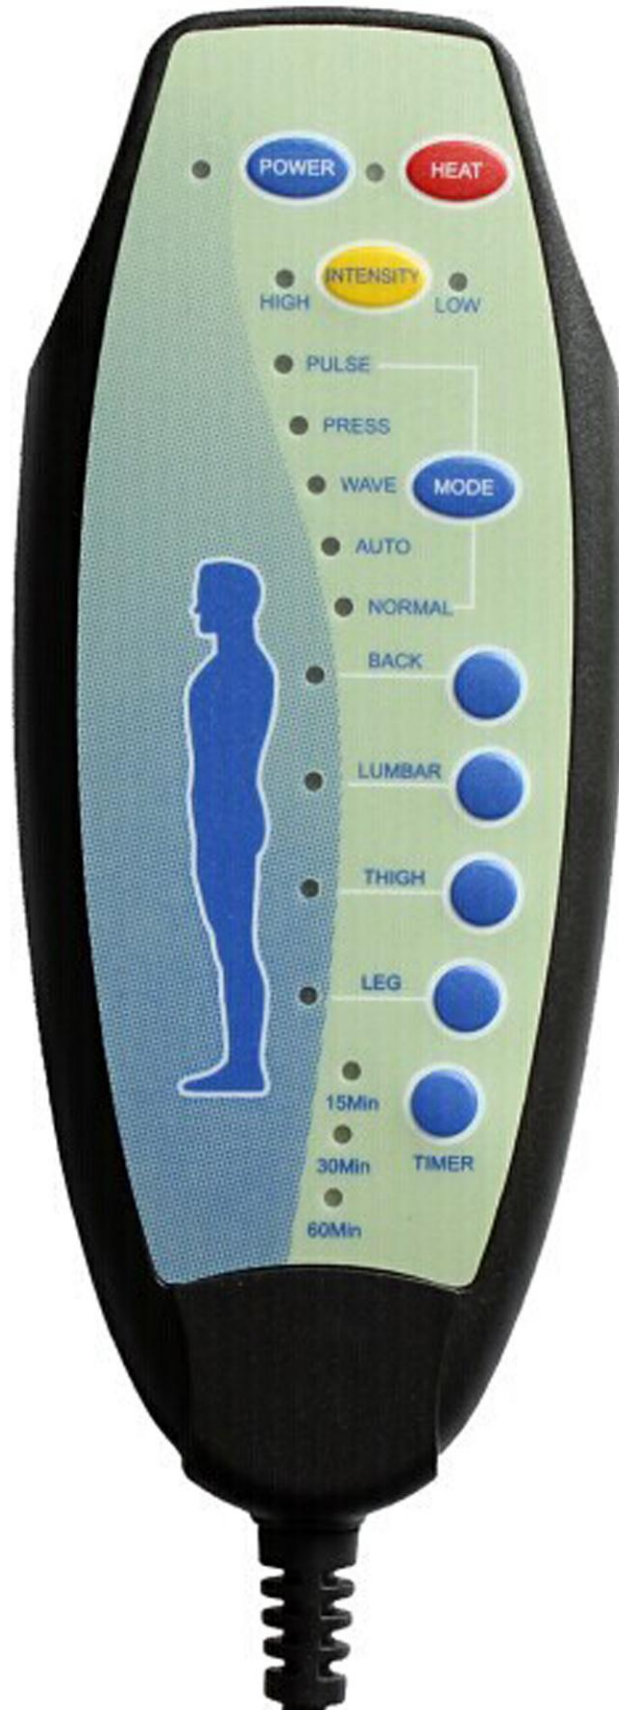

Functional specification

1. Massage mode: five styles (rap/beat/pat/auto/comfortable)
2. Duration time: every 15 minutes 30 minutes 60 minutes, Start the default time is 30 minutes.
3. Massage place: neck/waist/lag/feet.
4. Automatic power-off.
5. Vibration strength: strong and weak
6. Heating function can choose ($60^{\circ}\text{C} \sim 70^{\circ}\text{C}$) , the heating function can control aione.
7. 4 to 12 piece of vibration block are available, 4-way output.
8. The surface language changes with customers' demand.
9. CE/GS/UL/SAA certification is available.
10. All the wire material is standard power cables, assembly unit is plug connection , easy to install and change.

Product operation instruction

Using strong decontamination products is forbidden (such as scrubbing powder, chemical solvent, turpentine, shoe polish or other improper solutions).

Keep a distance of 8-12 inches away from radiating objects, and avoid direct sunshine.

Do not wipe the leather with strong strength. Your office chair needs a good care.

Cleaning & maintenance:

When cleaning, dilute suds is needed for slightly wiping. And use soft cleaning cloth after washing.



Max. load capacity is 75 kg.



Please sit in the middle of the chair plate. Do not incline to front, back, left or right to avoid falling down.



Standing on the chair is forbidden for fear that you may fall down from the chair due to the centre-of-gravity shift.



Rock the chair gently. Strong impact on tilt mechanism will make you fall down.



Do not hit the chair by hard objects or scratch the leather's surface by edge tools.



Tighten the screws every three month especially the joint point between back and seat for safer use



For these chairs with reclining function please ensuring lock the tilt mechanism (push in the handle bar) as figure before you using reclining function



Assembling hints: Align all the screws at the screws holes before fully tighten a screw to decrease the tolerance of assembly