

CONVERTIBLE MEDIA FIREPLACE

CHERRY

 
IVORY

BLACK



 
 

 
 
 
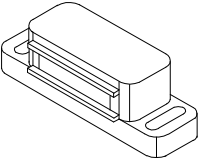 
 
 
 
 
 
 
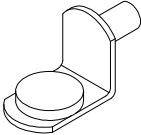 
 
 
BROWN MAHOGANY

GLAZED PINE

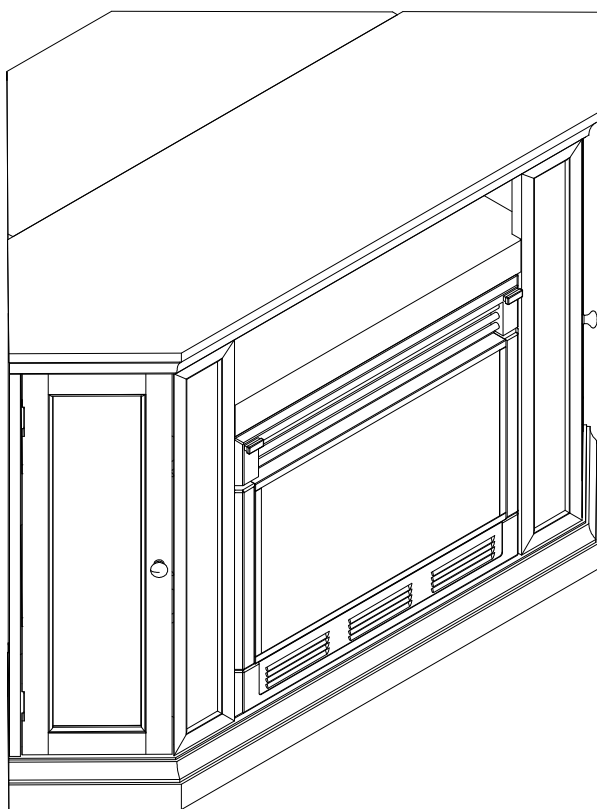Assembly Instructions



 
 
 
 
 
 
 
 

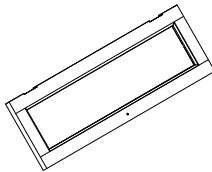 
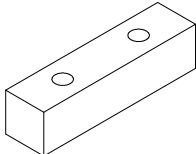 
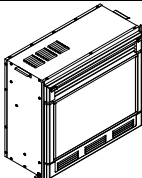 
Please review all parts and hardware before disposing of any packaging.
 Call Customer Service if missing hardware. Do not return to store/retailer.
 Using a screw that is too long will cause damage.
 Before beginning assembly, separate each type of screw. Carefully study the
 screw diagrams below . You may receive extra hardware with your unit.

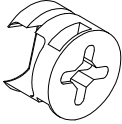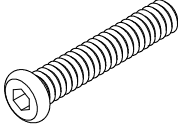A  CAM BOLT Quantity of 22	B  WOOD DOWEL Quantity of 32
C  CAM LOCK Quantity of 22	D  SOCKET HEXAGON BOLT Quantity of 4
E  SPRING WASHER Quantity of 4	F  FLAT WASHER Quantity of 4
G  ALLEN WRENCH Quantity of 1	H  CROSS SOCKET NUT Quantity of 4
I  MAGNET LOCK Quantity of 2	J  MAGNET PLATE Quantity of 2
K  FLAT HEAD SHORT SCREW Quantity of 22	L  FLAT HEAD LONG SCREW Quantity of 8
M  ROUND HEAD SCREW Quantity of 16	N  KNOB Quantity of 2
O  LONG BOLT Quantity of 2	P  SHELF HOLDER Quantity of 16
Q  HINGE Quantity of 4	R  COVER Quantity of 22

CONVERTIBLE MEDIA FIREPLACE

Parts List

Please review all parts and hardware before disposing of any packaging.
 Call Customer Service if missing hardware. Do not return to store/retailer.
 Screws shown in actual size. Using a screw that is too long will cause damage.
 Before beginning assembly, separate each type of screw. Carefully study the
 screw diagrams below . You may receive extra hardware with your unit.

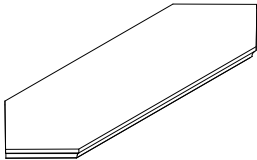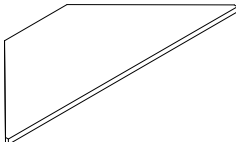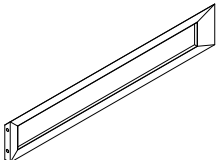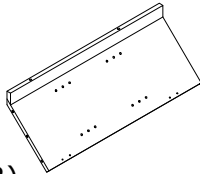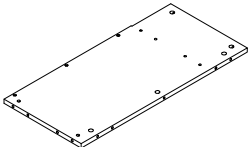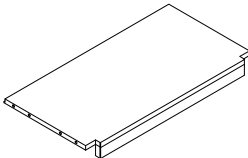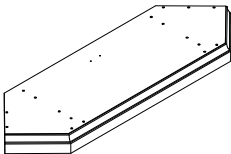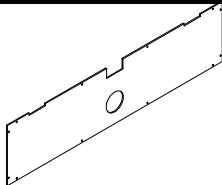 
(1)  TOP PANEL Quantity of 1	(2)  CORNER TOP PANEL Quantity of 1
(3)  FRONT SIDE PANEL (L/R) Quantity of 2	(4)  SIDE PANEL (L/R) Quantity of 2
(5)  MIDDLE PARTITION PANEL (L/R) Quantity of 2	(6)  SHELF PANEL Quantity of 1
(7)  BASE Quantity of 1	(8)  BACK PANEL Quantity of 1
(9)  ADJUSTABLE SHELF PANEL (L/R) Quantity of 4	(10)  DOOR (L/R) Quantity of 2
(11)  INSERT FIXED BAR Quantity of 1	(12)  INSERT (sold in a separate carton) Quantity of 1

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth.
 Periodically apply furniture wax to renew
 the finish . Avoid rubbing or scratching the
 surface with rough or abrasive objects.

For replacement parts or questions, please
 Call Customer Service. Do not return
 product to store, please call Manufacturer
 for assistance, questions or Parts.

Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



CONVERTIBLE MEDIA FIREPLACE

Assembly Instructions

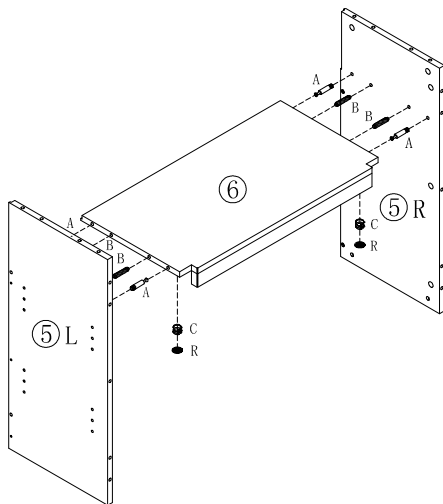 


Figure 1

INSERT(A)CAM BOLT &(B)WOOD DOWEL TO THE RELATED HOLES,THEN USE (C) CAM LOCK TO CONNECT (5) SUPPORT PANELS&(6) SHELF PANEL. FINALLY PLACE (R) COVER IN CAM LOCK.

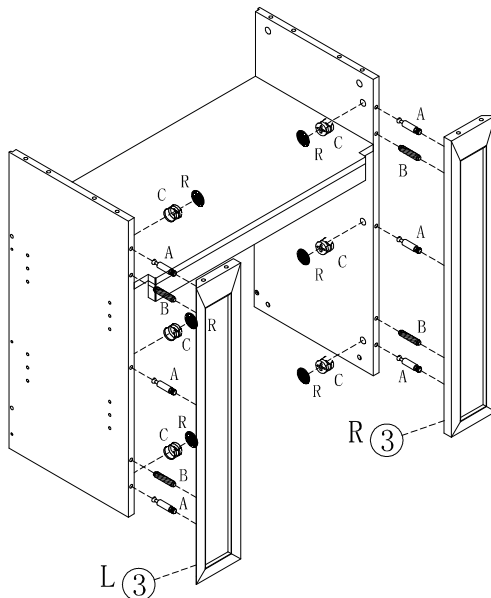 


Figure 2

INSERT(A)CAM BOLT &(B)WOOD DOWEL TO THE RELATED HOLES,THEN USE (C) CAM LOCK TO CONNECT (3)FRONT SIDE PANEL FINALLY PLACE (R) COVER IN THE CAM LOCK.

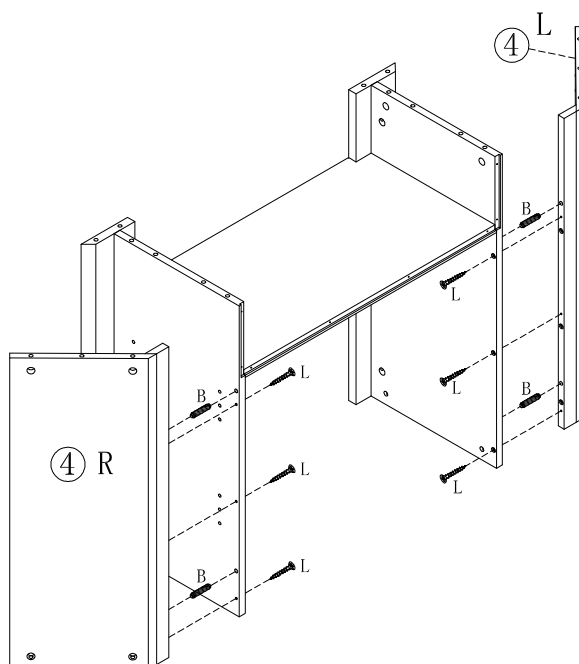 


Figure 3

INSERT (B) WOOD DOWEL TO THE RELATED HOLES ,THEN USE (L) WOOD SCREW TO CONNECT (4) SIDE PANEL.

CONVERTIBLE MEDIA FIREPLACE

Assembly Instructions

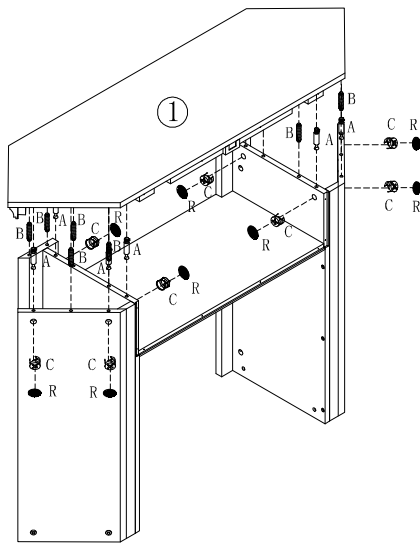 


Figure 4

INSERT(A)CAM BOLT &(B)WOOD DOWEL TO THE RELATED HOLES,THEN USE (C)CAM LOCK TO (1) CONNECT TOP PANEL . FINALLY PLACE (R) COVER IN CAM LOCK.

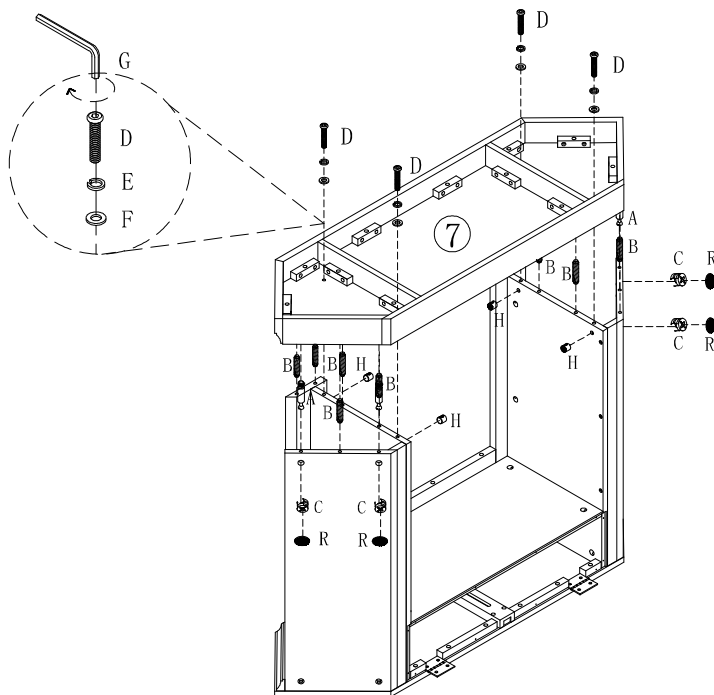 


Figure 5

INSERT(A)CAM BOLT &(B)WOOD DOWEL TO THE RELATED HOLES,THEN USE (C) CAM LOCK TO CONNECT (7) BASE . INSERT(D) SOCKET HEXAGON BOLT TO THE RELATED HOLES THROUGH(E) SPRING WASHER& (F)FLAT WASHER,THEN PLACE (R) COVER IN THE CAM LOCK .

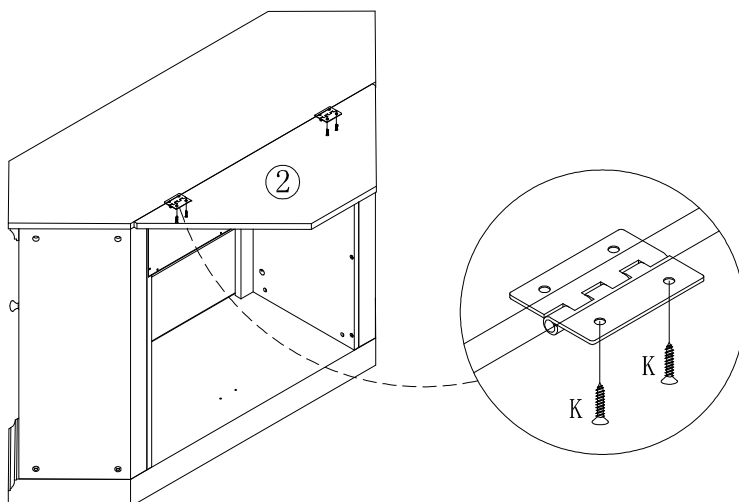 


Figure 6

USE (K) WOOD SCREW TO CONNECT (2) CORNER TOP PANEL. (HINGES SHOULD ON BE ON THE BOTTOM OF TOP PANEL)

CONVERTIBLE MEDIA FIREPLACE

Assembly Instructions

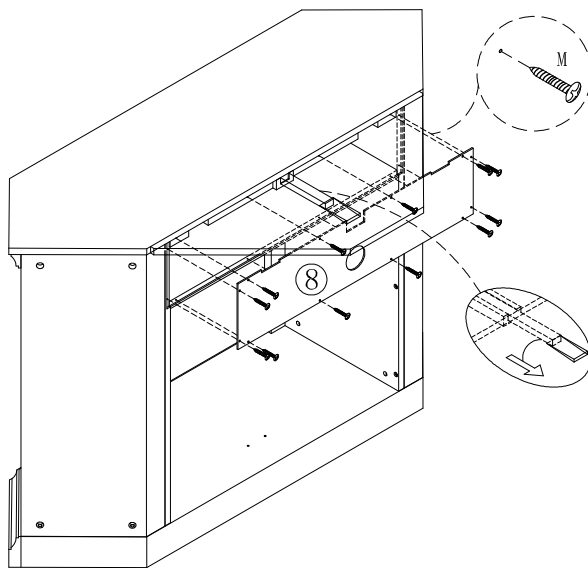 


Figure 7

USE (M) WOOD SCREW TO
CONNECT (8) UPPER BACK
PNAEL .

 
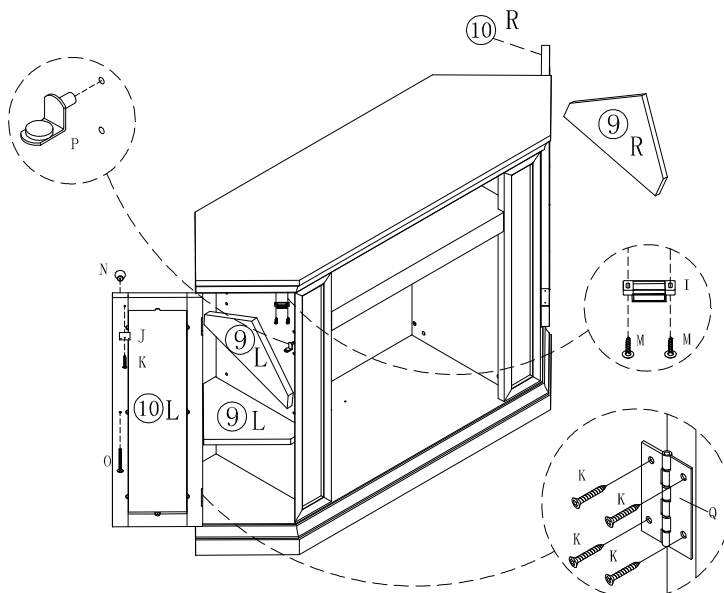 


Figure 8

AFTER ASSEMBLE FIGURE(7)
USE (K) WOOD SCREW & (Q)
HINGE TO CONNECT (10)DOORS .
INSERT (P) SHELF HOLDER TO
THE RELATED HOLES, THEN PUT
(9) ADJUSTABLE SHELF PANELS
ON THE (P) SHELF HOLDERS.
THEN USE(M) WOOD SCREW AND
(I) MAGNET LOCK ON THE
RELATED HOLES; USE (K) WOOD
SCREW AND (J) MAGNET PLATE
ON THE RELATED PLACE.
PUT(10) DOOR TO THE RELATED
PLACE ASSEMBLED(N) KNOB TO
THE RELATED PLACE OF DOOR,
LOCK BY(O) LONG BOLT.

Figure 9

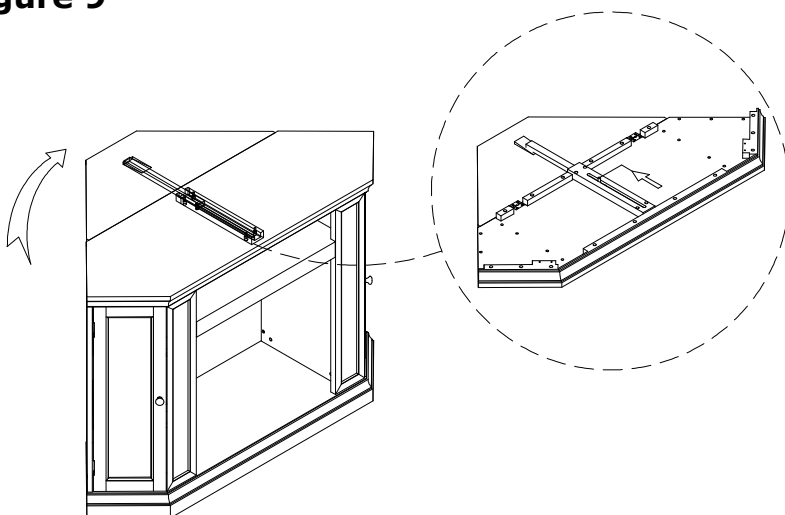

PULL -OUT OF THE WOOD BAR
FORM THE SURPORT WOOD
SLIDE, SO THE CORNER TOP
PANEL WILL KEEP PARALLEL
WITH THE TOP PANEL.

CONVERTIBLE MEDIA FIREPLACE

Assembly Instructions

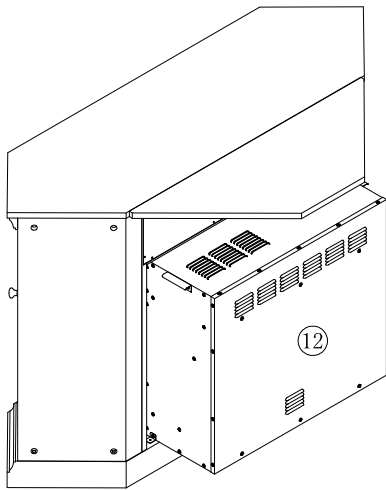 


Figure 10

PUSH (R) INSERT TO THE RELATED PLACE OF MAIN BODY.

 
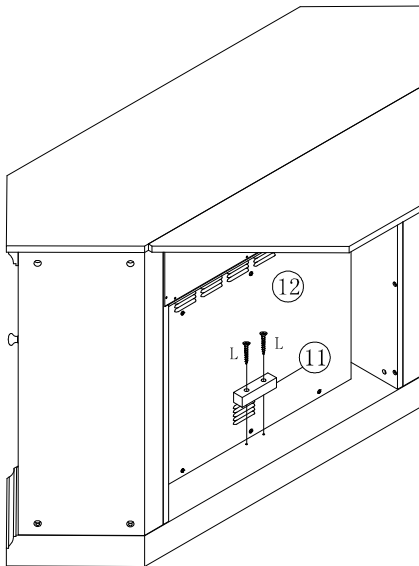 


Figure 11

INSERT THE (L) WOOD SCREW INTO THE RELATED HOLES OF (11) INNER FIXED BAR ,THEN USE SCREWDRIVER TO LOCK IT TIGHTLY.

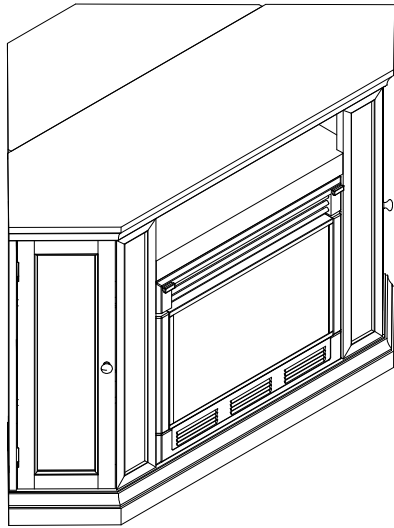

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
----------	--------------	-------------------	-----------------

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing

parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact us if you have product issues or email us. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



CAUTION

The top shelf is intended for a flat screen television with a maximum overall width of 46" and supports up to 85lb.

Each center shelf should not be loaded with more than 20 lb. Each side shelf should not be loaded with more than 10 lb. The extension panel not be loaded with more than 6 LBS.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on under side of top shelf or inside drawer.

Do not allow children under 16 years old to move the cart.

CONVERTIBLE MEDIA FIREPLACE