

## CHANDELIER LIGHT ASSEMBLY/INSTALLATION INSTRUCTIONS

*Please read carefully and save these instructions, as you may need them at a later date.*

### CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

### TOOLS REQUIRED

Philips Screwdriver and Chain Pliers

### ASSEMBLY AND INSTALLATION

1. If SUPPORT ARMS on FIXTURE ASSEMBLY are collapsed when shipped, Carefully separate ARMS by gently and evenly spreading them apart. See Figure 1.
2. Thread NIPPLE A SECURELY onto the COUPLING which located on top of the FIXTURE ASSEMBLY. Slide down TUBE COVER A and tighten it onto the COUPLING with lock nut. Slide TUBE A, TUBE COVER B, ADAPTER A, TUBE COVER C, TUBE B, TUBE COVER D and ADAPTER B down along wires and secure them with ADAPTER LOCK RING and FIXTURE LOOP (Carefully pulling excess wire through FIXTURE LOOP).
3. Locate the CROSSBAR and secure to JUNCTION BOX with (2) JUNCTION BOX SCREWS. Thread LOCK NUT A and VIBRATION PROOF WASHER A on top end of the NIPPLE B. Thread the NIPPLE B into the center of the CROSSBAR. Locate LOCK NUT B and thread onto bottom end of NIPPLE B. Tighten LOCK NUT A against CROSSBAR with pliers until snug.
4. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open (See Figure 2). Attach one end of chain to FIXTURE LOOP. Unravel FIXTURE WIRES and GROUND WIRE and pass through FIXTURE CHAIN alternating links at every 3 inches. Proceed to pull the fixture wires through the following mounting components: 1) CANOPY LOCK RING, 2) CEILING CANOPY, 3) CANOPY CHAIN LOOP, 4) VIBRATION PROOF WASHER B.
5. MAKE ELECTRICAL CONNECTIONS: (We recommend 2 people for the remainder of installation) Position the FIXTURE under the JUNCTION BOX and pass the FIXTURE WIRES and GROUND WIRE through the center of the NIPPLE B. Using WIRE NUTS, Connect the SUPPLY GROUND WIRE to the FIXTURE GROUND WIRE and secure it to the CROSSBAR with GREEN GROUND SCREW; Connect the SUPPLY WHITE WIRE(S) to the FIXTURE WHITE(or RIBBED) LEAD(S); Connect the SUPPLY BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD(S). Wrap all connections with approved electrical tape.
6. With the connections properly made, carefully tuck all wires into JUNCTION BOX. Locate the CANOPY CHAIN LOOP and thread onto the end of the NIPPLE B. Thread LOCK NUT B and VIBRATION PROOF WASHER B down NIPPLE B and tighten against CANOPY CHAIN LOOP. Pull the center hole in the CEILING CANOPY over the CANOPY CHAIN LOOP and secure to ceiling by threading CANOPY LOCK RING onto CANOPY CHAIN LOOP.
7. Put INNER GLASS SHADE(S) into OUTER GLASS SHADE(S) carefully and pull over the SOCKET(S). Thread SOCKET RING(S) onto the end of the SOCKET(S). Hand tighten until snug.
8. Install LIGHT BULB(S) (Sold separately) referring to fixture markings or labels for maximum wattage.
9. Turn on the power at the main fuse or circuit breaker box.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN.**

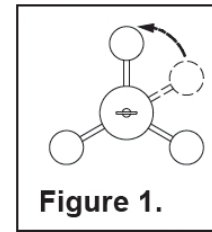


Figure 1.



Figure 2

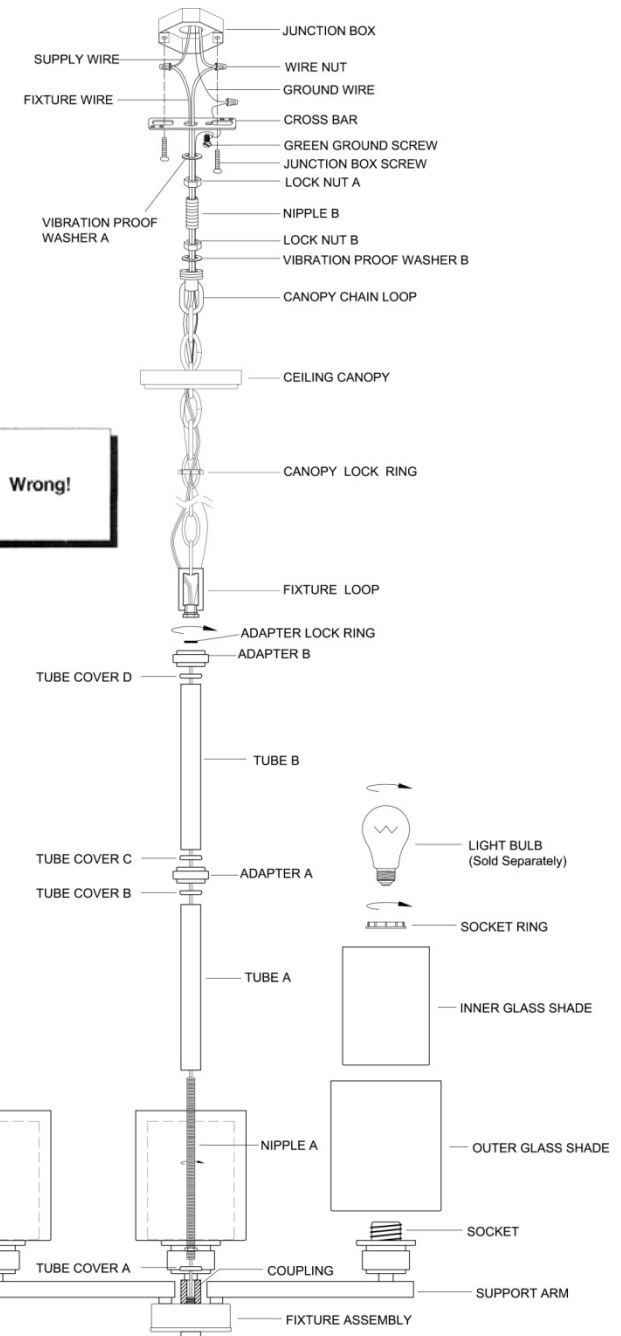


Figure 3.

**Note:** This illustration is based on (3 Lights), the assembly/ installation instructions for (5 Lights) is same as (3 Lights).