
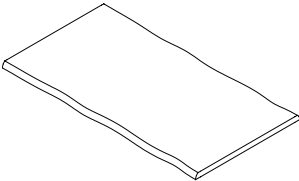
 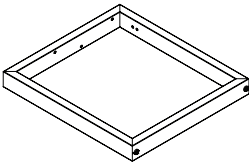
 
 
 
 
 



ASSEMBLY INSTRUCTIONS

78" DINING TABLE


A Top Panel	B Leg	C Support Leg	D Bolt Ø1/4" x 1-1/2" x Ø1/2"
			
1PC	2PCS	4PCS	8PCS
E Bolt 1/4" x 5/8" x Ø1/2"	F Spring Washer Ø2/5" x Ø1/4"	G Flat Washer Ø3/4" x Ø1/4"	H Allen Wrench 4mm
			
16PCS	24PCS	24PCS	1PC

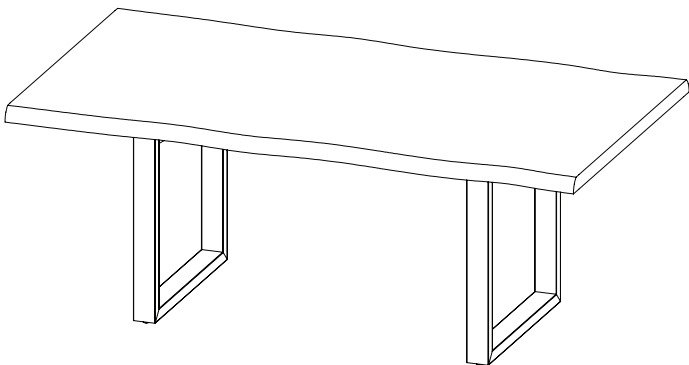


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***Do not tighten screws & bolts until the entire unit is completely assembled.

- 1 Attach the Leg (B) to the Top Panel (A) using Bolt (D), Spring Washer (F) and Flat Washer (G) with the Allen Wrench (H).

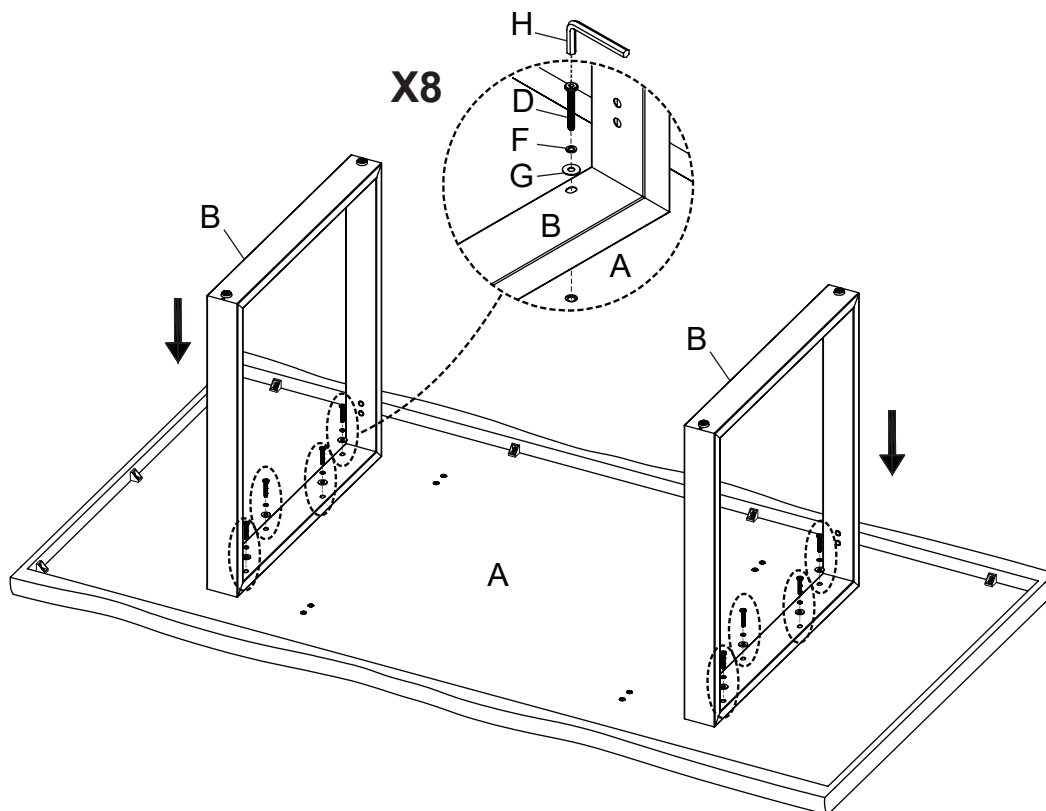

- 2 Attach the Support Leg (C) to the Top Panel (A) and Leg (B) using Bolt (E), Spring Washer (F) and Flat Washer (G) with the Allen Wrench (H).

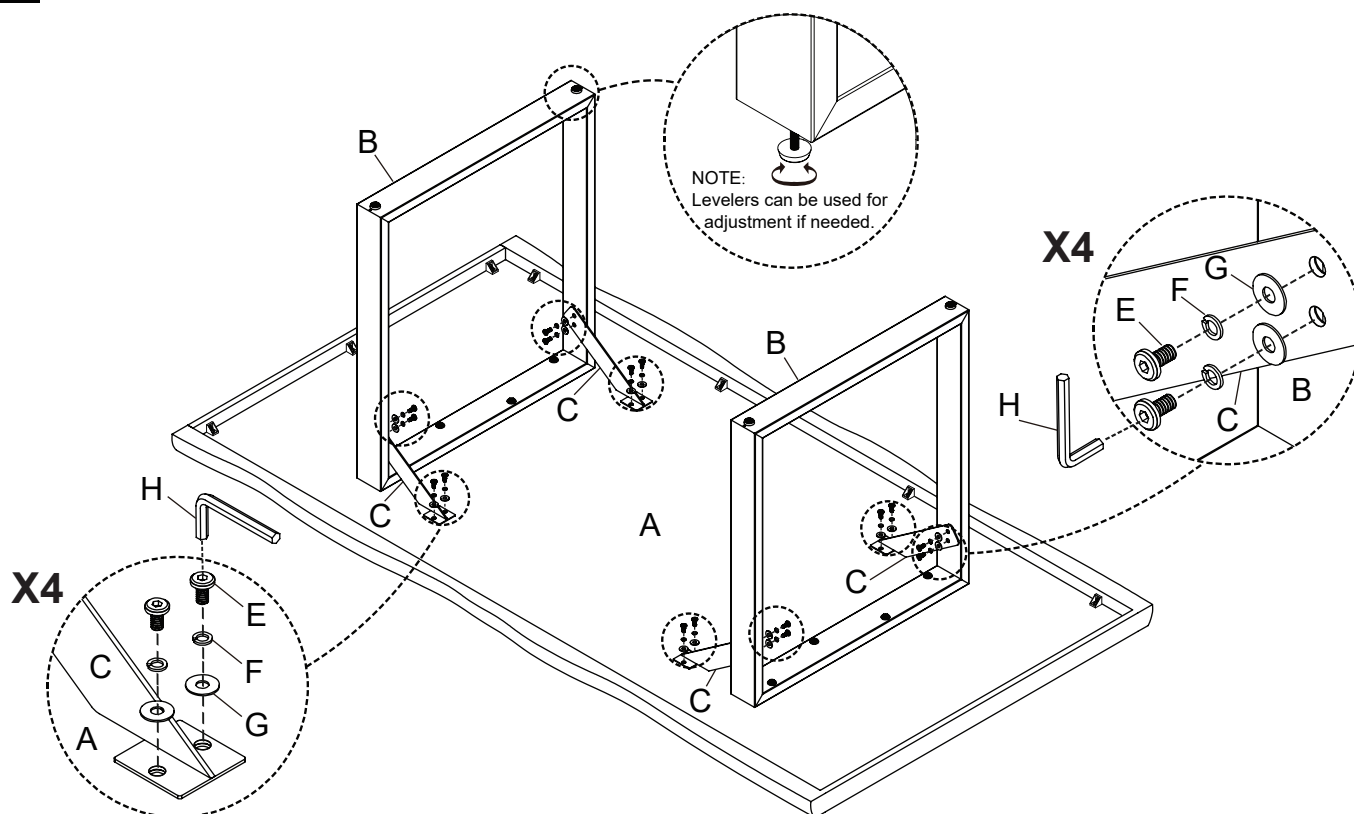

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.