

TV STAND

ASSEMBLY INSTRUCTION



Assembly Instruction

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly



Warning !

- 1.Don't attempt to repair or modify parts are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commerical establishment.

PARTS LIST:

 
A. Top board

1PC




B. Base board

1PC



C. Support box

2PCS

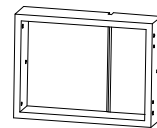

D. Glass

2PCS

 
 






E. Leg

4PCS




HARDWARE LIST:


NO.	DESCRIPTION	FIGURE	QTY
1	M5 ALLEN KEY		1PC
2	M8*50 BOLT		12PCS
3	ø22 SHIM		12PCS
4	ø13 SPRING CHIM		12PCS
5	M4*25 SCREW		8PCS
6	ø8*30 WOOD PLUG		8PCS

ASSEMBLY INSTRUCTION


STEP 1: Attach leg (H) to the bottom of the base board (B). As shown in diagram, insert screw (5) through the holes on the leg.

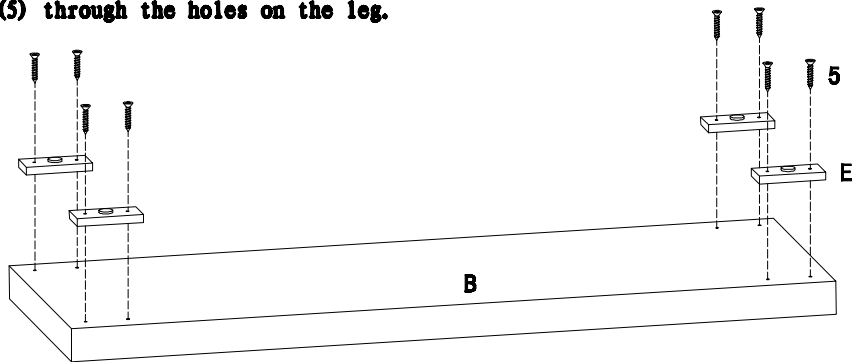

STEP 2: Attach top board (A) onto the top of the base board. As shown in diagram, insert bolt (2), shim (3), spring shim (4), and wood plug through the support box (C). Closely follow the placement of the support box in the diagram.

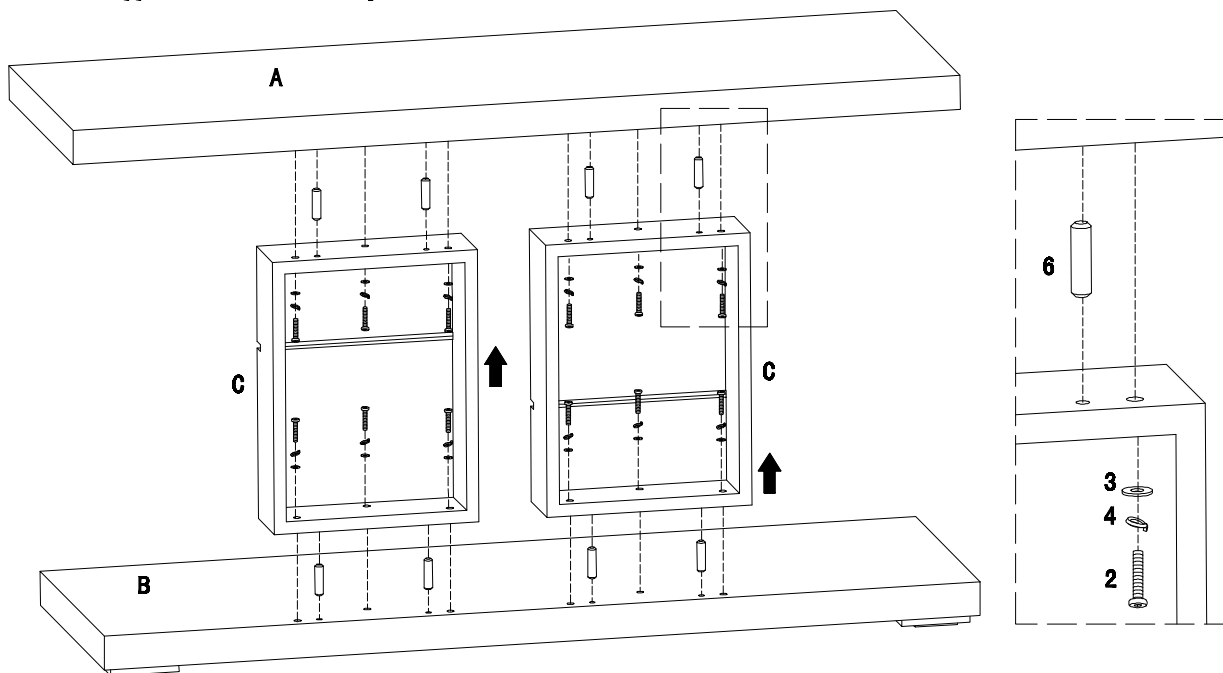

STEP 3: Place glass (D) onto the support box as shown.

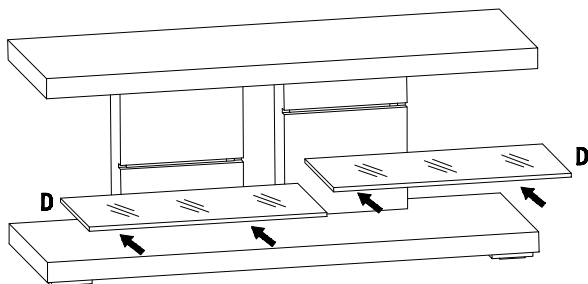

STEP 4

