



Retro Rectangle Rack DR5



If you need assistance, please call 1-877-ENCLUME
Enclume Design Products
 24 Colwell Street, Port Hadlock, WA 98339


Enclosed you will find everything needed for the assembly and use of your pot rack. Two people make assembly and installation easier. The parts and hardware included are:

Hardware included:

- 2 – Ceiling Hooks - Small
- 2 – S Hooks - 2"
- 2 - 6" Chain
- 2 – 5/16" x 7/8" Button head Screws
- 4 – 5/16" x 1/2" Button Head Screws
- 2 – 5/16" Hex Nuts
- 1 - 3/16" Hex Key
- Toggle Kit

Components included:

- 4 – 12" Upright Arms
- 1 – Top Bar
- 2 – Rack Body
- 4 - Grid brackets - EGB
- 12 - Pot hooks - EPHS
- 1 - Grid

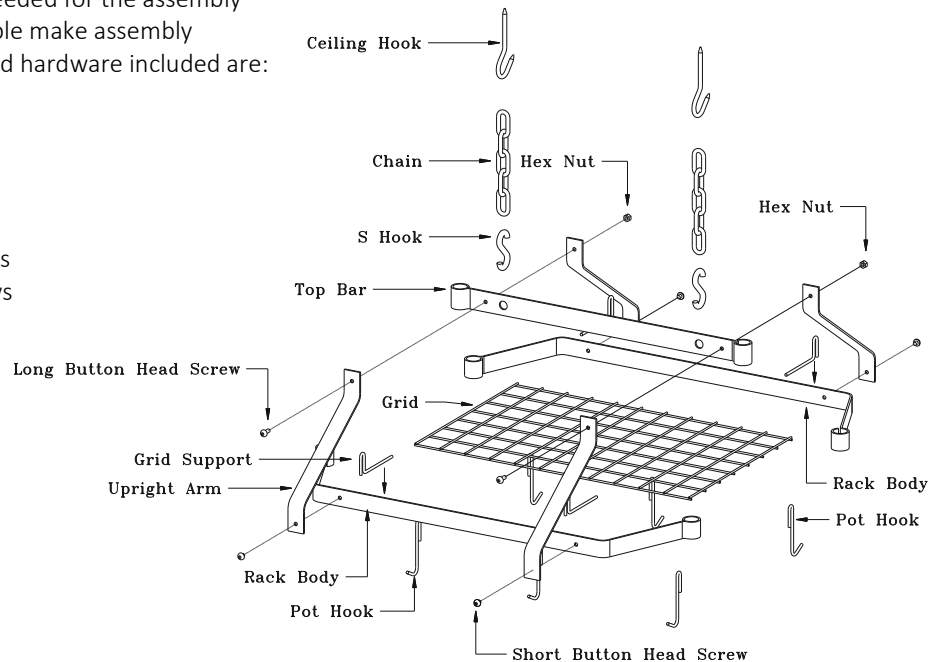

ASSEMBLY AND INSTALLATION INSTRUCTIONS

- 1) Lay rack body on firm surface. Protect surface with corrugated box if necessary.
- 2) Identify the four "Upright Arms." Using the 5/16" x 1/2" button head screws attach the upright arms to the rack body as shown. Do not fully tighten screws at this time.
- 3) Locate the "Top Bar" and attach to the four "Upright Arms" as shown in drawing using the two 5/16" x 7/8" button head screws and the two 5/16" nuts. Tighten all screws at this time.
- 4) Your Rack may be carefully anchored into solid wood of the ceiling joist or beams. If you are mounting in anything other than solid wood, use the Toggles provided and follow the directions in the kit. Carefully measure the area where the rack is to be hung and install the ceiling screw hooks (approximately 16" apart) if you are mounting in wood or the Toggles if you are mounting in anything other than wood.
- 5) Place the four grid brackets over the sides of the rack, just inside each of the upright arms with the straight end of the brackets facing towards the inside of the rack. Next place the grid on top of the grid brackets. (See note and drawing next page).
- 6) Insert the "S" hooks into each of the remaining holes in the top bar and the other end through one end of the chain. Carefully lift your rack into place and attach the other end of the chain onto the ceiling screw hooks.
- 7) Hang your heavier item on the straight portion of the rack body or the center of the grid area.

Note: Grid as shown in drawing is upside down for illustration purposes. Please turn grid over so crossbars that extend the width of grid are facing down. This will help to keep grid from sliding out of position when rack is in use.

WARNING: It is important that your rack is assembled correctly. If the unit is assembled or used incorrectly, it could become unstable and collapse, possibly causing injury.

LIMITED WARRANTY: This product is warranted to be free of material defects, other than that from normal use, for a period of five years from the date of purchase. Customer's exclusive remedy shall be the repair or replacement of the defective product and shall be subject to the following conditions: (1) notice of any defect is received by Enclume within the warranty period and (2) customer returns the defective product to Enclume Design Products, 24 Colwell St., Port Hadlock, WA 98339, postage prepaid within 20 days following a return authorization number (which may be obtained by telephoning the number at the top of this instructions) being provided to the customer by Enclume. There are no other warranties, expressed or implied. THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ENCLUME SPECIFICALLY DISCLAIMS ANY AND ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE PURCHASE OR USE OF ENCLUME'S PRODUCTS.