



Leave the dining chair in a shady
outside for 1-2 days.

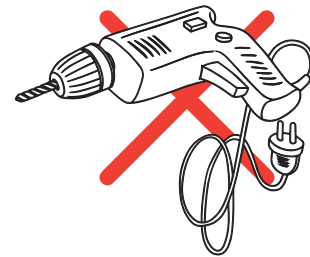

For longer use

Re-tighten bolts every 6 months by using
the enclosed allen-key.
*Using an electric drill can damage the chair.
Please re-tighten bolts manually.

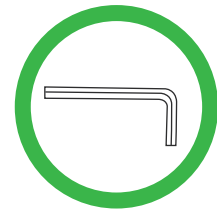

Safety Information



Sit in the center of the
chair, with your back to
the backrest



Do not sit at the front
edge of the chair



Do not stand on the
chair



Do not use the chair
with more than one
person



Do not push the chair
around when a person
is sitting in it




Do not push down on
the backrest when a
person is reclined




Do not place all your
weight on only the
backrest


INSTRUCTION MANUAL

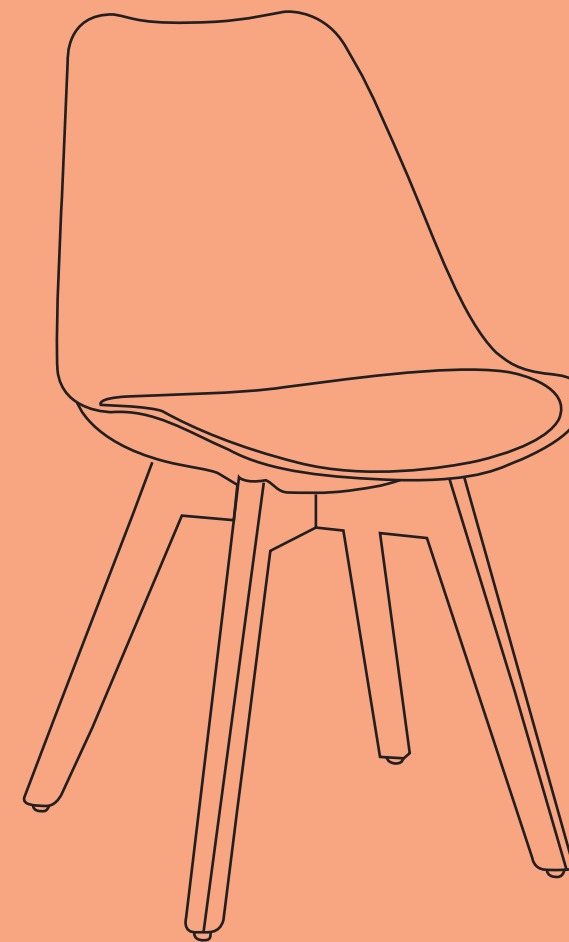


Package List

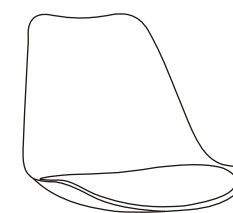

(A)*1

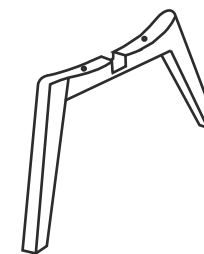

(B)*1

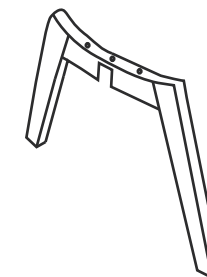

(C)*1



 
(D)*1




(E)*4




(F)*1



(G)*5

 


(H)*4

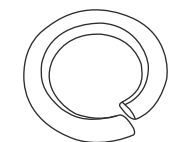

(I)*5

Assembly Instruction

1

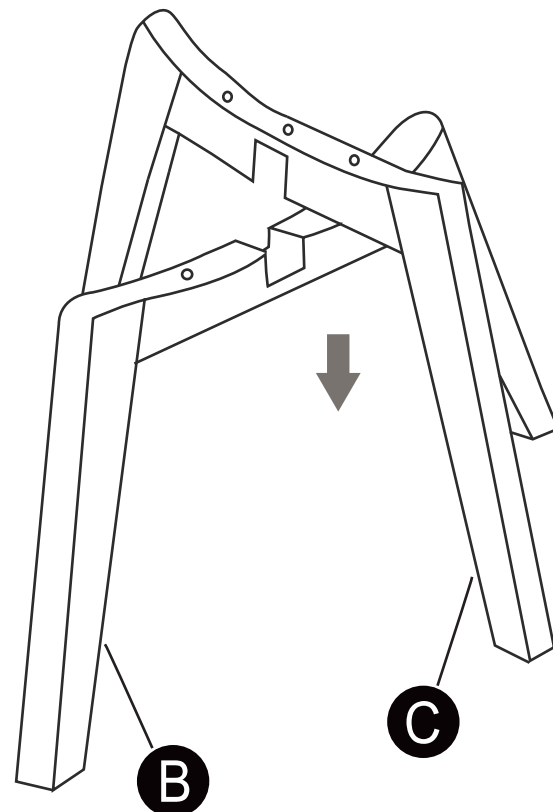


D 1pc

F 1pc

G 1pc



H 4pcs

I 1pc

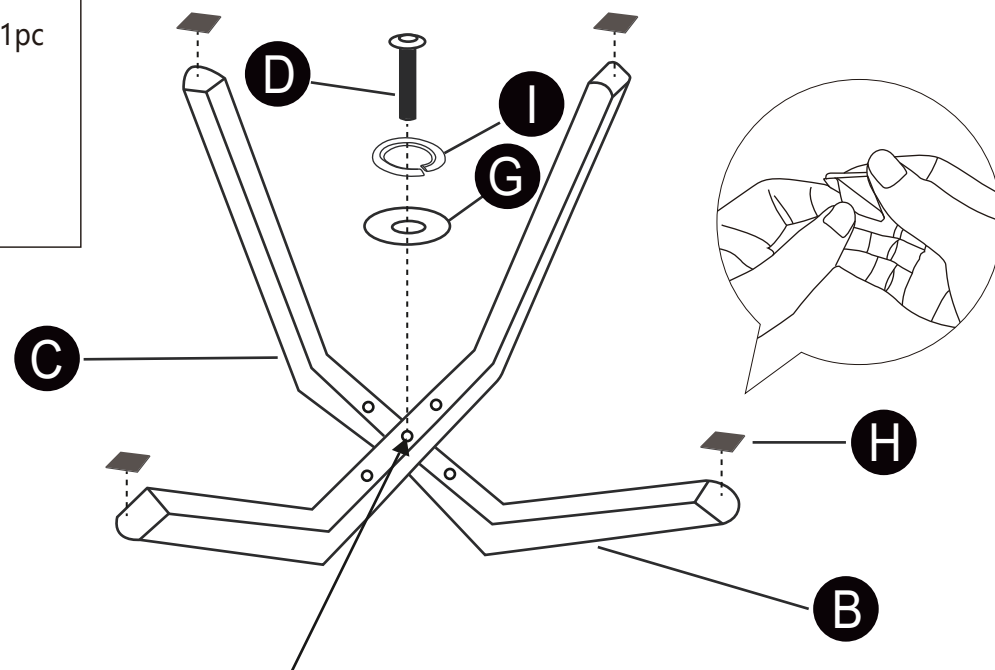

2


DO NOT TIGHTEN THIS SCREW TOO TIGHTLY

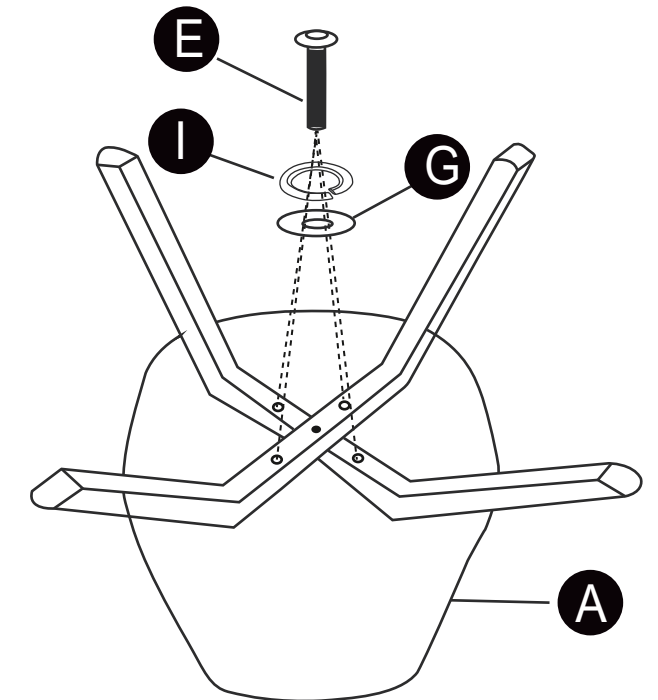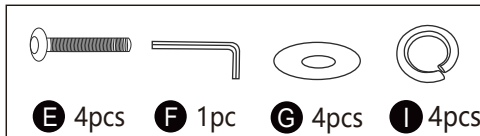

3

100% TIGHTEN ALL THE SCREWS

4

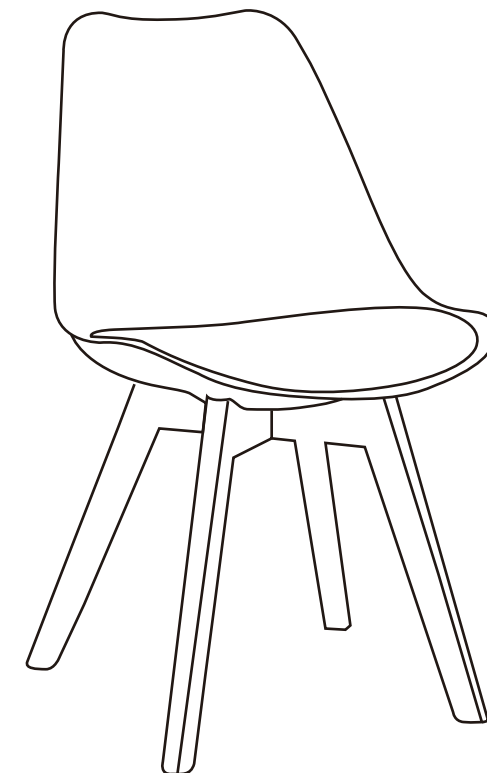

CAUTION:

* Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 months or whenever needed.