 


INSTRUCTION For Cordless Roller Shade


1 Check package for the complete set of parts.

width length
of the window



0"~45 ¹⁵/₁₆"




46"~58 ¹⁵/₁₆"

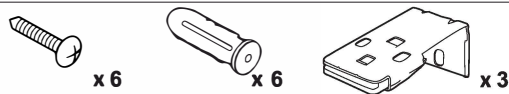


59"~72"

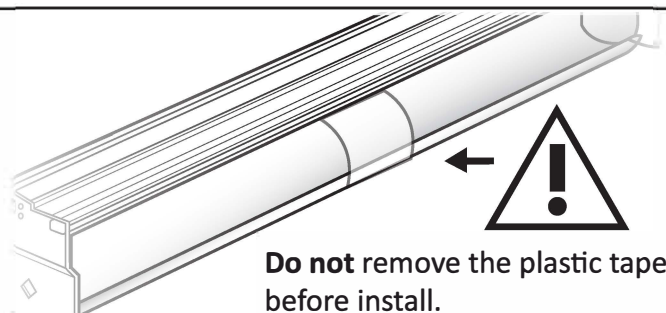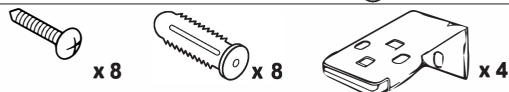



2 Install brackets as wall or ceiling mount according to your preference.

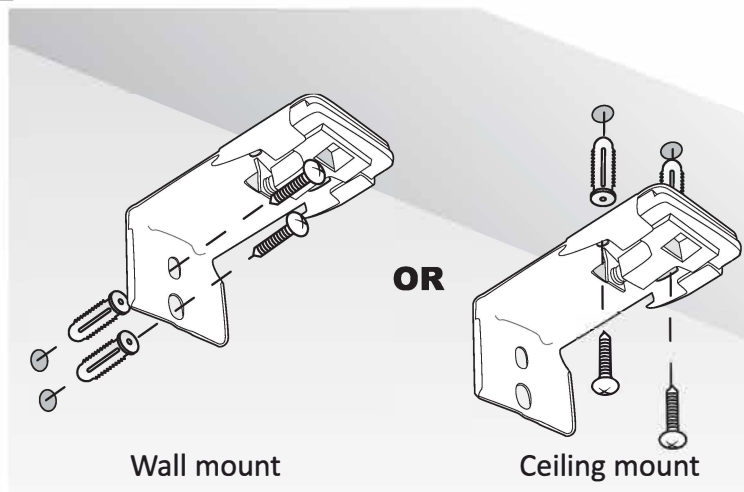

Make sure the brackets are level.

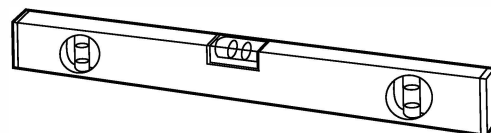

3 Place the front groove of the head rail into the bracket (as shown below). Then push the head rail in and cause the rear groove to clip into the bracket.

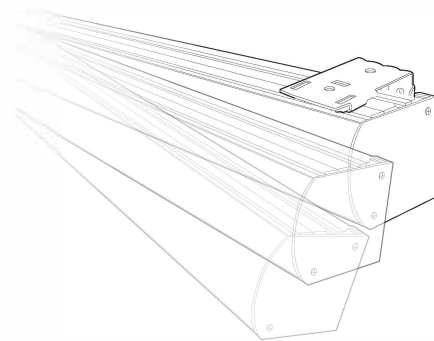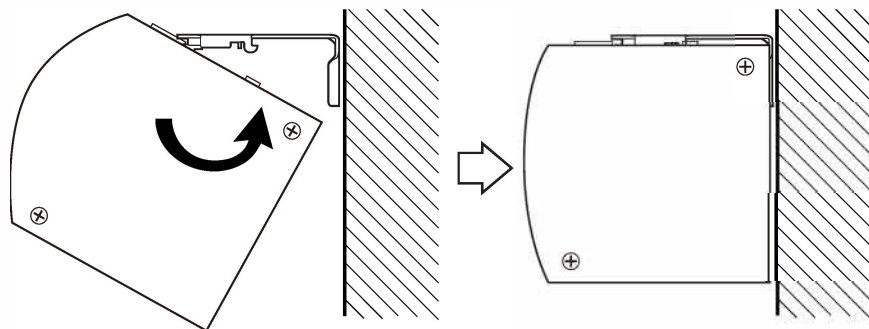

4 Remove the plastic tape and raise the shade up and down straight by holding the bottom handle.

