 




INSTALLATION

Product Manual

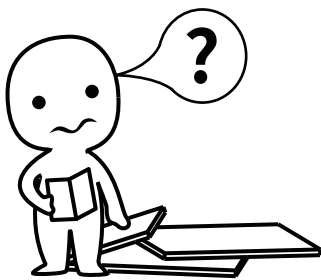


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

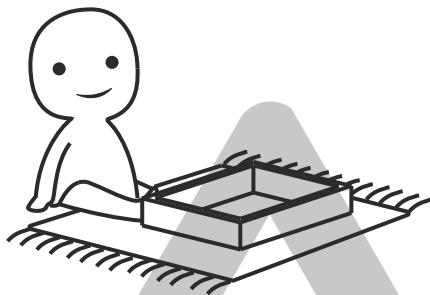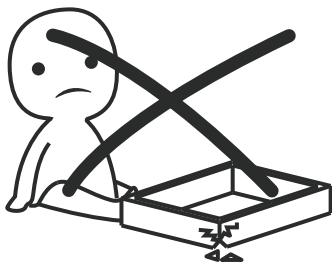



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

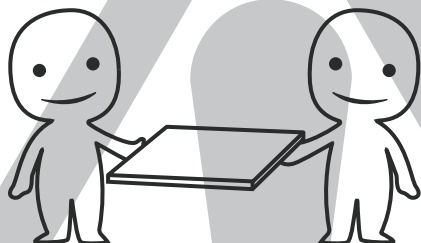

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

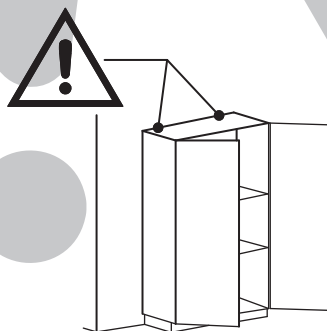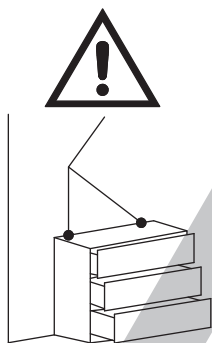

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

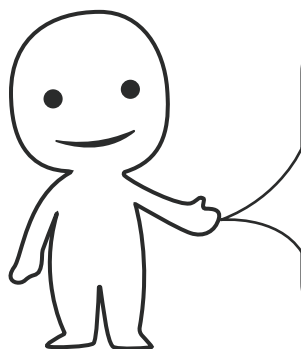

Please prepare the following tools

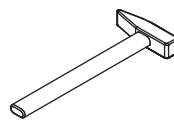   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 122



Ø 12 x 9.5 mm

 B x 122




Ø 7 x 40 mm

C x 16




M3 x 12 mm

 D x 6



M4 x 30 mm

 E x 8



M5 x 40 mm

F x 8



Ø 6 x 30 mm

G x 30

 


H x 16




M3.5 x 14 mm

J x 16



L x 2

 
CL

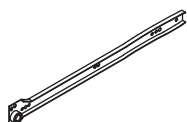

12"

L x 2

 
CR

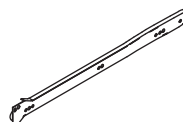

12"

L x 2

 
DL

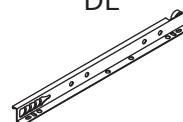


12"

L x 2

 DR

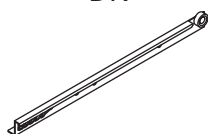

12"

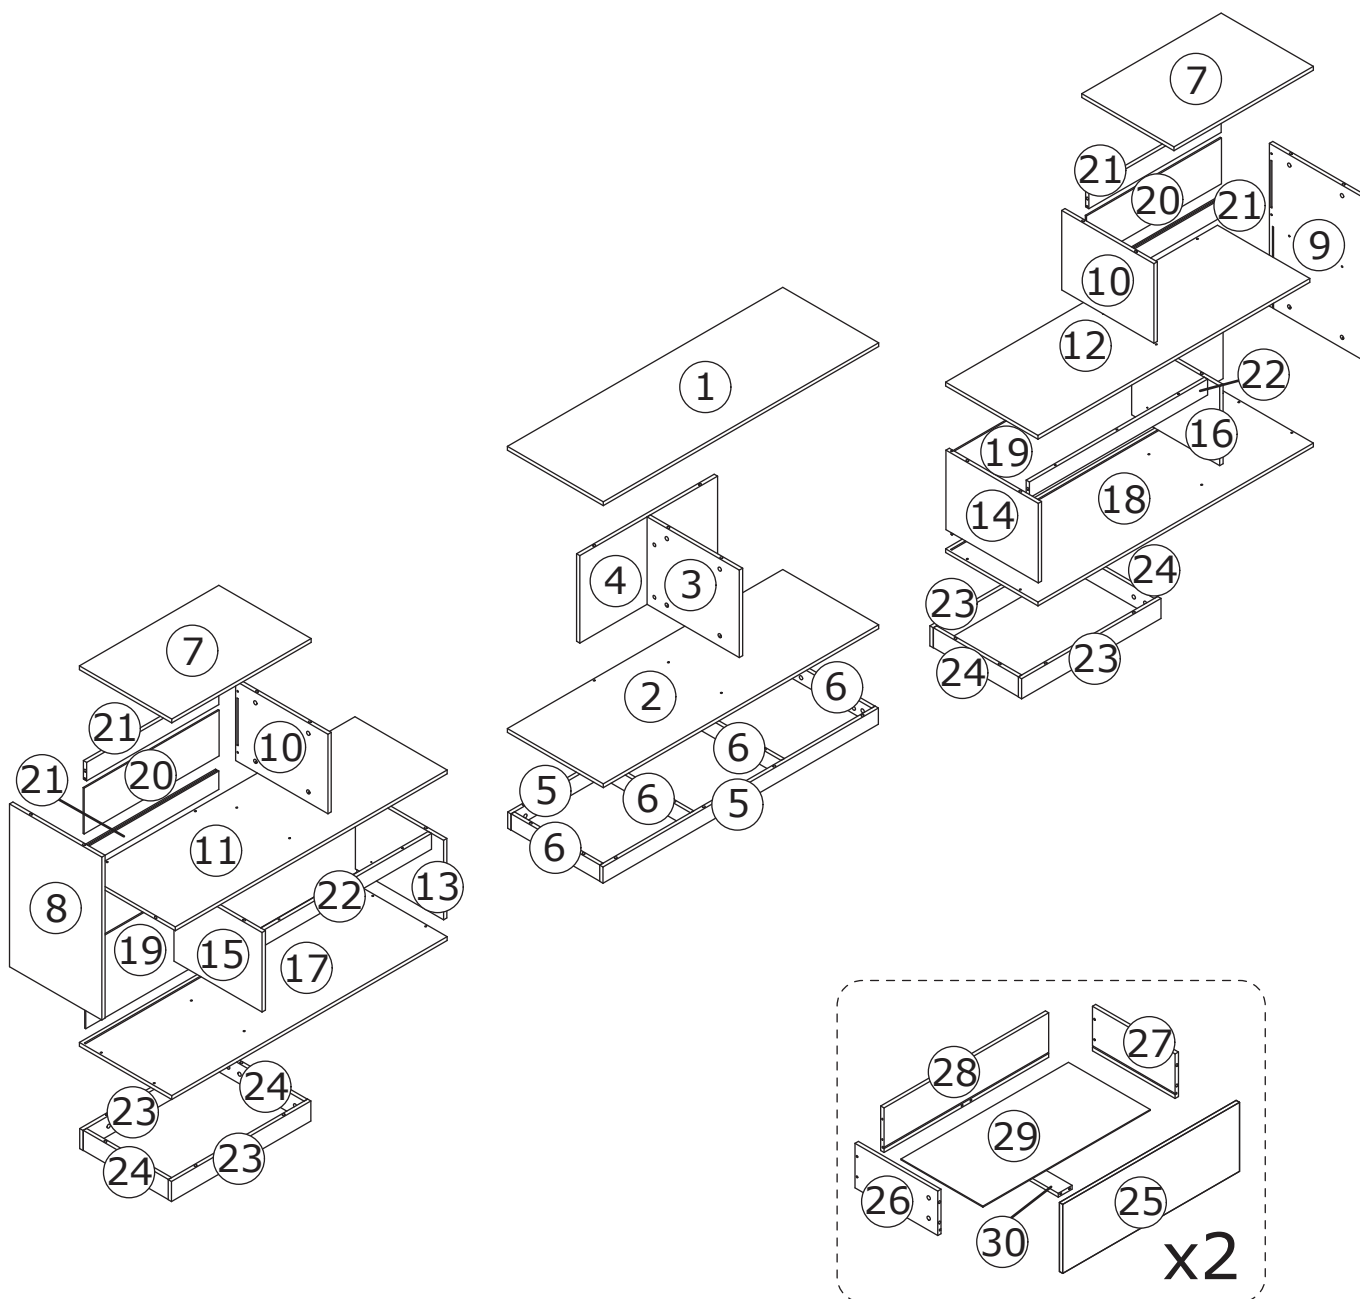 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

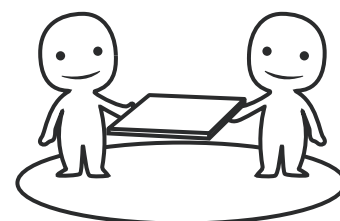


ASSEMBLED BY 2 ADULTS

   1

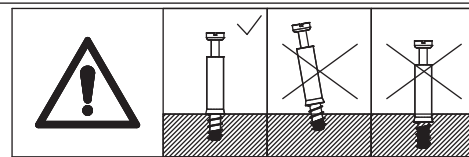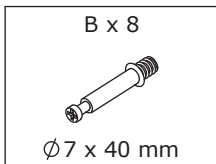

Screw eccentric bolt (B) onto plate 5.


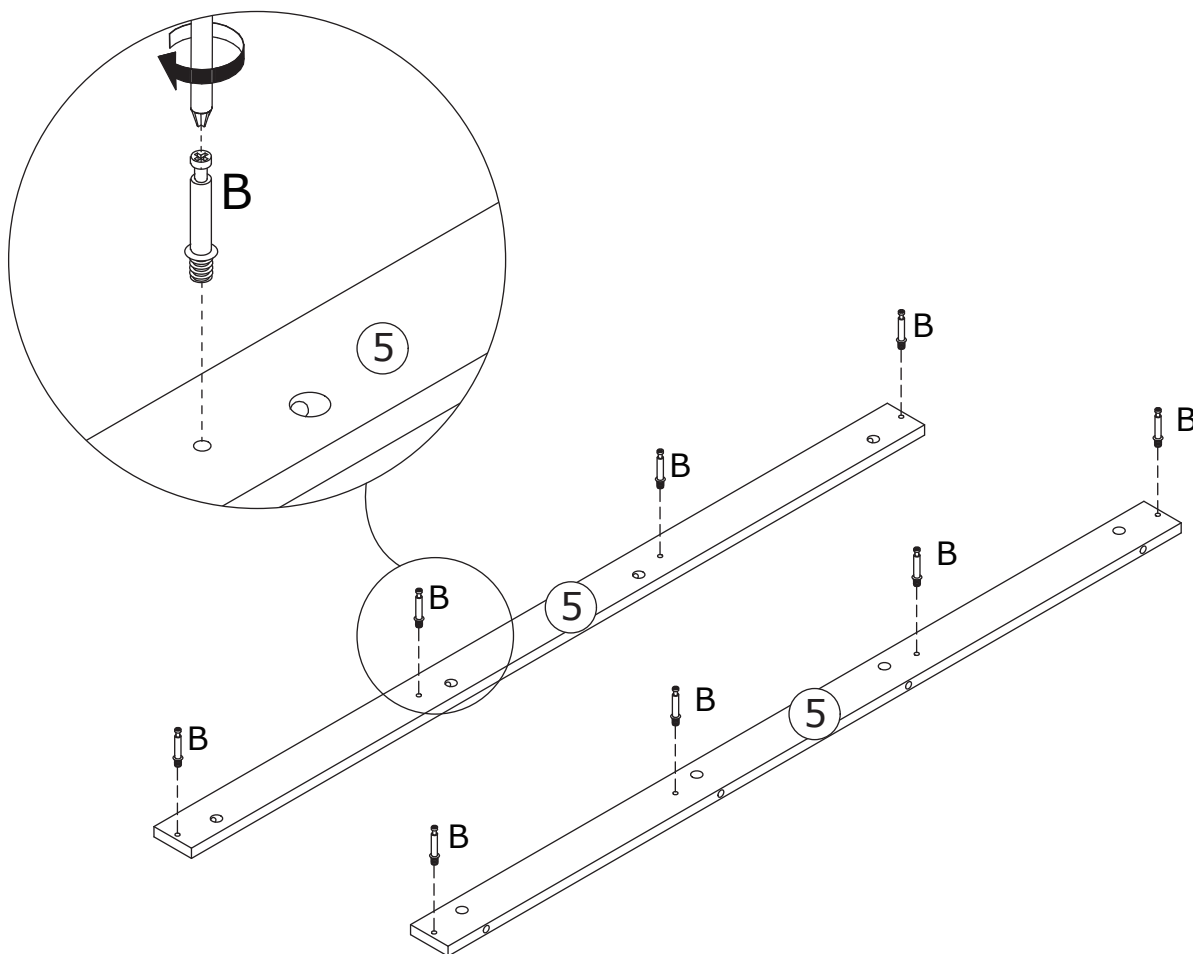 


2


A x 8



 
 
Ø 12 x 9.5 mm

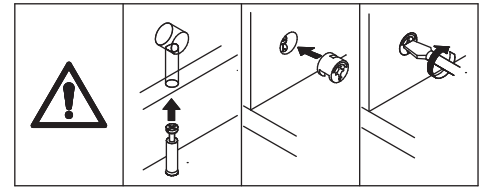


 
Connect plate 6 to plate 5, then tighten by turning eccentric wheel (A) clockwise.

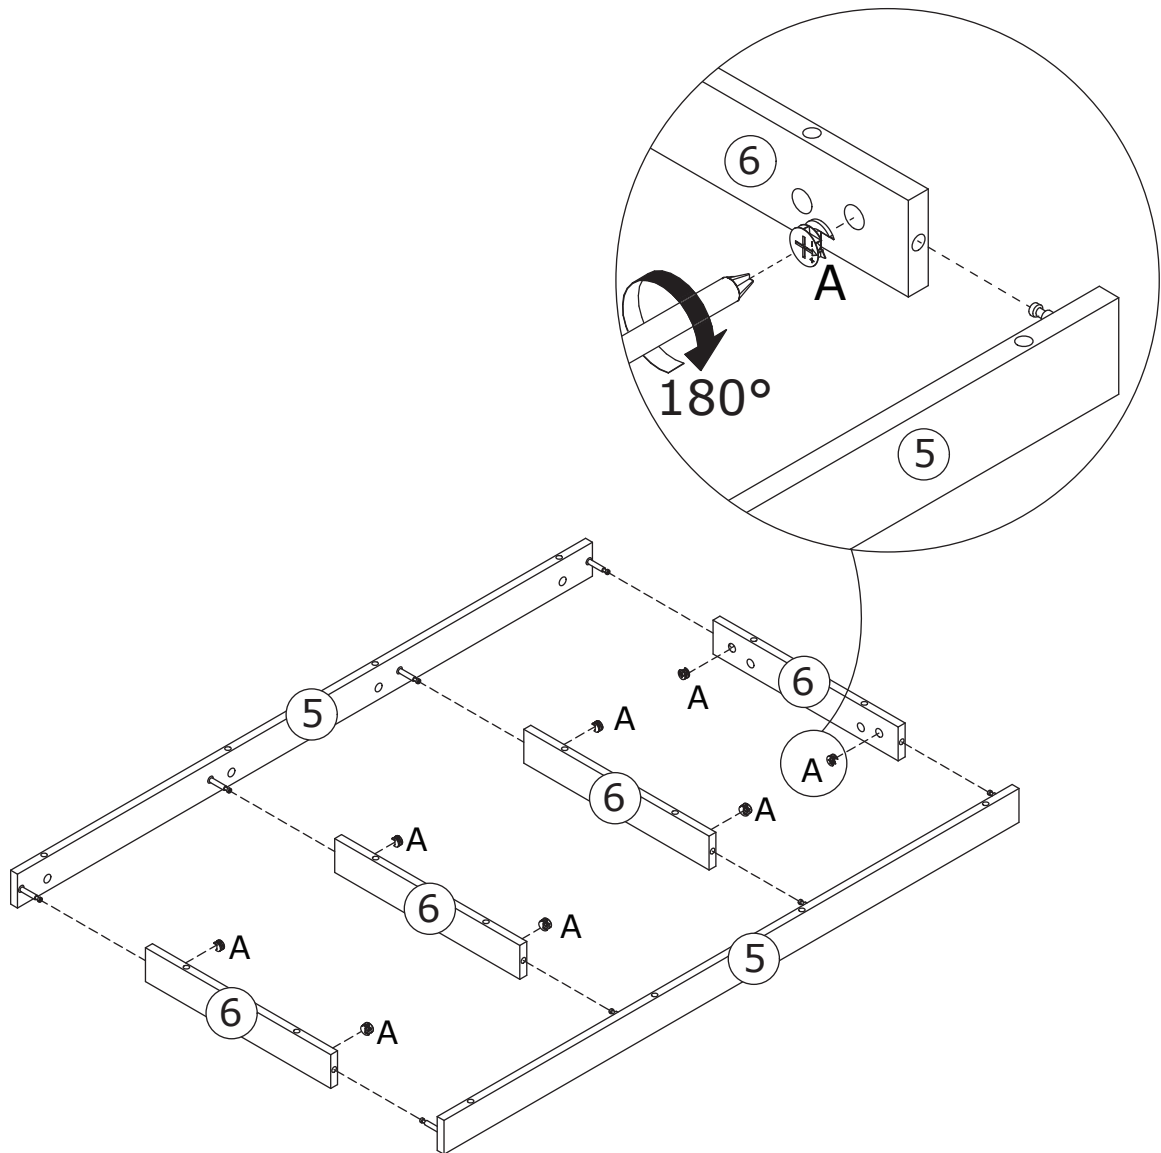

3

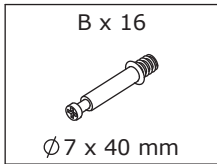  

Screw eccentric bolt (B) onto plate 2.

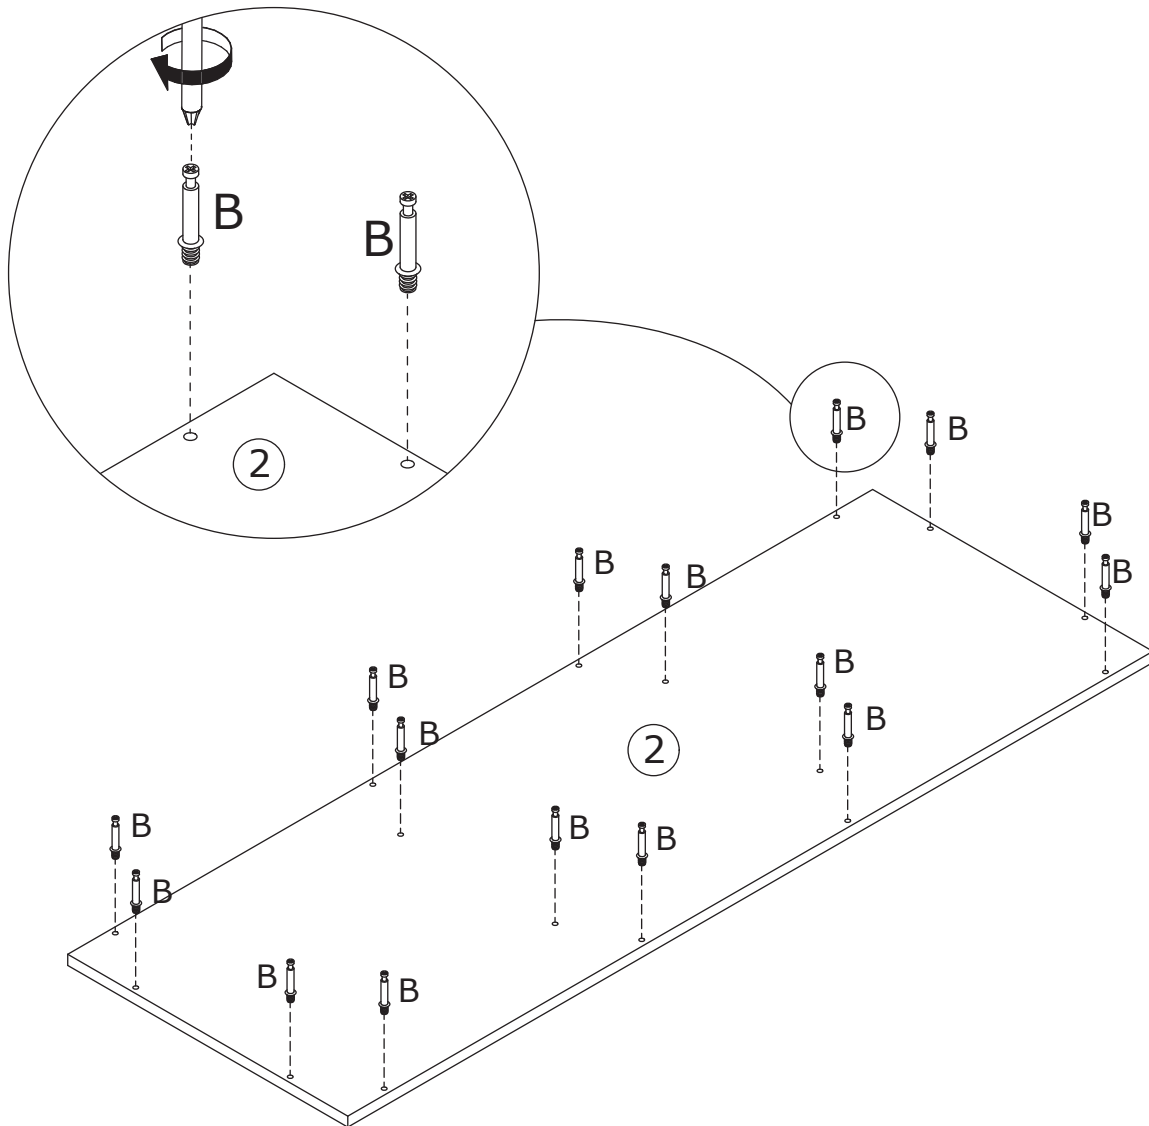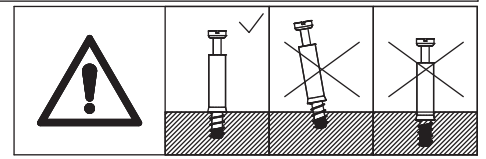  



4

A x 16




Ø 12 x 9.5 mm

  G x 14


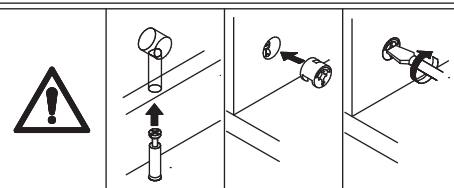



Connect plates 5 and 6 to plate 2, then tighten by turning eccentric wheel (A) clockwise.

 
Knock foot pin (G) into the panels as shown.

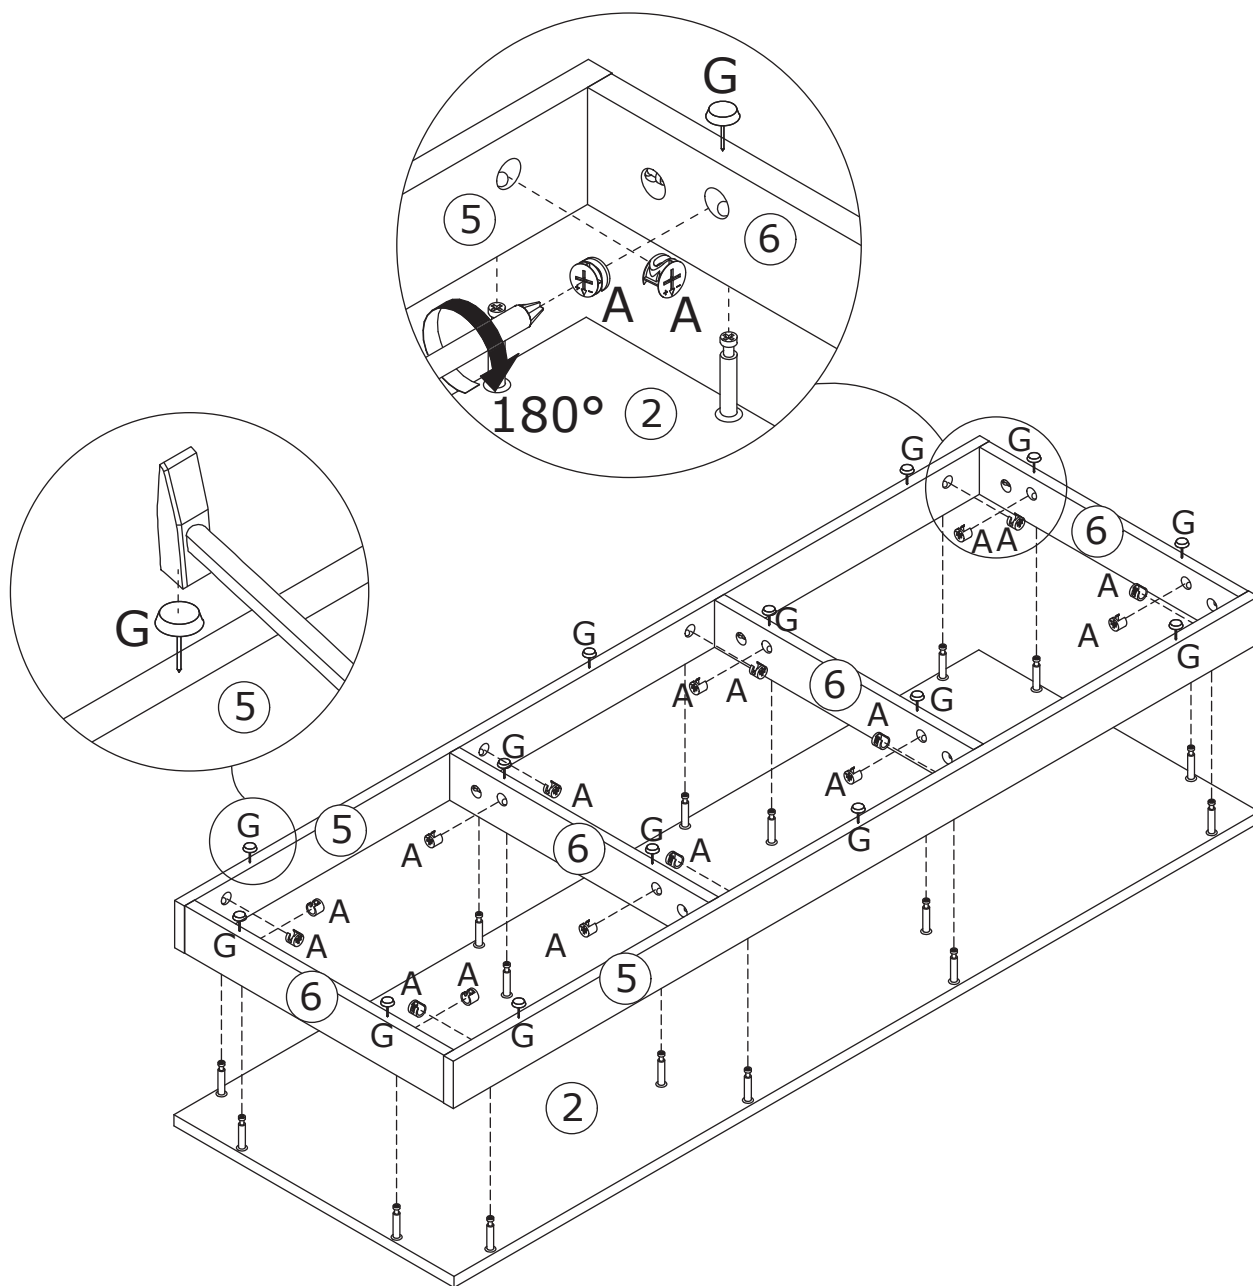

5

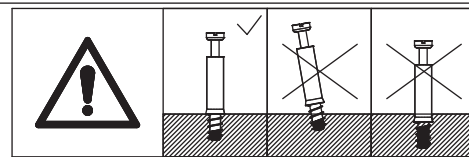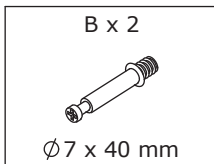   



Screw eccentric bolt (B) onto plate 4.

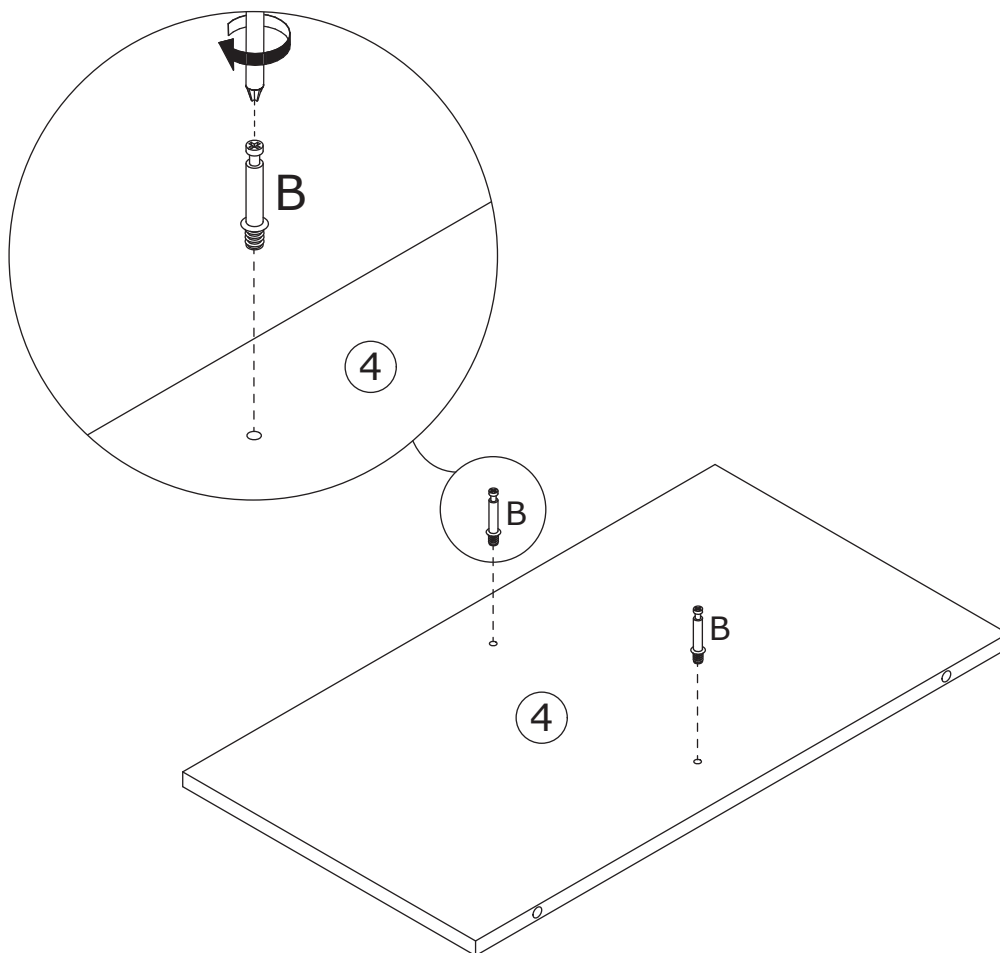 


6

A x 2


 
 
 Ø 12 x 9.5 mm

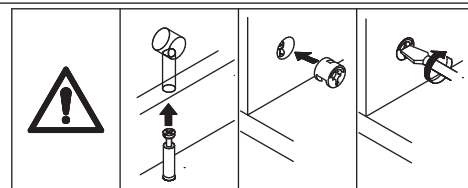

 
Connect plate 3 to plate 4, then tighten by turning eccentric wheel (A) clockwise.

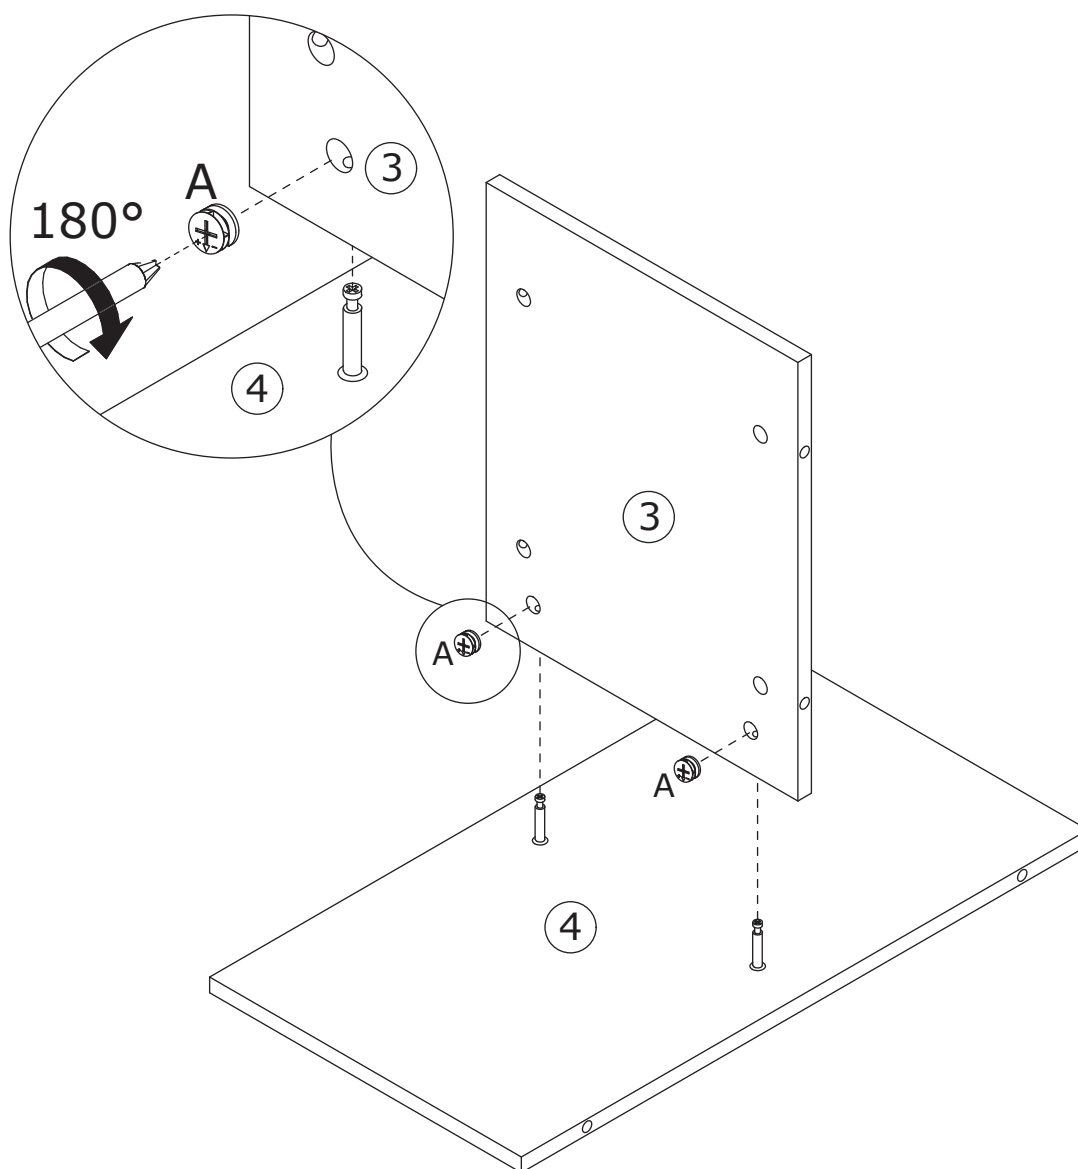

7

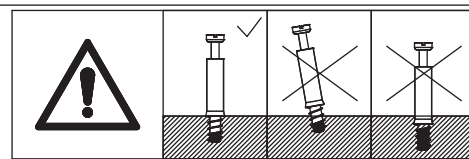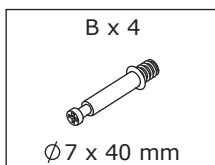   



Screw eccentric bolt (B) onto plate 2.

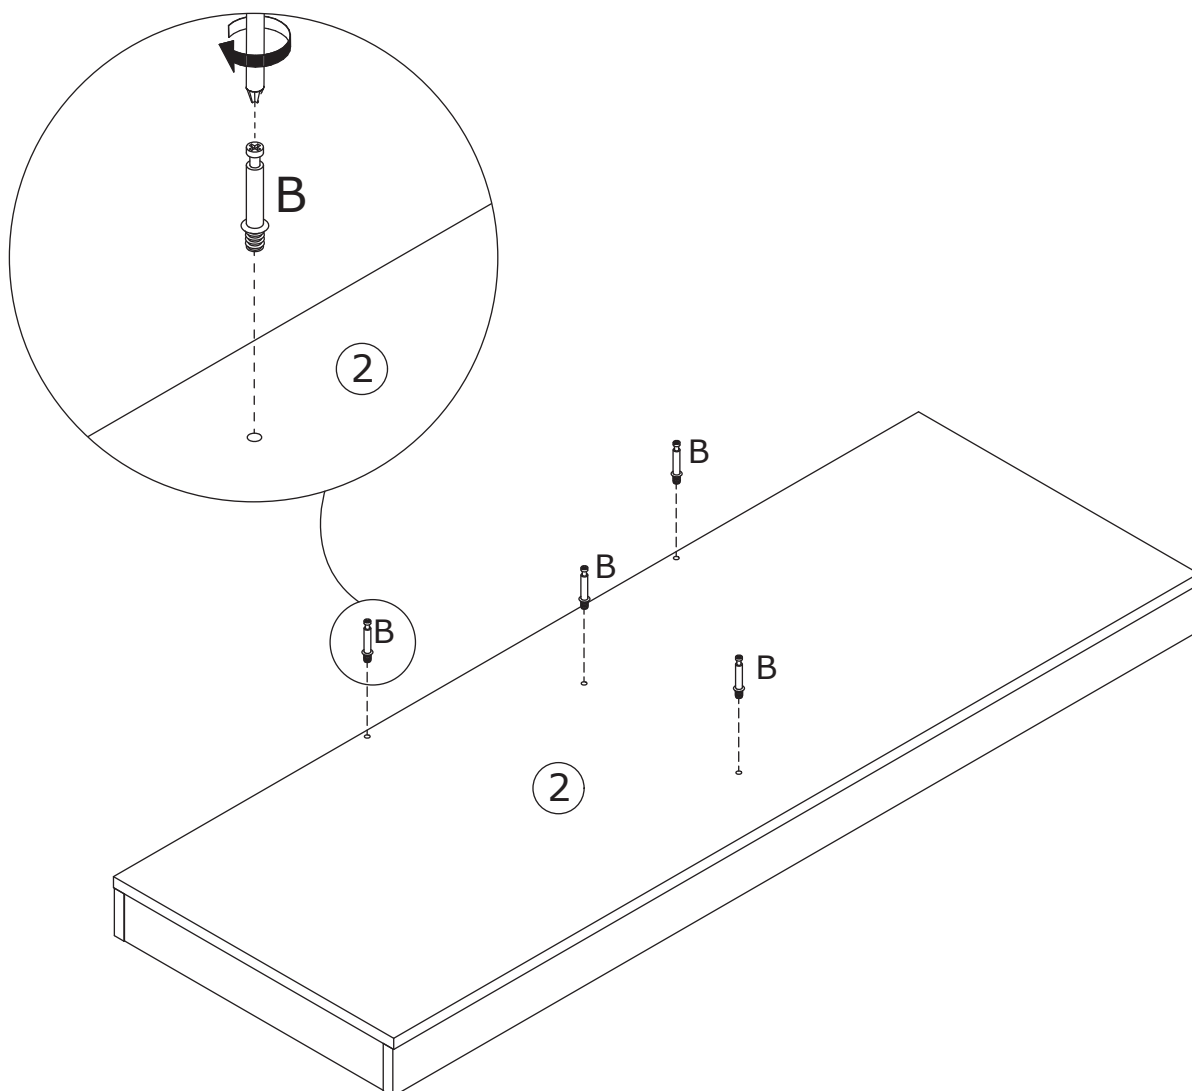 


8

A x 4


 
 
 Ø 12 x 9.5 mm

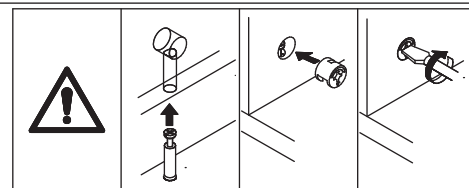

 
connect plates 3 and 4 to plate 2, then
 tighten by turning eccentric wheel (A)
 clockwise.

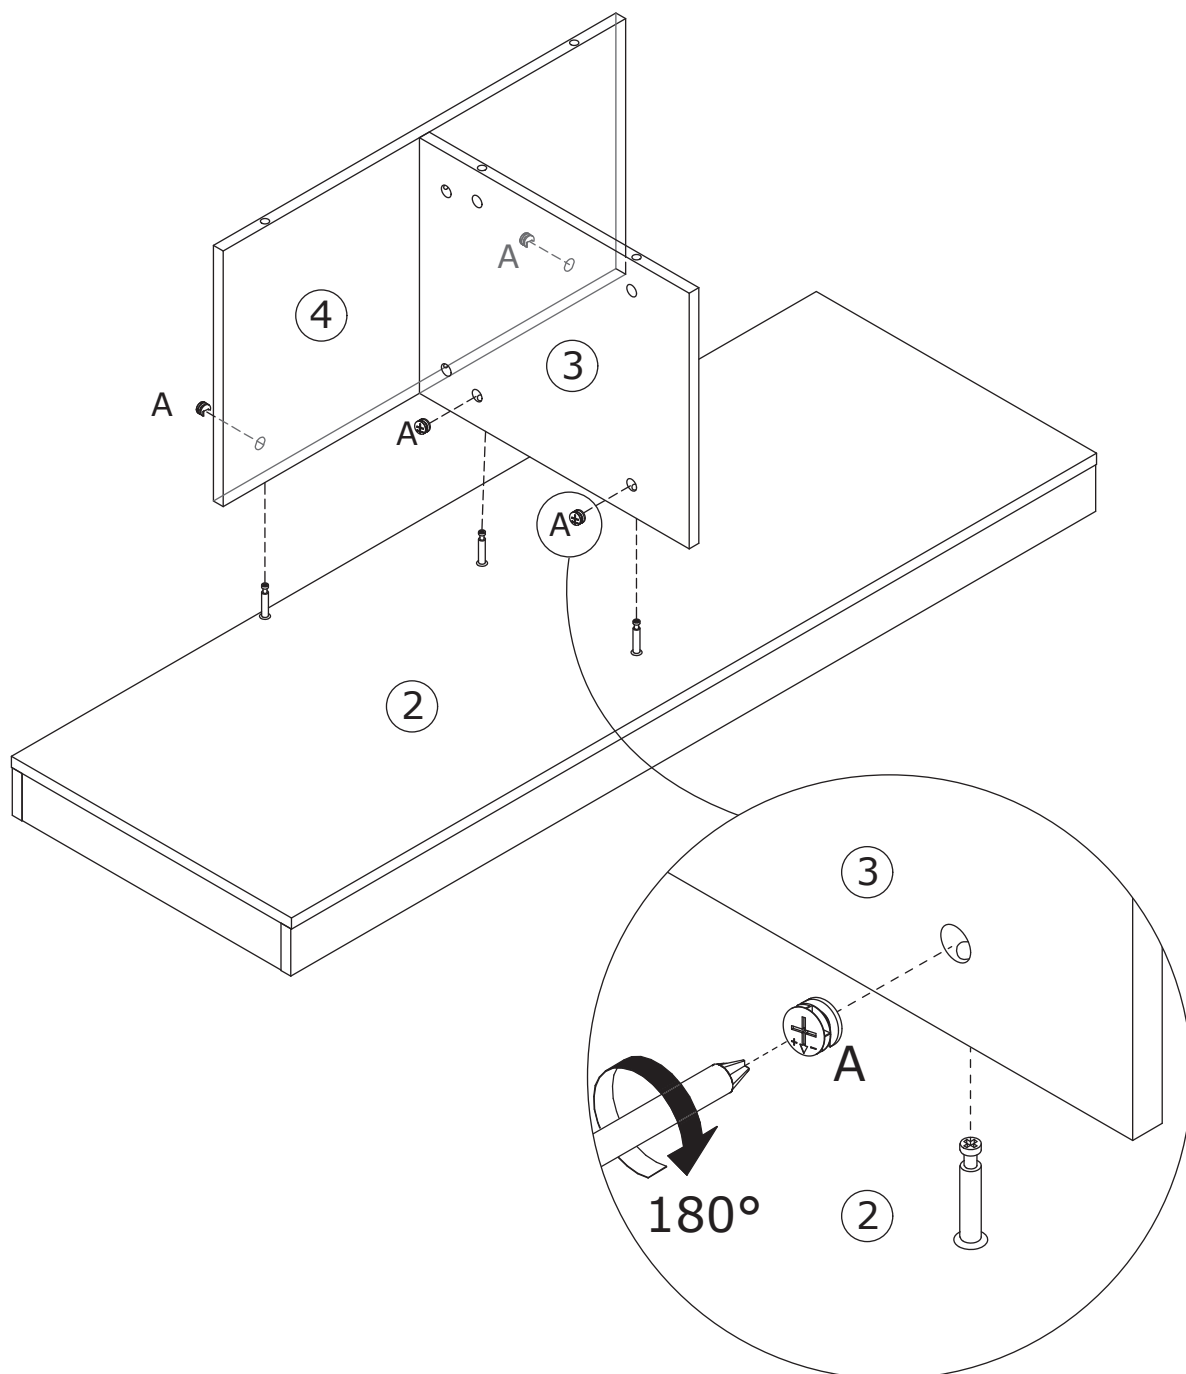

9

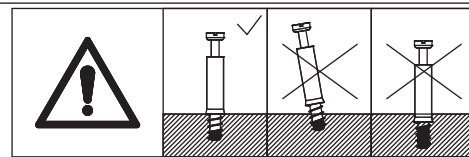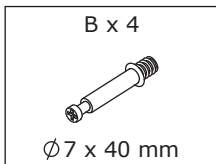   

Screw eccentric bolt (B) onto plate 1.


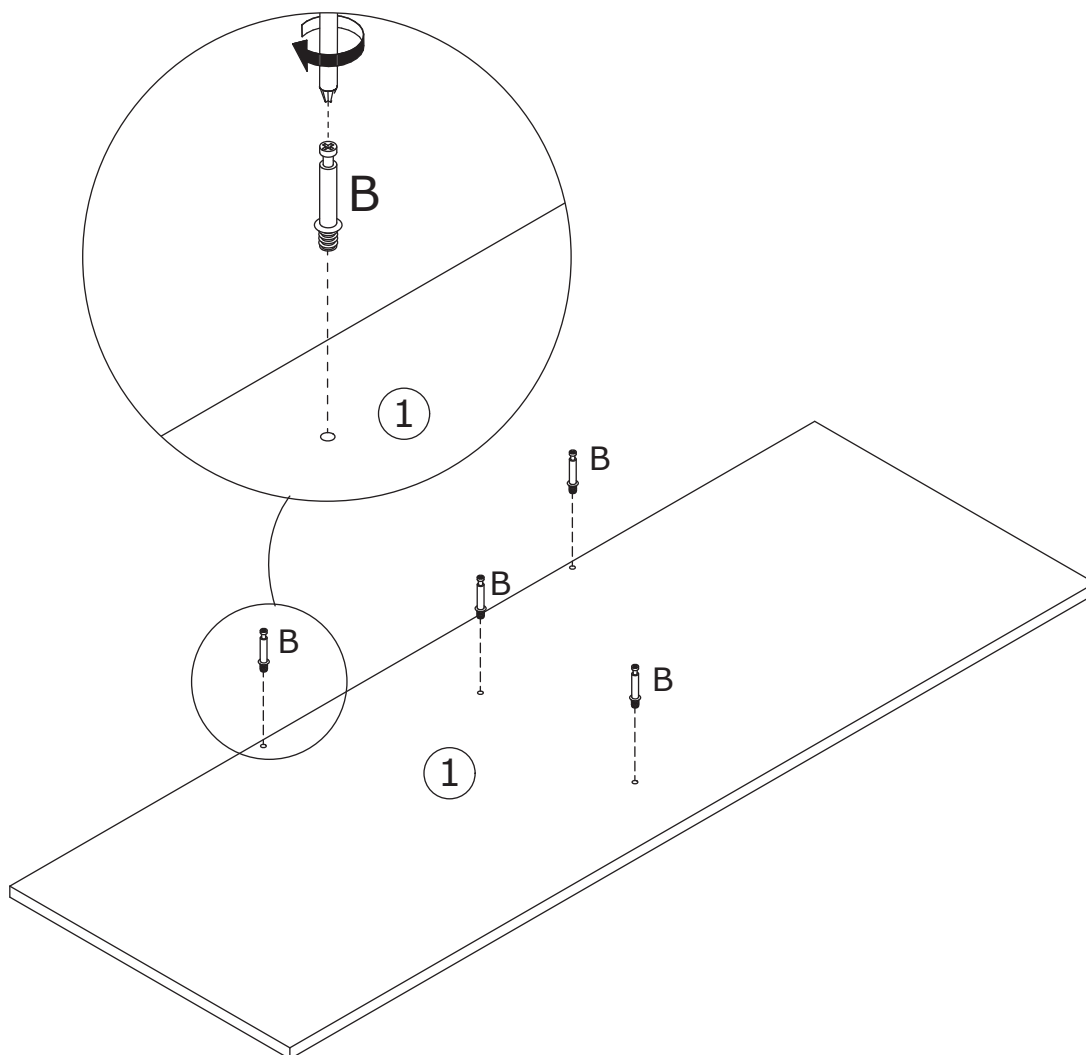 


10


A x 4




 
 
Ø 12 x 9.5 mm

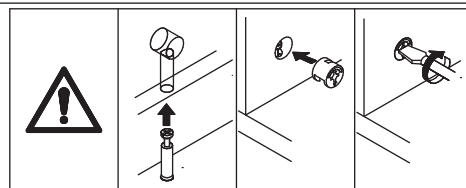

 
Connect plate 1 to plates 3 and 4, then tighten by turning eccentric wheel (A) clockwise.

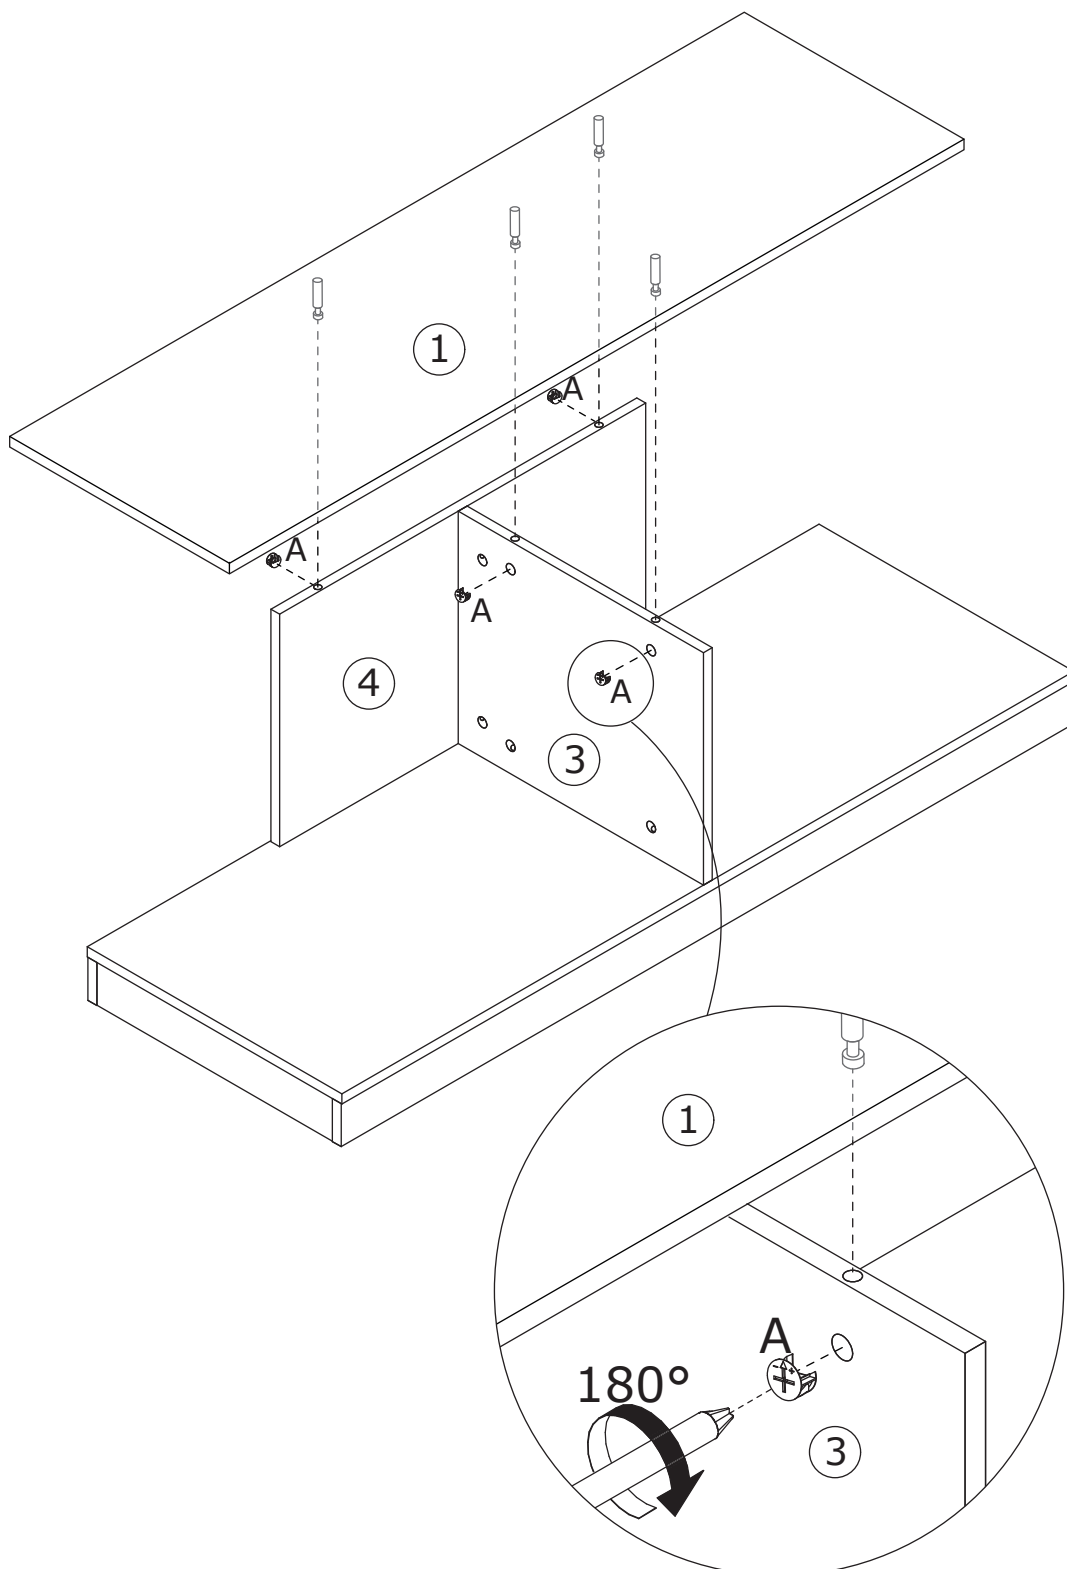

11

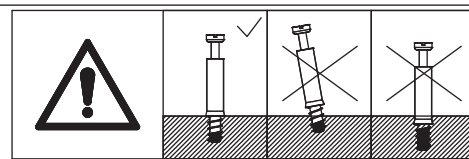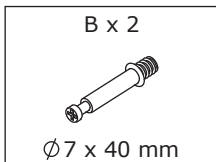   

 Screw eccentric bolt (B) onto plate 13 and 15.


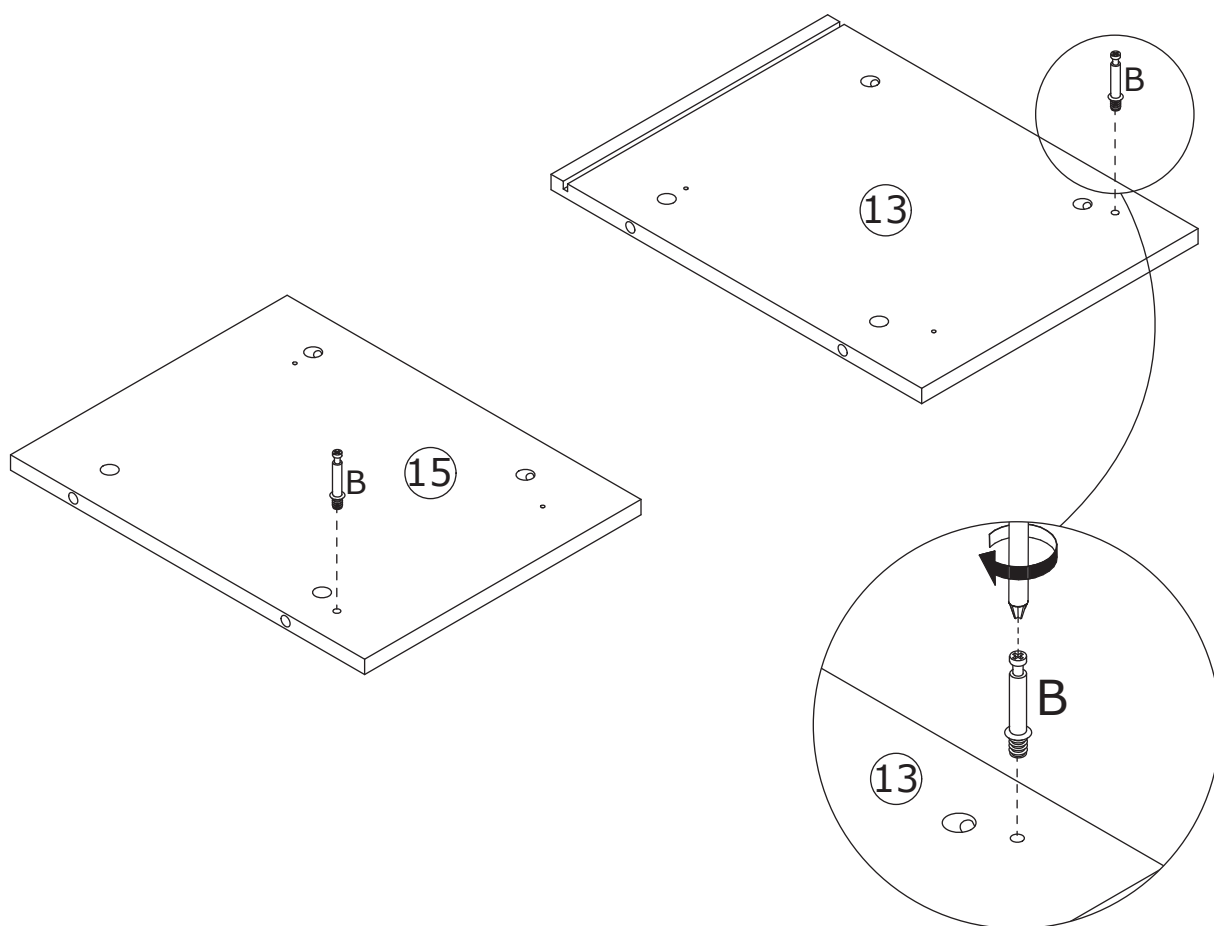


12


A x 2




 
 
Ø 12 x 9.5 mm

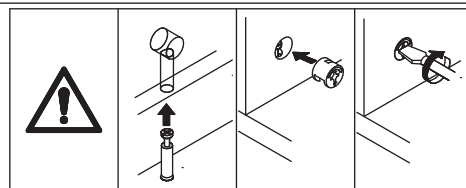

 
Connect plates 13 and 15 to plate 22, then tighten by turning eccentric wheel (A) clockwise.

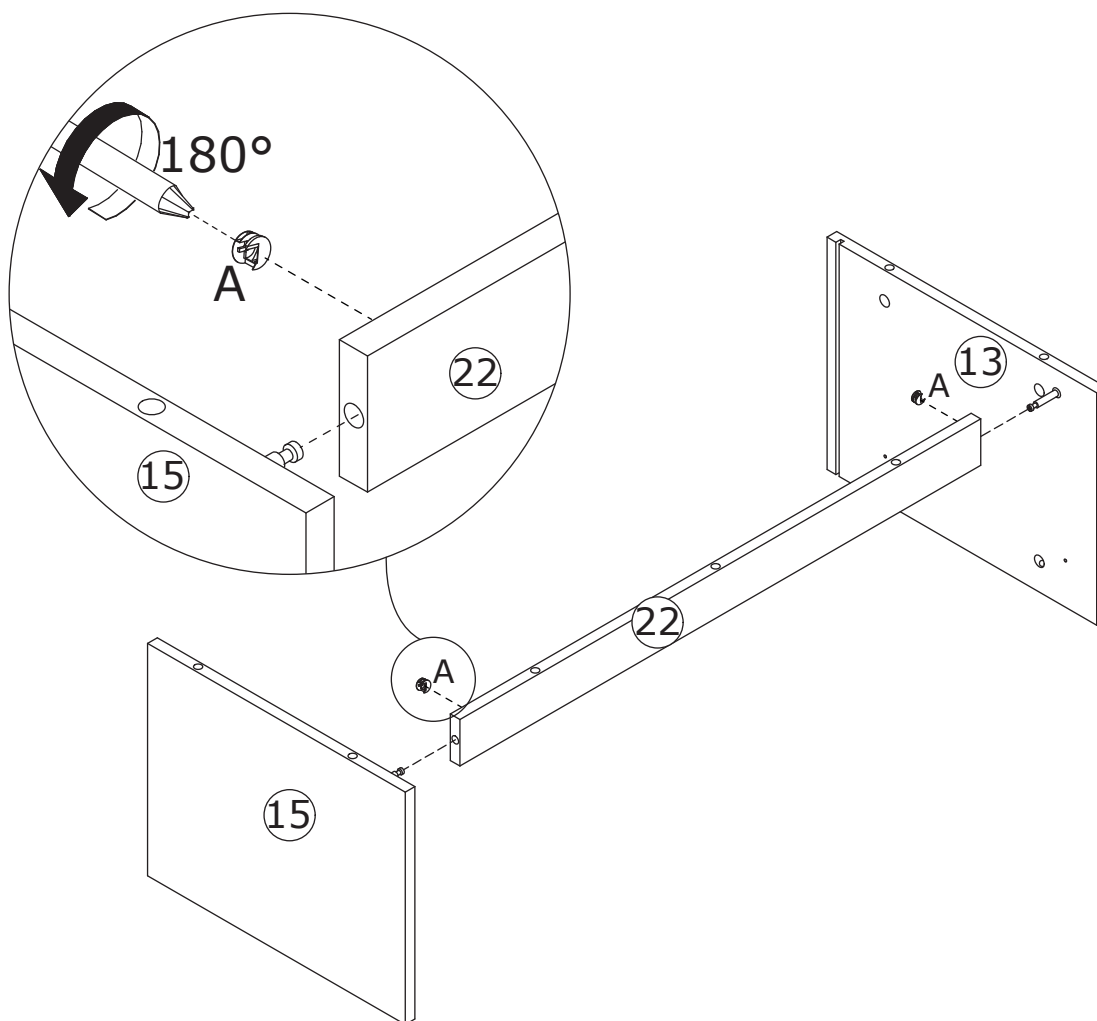

13

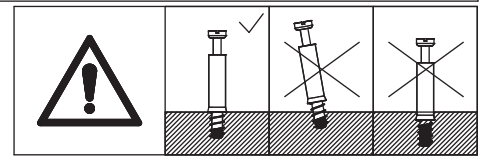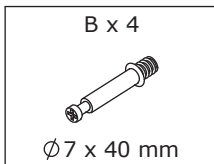   

Screw eccentric bolt (B) onto plate 11.


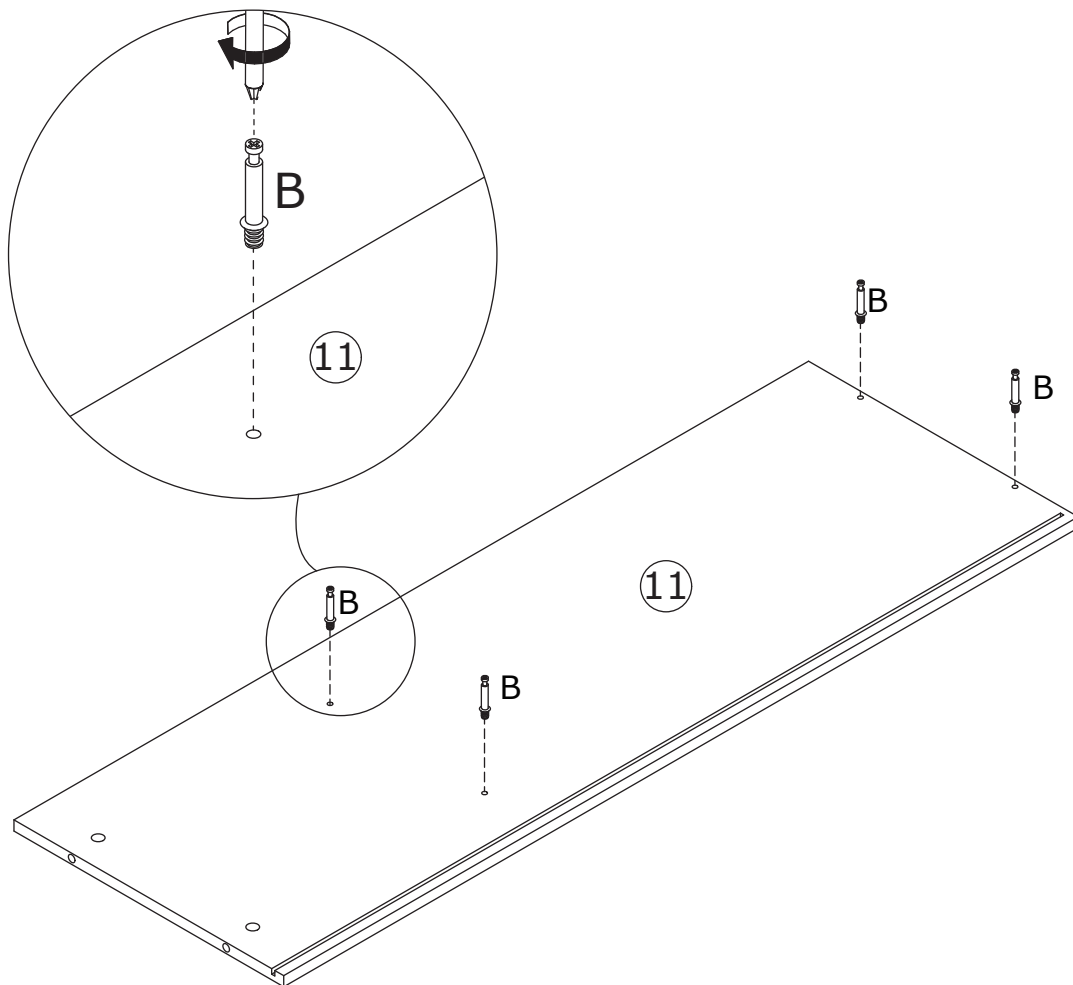 


14


A x 4



  Ø 12 x 9.5 mm

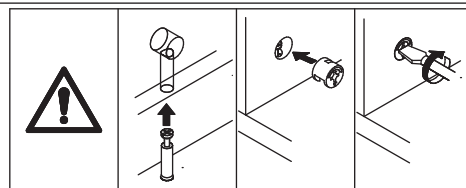

 Connect plates 13 and 15 to plate 11, then tighten by turning eccentric wheel (A) clockwise.

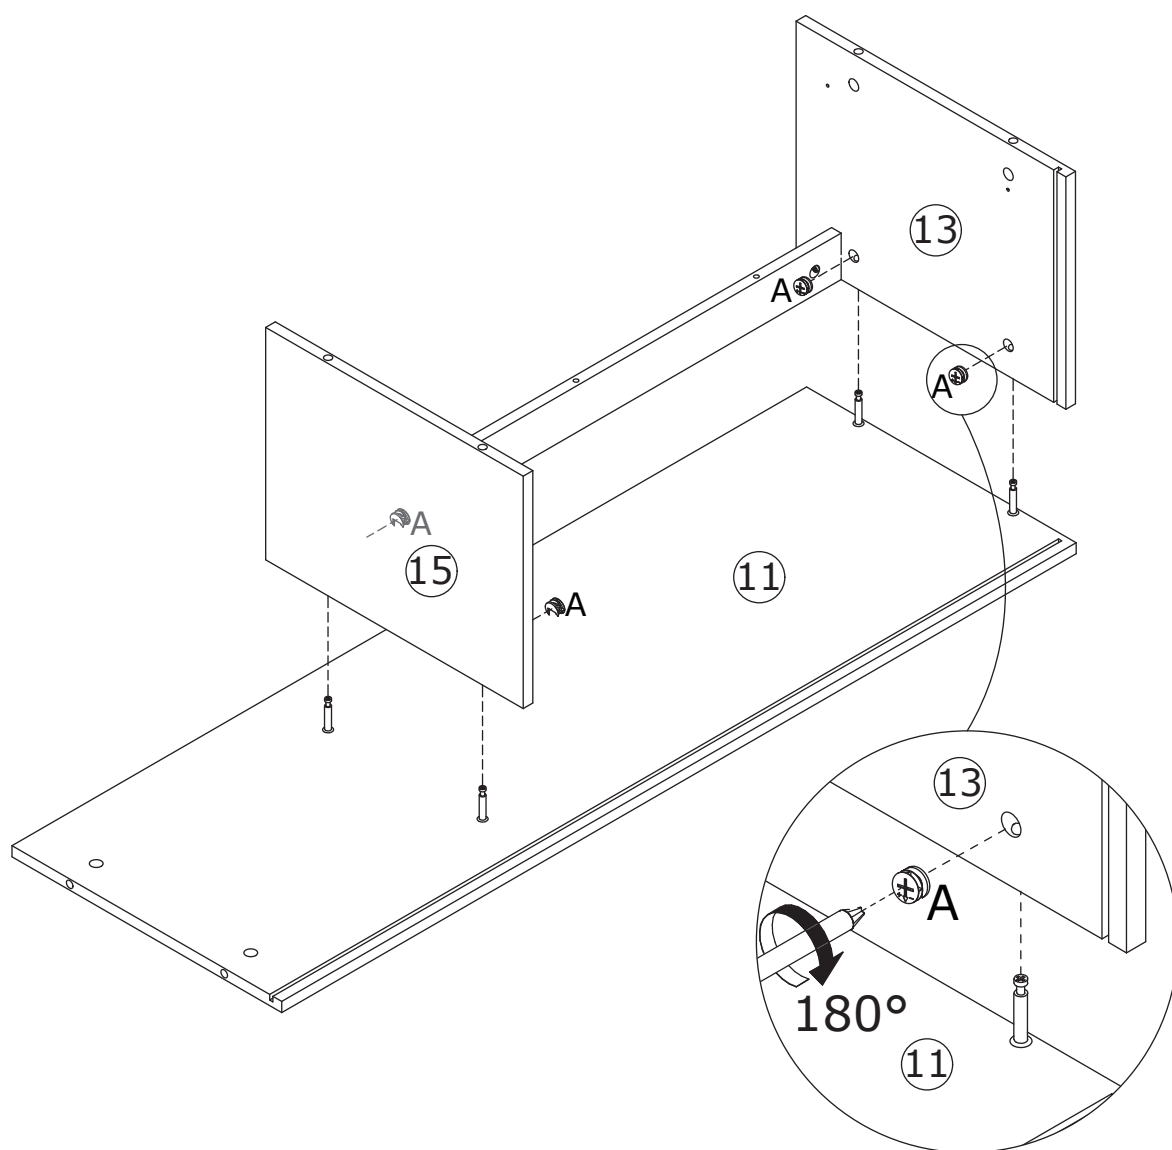


15


D x 3





 
M4 x 30 mm



 
Secure plate 22 to plate 11 using screw (D).

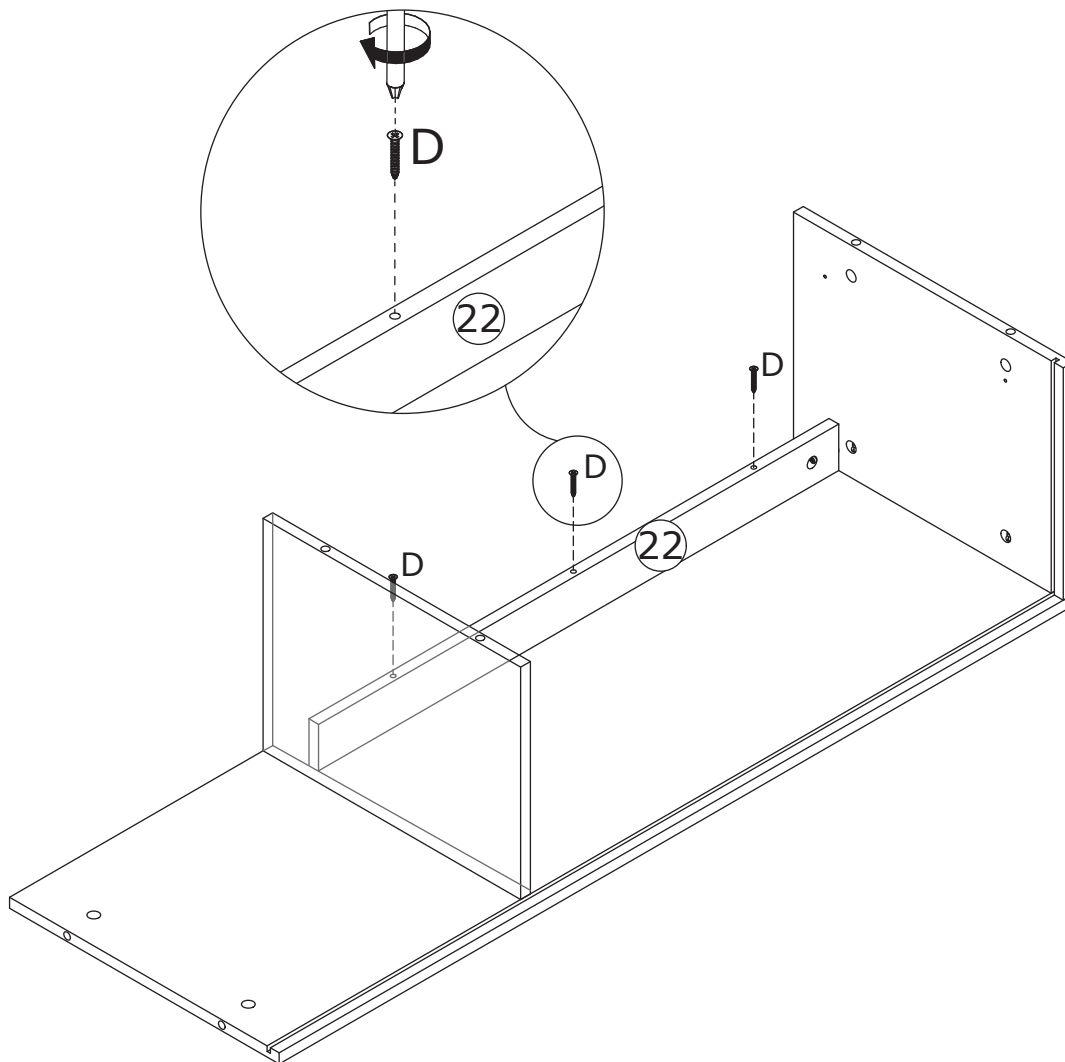




16

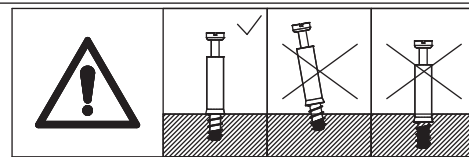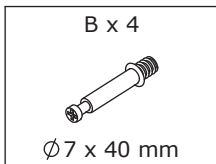   



Screw eccentric bolt (B) onto plate 11.

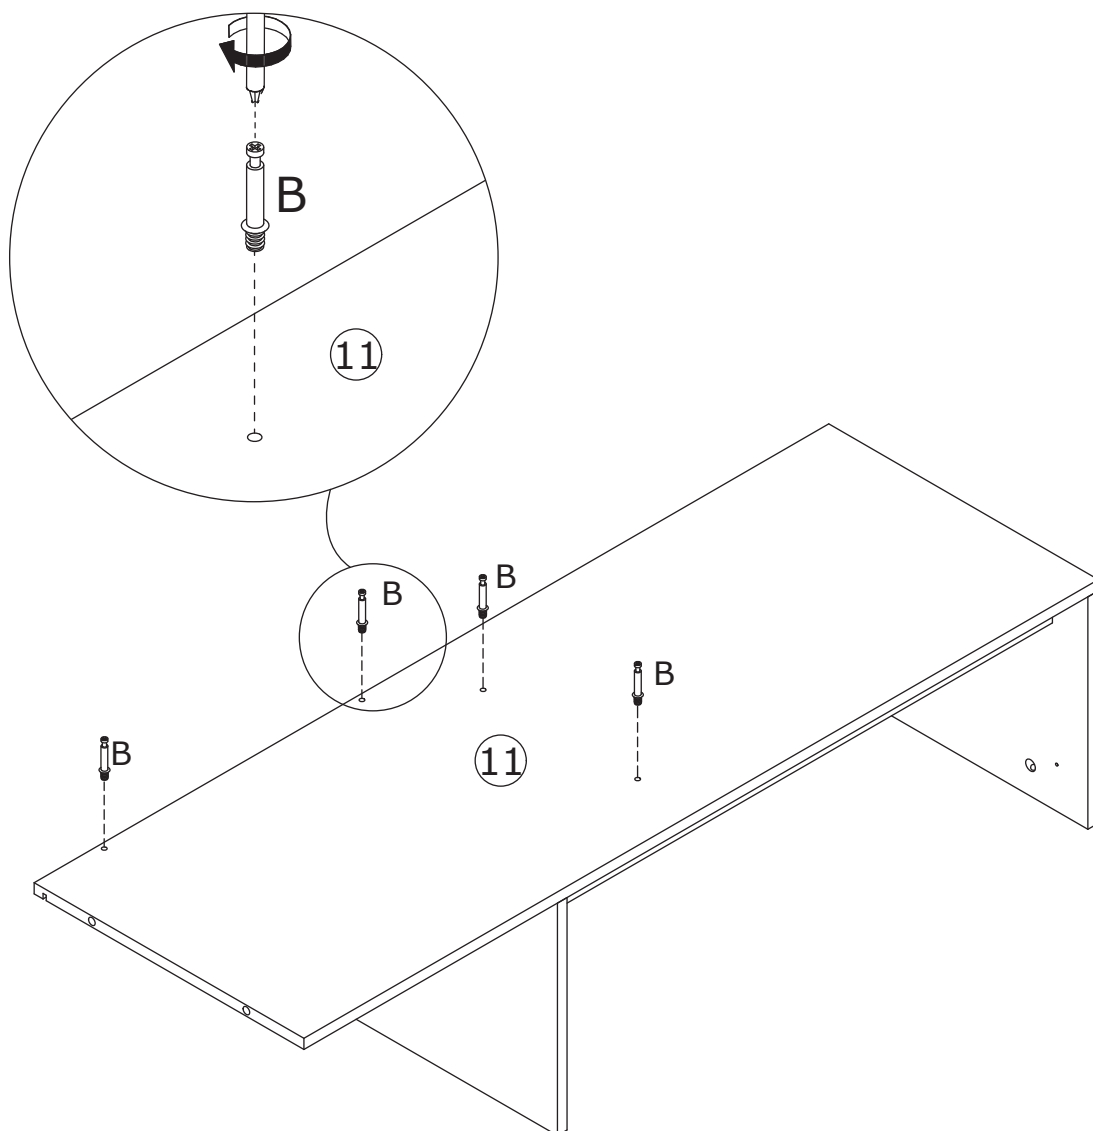 

17

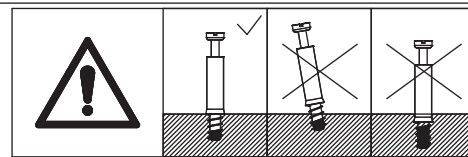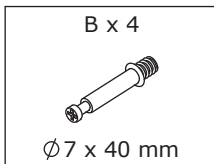   

Screw eccentric bolt (B) onto plate 10.

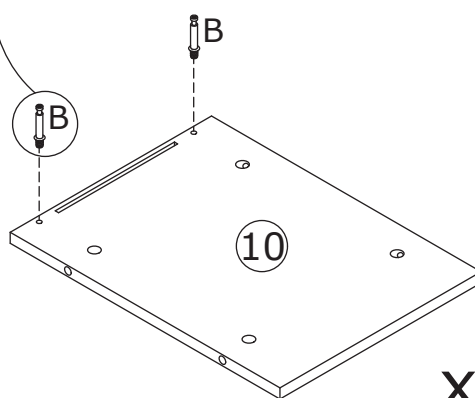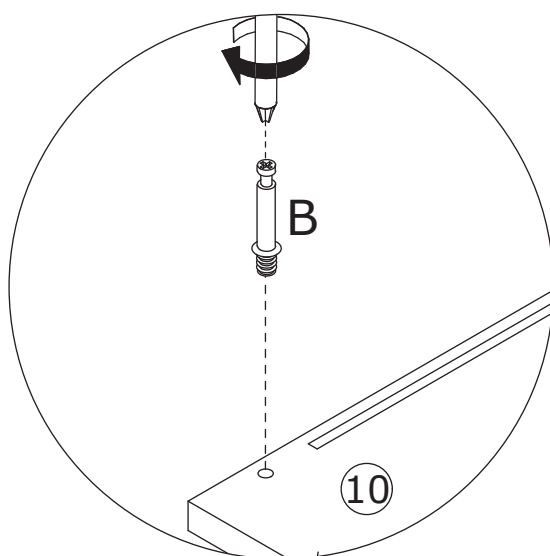  


18

A x 4






 Ø 12 x 9.5 mm



Connect plate 21 to plate 10, then tighten by turning eccentric wheel (A) clockwise.

   Insert plate 20 along the available grooves.

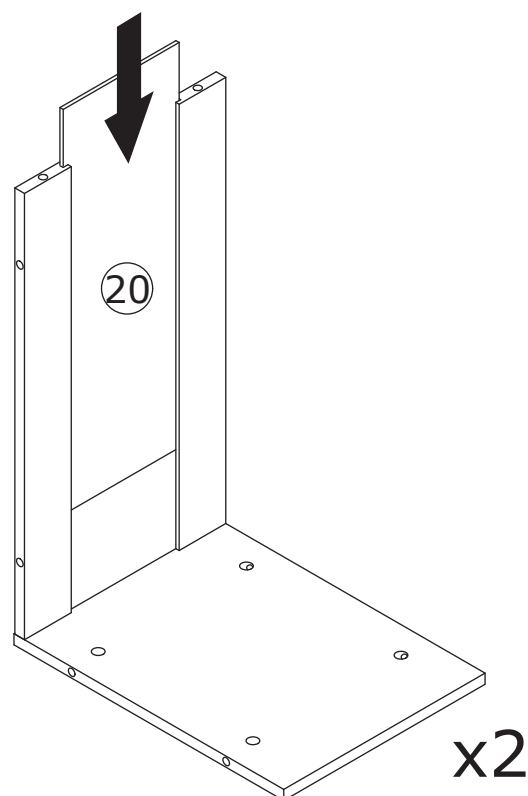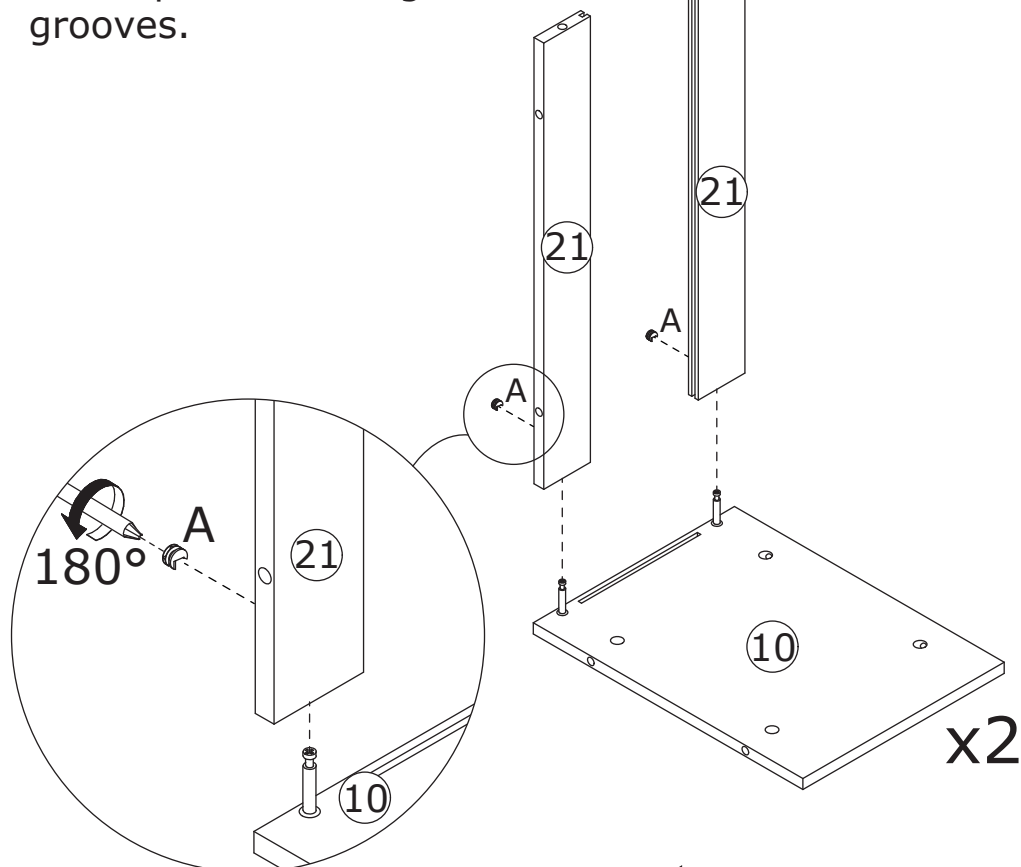
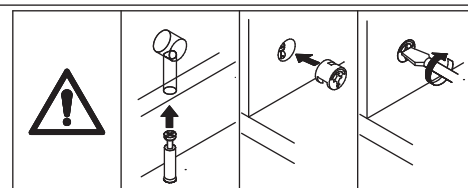


19


A x 4




 
 
Ø 12 x 9.5 mm

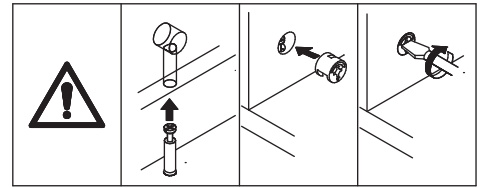

 
Connect plates 21 and 10 to plate 11, then tighten by turning eccentric wheel (A) clockwise.

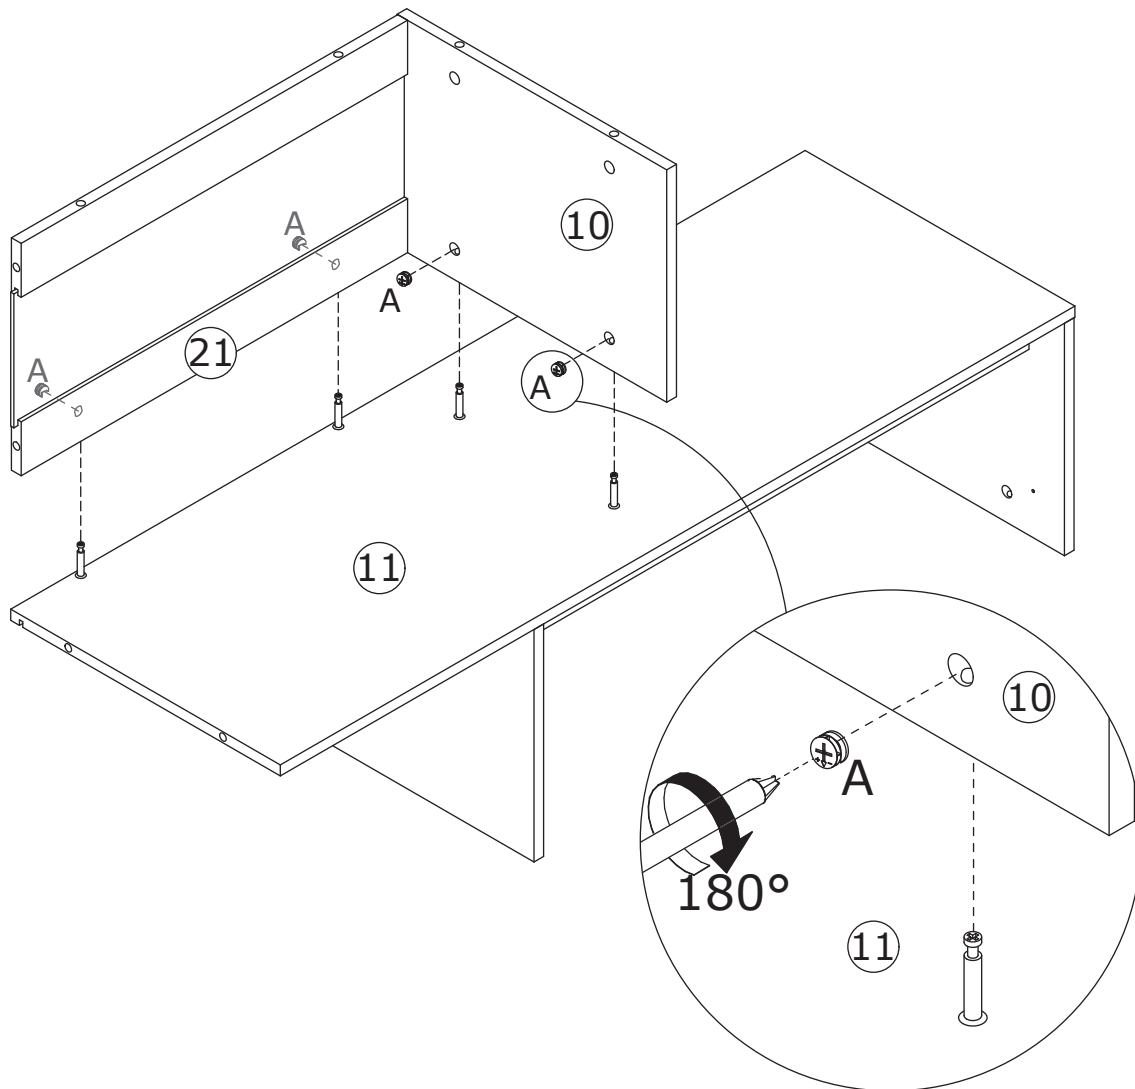

20

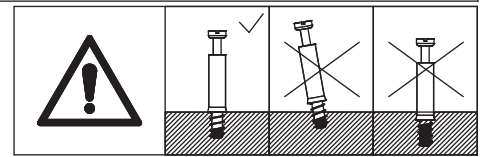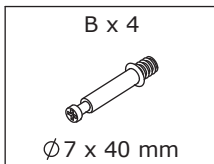   

Screw eccentric bolt (B) onto plate 8.


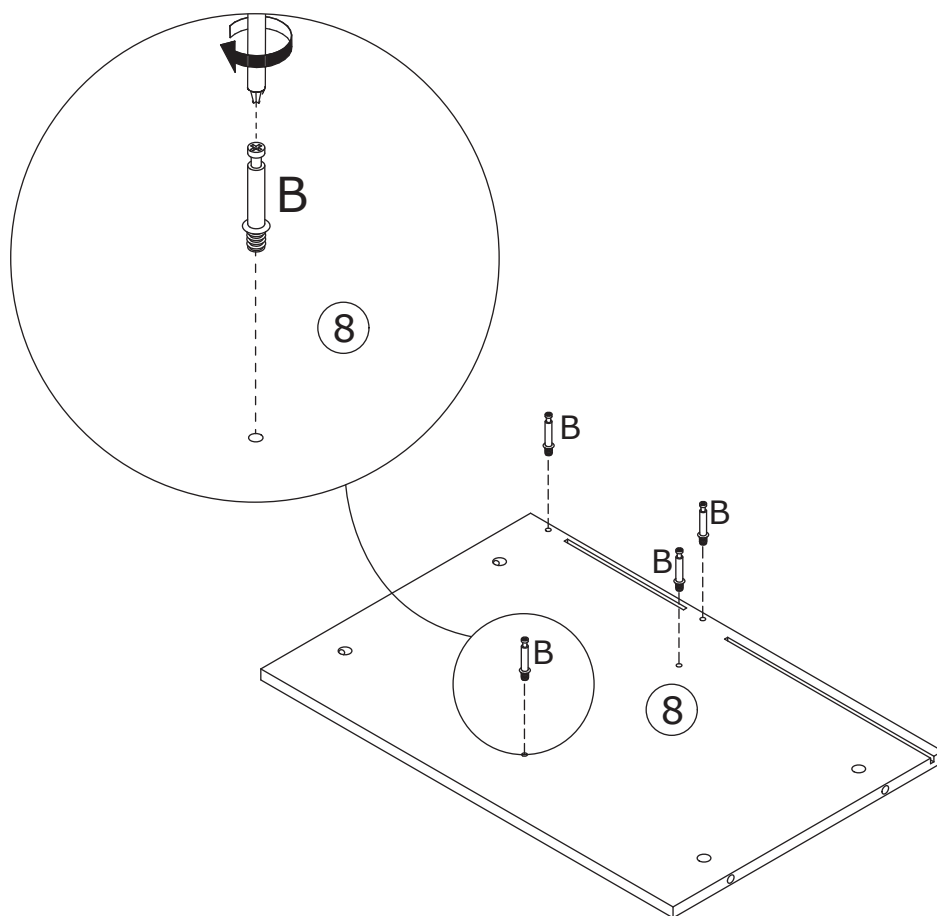 


21


A x 4




 
 
Ø 12 x 9.5 mm

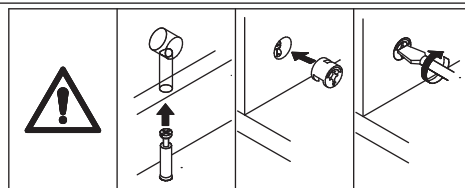

 
Connect plate 8 to plates 21 and 11, then tighten by turning eccentric wheel (A) clockwise.

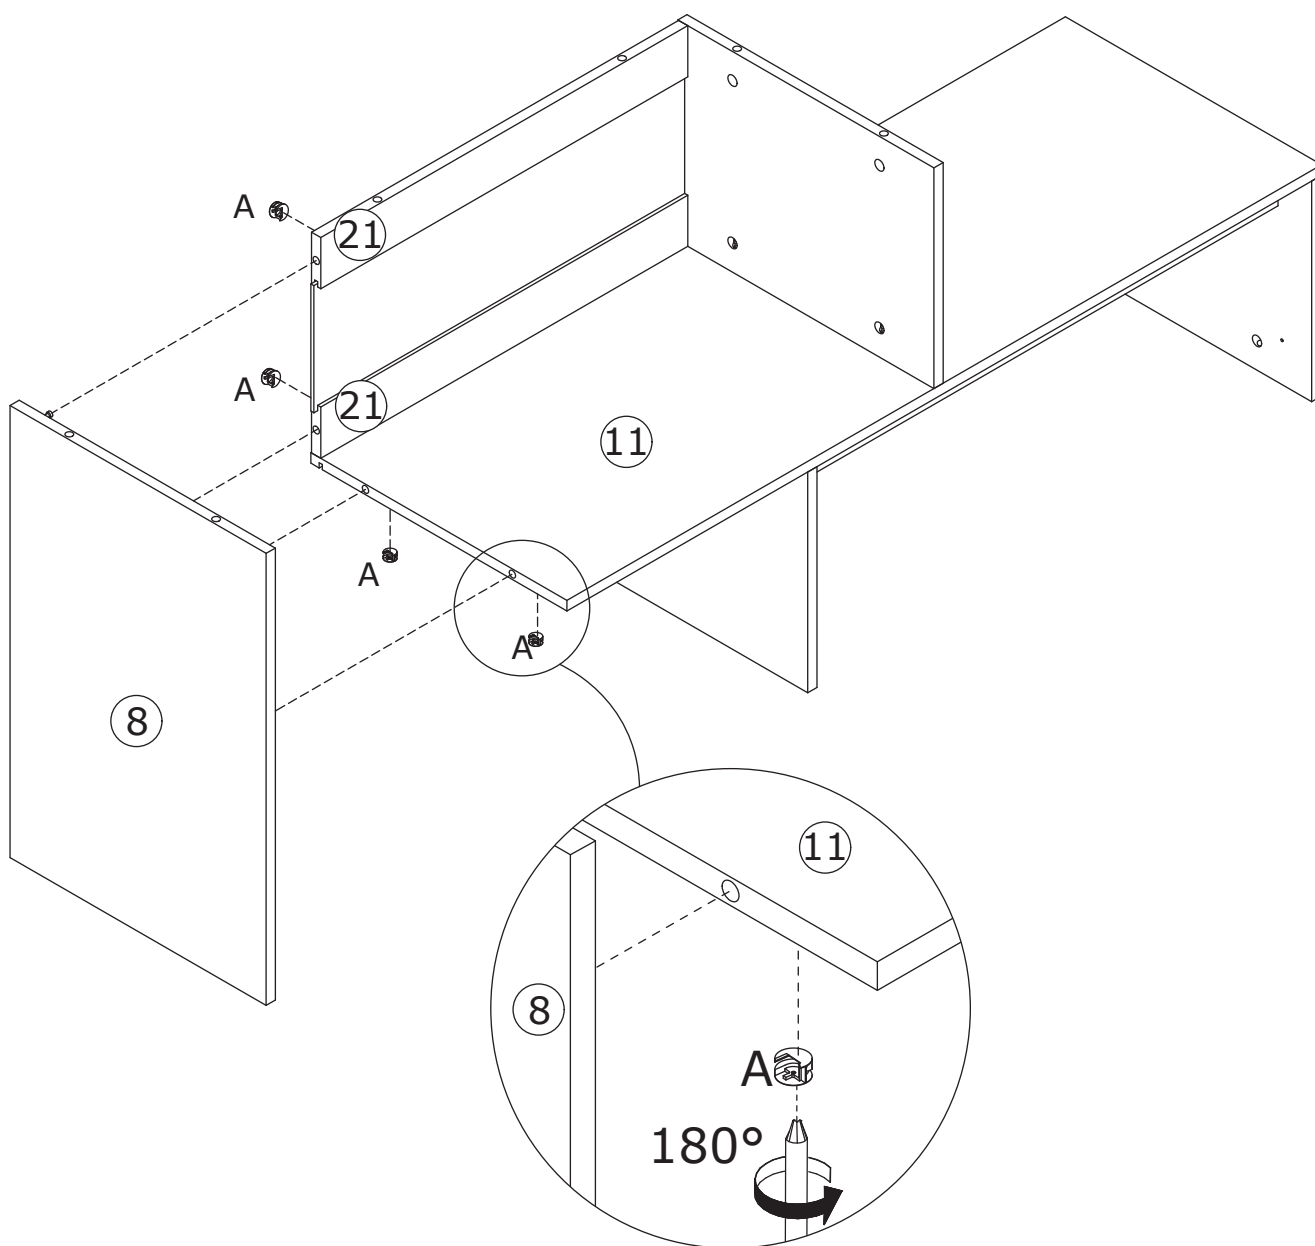

22

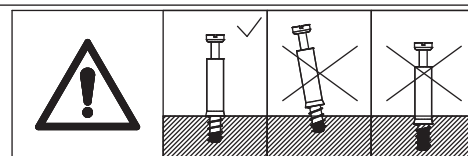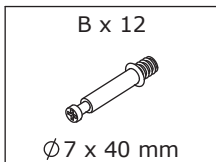   

Screw eccentric bolt (B) onto plate 7.


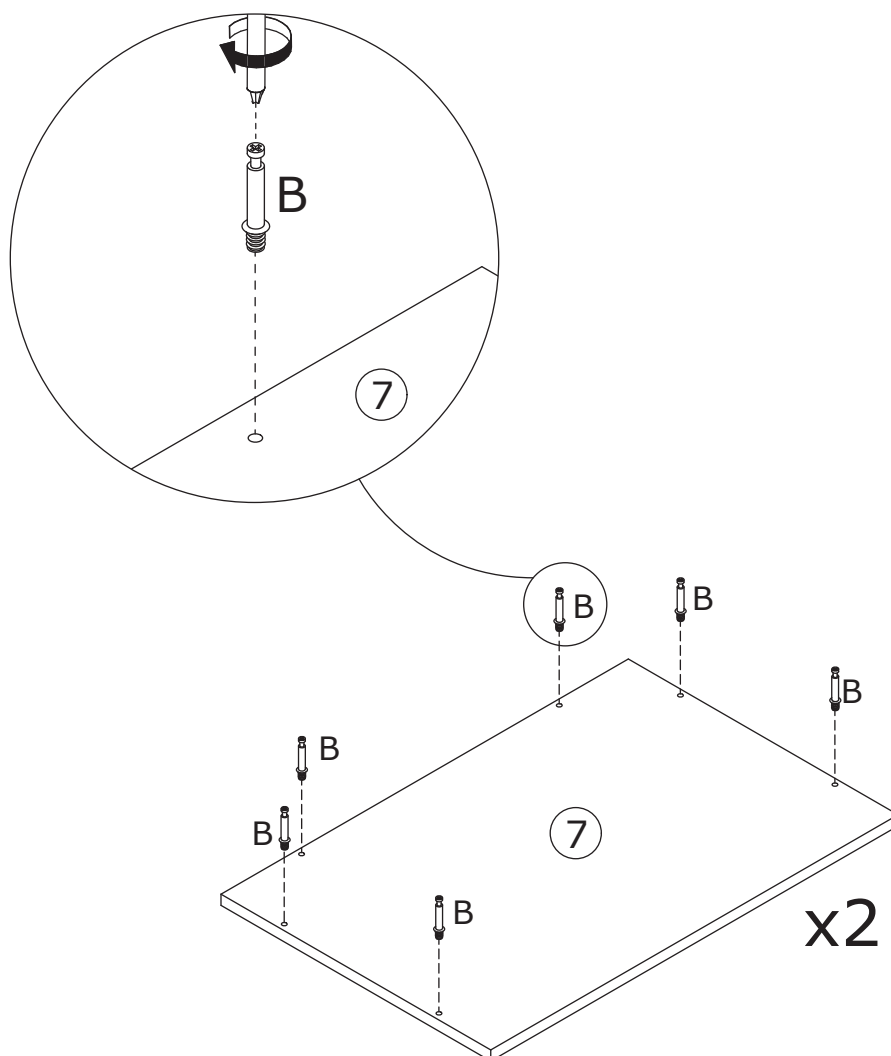 


23


A x 6



 
 
Ø 12 x 9.5 mm

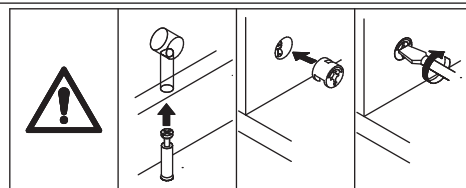


 
Connect plates 8, 10 and 21 to plate 7, then tighten by turning eccentric wheel (A) clockwise.

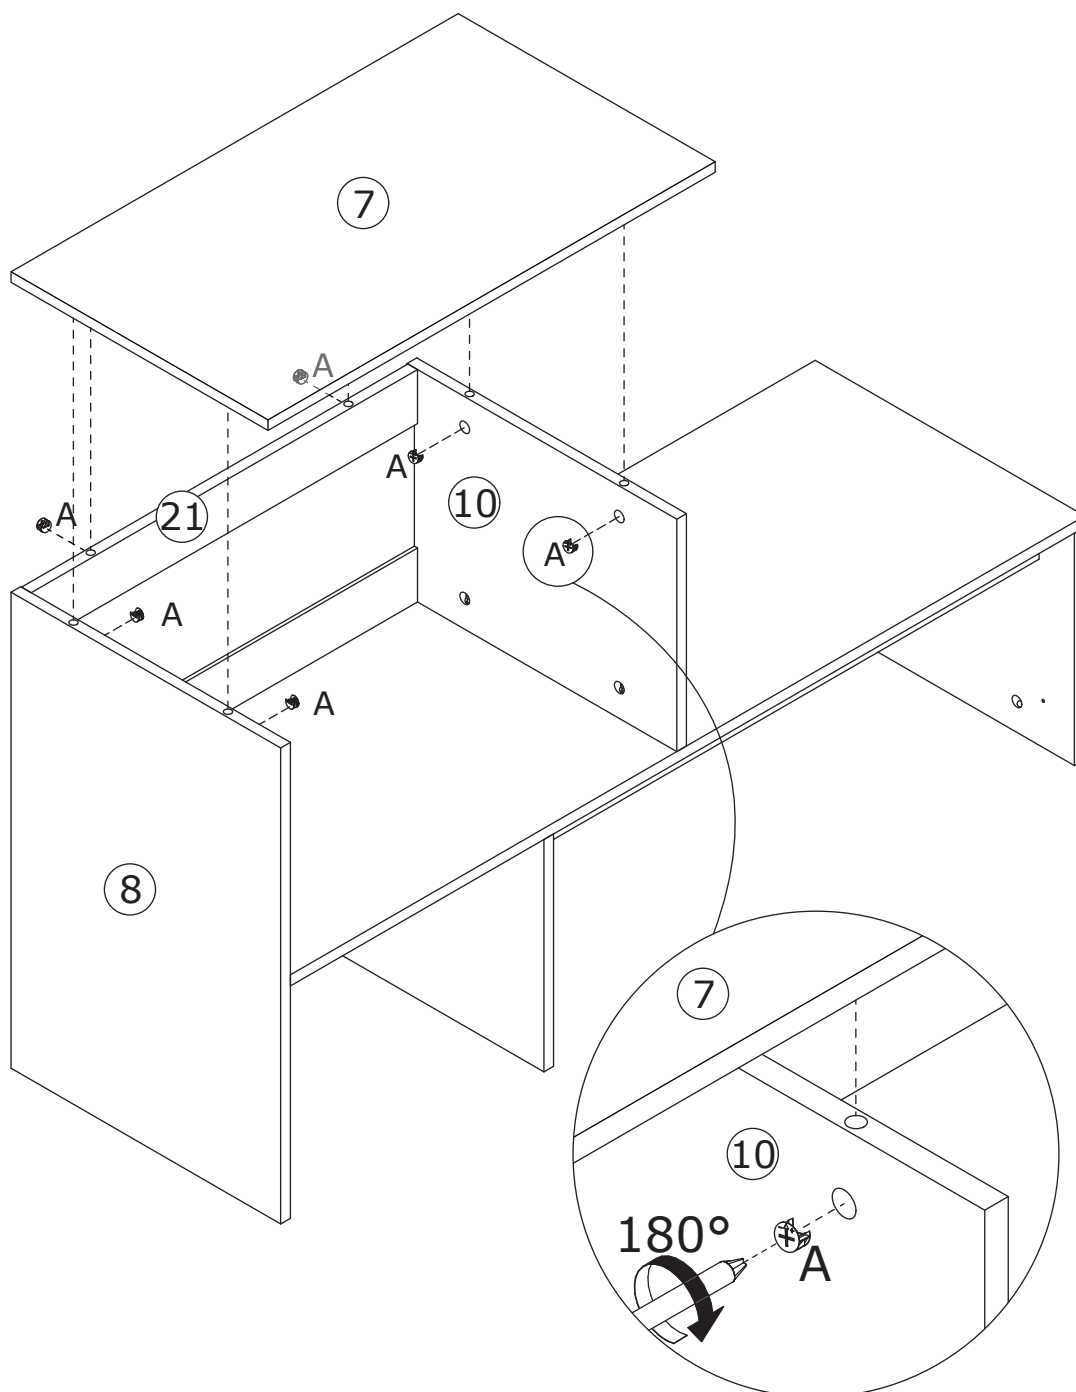

24

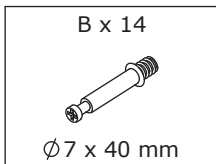  

  Screw eccentric bolt (B) onto **both sides of plate 17**.

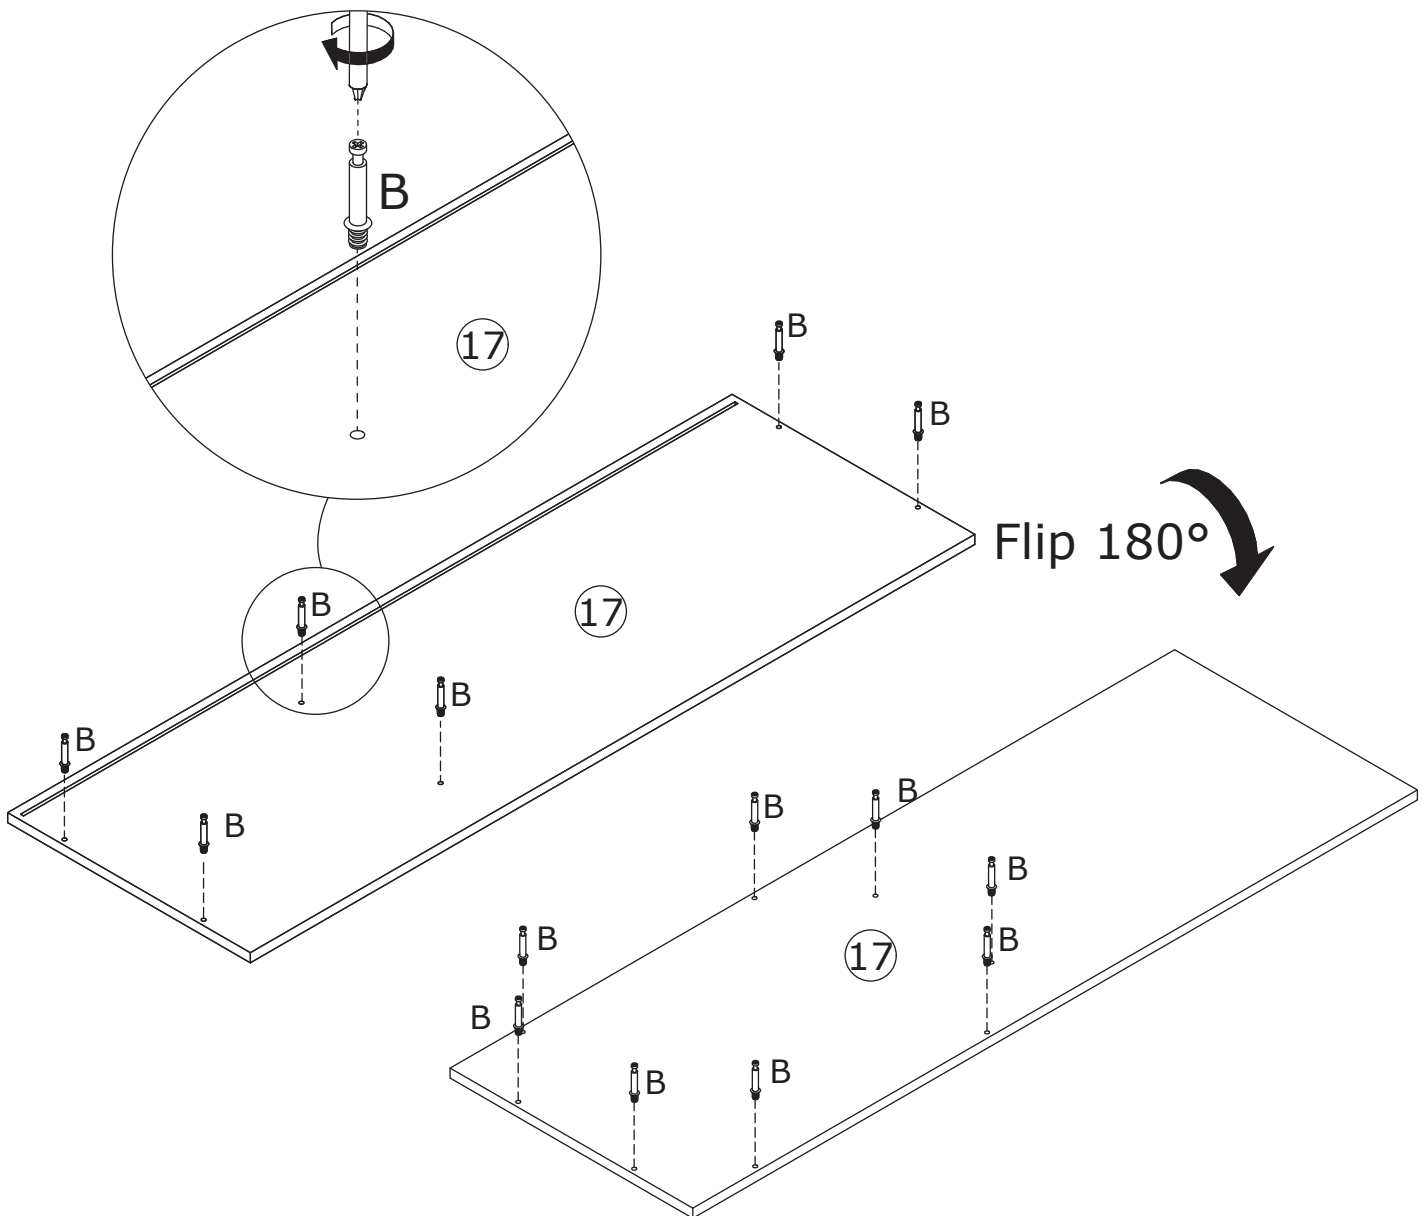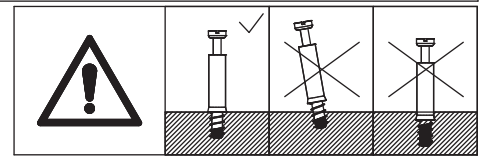


25

A x 6






 Ø 12 x 9.5 mm






Insert plate 19 along the available grooves.

   
Then connect plate 17 to plates 8, 13 and 15, then tighten by turning eccentric wheel (A) clockwise.

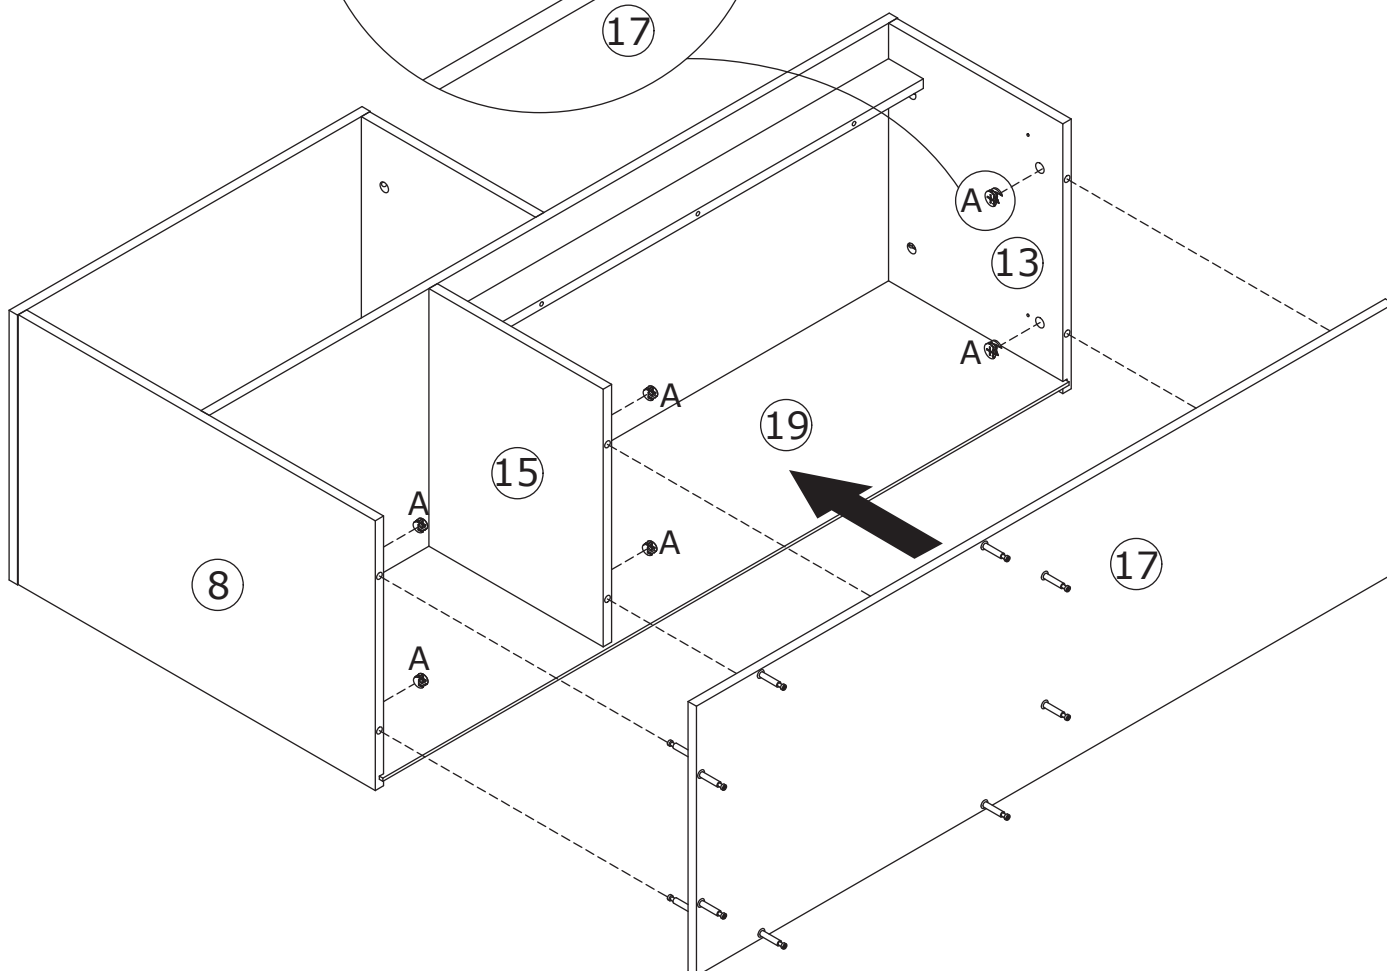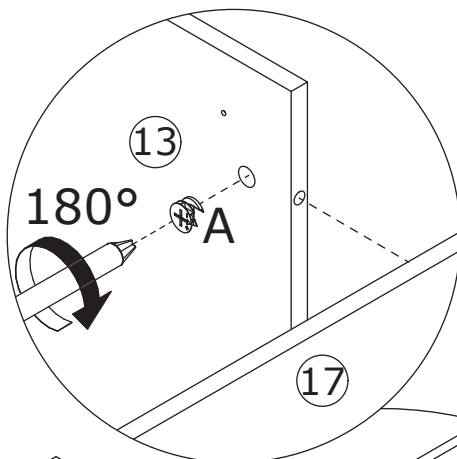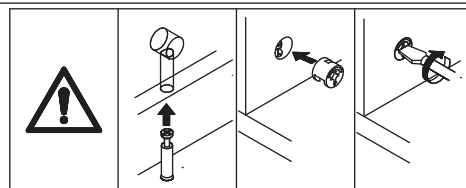

26

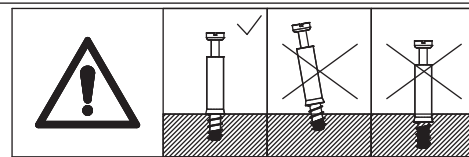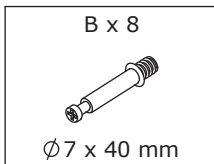   

 SScrew eccentric bolt (B) onto plate 23.


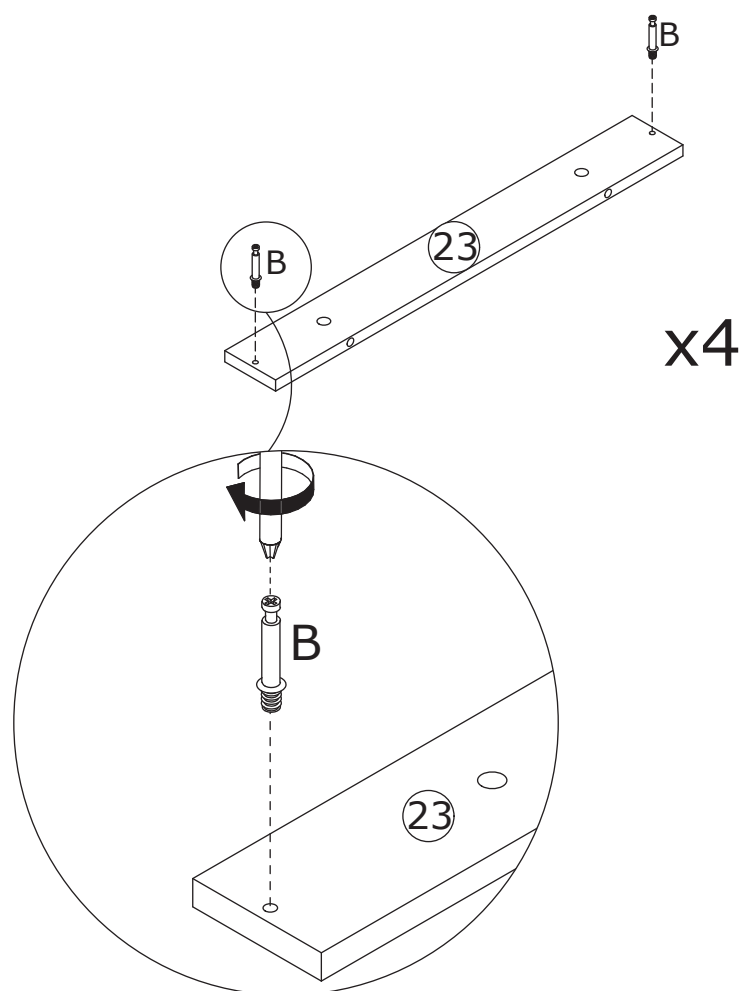


27


A x 8



  Ø 12 x 9.5 mm



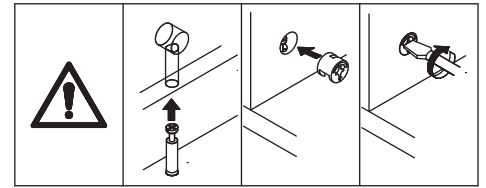



 Connect plates 24 to plate 23, then tighten by turning eccentric wheel (A) clockwise.

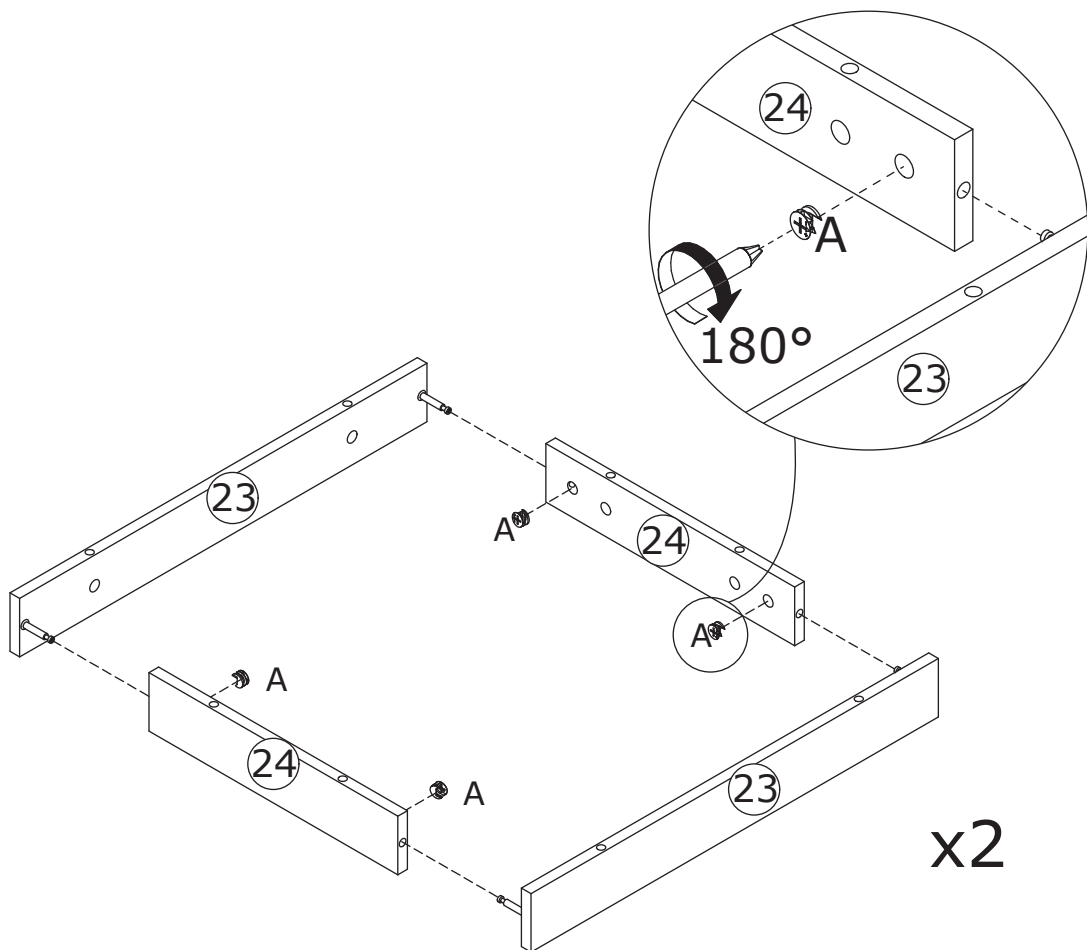


x2

    28

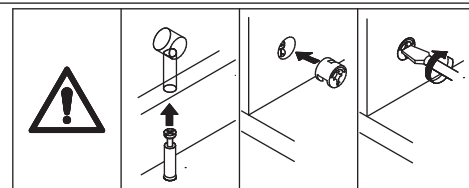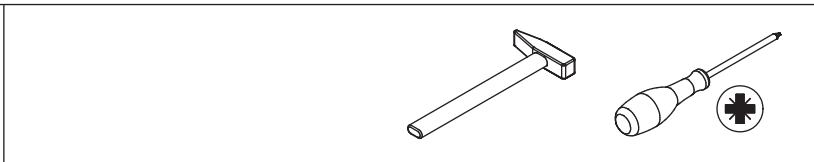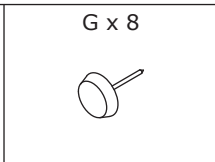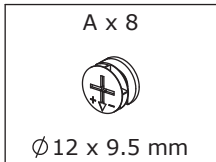

 Connect plates 23 and 24 to plate 17, then tighten by turning eccentric wheel (A) clockwise.
Knock foot pin (G) into the panels as shown.

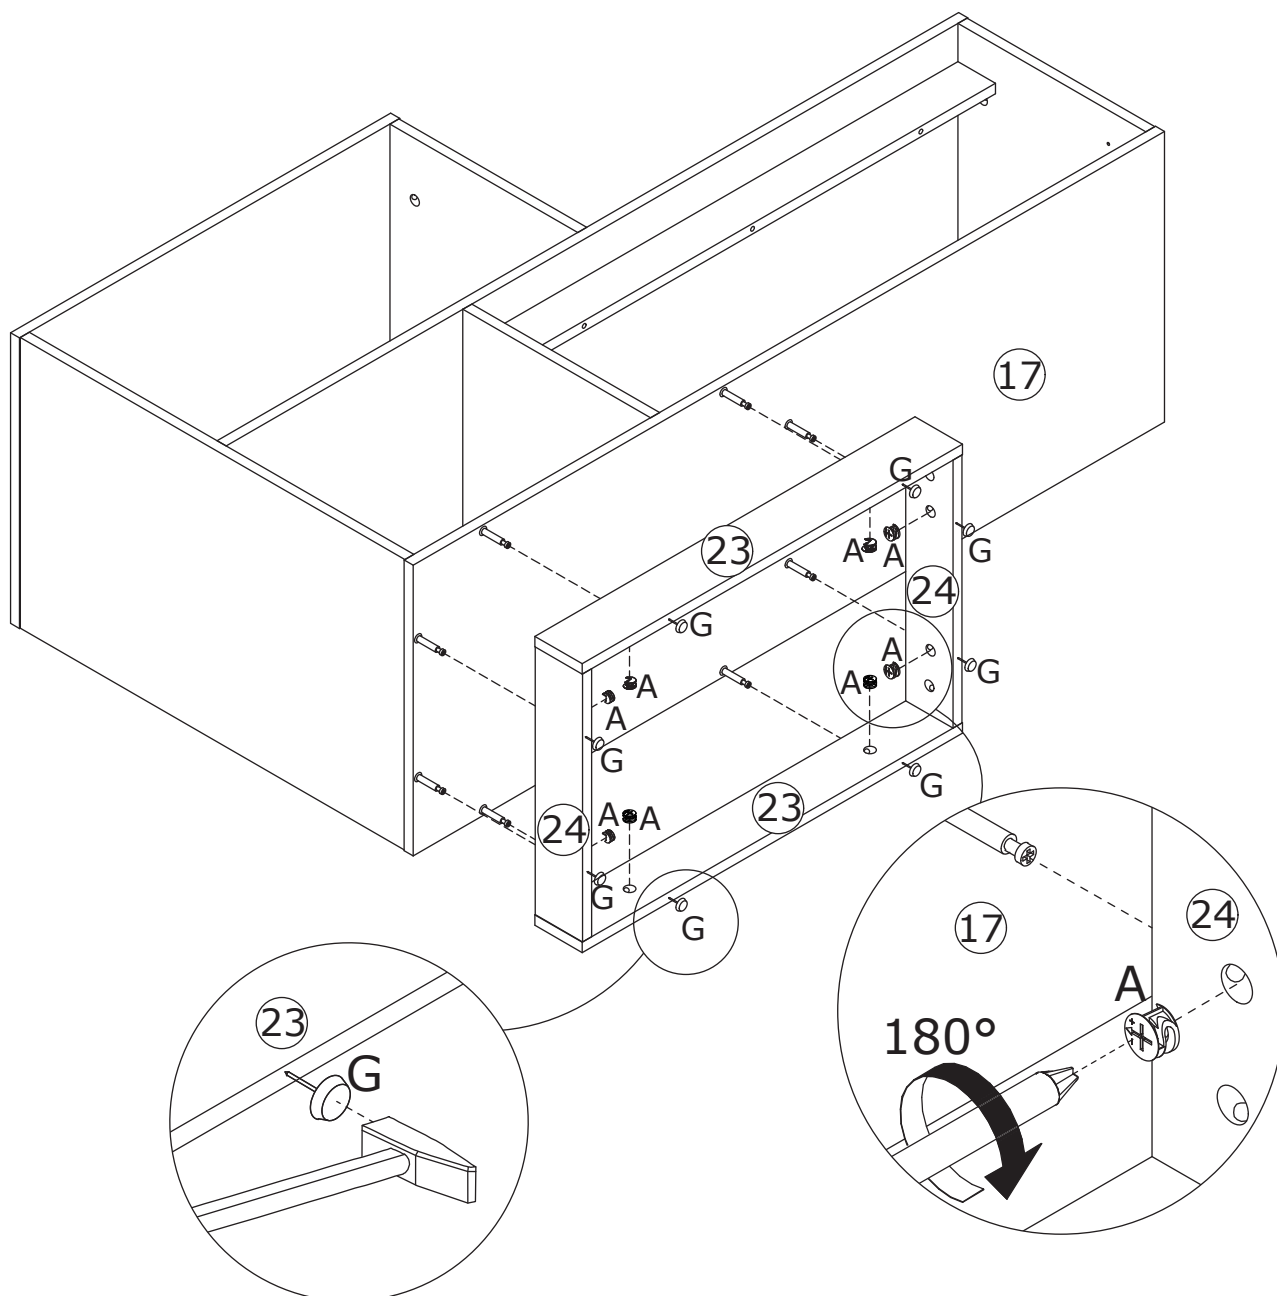


29

H x 8






M3.5 x 14 mm

 
J x 8



 
 
 
Insert clip (J) into back slots and secure them using screw (H).

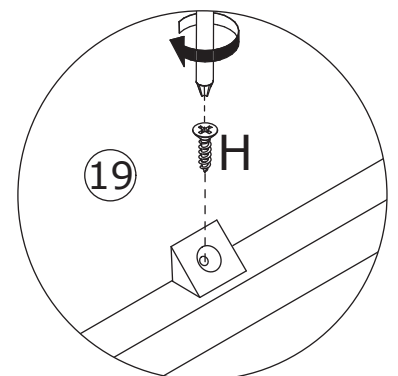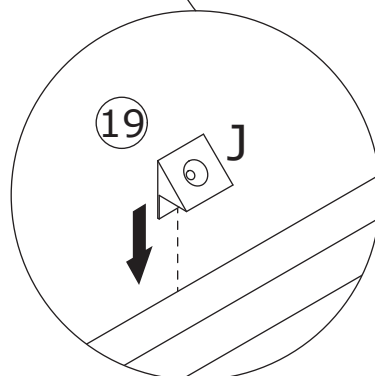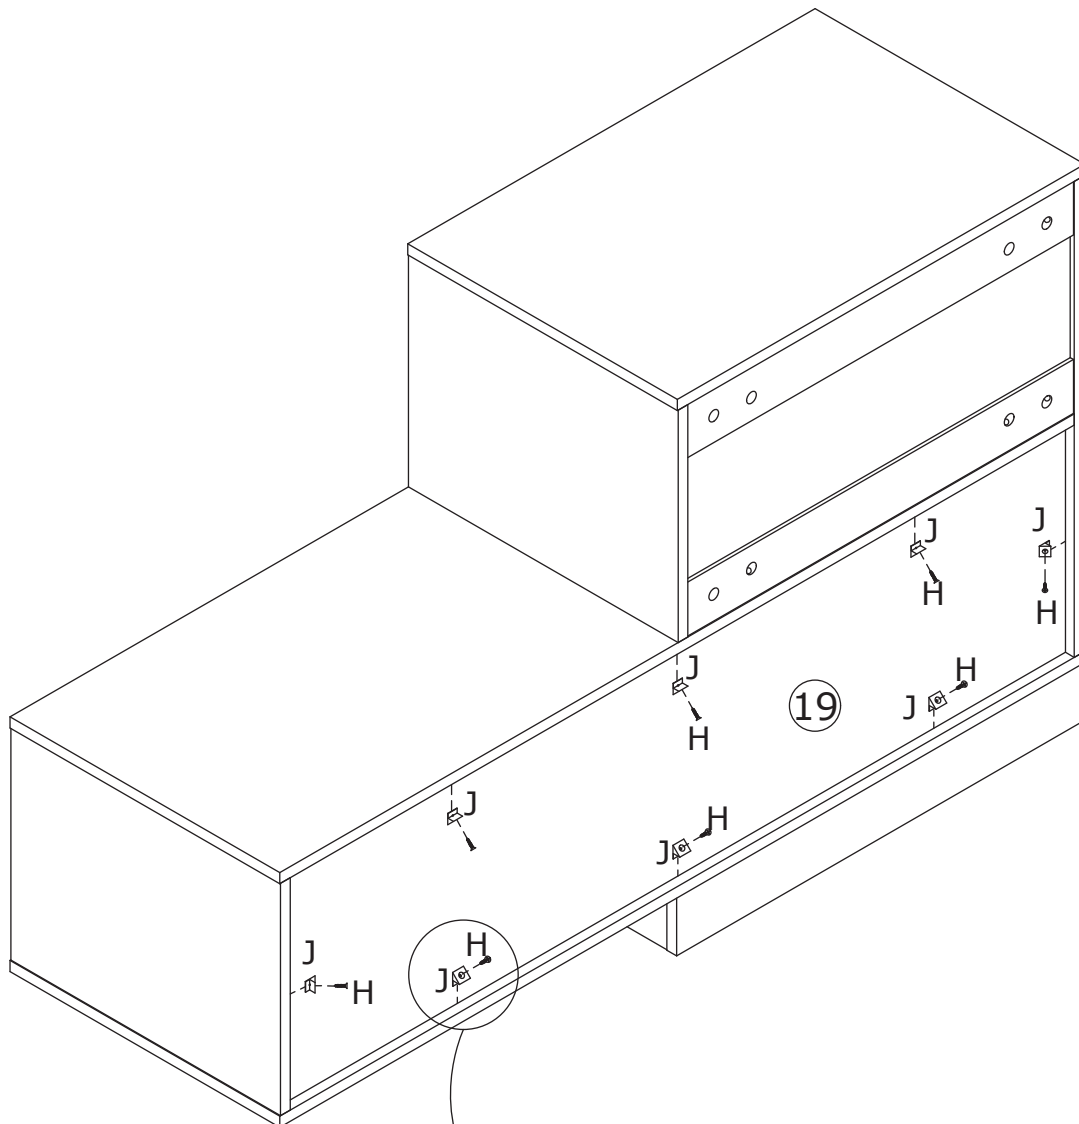




30

 C x 4  M3 x 12 mm	L x 1 CL  12"	L x 1 CR  12"	
--	--	--	---

   
Secure guide L(CL) and L(CR) to plate 15 and 13 respectively using screw (C).

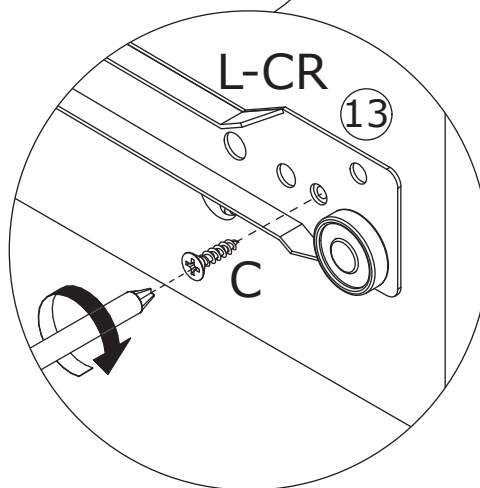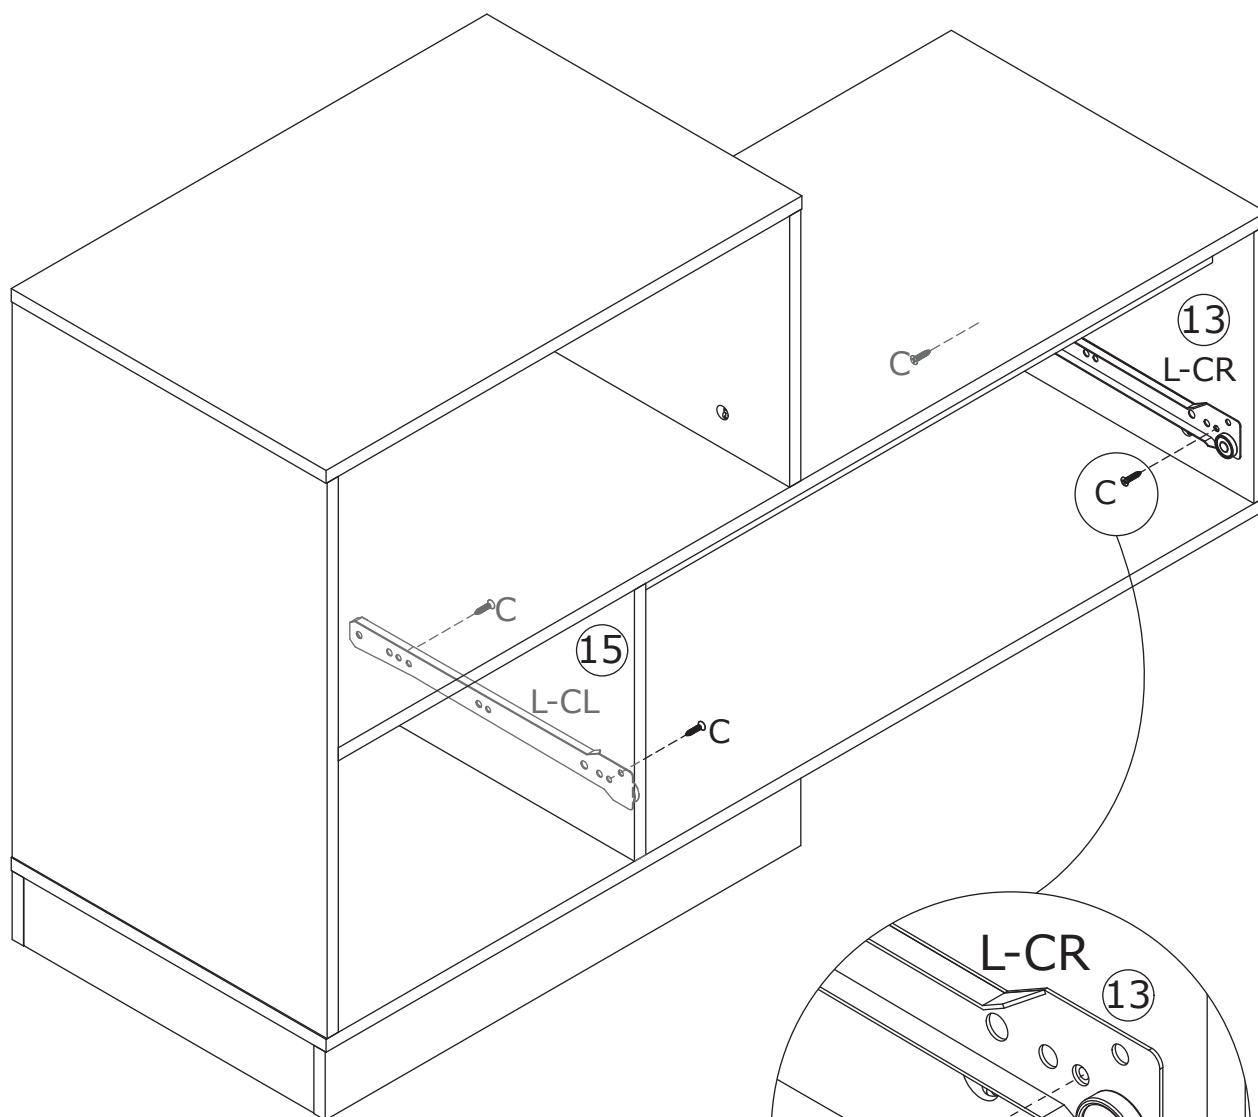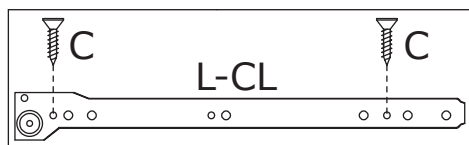

31

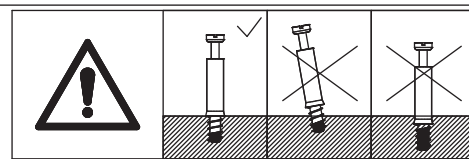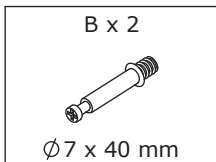   

 Screw eccentric bolt (B) onto plate 14 and 16.


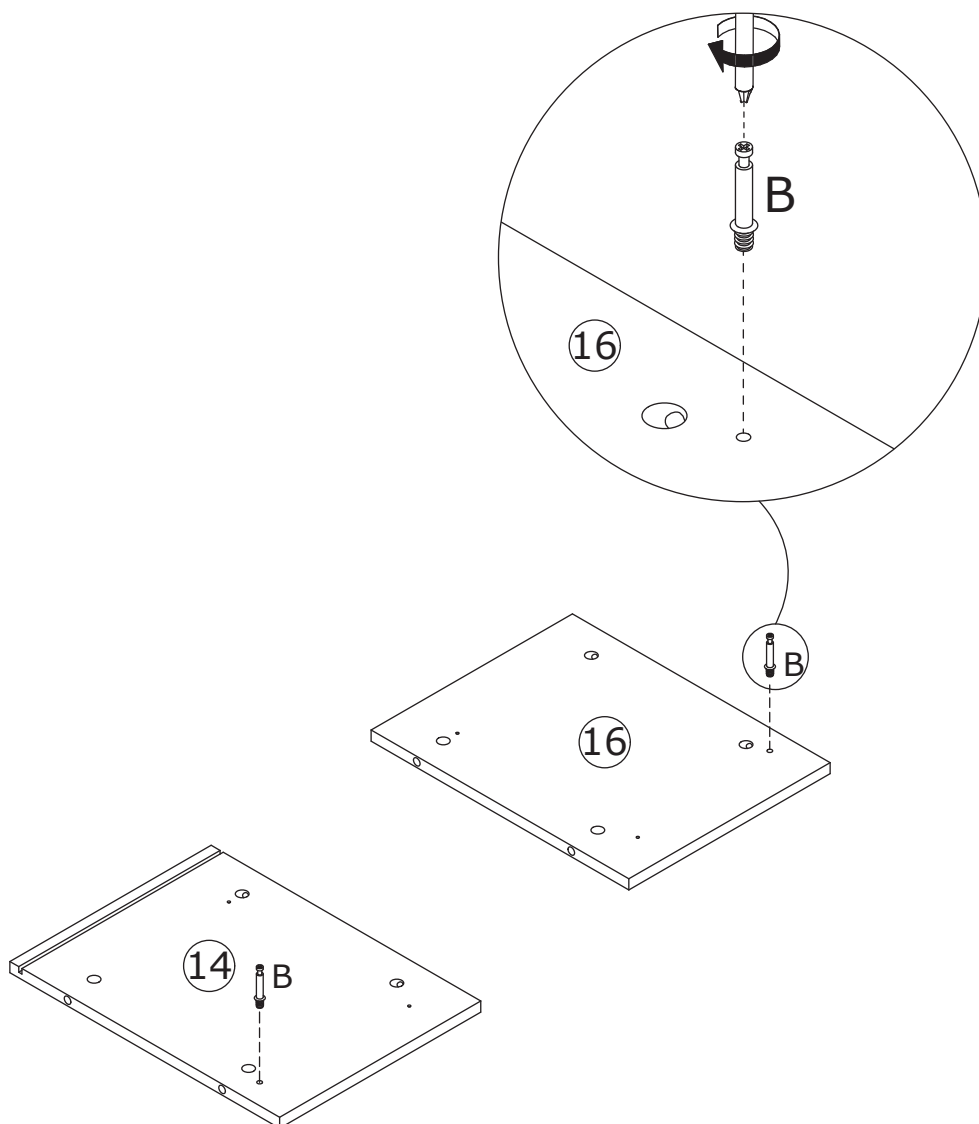


32


A x 2




 
 
Ø 12 x 9.5 mm

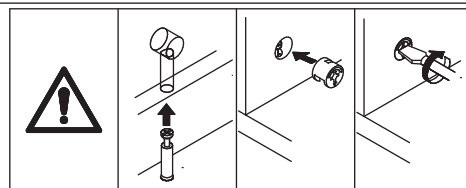

 
Connect plates 14 and 16 to plate 22, then tighten by turning eccentric wheel (A) clockwise.

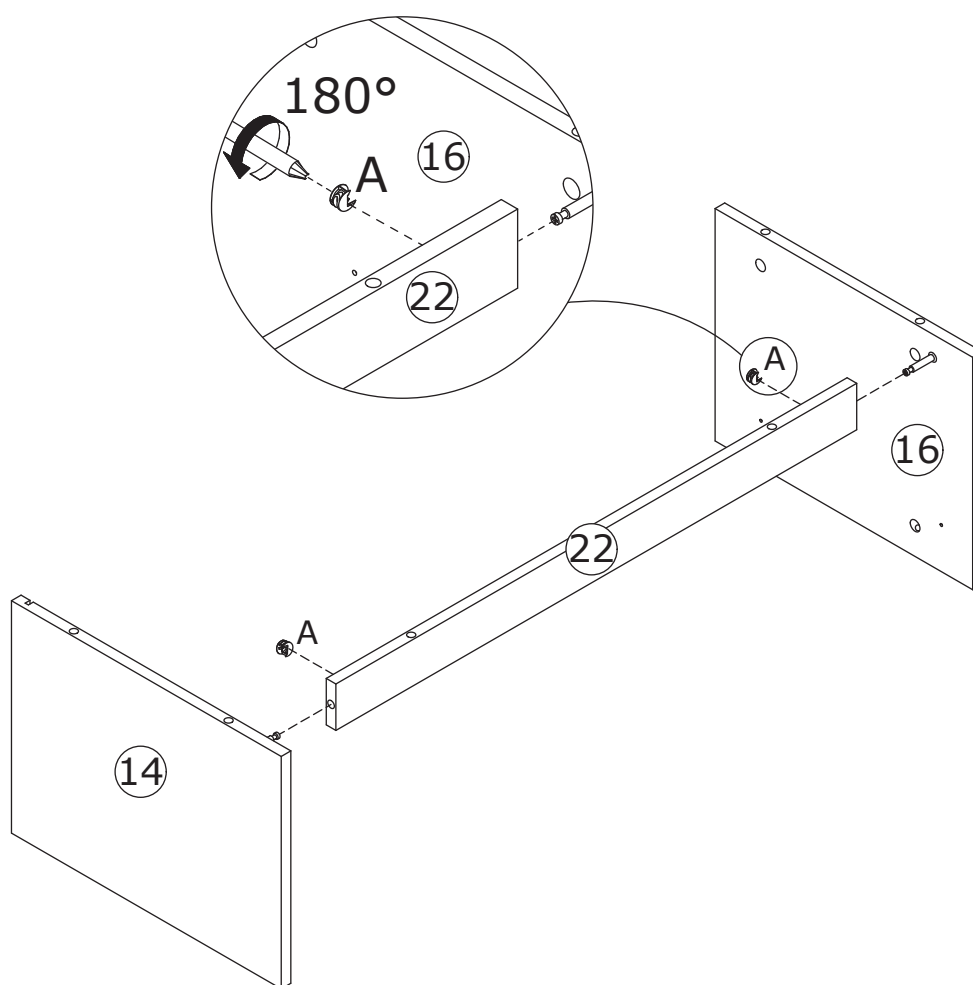

33

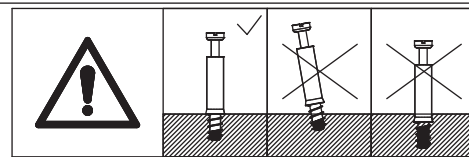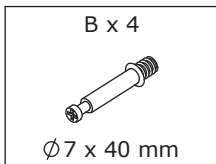   

Screw eccentric bolt (B) onto plate 12.


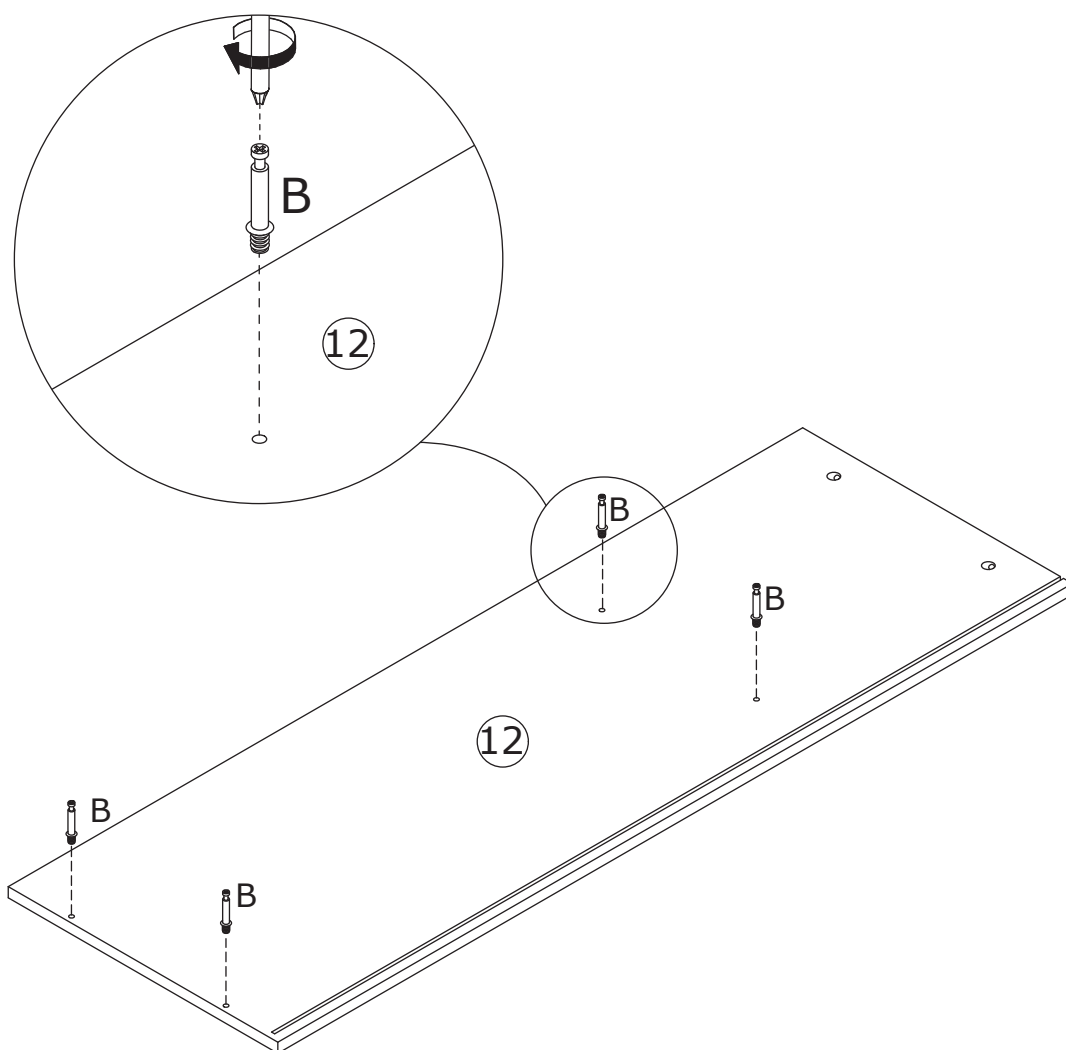 


34


A x 4



  Ø 12 x 9.5 mm

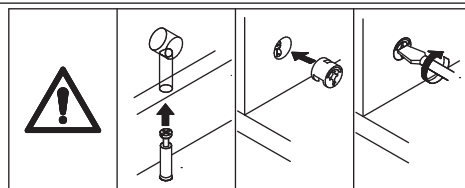

 Connect plates 14 and 16 to plate 12, then tighten by turning eccentric wheel (A) clockwise.

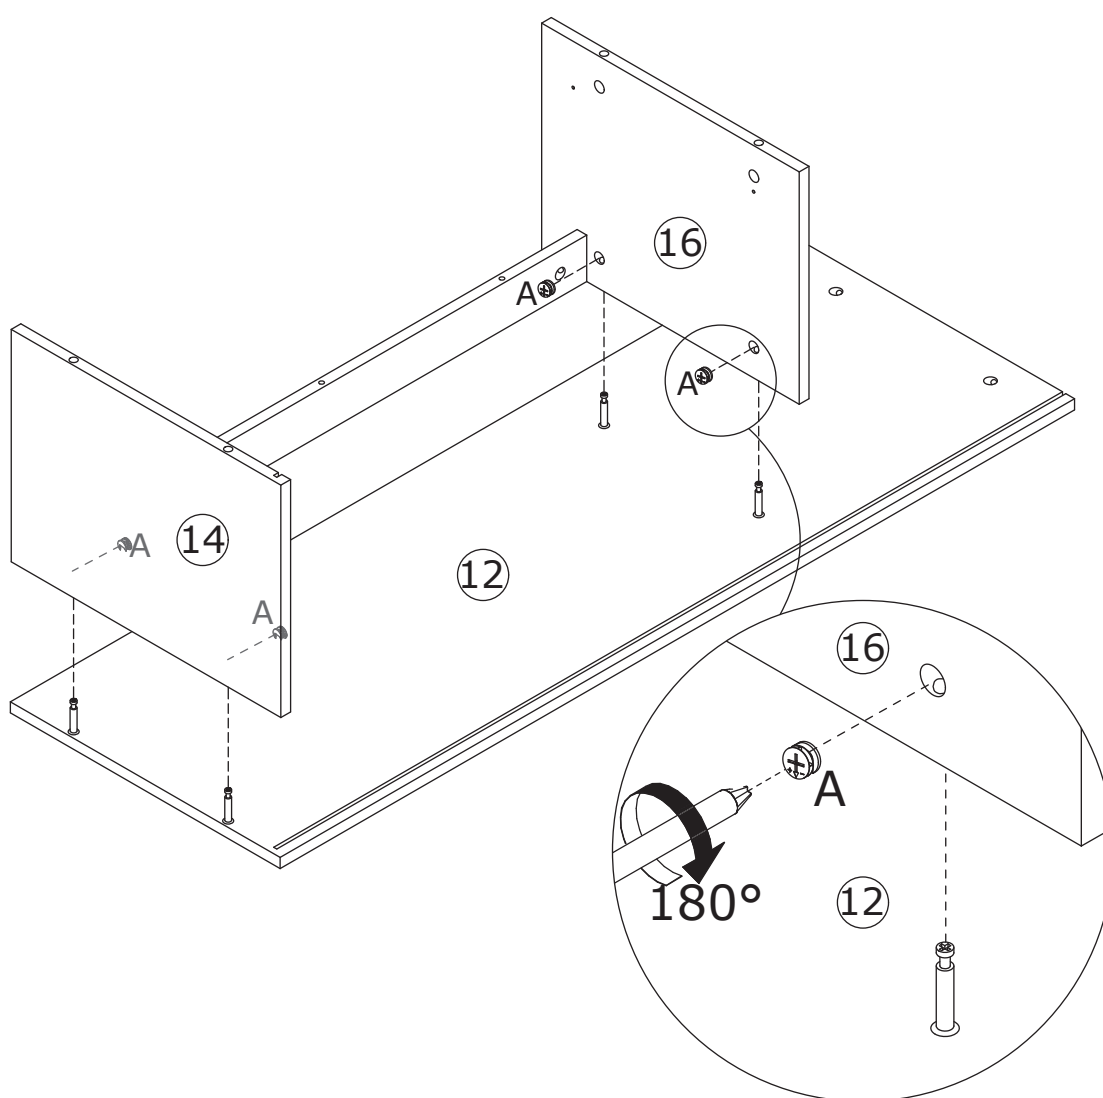


35


D x 3





 
M4 x 30 mm



 
Secure plate 22 to plate 12 using screw (D).

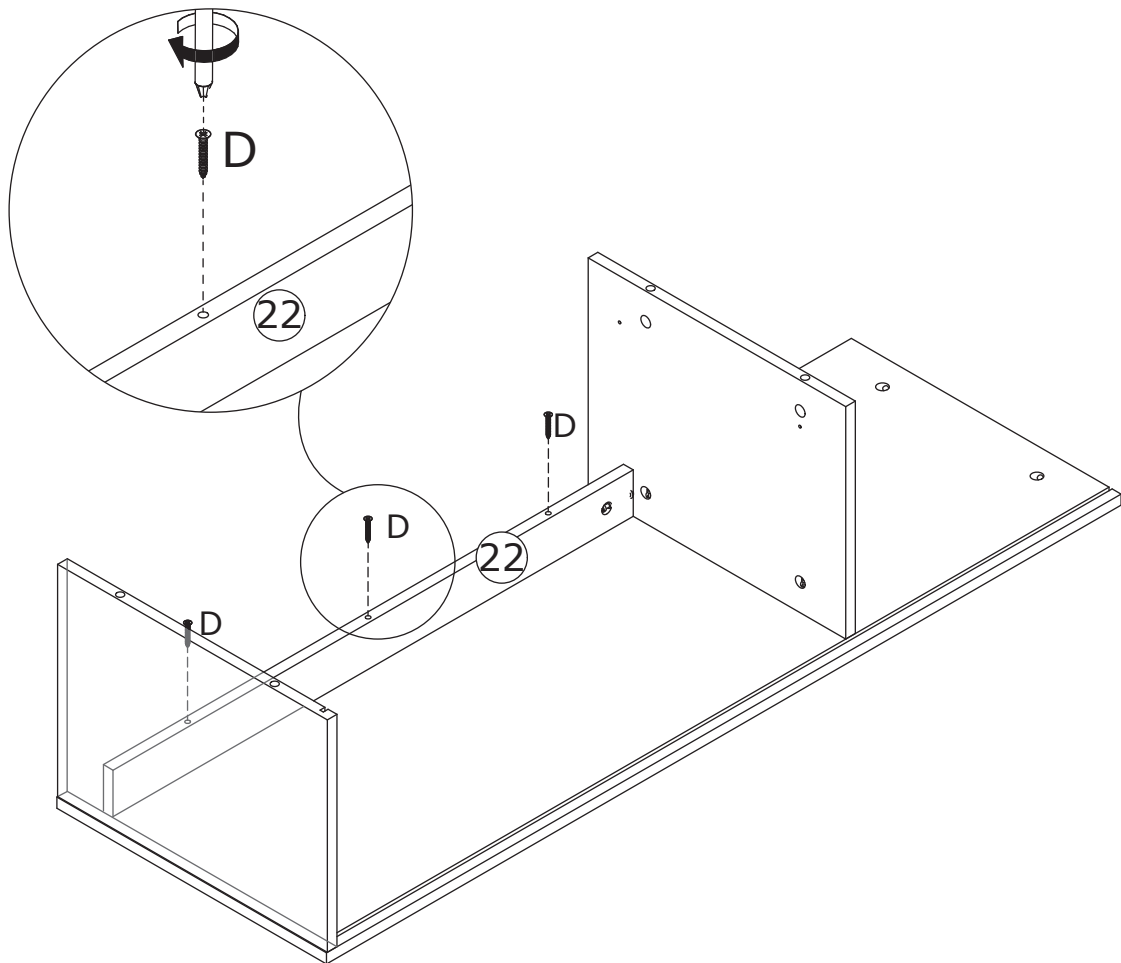

36

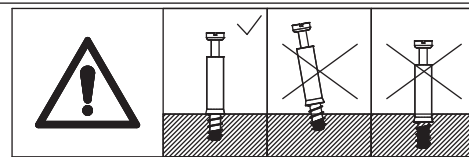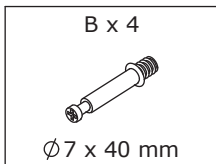   

Screw eccentric bolt (B) onto plate 12.


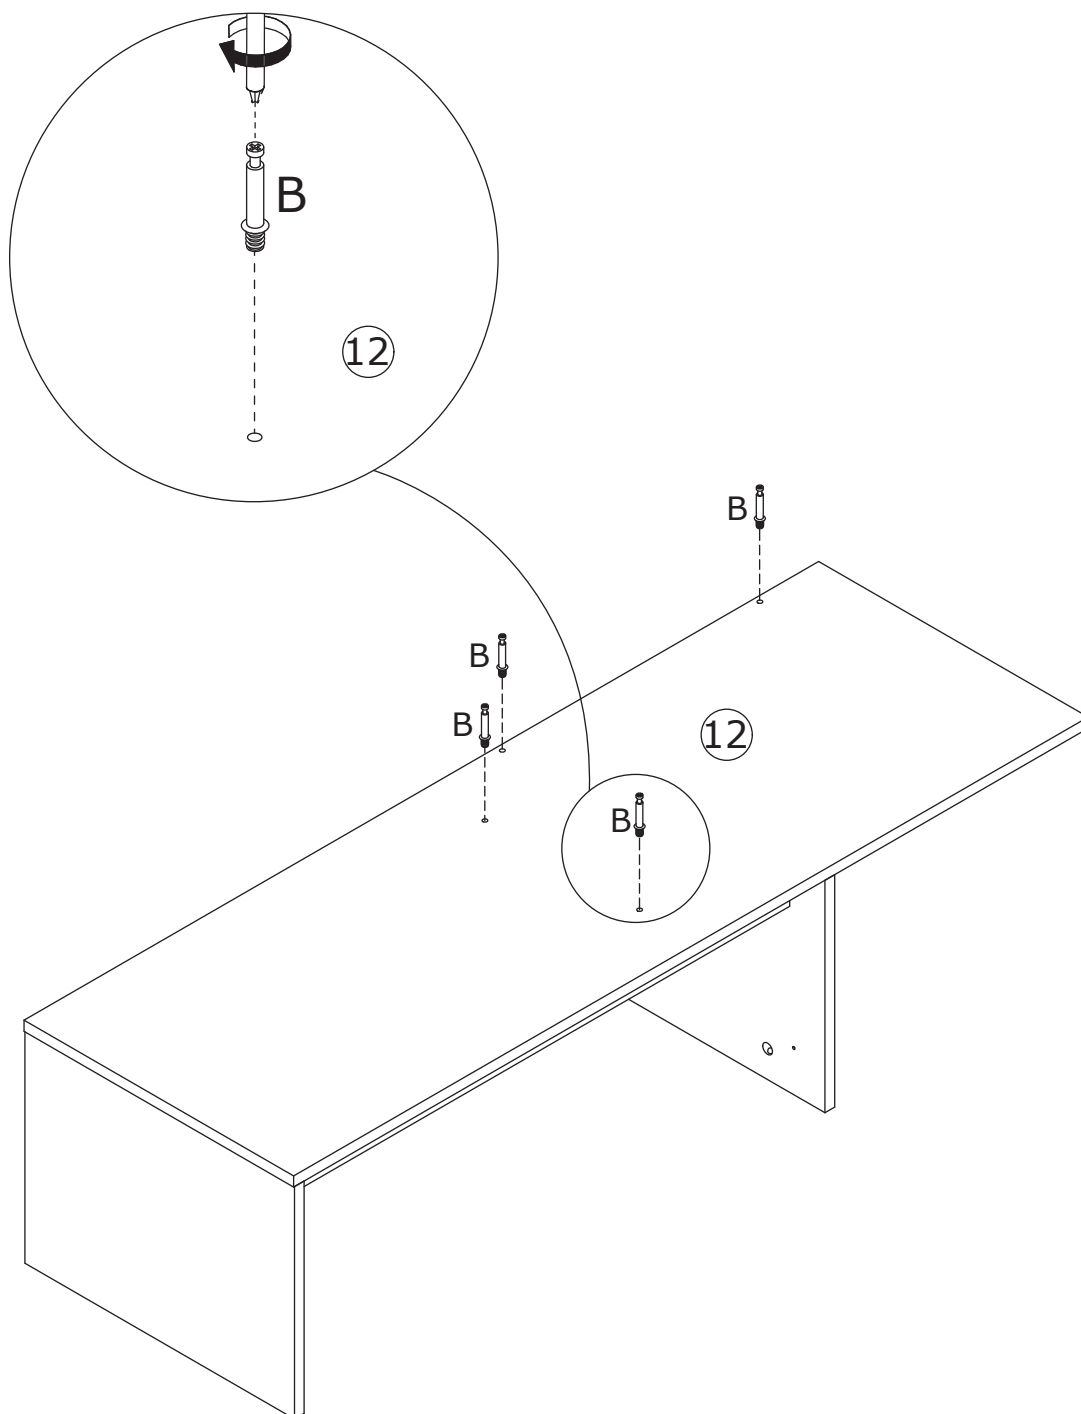 


37


A x 4



  Ø 12 x 9.5 mm

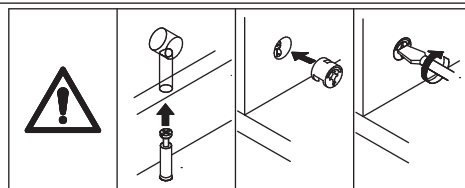



 Connect plates 21 and 10 to plate 12, then tighten by turning eccentric wheel (A) clockwise

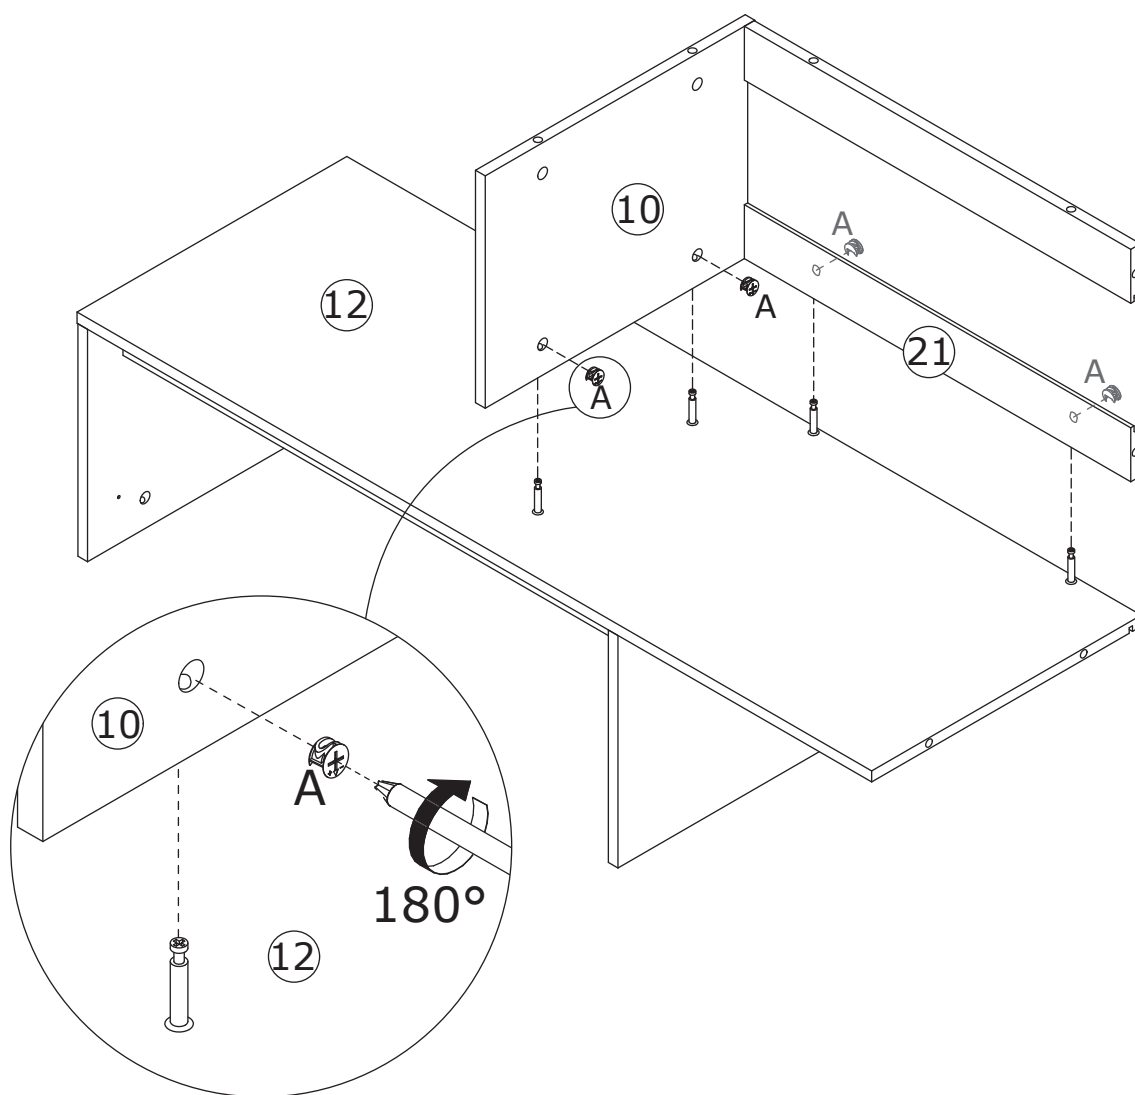


38

  B x 4



Screw eccentric bolt (B) onto plate 9.


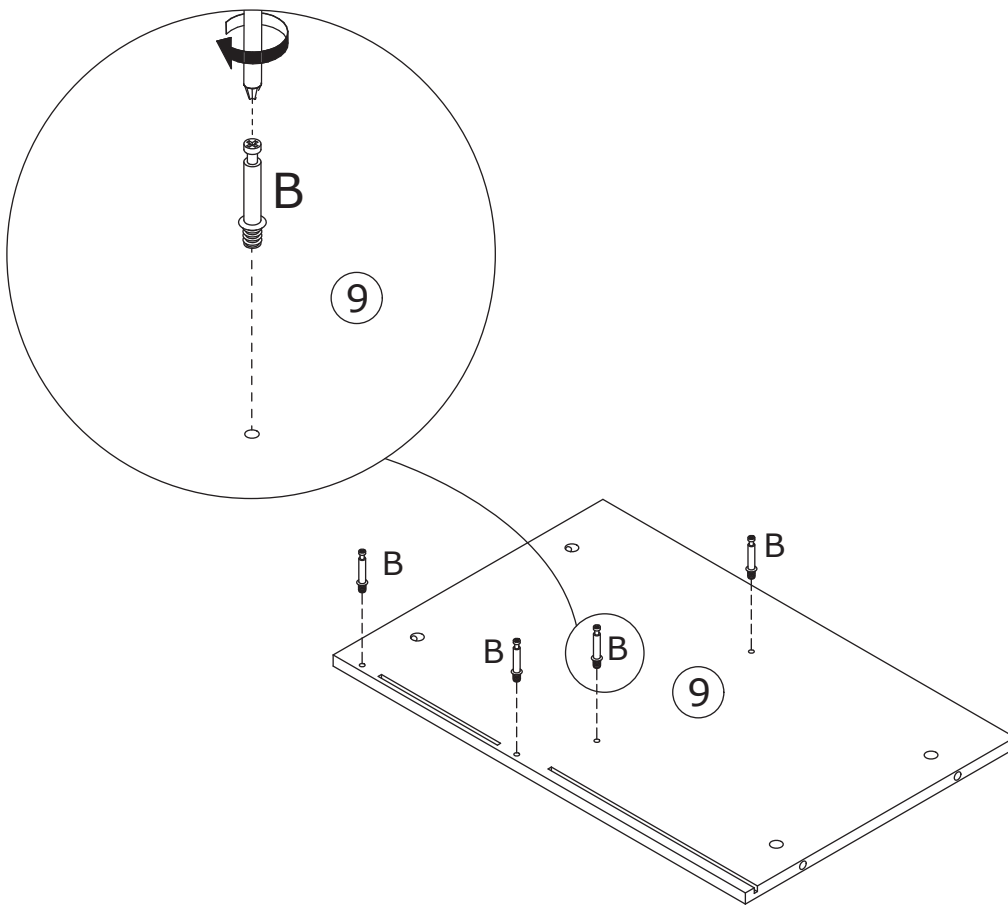 


39


A x 4



  Ø 12 x 9.5 mm

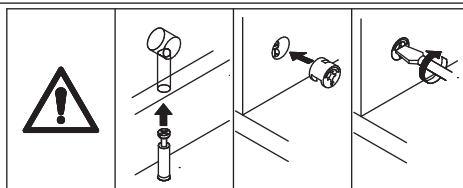

 Connect plate 9 to plates 21 and 12, then tighten by turning eccentric wheel (A) clockwise.


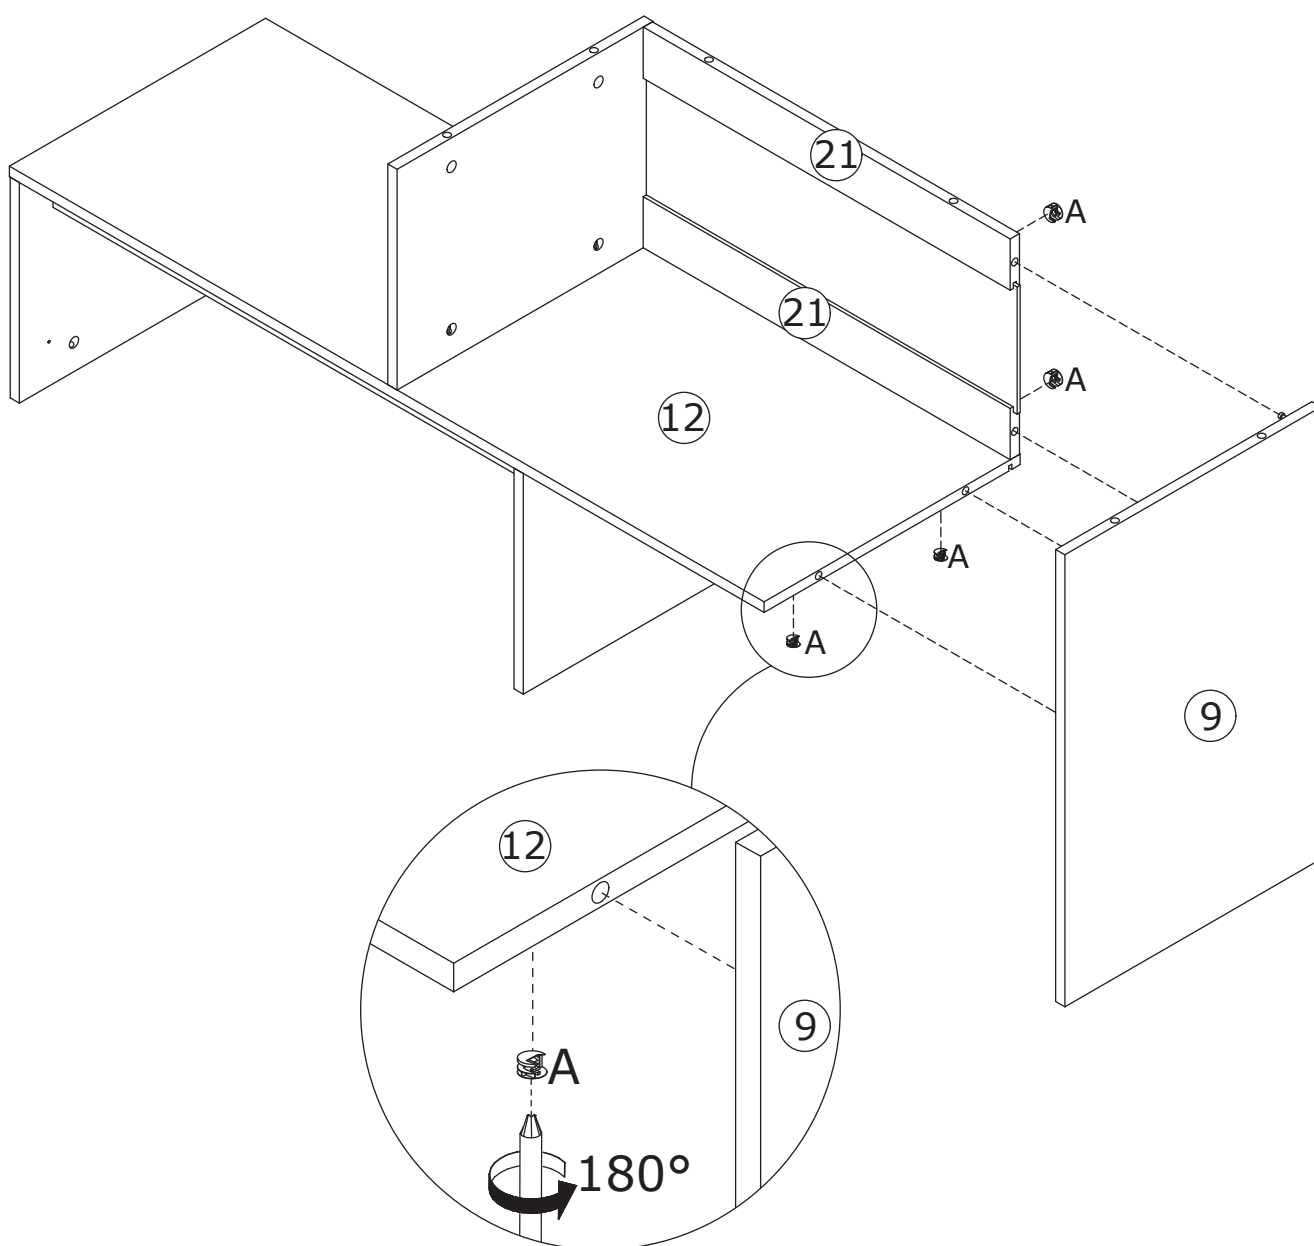


40


A x 6



 
 
Ø 12 x 9.5 mm

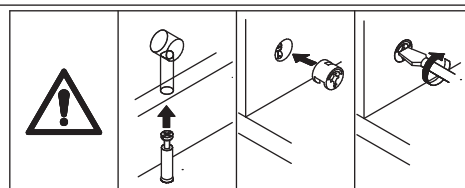


 
Connect plates 9, 10 and 21 to plate 7, then
tighten by turning eccentric wheel (A) clockwise

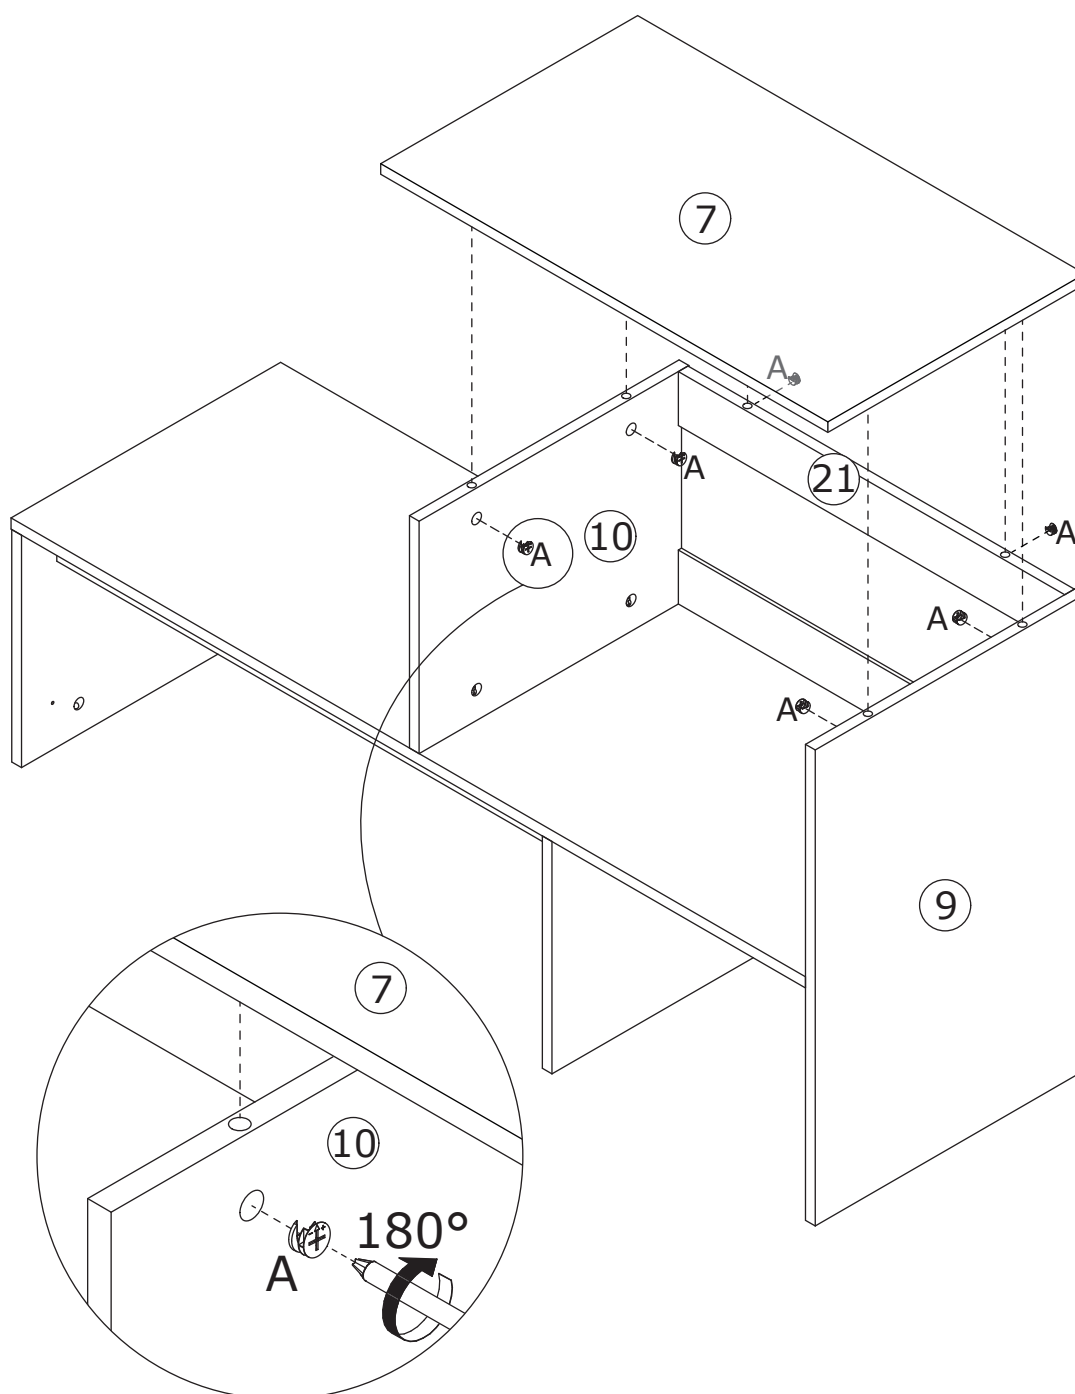

41

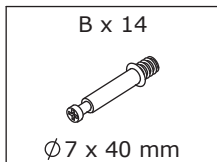  

  Screw eccentric bolt (B) onto **both sides of plate 18.**

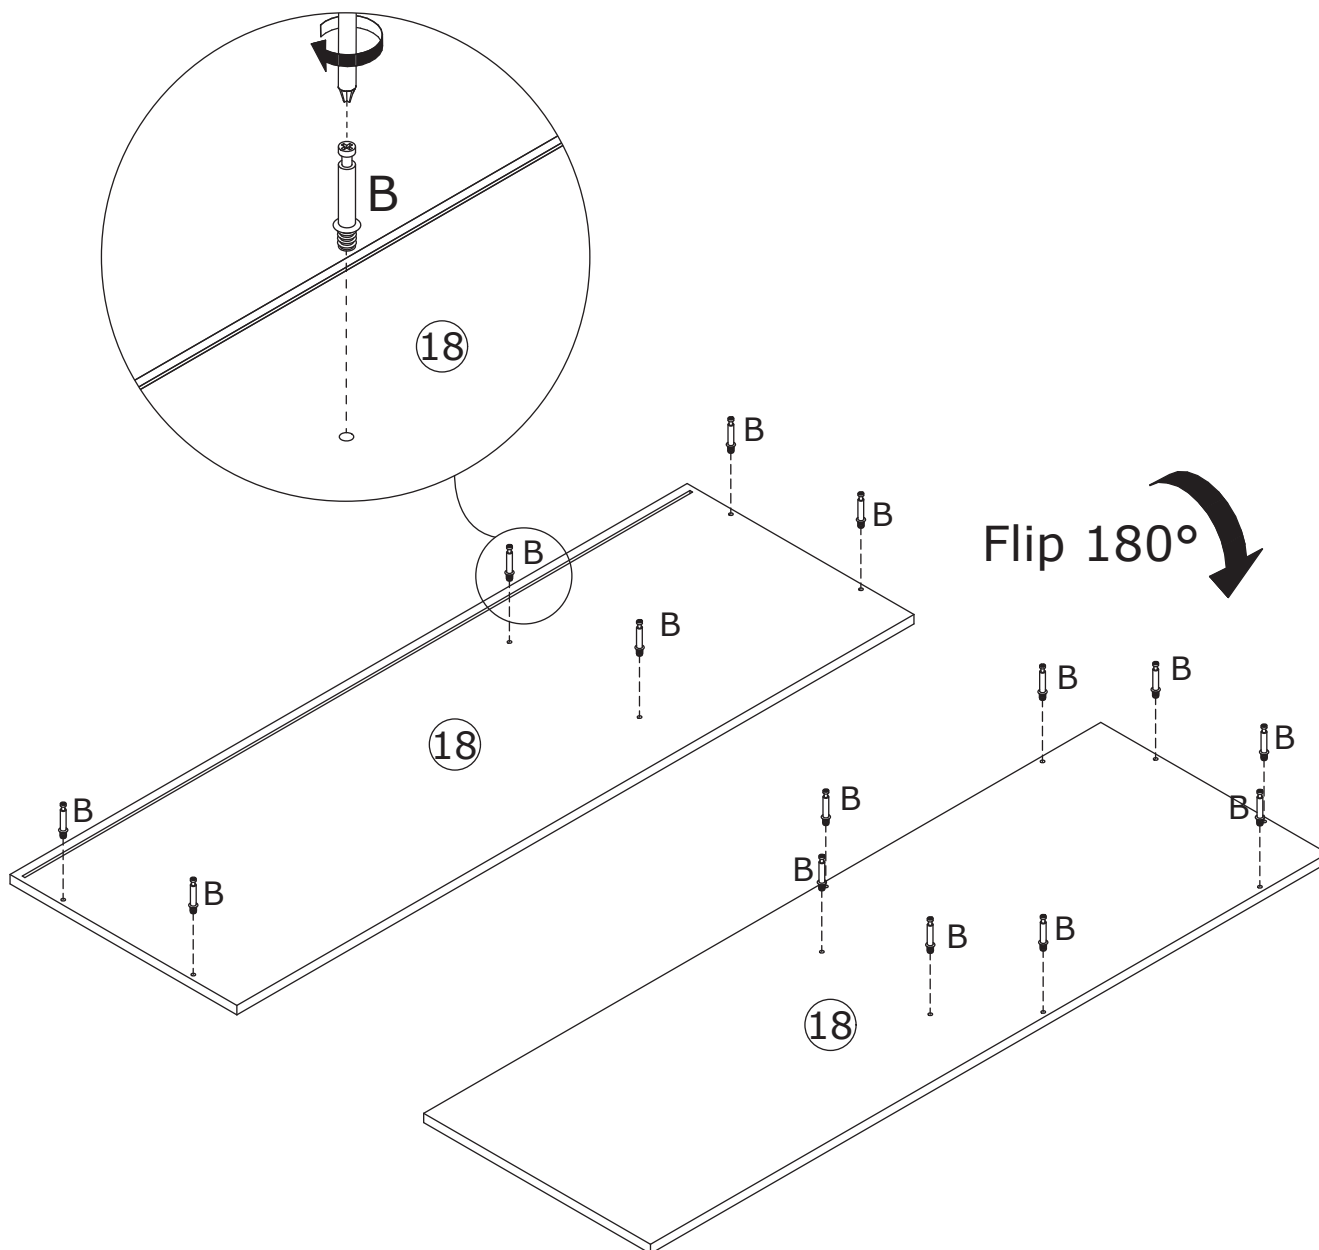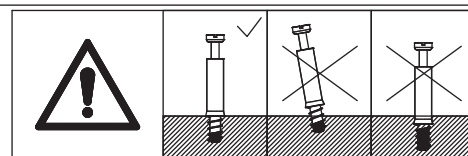


42

A x 6






 Ø 12 x 9.5 mm



Insert plate 19 along the available grooves.

   Then connect plate 18 to plates 9, 16 and 14, then tighten by turning eccentric wheel (A) clockwise.

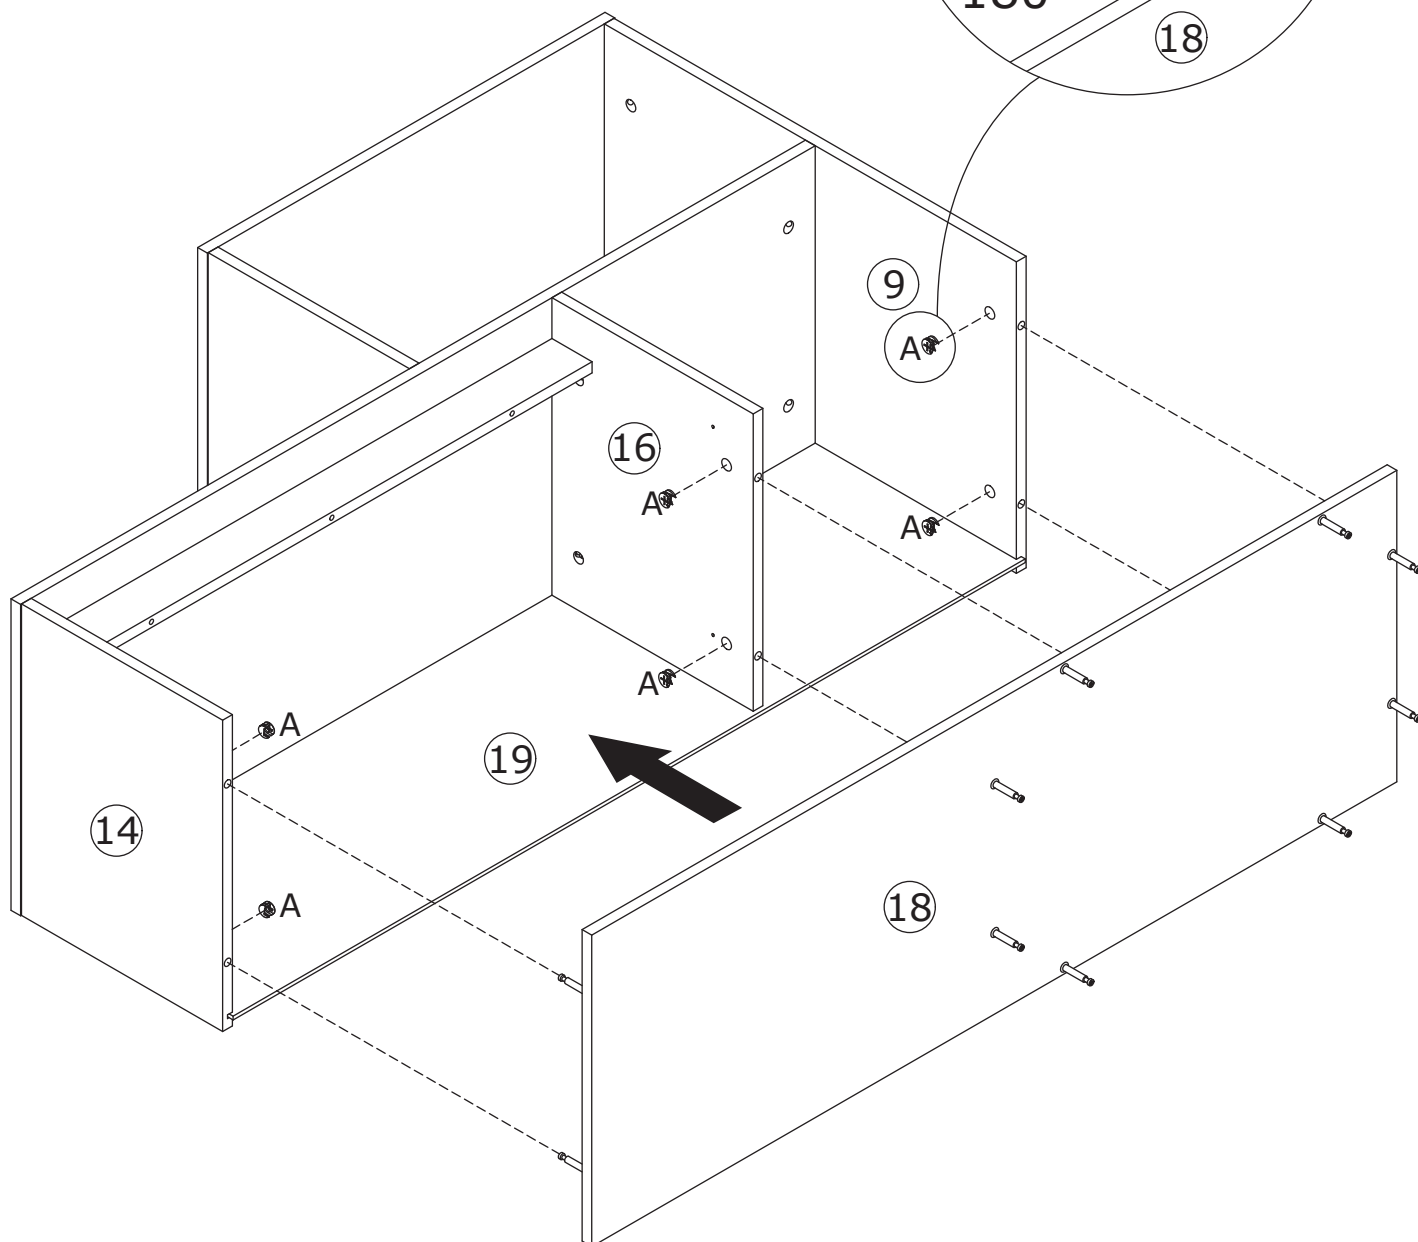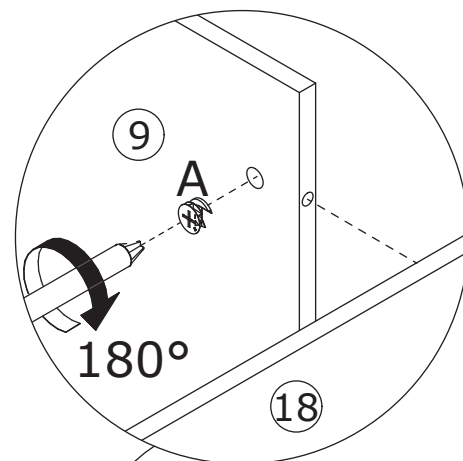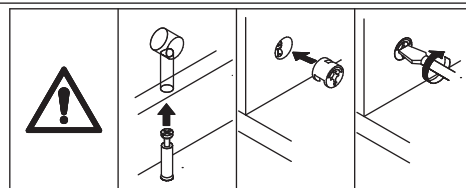



43

A x 8




Ø 12 x 9.5 mm

  G x 8



 Connect plates 23 and 24 to plate 18, then tighten by turning eccentric wheel (A) clockwise. Knock foot pin (G) into the panels as shown.

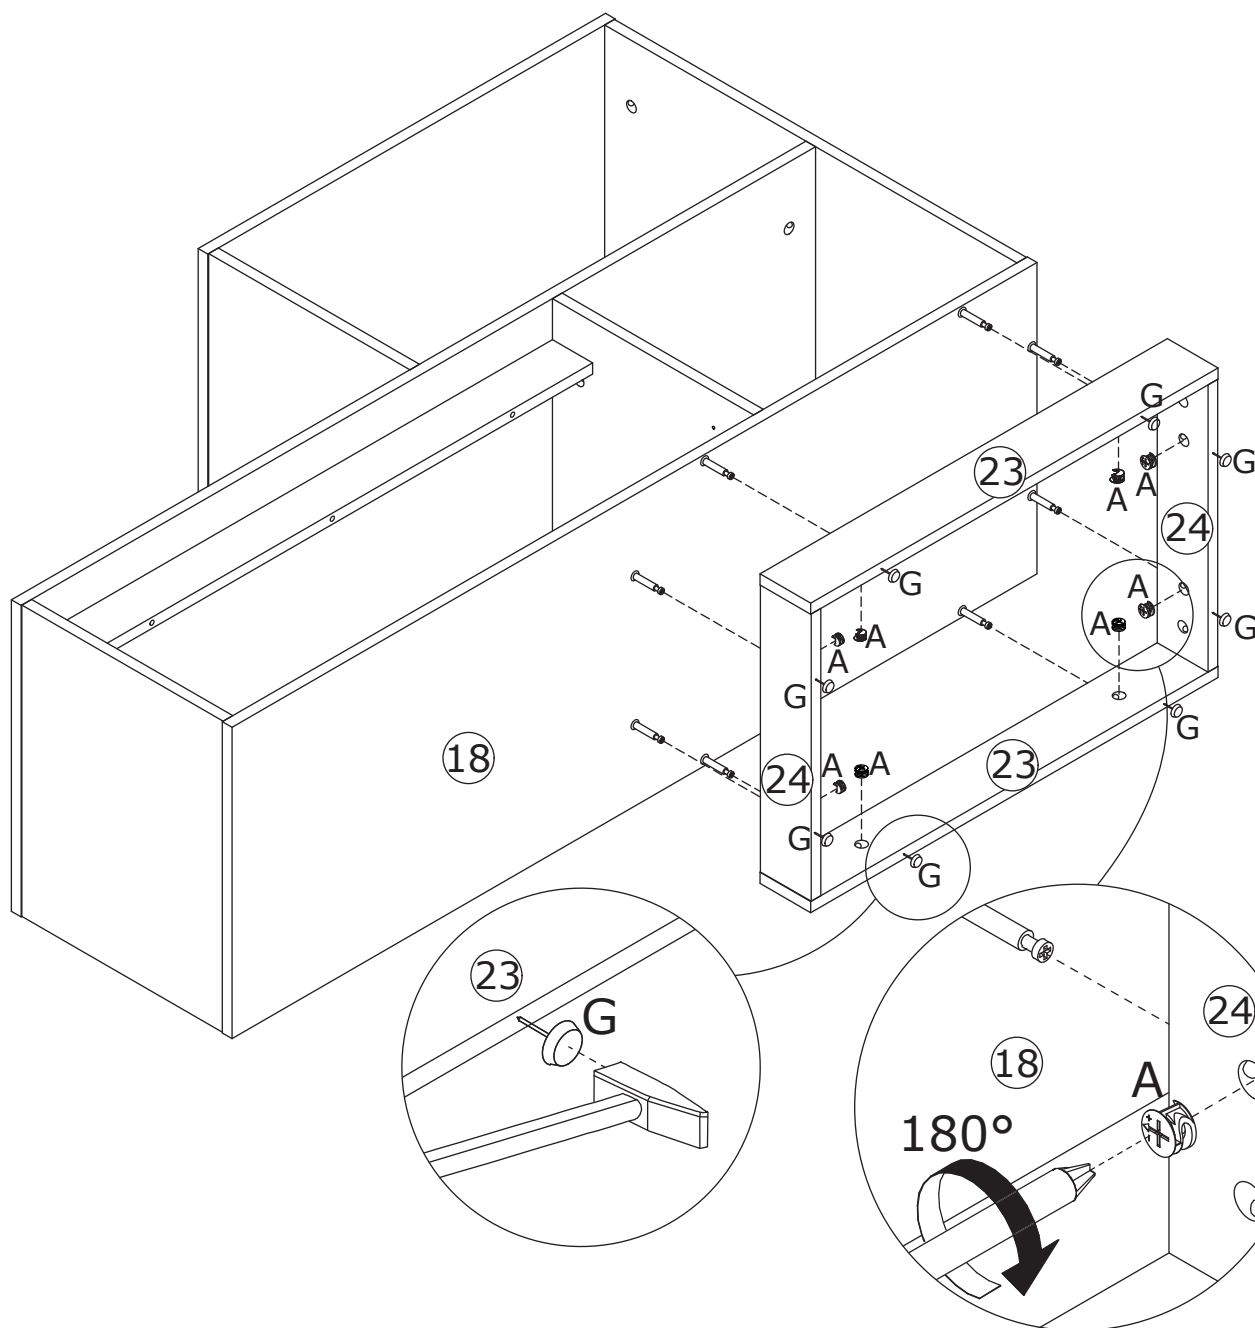


44

H x 8






M3.5 x 14 mm

 J x 8



   Insert clip (J) into back slots and secure them using screw (H).

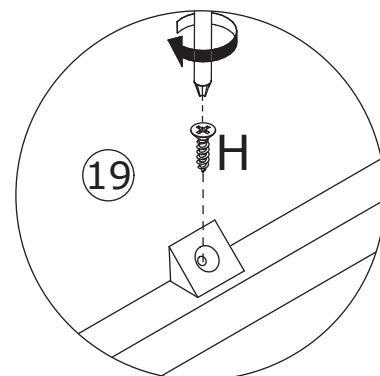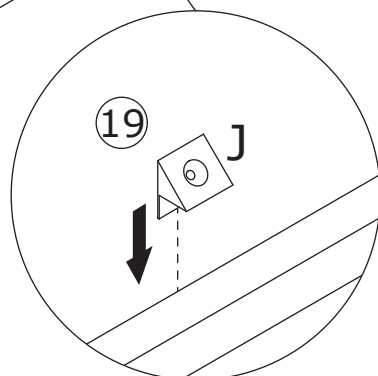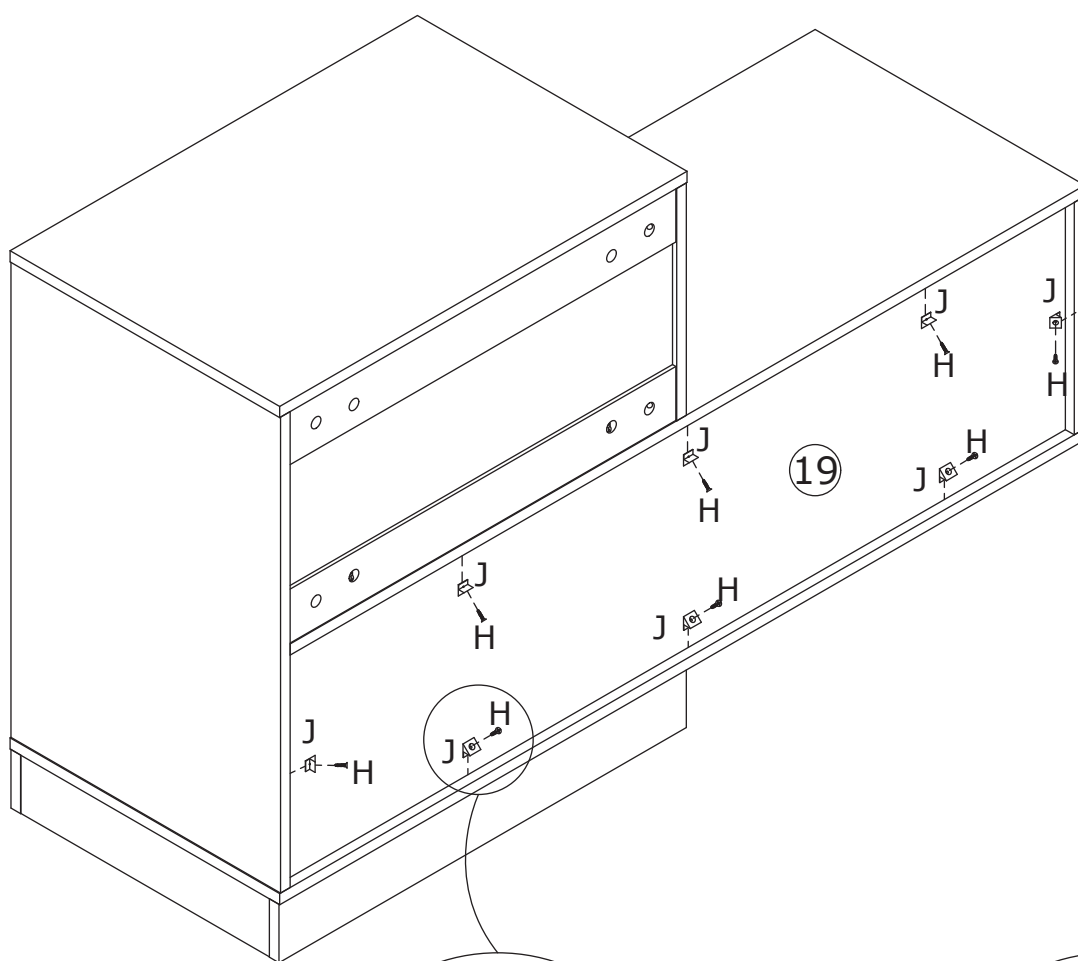

45

C x 4



M3 x 12 mm

L x 1
CL

 


12"



L x 1
CR



12"



  Secure guide L(CL) and L(CR) to plate 14 and 16 respectively using screw (C).

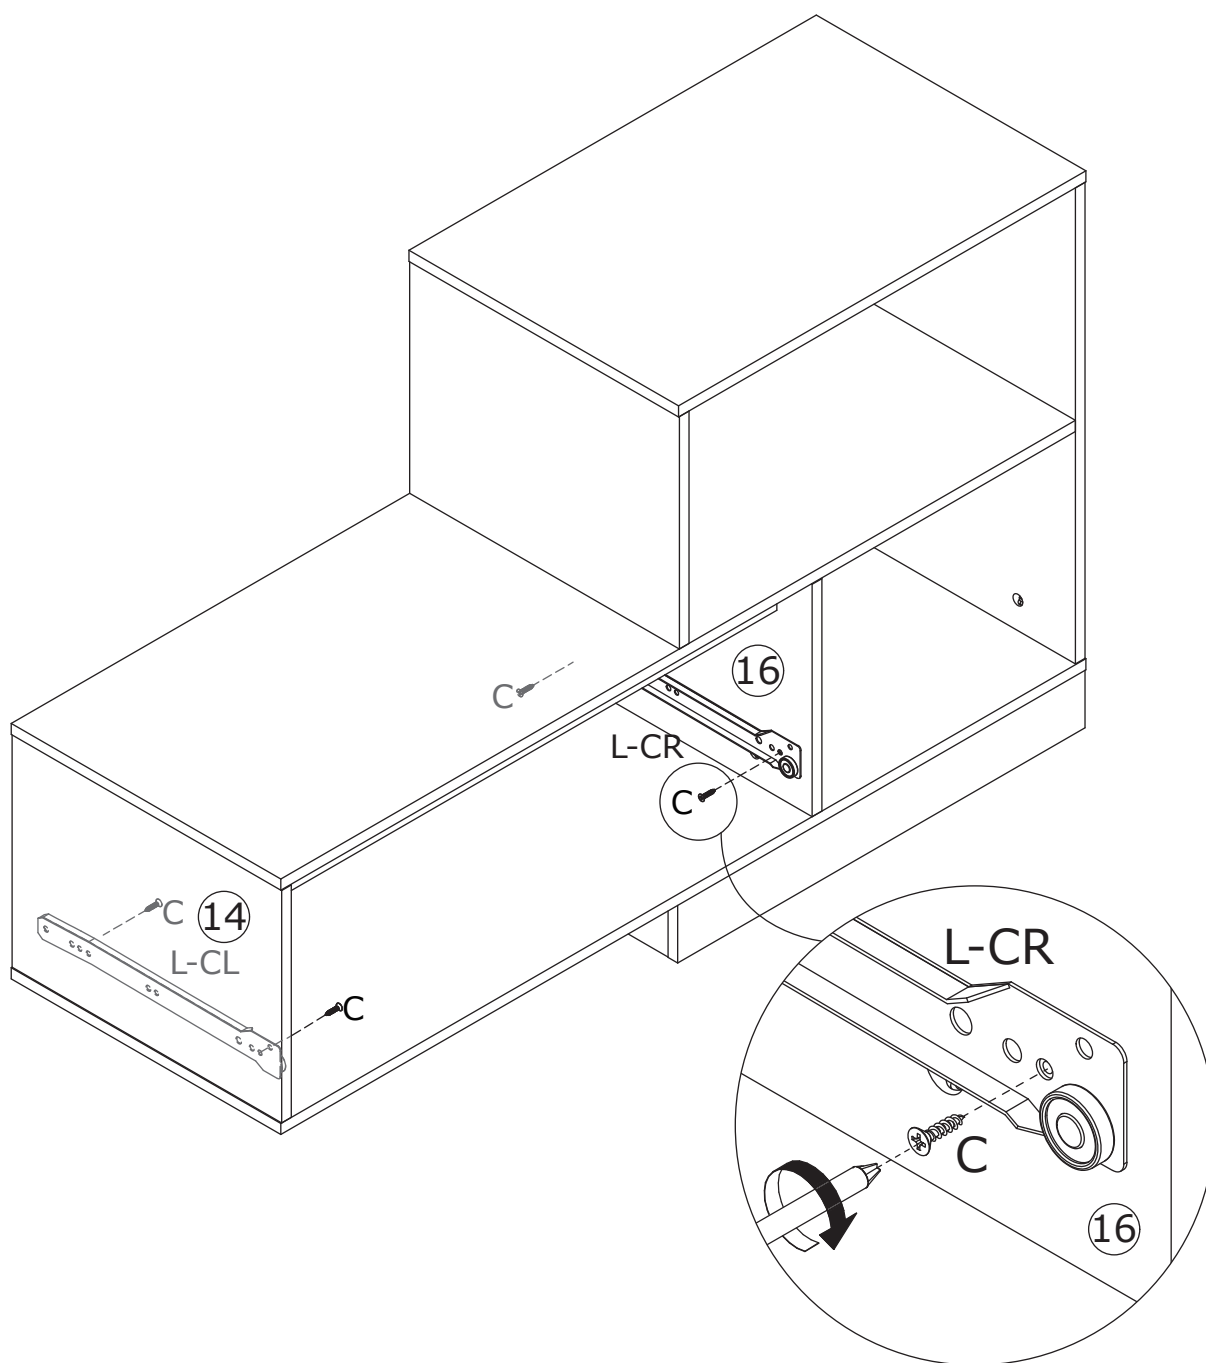
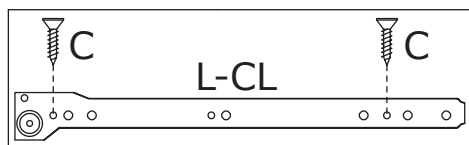


46



B x 8



  F x 8



  Screw eccentric bolt (B) onto plate 25.
Insert wooden dowel (F) into plate 30.

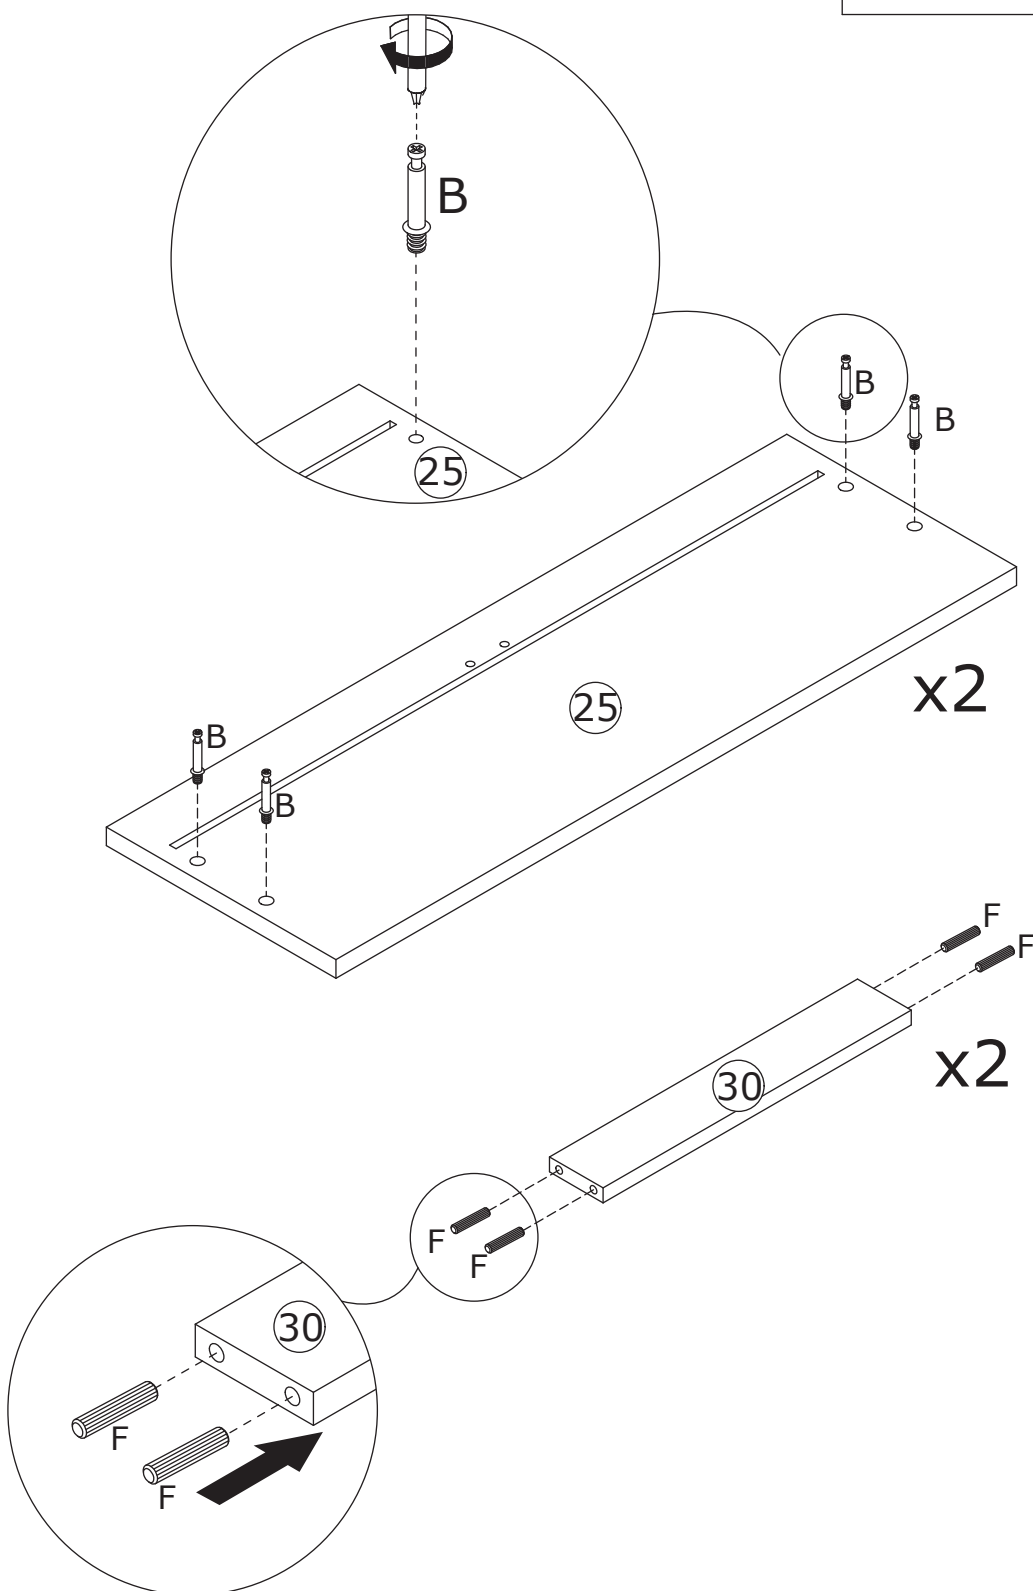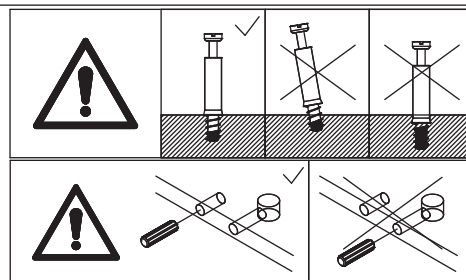


47


A x 8



 
Ø12 x 9.5 mm



 Connect plates 26, 27 and 30 to plate 25, then tighten by turning eccentric wheel (A) clockwise.

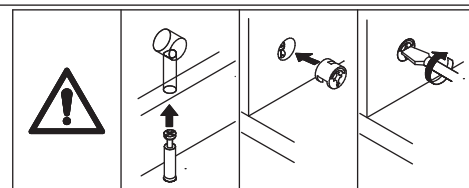

 Insert plate 29 along the available grooves.

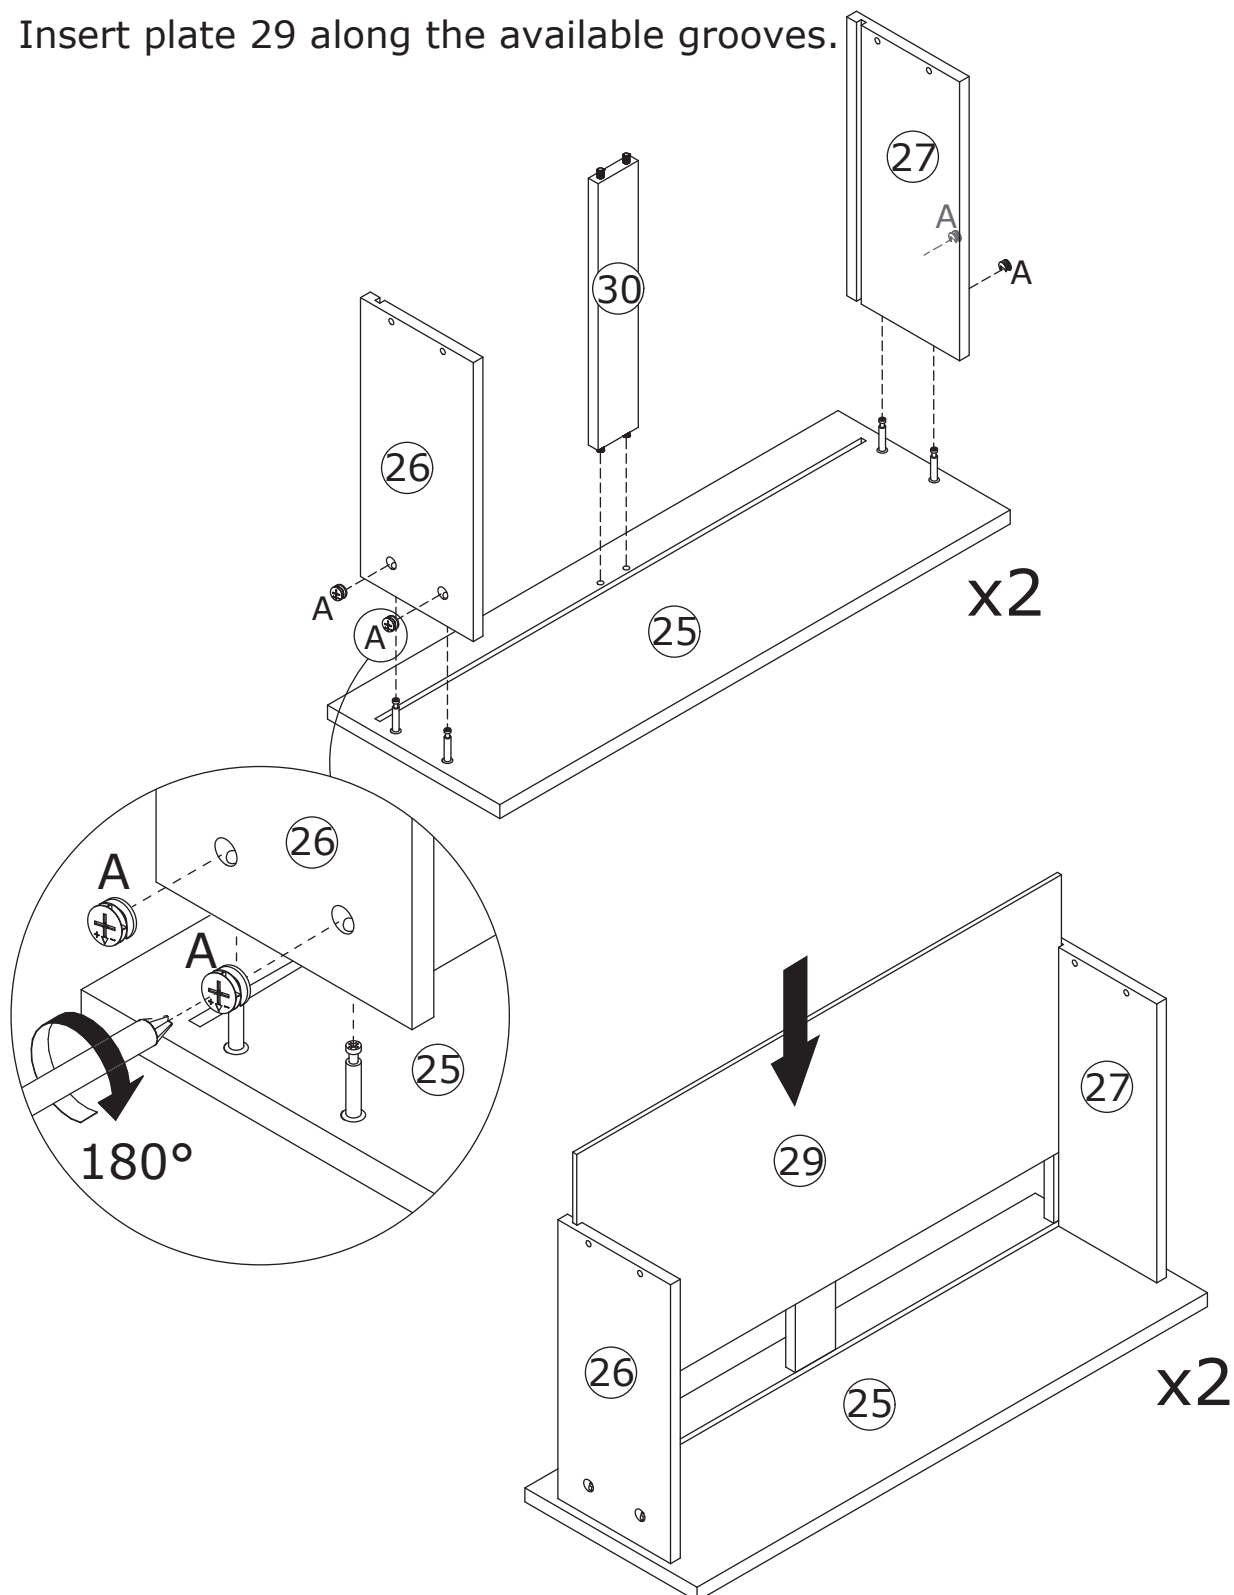


48


E x 8



 M5 x 40 mm



 Secure plate 28 to plates 26 and 27 using screw (E).

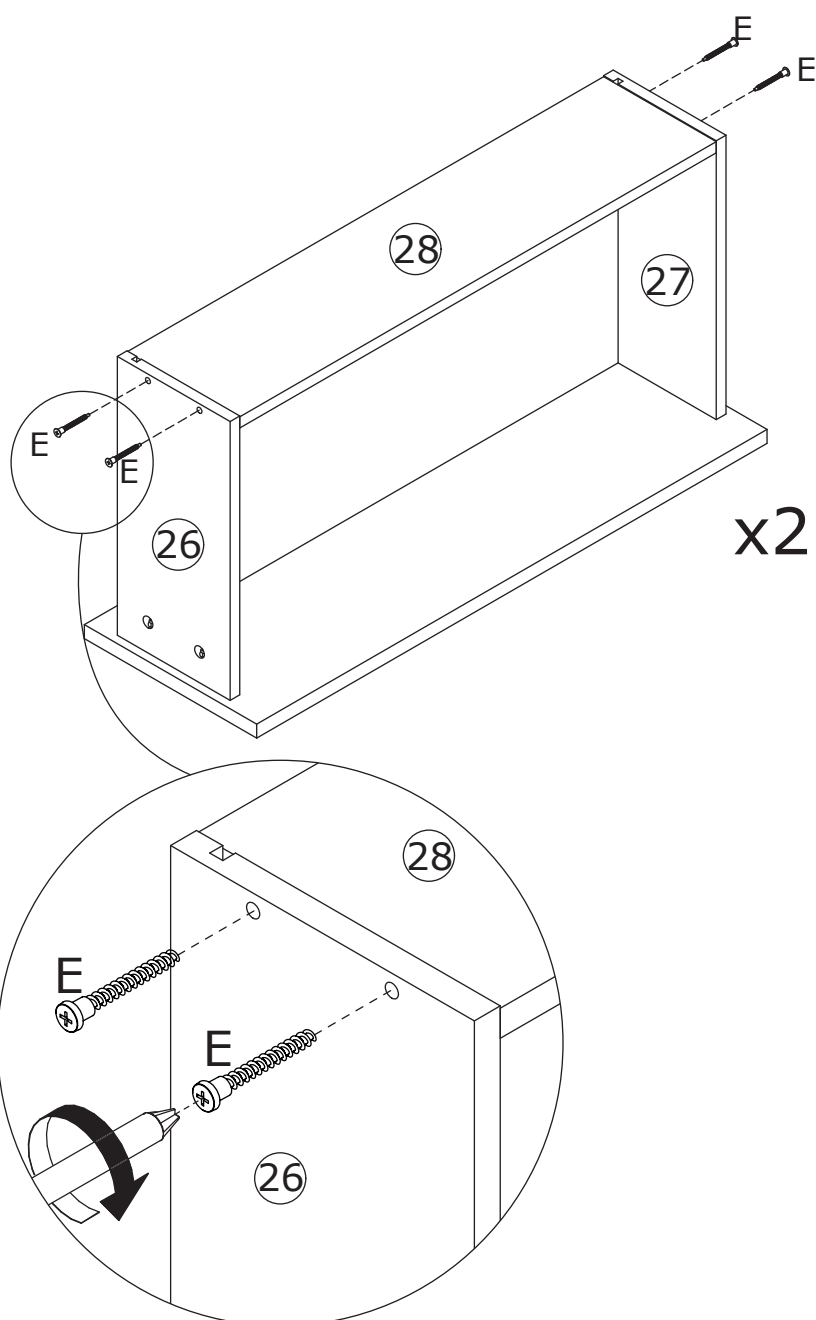


49

C x 8




M3 x 12 mm

 L x 2
DL




12"

 L x 2
DR




12"



 


Flip the drawer over, secure guide L(DL) and L(DR) to plate 26 and 27 respectively using screw (C).

 
L-DL



L-DR

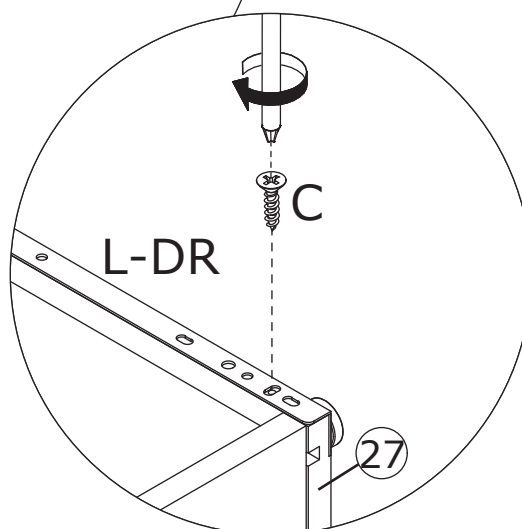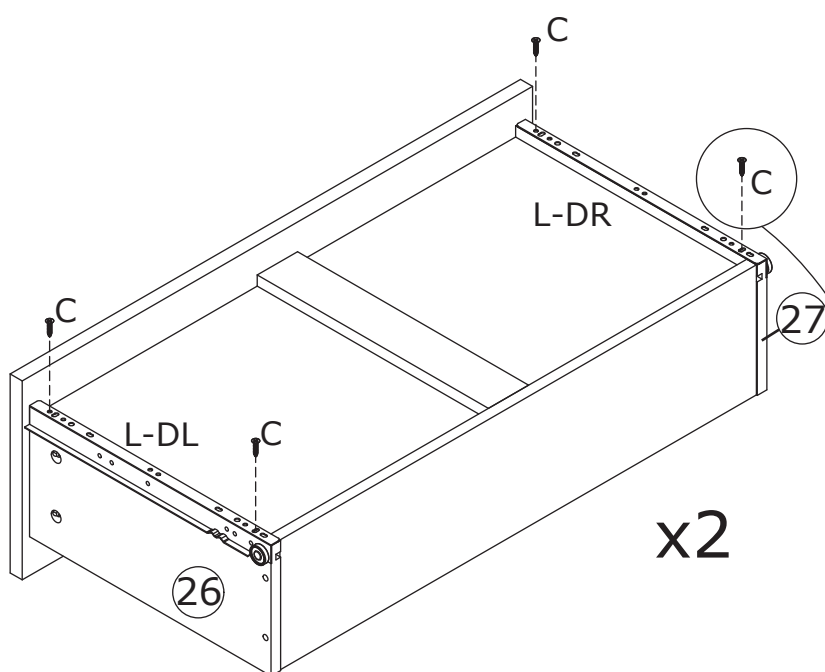   


Place the drawer into the cabinet.

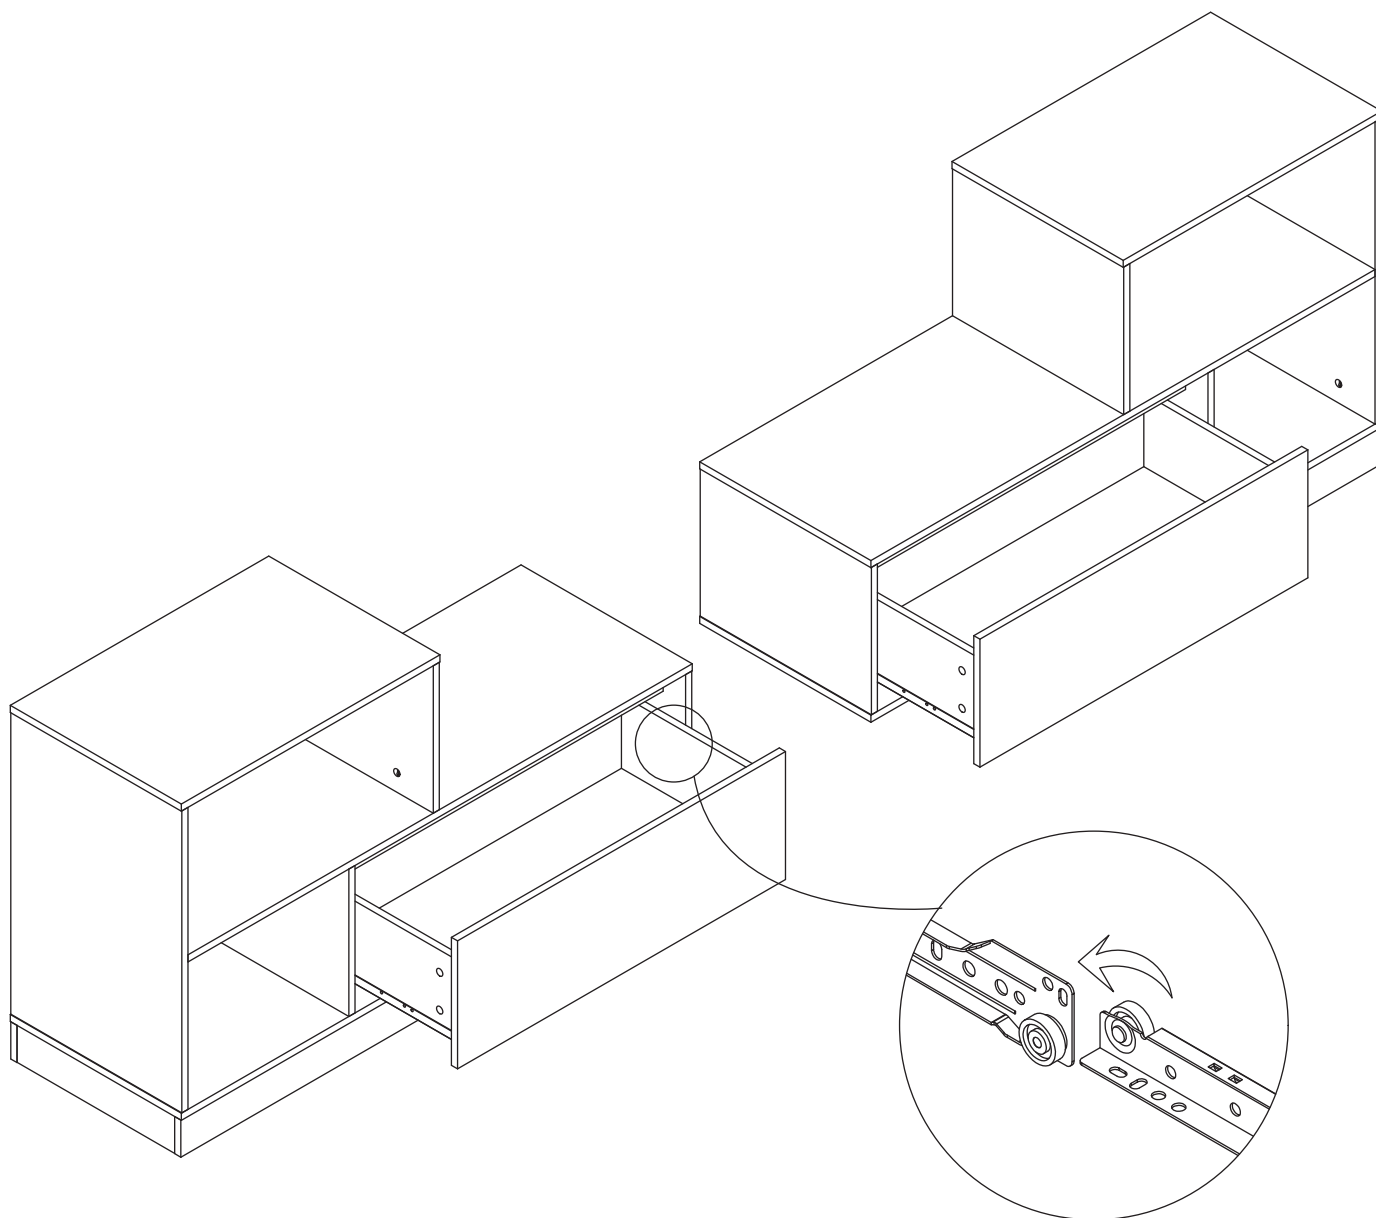 

51

 Connect the two side cabinets to the middle cabinet. Assembly completed.

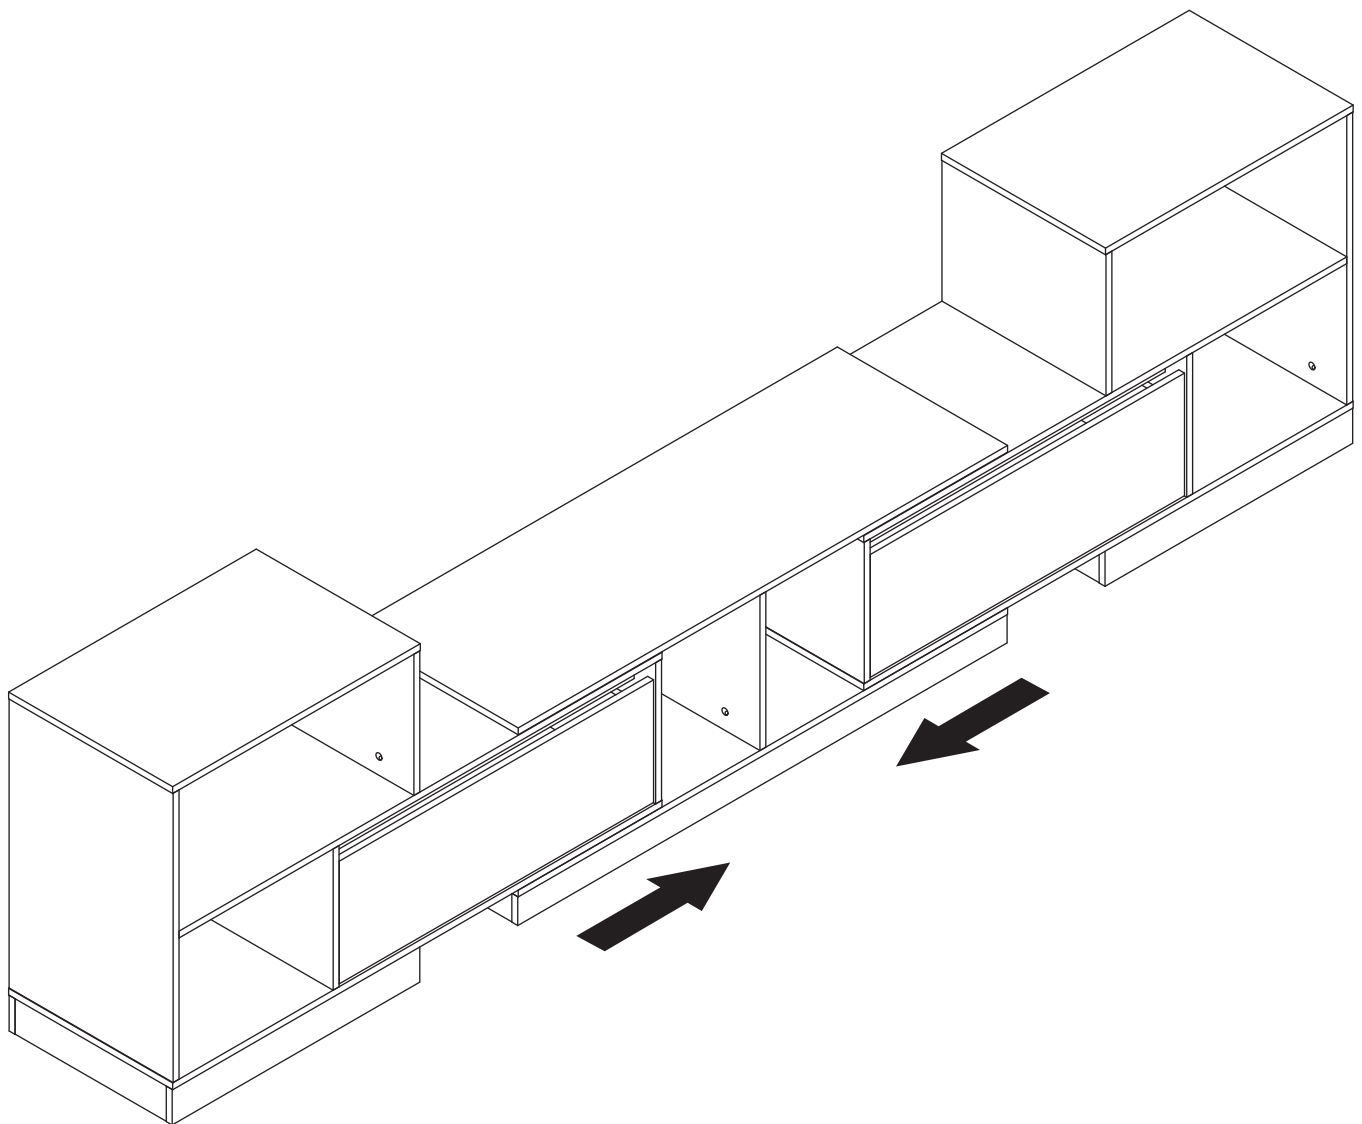

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.